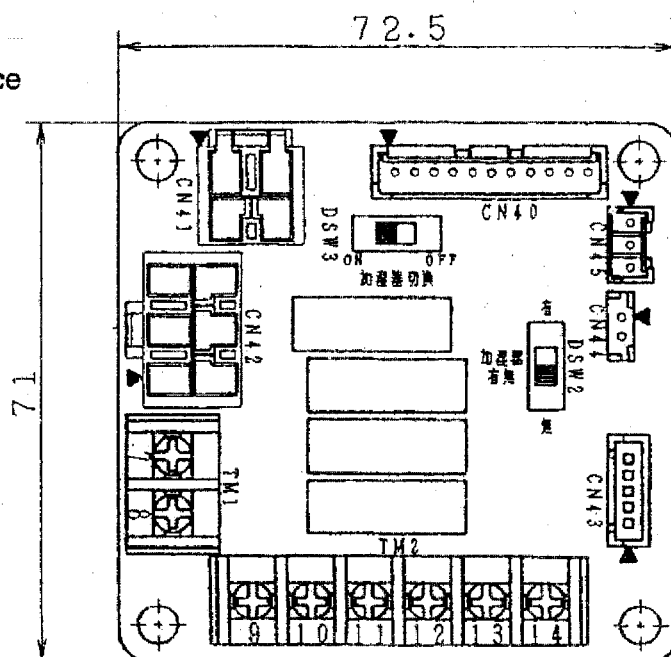


Feature

- It can output the operation output of the indoor fan to outside.
- It can do the On /Off output and the malfunction output to the external control equipment.
- It can do On/OFF of the indoor unit with a switch as an outside input.


Outside appearance

**1. Enclosed attached part**

Name	Q'ty	Rough sketch	Use	Name	Q'ty	Rough sketch	Use
Option p.c.b.	1		CZ-03APA	φ 3 Screw	4		For fixing CZ-03APA
Wire	1		For connection between Indoor main p.c.b. and CZ-03APA	Collar	4		For fixing CZ-03APA
Wire	1			Bush	4		For fixing CZ-03APA
Wire	1						

2.Wiring layout

(Note) Please cut off the power supply to the indoor unit.

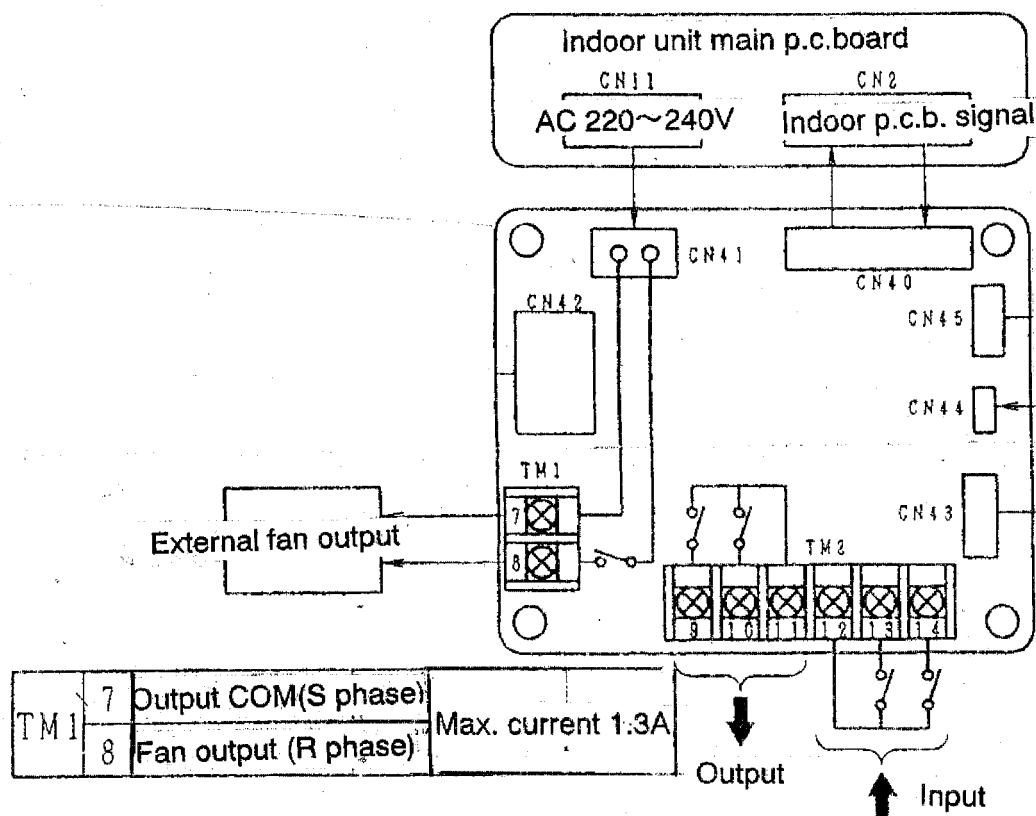


Procedure


1. Please install the P.C.Board in the control Box of the indoor unit.
2. Please connect the indoor unit main p.c.board with CZ-03APA by using the attached electric wire.
3. Please do your necessary connection to the CZ-03APA.
4. Please supply power to the indoor unit and do the test run after all connection set up were completed.

3. Installation of CZ-03APA

- Please install CZ-03APA to the control box in the indoor unit by using the attached parts.
- Please refer to the following figure.

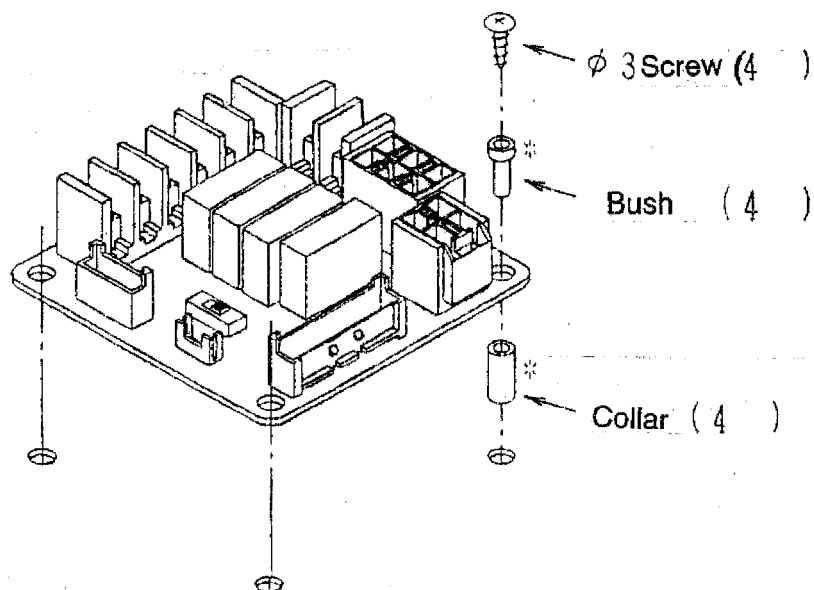

4. Wiring between the indoor unit main p.c.b. and CZ-03APA

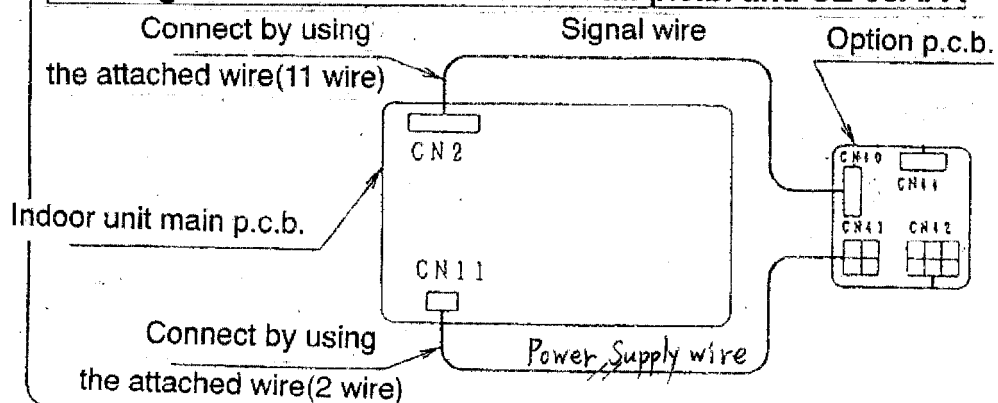

5. Connection to Remote / Local control

