


# Service Manual

## Air Conditioner

**CS-E9GFEW CU-E9GFE**  
**CS-E12GFEW CU-E12GFE**  
**CS-E18GFEW CU-E18GFE**

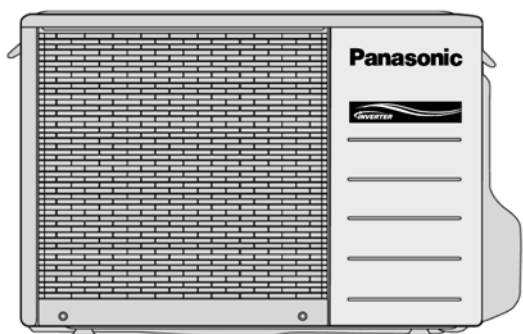

Please file and use this manual together with the Service Manual for Model No. CU-2E15GBE, Order No. MAC0704001A2, Model No. CU-3E18EBE, Order No. RAC0602011C2, Model No. CU-3E23CBPG, CU-4E27CBPG, Order No. RAC0209005C2.

### **⚠ WARNING**

This service information is designed for experienced repair technicians only and is not designed for use by the general public. It does not contain warnings or cautions to advise non-technical individuals of potential dangers in attempting to service a product. Products powered by electricity should be serviced or repaired only by experienced professional technicians. Any attempt to service or repair the product or products dealt with in this service information by anyone else could result in serious injury or death.

## CONTENTS

	PAGE		PAGE
<b>1 Safety Precautions</b> .....	<b>2</b>	3.3. Outdoor Unit.....	19
<b>2 Specifications</b> .....	<b>4</b>	<b>4 Location of Controls and Components</b> .....	<b>20</b>
2.1. Floor Type .....	4	4.1. Indoor Unit .....	20
2.2. Outdoor Unit: CU-2E15GBE .....	10	4.2. Outdoor Unit.....	20
2.3. Outdoor Unit: 3E18EBE.....	11	4.3. Remote Control.....	20
2.4. Outdoor Unit: CU-3E23CBPG   CU-		<b>5 Dimensions</b> .....	<b>21</b>
4E27CBPG.....	12	5.1. Indoor Unit .....	21
<b>3 Features</b> .....	<b>16</b>	5.2. Outdoor Unit.....	22
3.1. Remote Control .....	17	<b>6 Refrigeration Cycle Diagram</b> .....	<b>24</b>
3.2. Indoor Unit.....	18		


# Panasonic®


© 2007 Panasonic HA Air-Conditioning (M) Sdn. Bhd. (11969-T). All rights reserved. Unauthorized copying and distribution is a violation of law.

6.1. CS-E9GFEW CU-E9GFECSE12GFEW CU-E12GFE -----	24	9.12. Auto Operation Switch -----	45
6.2. CS-E18GFEW CU-E18GFE -----	25	9.13. Freeze Prevention Control -----	45
<b>7 Wiring Connection Diagram</b> -----	<b>26</b>	9.14. Dew Prevention Control-----	46
7.1. Indoor Unit -----	26	9.15. Protection Control Features-----	46
7.2. Outdoor Unit-----	27	<b>10 Self Diagnosis Display</b> -----	<b>53</b>
<b>8 Electronic Circuit Diagram</b> -----	<b>29</b>	10.1. Self Diagnosis Function-----	53
8.1. Indoor Unit / Remote Controller -----	29	10.2. Error Codes Table -----	54
8.2. Outdoor Unit-----	31	<b>11 Installation Instruction</b> -----	<b>56</b>
<b>9 Operation and Control</b> -----	<b>34</b>	11.1. Auto switch operation-----	56
9.1. Simultaneous Operation Control (Multi Type Only)-----	34	11.2. Changing the remote control transmission code-----	56
9.2. Basic Function -----	35	11.3. Indoor Unit-----	57
9.3. Room Temperature Control (Compressor Control) -----	36	11.4. Outdoor Unit -----	65
9.4. Automatic Operation-----	37	<b>12 Disassembly and Assembly Instructions</b> -----	<b>68</b>
9.5. Indoor Fan Motor Operation-----	39	12.1. Indoor Unit-----	68
9.6. Airflow Direction Control-----	41	12.2. Outdoor Unit -----	72
9.7. Powerful Mode Operation-----	44	<b>13 Technical Data</b> -----	<b>74</b>
9.8. ON Timer Control -----	44	13.1. Operation Characteristics -----	74
9.9. OFF Timer Control -----	44	13.2. Sensible Capacity Chart -----	86
9.10. Auto Restart Control-----	45	<b>14 Exploded View and Replacement Parts List</b> -----	<b>87</b>
9.11. Indication Panel-----	45	14.1. Indoor Unit-----	87
		14.2. CU-E9GFE CU-E12GFE-----	90
		14.3. CU-E18GFE-----	92


# 1 Safety Precautions

- Read the following “SAFETY PRECAUTIONS” carefully before perform any servicing.
- Electrical work must be installed or serviced by a licensed electrician. Be sure to use the correct rating of the power plug and main circuit for the model installed.
- The caution items stated here must be followed because these important contents are related to safety. The meaning of each indication used is as below.  
Incorrect installation or servicing due to ignoring of the instruction will cause harm or damage, and the seriousness is classified by the following indications.


	<b>WARNING</b>	This indication shows the possibility of causing death or serious injury.
--	----------------	---

	<b>CAUTION</b>	This indication shows the possibility of causing injury or damage to properties.
--	----------------	--

The items to be followed are classified by the symbols:

	This symbol denotes item that is PROHIBITED from doing.
---	---

- Carry out test running to confirm that no abnormality occurs after the servicing. Then, explain to user the operation, care and maintenance as stated in instructions. Please remind the customer to keep the operating instructions for future reference.

	<b>WARNING</b>
1. Engage dealer or specialist for installation and servicing. If installation or servicing done by the user is defective, it will cause water leakage, electrical shock or fire.	
2. Install according to this installation instructions strictly. If installation is defective, it will cause water leakage, electrical shock or fire.	
3. Use the attached accessories parts and specified parts for installation and servicing. Otherwise, it will cause the set to fall, water leakage, fire or electrical shock.	
4. Install at a strong and firm location which is able to withstand the set's weight. If the strength is not enough or installation is not properly done, the set will drop and cause injury.	



## WARNING

- |   |  |
|---|--|
| 5. For electrical work, follow the local national wiring standard, regulation and the installation instruction. An independent circuit and single outlet must be used. If electrical circuit capacity is not enough or defect found in electrical work, it will cause electrical shock or fire. |  |
| 6. Use the specified cable and connect tightly for indoor/outdoor connection. Connect tightly and clamp the cable so that no external force will be acted on the terminal. If connection or fixing is not perfect, it will cause heat-up or fire at the connection.                             |  |
| 7. Wire routing must be properly arranged so that control board cover is fixed properly. If control board cover is not fixed perfectly, it will cause heat-up at connection point of terminal, fire or electrical shock.  |  |
| 8. When connecting the piping, do not allow air or any substances other than the specified refrigerant to enter the refrigeration cycle. Otherwise, this may lower the capacity, cause abnormally high pressure in the refrigeration cycle, and possibly result in explosion and injury.        |  |
| 9. Thickness of copper pipes used must be more than 0.8 mm. Never use copper pipes thinner than 0.8 mm.   |  |
| 10. It is desirable that the amount of residual oil is less than 40 mg/10 m.  |  |
| 11. Do not modify the length of the power supply cord or use of the extension cord, and do not share the single outlet with other electrical appliances. Otherwise, it will cause fire or electrical shock.   |  |



## CAUTION

- |   |  |
|---|--|
| 1. The equipment must be earthed. It may cause electrical shock if grounding is not perfect.  |  |
| 2. Do not install the unit at place where leakage of flammable gas may occur. In case gas leaks and accumulates at surrounding of the unit, it may cause fire.  |  |
| 3. Carry out drainage piping as mentioned in installation instructions. If drainage is not perfect, water may enter the room and damage the furniture.  |  |
| 4. Pb free solder has a higher melting point than standard solder; typically the melting point is 50 - 70°F (30 - 40°C) higher. Please use a high temperature soldering iron. In case of the soldering iron with temperature control, please set it to 700 ± 20°F (370 ± 10°C). Pb free solder will tend to splash when heated too high (about 1100°F/600°C). |  |





## ATTENTION

- |  |
|--|
| 1. Selection of the installation location. Select an installation location which is rigid and strong enough to support or hold the unit, and select a location for easy maintenance.   |
| 2. Power supply connection to the conditioner. Connect the power supply cord of the air conditioner to the mains using one of the following methods. Power supply point shall be the place where there is ease for access for the power disconnection in case of emergency. In some countries, permanent connection of this room air conditioner to the power supply is prohibited. <ol style="list-style-type: none"> <li>1. Power supply connection to the receptacle using a power plug. Use an approved power plug with earth pin for the connection to the socket.</li> <li>2. Power supply connection to a circuit breaker for the permanent connection. Use an approved circuit breaker for the permanent connection. It must be a double pole switch with a minimum 3.5 mm contact gap.</li> </ol> |
| 3. Do not release refrigerant during piping work for installation, servicing reinstallation and during repairing a refrigeration parts. Take care of the liquid refrigerant, it may cause frostbite.   |
| 4. Installation work. It may need two people to carry out the installation work.   |
| 5. Do not install this appliance in a laundry room or other location where water may drip from the ceiling, etc.   |

## 2 Specifications

### 2.1. Floor Type

#### 2.1.1. CS-E9GFEW CU-E9GFE


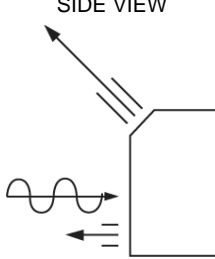
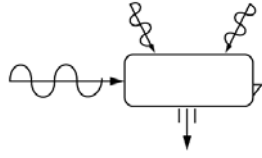
ITEM		UNIT	CS-E9GFEW	CU-E9GFE
Cooling Capacity		kW	2.50 (0.80 ~ 3.00)	
		kCal/h	2,150 (690 ~ 2,580)	
		BTU/h	8,500 (2,700 ~ 10,200)	
Heating Capacity		kW	3.60 (0.80 ~ 5.00)	
		kCal/h	3,100 (690 ~ 4,300)	
		BTU/h	12,300 (2,700 ~ 17,100)	
Moisture Removal		l/h	1.4	
		pt/h	(2.9)	
Power Source		Phase	Single	
		V	220 / 230 / 240	
		Cycle	50	
Airflow Method		<p>OUTLET</p>  <p>INTAKE</p> 	<p>SIDE VIEW</p> 	<p>TOP VIEW</p> 
Air Volume	Indoor Air (Lo)	m <sup>3</sup> /min (cfm)	Cooling; 5.6 (198) Heating; 5.6 (198)	—
	Indoor Air (Me)	m <sup>3</sup> /min (cfm)	Cooling; 7.4 (261) Heating; 7.6 (268)	—
	Indoor Air (Hi)	m <sup>3</sup> /min (cfm)	Cooling; 9.3 (328) Heating; 9.6 (339)	Cooling; 29.8 (1,050) Heating; 29.8 (1,050)
Noise Level		dB (A)	Cooling; High 38, Low 27 Heating; High 38, Low 28	Cooling; 46 Heating; 47
		Power Level dB	Cooling; High 54 Heating; High 54	Cooling; 59 Heating; 60
Electrical Data	Input	W	Cooling; 570 (175 - 780) Heating; 865 (165 - 1,360)	
	Running Current	A	Cooling; 2.75 / 2.70 / 2.65 Heating; 4.20 / 4.05 / 3.90	
	EER	W/W(kcal/hw), BTU/hw	Cooling; 4.39 (3.78), 15.0	
	COP	W/W(kcal/hw), BTU/hw	Heating; 4.16 (3.58), 14.2	
	Starting Current	A	4.20	
Piping Connection Port (Flare piping)		inch	G; Half Union 3/8" L; Half Union 1/4"	G; 3-way valve 3/8" L; 2-way valve 1/4"
Piping Size (Flare piping)		inch	G; (gas side); 3/8" L; (liquid side); 1/4"	G; (gas side); 3/8" L; (liquid side); 1/4"
Drain Hose	Inner diameter	mm	15	—
	Length	m	220	—
Power Cord Length			—	—
Number of core-wire			—	—
Dimensions	Height	(inch) mm	23-5/8 (600)	21-1/4 (540)
	Width	(inch) mm	27-9/16 (700)	30-23/32 (780)
	Depth	(inch) mm	8-9/32 (210)	11-3/8 (289)
Net Weight		lb (kg)	31 (14)	82 (37)



ITEM		UNIT	CS-E9GFEW	CU-E9GFE	
Compressor	Type		—	Brushless (4-poles)	
	Motor Type		—		
	Rated Output	W	—		
Air Circulation	Type		Turbo Fan	Propeller Fan	
	Material		ASG	PP	
	Motor Type		Transistor (8-poles)	Induction (6-poles)	
	Input	W	—	—	
	Rated Output	W	48	28	
	Fan Speed Lo (Cool / Heat)			620 / 630	—
	Me (Cool / Heat)			510 / 520	—
Hi (Cool / Heat)			410 / 410	770	
Heat Exchanger	Description		Evaporator	Condenser	
	Tube Material		Copper	Copper	
	Fin Material		Aluminium (Pre coat)	Aluminium (Pre coat)	
	Fin Type		Slit Fin	Corrugated Fin	
	Row / Stage	(Plate fin configuration, forced draft)			
			2 / 22	2 / 24	
	FPI		19	17	
Size (W x H x L)		mm	510 x 396 x 24	689.8 x 504 x 36.4 718.4 x 504 x 36.4	
Refrigeration Control Device			—	Capillary Tube	
Refrigeration Oil		(c.c)	—	RB68A (320)	
Refrigerant (R410A)		g (oz)	—	965 (34.0)	
Thermostat			Electronic Control	Electronic Control	
Protection Device			Electronic Control	Electronic Control	
Air Filter	Material		PET	—	
	Style		Honeycomb		

- Specifications are subject to change without notice for further improvement.




## 2.1.2. CS-E12GFEW CU-E12GFE

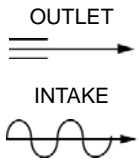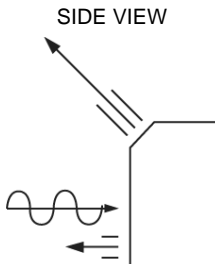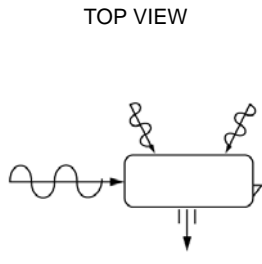ITEM		UNIT	CS-E12GFEW	CU-E12GFE
Cooling Capacity		kW	3.50 (0.80 ~ 3.80)	
		kCal/h	3,010 (690 ~ 3,270)	
		BTU/h	11,900 (2,700 ~ 13,000)	
Heating Capacity		kW	4.80 (0.80 ~ 6.10)	
		kCal/h	4,130 (690 ~ 5,240)	
		BTU/h	16,400 (2,700 ~ 20,800)	
Moisture Removal		l/h	2.0	
		pt/h	(4.2)	
Power Source		Phase	Single	
		V	220 / 230 / 240	
		Cycle	50	
Airflow Method				
Air Volume	Indoor Air (Lo)	m <sup>3</sup> /min (cfm)	Cooling; 5.9 (208) Heating; 5.6 (198)	—
	Indoor Air (Me)	m <sup>3</sup> /min (cfm)	Cooling; 7.6 (268) Heating; 7.6 (268)	—
	Indoor Air (Hi)	m <sup>3</sup> /min (cfm)	Cooling; 9.5 (335) Heating; 10.0 (353)	Cooling; 31.0 (1,095) Heating; 31.0 (1,095)
Noise Level		dB (A)	Cooling; High 39, Low 28 Heating; High 39, Low 27	Cooling; 48 Heating; 50
		Power Level dB	Cooling; High 55 Heating; High 55	Cooling; 61 Heating; 63
Electrical Data	Input	W	Cooling; 965 (185 - 1,140) Heating; 1,320 (175 - 1,770)	
	Running Current	A	Cooling; 4.60 / 4.40 / 4.25 Heating; 6.25 / 6.00 / 5.80	
	EER	W/W(kcal/hw), BTU/hw	Cooling; 3.63 (3.12), 12.3	
	COP	W/W(kcal/hw), BTU/hw	Heating; 3.64 (3.13), 12.4	
	Starting Current	A	6.25	
Piping Connection Port (Flare piping)		inch inch	G; Half Union 3/8" L; Half Union 1/4"	G; 3-way valve 3/8" L; 2-way valve 1/4"
Piping Size (Flare piping)		inch inch	G; (gas side); 3/8" L; (liquid side); 1/4"	G; (gas side); 3/8" L; (liquid side); 1/4"
Drain Hose	Inner diameter	mm	15	—
	Length	m	220	—
Power Cord Length			—	—
Number of core-wire			—	—
Dimensions	Height	(inch) mm	23-5/8 (600)	21-1/4 (540)
	Width	(inch) mm	27-9/16 (700)	30-23/32 (780)
	Depth	(inch) mm	8-9/32 (210)	11-3/8 (289)
Net Weight		lb (kg)	31 (14)	82 (37)
Compressor	Type		—	Brushless (4-poles)
	Motor Type		—	
	Rated Output	W	—	

ITEM		UNIT	CS-E12GFEW	CU-E12GFE	
Air Circulation	Type		Turbo Fan	Propeller Fan	
	Material		ASG	PP	
	Motor Type		Transistor (8-poles)	Induction (6-poles)	
	Input	W	—	—	
	Rated Output	W	48	29	
	Fan Speed Lo (Cool / Heat)			640 / 650	—
	Me (Cool / Heat)			530 / 530	—
	Hi (Cool / Heat)			430 / 410	830
Heat Exchanger	Description		Evaporator	Condenser	
	Tube Material		Copper	Copper	
	Fin Material		Aluminium (Pre coat)	Aluminium (Pre coat)	
	Fin Type		Slit Fin	Corrugated Fin	
	Row / Stage	(Plate fin configuration, forced draft)			
			2 / 22	2 / 24	
	FPI		19	17	
Size (W x H x L)	mm	510 x 396 x 24	689.8 x 504 x 36.4 718.4 x 504 x 36.4		
Refrigeration Control Device			—	Capillary Tube	
Refrigeration Oil		(c.c)	—	RB68A (320)	
Refrigerant (R410A)		g (oz)	—	980 (34.6)	
Thermostat			Electronic Control	Electronic Control	
Protection Device			Electronic Control	Electronic Control	
Air Filter	Material		PET	—	
	Style		Honeycomb		

• Specifications are subject to change without notice for further improvement.

### 2.1.3. CS-E18GFEW CU-E18GFE

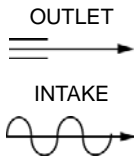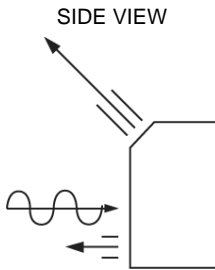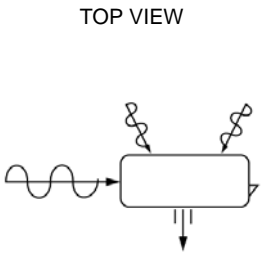ITEM		UNIT	CS-E18GFEW	CU-E18GFE
Cooling Capacity		kW	5.00 (0.90 ~ 5.60)	
		kCal/h	4,300 (780 ~ 4,820)	
		BTU/h	17,100 (3,100 ~ 19,100)	
Heating Capacity		kW	5.80 (0.90 ~ 7.10)	
		kCal/h	4,990 (780 ~ 6,100)	
		BTU/h	19,800 (3,100 ~ 24,200)	
Moisture Removal		l/h	2.8	
		pt/h	(5.9)	
Power Source		Phase	Single	
		V	220 / 230 / 240	
		Cycle	50	
Airflow Method				
Air Volume	Indoor Air (Lo)	m <sup>3</sup> /min (cfm)	Cooling; 8.3 (293) Heating; 8.5 (300)	—
	Indoor Air (Me)	m <sup>3</sup> /min (cfm)	Cooling; 9.9 (350) Heating; 10.8 (381)	—
	Indoor Air (Hi)	m <sup>3</sup> /min (cfm)	Cooling; 11.0 (388) Heating; 13.0 (459)	Cooling; 40.0 (1,410) Heating; 40.0 (1,410)
Noise Level		dB (A)	Cooling; High 44, Low 36 Heating; High 44, Low 36	Cooling; 47 Heating; 48
		Power Level dB	Cooling; High 60 Heating; High 62	Cooling; 60 Heating; 61
Electrical Data	Input	W	Cooling; 1,550 (255 - 1,910) Heating; 1,600 (260 - 2,350)	
	Running Current	A	Cooling; 7.20 / 7.00 / 6.90 Heating; 7.35 / 7.10 / 6.95	
	EER	W/W(kcal/hw), BTU/hw	Cooling; 3.23 (2.78), 11.0	
	COP	W/W(kcal/hw), BTU/hw	Heating; 3.63 (3.12), 12.4	
	Starting Current	A	7.35	
Piping Connection Port (Flare piping)		inch inch	G; Half Union 1/2" L; Half Union 1/4"	G; 3-way valve 1/2" L; 2-way valve 1/4"
Piping Size (Flare piping)		inch inch	G; (gas side); 1/2" L; (liquid side); 1/4"	G; (gas side); 1/2" L; (liquid side); 1/4"
Drain Hose	Inner diameter	mm	15	—
	Length	m	220	—
Power Cord Length			—	—
Number of core-wire			—	—
Dimensions	Height	(inch) mm	23-5/8 (600)	29-17/32 (750)
	Width	(inch) mm	27-9/16 (700)	34-7/16 (875)
	Depth	(inch) mm	8-9/32 (210)	13-19/32 (345)
Net Weight		lb (kg)	31 (14)	82 (37)
Compressor	Type		—	Brushless (4-poles)
	Motor Type		—	
	Rated Output	W	—	

ITEM		UNIT	CS-E18GFEW	CU-E18GFE	
Air Circulation	Type		Turbo Fan	Propeller Fan	
	Material		ASG	PP	
	Motor Type		Transistor (8-poles)	Transistor (8-poles)	
	Input	W	—	—	
	Rated Output	W	48	29	
	Fan Speed Lo (Cool / Heat)			760 / 860	—
	Me (Cool / Heat)			660 / 720	—
	Hi (Cool / Heat)			570 / 580	660 / 640
Heat Exchanger	Description		Evaporator	Condenser	
	Tube Material		Copper	Copper	
	Fin Material		Aluminium (Pre coat)	Aluminium (Pre coat)	
	Fin Type		Slit Fin	Corrugated Fin	
	Row / Stage	(Plate fin configuration, forced draft)			
			2 / 22	2 / 34	
	FPI		19	16	
Size (W x H x L)	mm	4.80 (0.80 - 6.10)	36.4 x 714 x 839.5 36.4 x 714 x 868.0		
Refrigeration Control Device			—	Capillary Tube	
Refrigeration Oil		(c.c)	—	RB68A (400)	
Refrigerant (R410A)		g (oz)	—	980 (34.6)	
Thermostat			Electronic Control	Electronic Control	
Protection Device			Electronic Control	Electronic Control	
Air Filter	Material		PET	—	
	Style		Honeycomb		

• Specifications are subject to change without notice for further improvement.

## 2.2. Outdoor Unit: CU-2E15GBE

Outdoor Unit	Indoor unit combination		Operation mode	Capacity (kW)		Power input (kW)		Current (A)
	Operation	Class (kW)		Rating	mini - max	Rating	mini - max	
CU-2E15GBE	One-room Operation	2.2	Cooling	2.20	1.1 - 2.9	0.52	0.22 - 0.75	2.45
			Heating	3.20	0.7 - 4.8	0.85	0.17 - 1.41	3.75
		2.8	Cooling	2.80	1.1 - 3.5	0.75	0.22 - 1.00	3.50
			Heating	4.00	0.7 - 5.5	1.15	0.17 - 1.70	5.10
		3.2	Cooling	3.20	1.1 - 4.0	0.92	0.22 - 1.22	4.30
			Heating	4.50	0.7 - 6.2	1.25	0.17 - 1.81	5.55
	Two-room Operation	2.2 + 2.2	Cooling	4.50	1.5 - 5.0	1.23	0.25 - 1.35	5.75
			Heating	5.40	1.1 - 7.0	1.17	0.21 - 1.67	5.20
		2.2 + 2.8	Cooling	4.50	1.5 - 5.2	1.25	0.25 - 1.53	5.80
			Heating	5.40	1.1 - 7.0	1.23	0.21 - 1.72	5.45
		2.2 + 3.2	Cooling	4.50	1.5 - 5.2	1.25	0.25 - 1.53	5.80
			Heating	5.40	1.1 - 7.0	1.23	0.21 - 1.72	5.45

## 2.3. Outdoor Unit: 3E18EBE

Outdoor Unit	Indoor unit combination		Operation mode	Capacity (kW)		Power input (kW)		Current (A)	
	Operation	Class (kW)		Rating	mini - max	Rating	mini - max		
CU-3E18EBE	One-room Operation	2.2	Cooling	2.20	1.8 - 2.9	0.50	0.34 - 0.81	2.5	
			Heating	3.20	1.2 - 4.1	0.74	0.30 - 1.23	3.7	
		2.8	Cooling	2.80	1.8 - 2.9	0.70	0.34 - 0.81	3.3	
			Heating	4.00	1.2 - 4.3	1.05	0.30 - 1.23	5.0	
		3.2	Cooling	3.20	1.8 - 3.8	0.80	0.34 - 1.36	3.7	
			Heating	4.50	1.2 - 5.8	1.23	0.30 - 2.10	5.8	
		4.0	Cooling	4.00	1.8 - 4.3	1.24	0.34 - 1.99	5.6	
			Heating	5.60	1.2 - 6.8	1.72	0.30 - 2.93	7.7	
		5.0	Cooling	5.00	1.9 - 5.7	1.55	0.34 - 2.13	6.8	
			Heating	6.80	1.2 - 6.9	2.10	0.30 - 2.52	9.2	
		Two-room Operation	2.2 + 2.2	Cooling	4.40	1.9 - 6.2	1.11	0.35 - 2.10	4.9
				Heating	5.80	1.4 - 7.0	1.45	0.31 - 2.55	6.4
	2.2 + 2.8		Cooling	5.00	1.9 - 6.2	1.41	0.35 - 2.10	6.2	
			Heating	6.40	1.4 - 7.0	1.72	0.31 - 2.55	7.6	
	2.2 + 3.2		Cooling	5.20	1.9 - 6.3	1.49	0.35 - 2.11	6.6	
			Heating	6.80	1.4 - 7.3	1.84	0.31 - 2.52	8.2	
	2.2 + 4.0		Cooling	5.20	1.9 - 6.4	1.45	0.35 - 2.11	6.4	
			Heating	6.80	1.4 - 7.3	1.80	0.31 - 2.51	7.9	
	2.2 + 5.0		Cooling	5.20	1.9 - 6.8	1.29	0.36 - 2.15	5.7	
			Heating	6.80	1.4 - 8.0	1.52	0.31 - 2.20	6.7	
	2.8 + 2.8		Cooling	5.20	1.9 - 6.2	1.54	0.35 - 2.10	6.8	
			Heating	6.80	1.4 - 7.0	1.93	0.31 - 2.55	8.5	
	2.8 + 3.2		Cooling	5.20	1.9 - 6.3	1.48	0.35 - 2.11	6.5	
			Heating	6.80	1.4 - 7.3	1.84	0.31 - 2.52	8.1	
	2.8 + 4.0		Cooling	5.20	1.9 - 6.4	1.44	0.35 - 2.11	6.4	
			Heating	6.80	1.4 - 7.3	1.80	0.31 - 2.51	8.0	
	2.8 + 5.0		Cooling	5.20	1.9 - 6.8	1.29	0.36 - 2.15	5.7	
			Heating	6.80	1.4 - 8.0	1.52	0.31 - 2.20	6.7	
	3.2 + 3.2		Cooling	5.20	1.9 - 6.4	1.45	0.35 - 2.12	6.4	
			Heating	6.80	1.4 - 7.5	1.75	0.31 - 2.49	7.7	
	3.2 + 4.0		Cooling	5.20	1.9 - 6.5	1.41	0.35 - 2.12	6.3	
			Heating	6.80	1.4 - 7.5	1.75	0.31 - 2.47	7.8	
	3.2 + 5.0		Cooling	5.20	1.9 - 6.9	1.25	0.36 - 2.15	5.5	
			Heating	6.80	1.4 - 8.0	1.50	0.31 - 2.18	6.6	
	4.0 + 4.0		Cooling	5.20	1.9 - 6.5	1.41	0.35 - 2.12	6.2	
			Heating	6.80	1.4 - 7.6	1.71	0.31 - 2.47	7.5	
	4.0 + 5.0		Cooling	5.20	1.9 - 6.9	1.25	0.36 - 2.16	5.5	
			Heating	6.80	1.4 - 8.0	1.50	0.31 - 2.17	6.6	
	Three-room Operation		2.2 + 2.2 + 2.2	Cooling	5.20	1.9 - 7.2	1.24	0.36 - 2.17	5.4
				Heating	6.78	1.5 - 8.1	1.53	0.32 - 2.12	6.7
			2.2 + 2.2 + 2.8	Cooling	5.20	1.9 - 7.2	1.24	0.36 - 2.17	5.4
				Heating	6.80	1.5 - 8.1	1.53	0.32 - 2.12	6.7
			2.2 + 2.2 + 3.2	Cooling	5.20	1.9 - 7.2	1.23	0.36 - 2.18	5.4
				Heating	6.80	1.4 - 8.3	1.49	0.32 - 2.11	6.5
			2.2 + 2.2 + 4.0	Cooling	5.20	1.8 - 7.3	1.23	0.36 - 2.18	5.4
				Heating	6.80	1.6 - 8.3	1.46	0.32 - 2.11	6.4
		2.2 + 2.8 + 2.8	Cooling	5.20	1.9 - 7.2	1.24	0.36 - 2.17	5.4	
			Heating	6.80	1.5 - 8.1	1.53	0.32 - 2.12	6.7	
		2.2 + 2.8 + 3.2	Cooling	5.20	1.9 - 7.2	1.23	0.36 - 2.18	5.4	
			Heating	6.80	1.4 - 8.3	1.49	0.32 - 2.11	6.5	
		2.2 + 2.8 + 4.0	Cooling	5.20	1.8 - 7.3	1.22	0.36 - 2.18	5.4	
			Heating	6.80	1.6 - 8.3	1.42	0.32 - 2.11	6.5	
		2.2 + 3.2 + 3.2	Cooling	5.20	1.8 - 7.3	1.22	0.36 - 2.18	5.4	
			Heating	6.80	1.6 - 8.3	1.43	0.32 - 2.10	6.3	
2.8 + 2.8 + 2.8		Cooling	5.19	1.9 - 7.2	1.24	0.36 - 2.17	5.4		
		Heating	6.80	1.5 - 8.1	1.53	0.32 - 2.12	6.7		
2.8 + 2.8 + 3.2	Cooling	5.20	1.9 - 7.2	1.23	0.36 - 2.18	5.4			
	Heating	6.80	1.4 - 8.3	1.49	0.32 - 2.11	6.5			

## 2.4. Outdoor Unit: CU-3E23CBPG CU-4E27CBPG

Outdoor Unit	Indoor unit combination		Operation mode	Capacity (kW)		Power input (kW)		Current (A)	
	Operation	Class (kW)		Rating	mini - max	Rating	mini - max		
CU-3E23CBPG	One-room Operation	2.2	Cooling	2.20	1.9 - 2.7	0.45	0.38 - 0.62	2.25	
			Heating	3.20	1.7 - 4.1	0.84	0.37 - 1.31	3.85	
		2.8	Cooling	2.80	2.0 - 3.4	0.62	0.38 - 0.90	2.95	
			Heating	4.00	1.7 - 4.3	1.21	0.37 - 1.40	5.40	
		3.2	Cooling	3.20	2.0 - 3.9	0.72	0.38 - 1.09	3.40	
			Heating	4.50	1.7 - 5.7	1.31	0.37 - 1.91	5.85	
		4.0	Cooling	4.00	2.0 - 4.4	1.03	0.38 - 1.39	4.60	
			Heating	5.60	1.8 - 7.2	1.90	0.37 - 2.92	8.35	
		5.0	Cooling	5.00	2.1 - 5.2	1.61	0.40 - 1.80	7.15	
			Heating	7.10	2.1 - 7.3	2.84	0.43 - 2.89	12.40	
		Two-room Operation	2.2 + 2.2	Cooling	4.40	2.1 - 5.0	0.98	0.40 - 1.26	4.45
				Heating	6.30	1.8 - 8.6	1.41	0.40 - 2.57	6.25
			2.2 + 2.8	Cooling	5.00	2.1 - 6.1	1.23	0.40 - 1.88	5.50
				Heating	7.10	2.1 - 8.6	1.70	0.42 - 2.57	7.55
	2.2 + 3.2		Cooling	5.40	2.2 - 7.0	1.37	0.40 - 2.79	6.10	
			Heating	7.50	2.2 - 8.7	1.74	0.42 - 2.97	7.75	
	2.2 + 4.0		Cooling	6.20	2.2 - 7.1	1.82	0.40 - 2.79	8.00	
			Heating	8.20	2.4 - 8.7	2.01	0.44 - 2.97	8.85	
	2.2 + 5.0		Cooling	6.80	2.5 - 7.1	2.24	0.46 - 2.80	9.85	
			Heating	8.60	3.2 - 9.0	2.16	0.53 - 2.96	9.50	
	2.8 + 2.8		Cooling	5.60	2.2 - 6.9	1.55	0.40 - 2.78	6.85	
			Heating	7.70	2.3 - 8.7	1.93	0.44 - 3.04	8.45	
	2.8 + 3.2		Cooling	6.00	2.2 - 7.0	1.70	0.40 - 2.79	7.55	
			Heating	8.00	2.4 - 8.8	1.97	0.44 - 3.02	8.60	
	2.8 + 4.0		Cooling	6.80	2.2 - 7.1	2.39	0.46 - 2.79	10.50	
			Heating	8.60	2.1 - 9.0	2.175	0.53 - 3.03	9.55	
	2.8 + 5.0		Cooling	6.80	2.5 - 7.2	2.23	0.46 - 2.80	9.85	
			Heating	8.60	3.2 - 9.0	2.15	0.53 - 3.01	9.50	
	3.2 + 3.2		Cooling	6.40	2.2 - 7.3	1.86	0.40 - 2.81	8.15	
			Heating	8.40	2.5 - 9.0	2.05	0.47 - 2.97	9.05	
	3.2 + 4.0		Cooling	6.80	2.5 - 7.3	2.22	0.46 - 2.81	9.65	
			Heating	8.60	3.2 - 9.0	2.09	0.53 - 2.97	9.20	
	3.2 + 5.0		Cooling	6.80	2.6 - 7.4	2.12	0.46 - 2.82	9.30	
			Heating	8.60	3.2 - 9.0	2.08	0.53 - 2.95	9.15	
	4.0 + 4.0		Cooling	6.80	2.5 - 7.3	2.19	0.46 - 2.81	9.65	
			Heating	8.60	3.2 - 9.0	2.08	0.53 - 2.97	9.15	
	4.0 + 5.0		Cooling	6.80	2.7 - 7.4	2.11	0.48 - 2.82	9.30	
			Heating	8.60	3.2 - 9.1	2.07	0.53 - 2.95	9.15	
	5.0 + 5.0		Cooling	6.80	2.8 - 7.4	2.07	0.48 - 2.82	9.15	
			Heating	8.60	3.5 - 9.1	2.07	0.59 - 2.94	9.15	
	Three-room Operation	2.2 + 2.2 + 2.2	Cooling	6.60	2.2 - 7.7	1.85	0.41 - 2.45	8.10	
			Heating	8.53	3.1 - 8.9	1.94	0.50 - 2.80	8.50	
		2.2 + 2.2 + 2.8	Cooling	6.80	2.5 - 8.1	1.98	0.46 - 2.82	8.70	
			Heating	8.60	3.2 - 8.9	1.98	0.51 - 2.80	8.70	
		2.2 + 2.2 + 3.2	Cooling	6.80	2.5 - 8.1	1.99	0.46 - 2.79	8.80	
			Heating	8.60	3.2 - 9.0	1.96	0.51 - 2.78	8.60	
		2.2 + 2.2 + 4.0	Cooling	6.80	2.6 - 8.2	1.97	0.46 - 2.79	8.60	
			Heating	8.60	3.2 - 8.8	1.94	0.51 - 2.76	8.50	
		2.2 + 2.2 + 5.0	Cooling	6.80	2.8 - 8.3	1.96	0.49 - 2.79	8.60	
			Heating	8.60	3.2 - 8.8	1.92	0.51 - 2.76	8.45	
		2.2 + 2.8 + 2.8	Cooling	6.80	2.5 - 8.1	1.95	0.46 - 2.78	8.50	
			Heating	8.60	3.2 - 9.0	1.93	0.51 - 2.73	8.45	
2.2 + 2.8 + 3.2		Cooling	6.80	2.6 - 8.1	1.98	0.46 - 2.79	8.70		
		Heating	8.60	3.2 - 8.8	1.93	0.51 - 2.76	8.45		
2.2 + 2.8 + 4.0		Cooling	6.80	2.7 - 8.2	1.96	0.49 - 2.79	8.60		
		Heating	8.60	3.2 - 9.0	1.91	0.51 - 2.76	8.35		
2.2 + 2.8 + 5.0		Cooling	6.80	2.8 - 8.3	1.95	0.49 - 2.79	8.50		
		Heating	8.60	3.5 - 9.0	1.92	0.56 - 2.73	8.45		
2.2 + 3.2 + 3.2		Cooling	6.80	2.7 - 8.3	1.97	0.46 - 2.80	8.60		
		Heating	8.60	3.2 - 9.1	1.91	0.50 - 2.71	8.35		
2.2 + 3.2 + 4.0	Cooling	6.80	2.8 - 8.3	1.95	0.49 - 2.80	8.50			
	Heating	8.60	3.2 - 9.0	1.89	0.50 - 2.71	8.25			
2.8 + 2.8 + 2.8	Cooling	6.78	2.6 - 8.1	1.94	0.46 - 2.82	8.50			
	Heating	8.58	3.2 - 9.0	1.91	0.51 - 2.76	8.35			



Outdoor Unit	Indoor unit combination		Operation mode	Capacity (kW)		Power input (kW)		Current (A)	
	Operation	Class (kW)		Rating	mini - max	Rating	mini - max		
CU-3E23CBPG	Three-room Operation	2.8 + 2.8 + 3.2	Cooling	6.80	2.7 - 8.2	1.96	0.49 - 2.79	8.60	
			Heating	8.60	3.2 - 9.0	1.92	0.51 - 2.76	8.45	
		2.8 + 2.8 + 4.0	Cooling	6.80	2.8 - 8.2	1.95	0.49 - 2.79	8.50	
			Heating	8.60	3.3 - 9.0	1.90	0.53 - 2.76	8.35	
		2.8 + 3.2 + 3.2	Cooling	6.80	2.7 - 8.3	1.96	0.49 - 2.80	8.60	
			Heating	8.60	3.2 - 9.0	1.90	0.50 - 2.71	8.35	
	2.8 + 3.2 + 4.0	Cooling	6.80	2.8 - 8.4	1.95	0.49 - 2.80	8.50		
		Heating	8.60	3.5 - 9.1	1.88	0.56 - 2.71	8.30		
	CU-4E27CBPG	One-room Operation	2.2	Cooling	2.20	1.9 - 2.7	0.45	0.38 - 0.62	2.25
				Heating	3.20	1.7 - 4.7	0.84	0.37 - 1.83	3.85
			2.8	Cooling	2.80	2.0 - 3.4	0.62	0.38 - 0.90	2.95
				Heating	4.00	1.7 - 4.8	1.21	0.37 - 1.90	5.40
3.2			Cooling	3.20	2.0 - 3.9	0.72	0.38 - 1.09	3.40	
			Heating	4.50	1.7 - 5.8	1.31	0.37 - 2.29	5.85	
4.0	Cooling		4.00	2.0 - 4.4	1.03	0.38 - 1.39	4.60		
	Heating		5.60	1.8 - 7.2	1.90	0.37 - 3.56	8.35		
5.0	Cooling		5.00	2.1 - 5.2	1.61	0.40 - 1.80	7.15		
	Heating		7.10	2.1 - 7.3	2.84	0.43 - 3.56	12.40		
Two-room Operation	2.2 + 2.2		Cooling	4.40	2.1 - 5.0	0.98	0.40 - 1.26	4.45	
			Heating	6.40	1.8 - 9.4	1.48	0.40 - 3.55	6.50	
	2.2 + 2.8	Cooling	5.00	2.1 - 6.1	1.23	0.40 - 1.88	5.50		
		Heating	7.10	2.1 - 9.4	1.70	0.42 - 3.51	7.55		
	2.2 + 3.2	Cooling	5.40	2.2 - 7.0	1.37	0.40 - 2.79	6.10		
		Heating	7.50	2.2 - 9.8	1.74	0.42 - 3.49	7.65		
	2.2 + 4.0	Cooling	6.20	2.2 - 7.1	1.82	0.40 - 2.79	8.00		
		Heating	8.30	2.4 - 9.8	2.06	0.44 - 3.44	9.05		
	2.2 + 5.0	Cooling	7.00	2.5 - 7.2	2.50	0.46 - 2.80	11.00		
		Heating	8.80	3.2 - 9.9	2.26	0.53 - 3.40	9.90		
	2.8 + 2.8	Cooling	5.60	2.2 - 6.9	1.55	0.40 - 2.78	6.85		
		Heating	7.70	2.3 - 9.4	2.02	0.44 - 3.48	8.85		
	2.8 + 3.2	Cooling	6.00	2.2 - 7.0	1.70	0.40 - 2.79	7.55		
		Heating	8.10	2.4 - 9.8	1.98	0.44 - 3.46	8.70		
	2.8 + 4.0	Cooling	6.80	2.2 - 7.1	2.28	0.40 - 2.79	10.00		
		Heating	8.60	2.1 - 9.8	2.175	0.53 - 3.39	9.65		
	2.8 + 5.0	Cooling	7.10	2.5 - 7.2	2.61	0.46 - 2.80	11.50		
		Heating	9.00	3.2 - 9.9	2.39	0.53 - 3.37	10.50		
	3.2 + 3.2	Cooling	6.40	2.2 - 7.3	1.86	0.40 - 2.81	8.15		
		Heating	8.50	2.5 - 10.1	2.11	0.47 - 3.39	9.30		
	3.2 + 4.0	Cooling	7.00	2.5 - 7.3	2.41	0.46 - 2.81	10.60		
		Heating	8.80	3.2 - 10.1	2.23	0.53 - 3.34	9.85		
	3.2 + 5.0	Cooling	7.40	2.6 - 7.4	2.82	0.46 - 2.88	12.30		
		Heating	9.20	3.2 - 10.1	2.39	0.53 - 3.30	10.50		
	4.0 + 4.0	Cooling	7.20	2.5 - 7.3	2.62	0.46 - 2.81	11.50		
		Heating	9.10	3.2 - 10.1	2.36	0.53 - 3.32	10.30		
	4.0 + 5.0	Cooling	7.30	2.7 - 7.4	2.67	0.48 - 2.82	11.70		
		Heating	9.40	3.2 - 10.2	2.48	0.53 - 3.30	10.90		
	5.0 + 5.0	Cooling	7.50	2.8 - 7.6	2.86	0.48 - 2.87	12.50		
		Heating	9.40	3.5 - 10.2	2.47	0.59 - 3.29	10.90		
	Three-room Operation	2.2 + 2.2 + 2.2	Cooling	6.60	2.2 - 7.8	1.66	0.41 - 2.49	7.40	
			Heating	8.61	3.1 - 10.4	1.99	0.50 - 3.25	8.80	
		2.2 + 2.2 + 2.8	Cooling	7.00	2.5 - 8.1	1.89	0.46 - 2.85	8.25	
			Heating	8.80	3.2 - 10.4	2.01	0.51 - 3.22	8.85	
		2.2 + 2.2 + 3.2	Cooling	7.30	2.5 - 8.2	1.98	0.46 - 2.79	8.70	
			Heating	8.90	3.2 - 10.4	2.03	0.51 - 3.22	8.95	
2.2 + 2.2 + 4.0		Cooling	7.80	2.6 - 8.2	2.33	0.46 - 2.83	10.30		
		Heating	9.20	3.2 - 10.4	2.15	0.51 - 3.18	9.50		
2.2 + 2.2 + 5.0		Cooling	8.00	2.8 - 8.3	2.46	0.49 - 2.82	10.80		
		Heating	9.40	3.2 - 10.4	2.12	0.51 - 3.18	9.30		
2.2 + 2.8 + 2.8		Cooling	7.40	2.5 - 8.1	2.14	0.46 - 2.79	9.40		
		Heating	9.00	3.2 - 10.4	2.09	0.51 - 3.19	9.20		
2.2 + 2.8 + 3.2		Cooling	7.60	2.6 - 8.2	2.24	0.46 - 2.84	9.85		
		Heating	9.20	3.2 - 10.4	2.11	0.51 - 3.18	9.30		
2.2 + 2.8 + 4.0		Cooling	8.00	2.7 - 8.2	2.51	0.49 - 2.80	11.00		
		Heating	9.40	3.2 - 10.4	2.16	0.51 - 3.14	9.50		

Outdoor Unit	Indoor unit combination		Operation mode	Capacity (kW)		Power input (kW)		Current (A)
	Operation	Class (kW)		Rating	mini - max	Rating	mini - max	
CU-4E27CBPG	Three-room Operation	2.2 + 2.8 + 5.0	Cooling	8.00	2.8 - 8.3	2.46	0.49 - 2.80	10.80
			Heating	9.40	3.5 - 10.4	2.08	0.56 - 3.15	9.15
		2.2 + 3.2 + 3.2	Cooling	7.90	2.7 - 8.3	2.29	0.46 - 2.81	10.10
			Heating	9.30	3.2 - 10.5	2.13	0.50 - 3.18	9.40
		2.2 + 3.2 + 4.0	Cooling	8.00	2.8 - 8.4	2.38	0.49 - 2.84	10.40
			Heating	9.40	3.2 - 10.5	2.15	0.50 - 3.14	9.50
		2.2 + 3.2 + 5.0	Cooling	8.00	2.8 - 8.3	2.47	0.49 - 2.84	10.90
			Heating	9.40	3.7 - 10.5	2.17	0.62 - 3.14	9.55
		2.2 + 4.0 + 4.0	Cooling	8.00	2.8 - 8.4	2.38	0.49 - 2.81	10.40
			Heating	9.40	3.6 - 10.5	2.11	0.62 - 3.11	9.30
		2.2 + 4.0 + 5.0	Cooling	8.00	2.8 - 8.3	2.47	0.49 - 2.81	10.90
			Heating	9.40	3.9 - 10.5	2.12	0.66 - 3.11	9.30
		2.2 + 5.0 + 5.0	Cooling	8.00	2.9 - 8.4	2.43	0.49 - 2.83	10.70
			Heating	9.40	4.1 - 10.5	2.17	0.70 - 3.12	9.55
		2.8 + 2.8 + 2.8	Cooling	7.80	2.6 - 8.1	2.45	0.46 - 2.82	10.80
			Heating	9.24	3.2 - 10.4	2.17	0.51 - 3.16	9.55
		2.8 + 2.8 + 3.2	Cooling	8.00	2.7 - 8.2	2.51	0.49 - 2.81	11.00
			Heating	9.40	3.2 - 10.4	2.19	0.51 - 3.15	9.65
		2.8 + 2.8 + 4.0	Cooling	8.00	2.8 - 8.2	2.51	0.49 - 2.79	11.00
			Heating	9.40	3.3 - 10.4	2.14	0.53 - 3.13	9.40
		2.8 + 2.8 + 5.0	Cooling	8.00	2.8 - 8.3	2.46	0.49 - 2.79	10.80
			Heating	9.40	3.8 - 10.4	2.10	0.64 - 3.12	9.20
		2.8 + 3.2 + 3.2	Cooling	8.00	2.7 - 8.4	2.38	0.49 - 2.85	10.40
			Heating	9.40	3.2 - 10.5	2.17	0.50 - 3.15	9.55
		2.8 + 3.2 + 4.0	Cooling	8.00	2.8 - 8.4	2.38	0.49 - 2.82	10.40
			Heating	9.40	3.5 - 10.5	2.13	0.56 - 3.12	9.40
		2.8 + 3.2 + 5.0	Cooling	8.00	2.8 - 8.4	2.34	0.49 - 2.83	10.30
			Heating	9.40	3.9 - 10.5	2.15	0.66 - 3.12	9.50
		2.8 + 4.0 + 4.0	Cooling	8.00	2.8 - 8.4	2.38	0.49 - 2.80	10.40
			Heating	9.40	3.8 - 10.5	2.06	0.64 - 3.08	9.05
		2.8 + 4.0 + 5.0	Cooling	8.00	2.8 - 8.4	2.34	0.49 - 2.80	10.30
			Heating	9.40	4.0 - 10.5	2.10	0.68 - 3.08	9.20
		2.8 + 5.0 + 5.0	Cooling	8.00	2.9 - 8.5	2.34	0.52 - 2.80	10.30
			Heating	9.40	4.2 - 10.5	2.14	0.70 - 3.08	9.40
		3.2 + 3.2 + 3.2	Cooling	7.98	2.8 - 8.5	2.30	0.49 - 2.83	10.10
			Heating	9.39	3.3 - 10.5	2.16	0.52 - 3.18	9.50
		3.2 + 3.2 + 4.0	Cooling	8.00	2.8 - 8.4	2.39	0.49 - 2.80	10.50
			Heating	9.40	3.7 - 10.5	2.14	0.62 - 3.15	9.40
		3.2 + 3.2 + 5.0	Cooling	8.00	2.8 - 8.4	2.39	0.49 - 2.83	10.50
			Heating	9.40	4.0 - 10.5	2.13	0.68 - 3.12	9.40
	3.2 + 4.0 + 4.0	Cooling	8.00	2.8 - 8.4	2.39	0.49 - 2.82	10.50	
		Heating	9.40	3.9 - 10.5	2.12	0.66 - 3.12	9.30	
	3.2 + 4.0 + 5.0	Cooling	8.00	2.9 - 8.4	2.35	0.49 - 2.82	10.30	
		Heating	9.40	4.1 - 10.5	2.10	0.70 - 3.10	9.20	
	3.2 + 5.0 + 5.0	Cooling	8.00	2.9 - 8.5	2.35	0.52 - 2.81	10.30	
		Heating	9.40	4.2 - 10.5	2.06	0.70 - 3.08	9.05	
	4.0 + 4.0 + 4.0	Cooling	7.98	2.9 - 8.4	2.39	0.49 - 2.84	10.50	
		Heating	9.39	4.0 - 10.5	2.10	0.68 - 3.08	9.20	
	4.0 + 4.0 + 5.0	Cooling	8.00	2.9 - 8.4	2.39	0.52 - 2.81	10.50	
		Heating	9.40	4.2 - 10.5	2.08	0.70 - 3.08	9.15	
	Four-room Operation	2.2 + 2.2 + 2.2 + 2.2	Cooling	8.00	2.7 - 8.8	2.15	0.49 - 2.84	9.50
			Heating	9.40	3.2 - 10.5	2.08	0.55 - 3.14	9.15
2.2 + 2.2 + 2.2 + 2.8		Cooling	8.00	2.8 - 8.8	2.14	0.49 - 2.88	9.40	
		Heating	9.40	3.2 - 10.5	2.06	0.55 - 3.12	9.05	
2.2 + 2.2 + 2.2 + 3.2		Cooling	8.00	2.8 - 8.9	2.13	0.49 - 2.88	9.40	
		Heating	9.40	3.4 - 10.5	2.12	0.59 - 3.18	9.30	
2.2 + 2.2 + 2.2 + 4.0		Cooling	8.00	2.8 - 8.9	2.11	0.49 - 2.87	9.30	
		Heating	9.40	3.8 - 10.5	2.09	0.64 - 3.14	9.20	
2.2 + 2.2 + 2.2 + 5.0		Cooling	8.00	2.8 - 8.9	2.11	0.49 - 2.84	9.30	
		Heating	9.40	4.0 - 10.5	2.12	0.68 - 3.11	9.30	
2.2 + 2.2 + 2.8 + 2.8		Cooling	8.00	2.8 - 8.8	2.13	0.49 - 2.87	9.40	
		Heating	9.40	3.5 - 10.5	2.05	0.61 - 3.11	9.05	
2.2 + 2.2 + 2.8 + 3.2		Cooling	8.00	2.8 - 8.9	2.12	0.49 - 2.87	9.30	
		Heating	9.40	3.7 - 10.5	2.10	0.62 - 3.16	9.20	
2.2 + 2.2 + 2.8 + 4.0		Cooling	8.00	2.8 - 8.9	2.09	0.49 - 2.84	9.20	
		Heating	9.40	3.9 - 10.5	2.07	0.66 - 3.11	9.10	

Outdoor Unit	Indoor unit combination		Operation mode	Capacity (kW)		Power input (kW)		Current (A)
	Operation	Class (kW)		Rating	mini - max	Rating	mini - max	
CU-4E27CBPG	Four-room Operation	2.2 + 2.2 + 2.8 + 5.0	Cooling	8.00	2.9 - 8.9	2.11	0.52 - 2.88	9.30
			Heating	9.40	4.1 - 10.5	2.09	0.70 - 3.10	9.20
		2.2 + 2.2 + 3.2 + 3.2	Cooling	8.00	2.8 - 8.9	2.09	0.50 - 2.87	9.20
			Heating	9.40	3.8 - 10.5	2.11	0.64 - 3.19	9.30
		2.2 + 2.2 + 3.2 + 4.0	Cooling	8.00	2.8 - 8.9	2.08	0.50 - 2.84	9.15
			Heating	9.40	4.0 - 10.5	2.08	0.68 - 3.15	9.15
		2.2 + 2.2 + 3.2 + 5.0	Cooling	8.00	2.9 - 9.0	2.04	0.52 - 2.86	8.95
			Heating	9.40	4.1 - 10.5	2.11	0.70 - 3.08	9.30
		2.2 + 2.2 + 4.0 + 4.0	Cooling	8.00	2.9 - 9.0	2.06	0.52 - 2.85	9.05
			Heating	9.40	4.1 - 10.5	2.05	0.70 - 3.11	9.05
		2.2 + 2.2 + 4.0 + 5.0	Cooling	8.00	2.9 - 9.0	2.02	0.52 - 2.88	8.85
			Heating	9.40	4.2 - 10.5	2.08	0.70 - 3.06	9.15
		2.2 + 2.8 + 2.8 + 2.8	Cooling	8.00	2.8 - 8.8	2.12	0.49 - 2.85	9.30
			Heating	9.40	3.8 - 10.5	2.04	0.64 - 3.08	8.95
		2.2 + 2.8 + 2.8 + 3.2	Cooling	8.00	2.8 - 8.9	2.10	0.49 - 2.85	9.20
			Heating	9.40	3.9 - 10.5	2.08	0.66 - 3.13	9.15
		2.2 + 2.8 + 2.8 + 4.0	Cooling	8.00	2.8 - 8.9	2.13	0.49 - 2.86	9.40
			Heating	9.40	4.0 - 10.5	2.05	0.68 - 3.08	9.05
		2.2 + 2.8 + 2.8 + 5.0	Cooling	8.00	2.9 - 8.9	2.11	0.52 - 2.86	9.30
			Heating	9.40	4.2 - 10.5	2.08	0.70 - 3.08	9.15
		2.2 + 2.8 + 3.2 + 3.2	Cooling	8.00	2.8 - 8.9	2.13	0.50 - 2.85	9.40
			Heating	9.40	4.0 - 10.5	2.09	0.68 - 3.18	9.20
		2.2 + 2.8 + 3.2 + 4.0	Cooling	8.00	2.9 - 9.0	2.07	0.52 - 2.86	9.15
			Heating	9.40	4.1 - 10.5	2.06	0.70 - 3.12	9.05
		2.2 + 2.8 + 3.2 + 5.0	Cooling	8.00	2.9 - 9.0	2.03	0.52 - 2.84	8.95
			Heating	9.40	4.2 - 10.5	2.09	0.70 - 3.08	9.20
		2.2 + 2.8 + 4.0 + 4.0	Cooling	8.00	2.9 - 9.0	2.04	0.52 - 2.87	8.95
			Heating	9.40	4.2 - 10.5	2.03	0.70 - 3.08	8.95
		2.2 + 3.2 + 3.2 + 3.2	Cooling	8.00	2.8 - 9.1	2.04	0.50 - 2.87	8.95
			Heating	9.40	4.0 - 10.6	2.11	0.68 - 3.12	9.30
		2.2 + 3.2 + 3.2 + 4.0	Cooling	8.00	2.9 - 9.1	2.02	0.52 - 2.84	8.85
			Heating	9.40	4.1 - 10.6	2.08	0.70 - 3.08	9.15
		2.2 + 3.2 + 3.2 + 5.0	Cooling	8.00	3.0 - 9.2	2.00	0.53 - 2.87	8.80
			Heating	9.40	4.2 - 10.6	2.11	0.70 - 3.06	9.30
		2.2 + 3.2 + 4.0 + 4.0	Cooling	8.00	2.9 - 9.1	2.09	0.52 - 2.86	9.20
			Heating	9.40	4.2 - 10.6	2.06	0.70 - 3.06	9.05
		2.8 + 2.8 + 2.8 + 2.8	Cooling	8.00	2.8 - 8.8	2.11	0.49 - 2.84	9.30
			Heating	9.40	3.9 - 10.5	2.03	0.66 - 3.08	8.95
		2.8 + 2.8 + 2.8 + 3.2	Cooling	8.00	2.8 - 8.9	2.09	0.49 - 2.87	9.20
			Heating	9.40	4.0 - 10.5	2.06	0.68 - 3.10	9.05
		2.8 + 2.8 + 2.8 + 4.0	Cooling	8.00	2.9 - 8.9	2.12	0.52 - 2.85	9.30
			Heating	9.40	4.1 - 10.5	2.04	0.70 - 3.07	8.95
		2.8 + 2.8 + 2.8 + 5.0	Cooling	8.00	2.9 - 8.9	2.11	0.52 - 2.85	9.30
			Heating	9.40	4.2 - 10.5	2.07	0.70 - 3.07	9.15
		2.8 + 2.8 + 3.2 + 3.2	Cooling	8.00	2.9 - 9.0	2.08	0.50 - 2.87	9.15
			Heating	9.40	4.0 - 10.5	2.07	0.68 - 3.14	9.15
		2.8 + 2.8 + 3.2 + 4.0	Cooling	8.00	2.9 - 9.0	2.05	0.52 - 2.88	9.05
			Heating	9.40	4.2 - 10.5	2.04	0.70 - 3.08	8.95
2.8 + 2.8 + 4.0 + 4.0	Cooling	8.00	3.0 - 9.0	2.04	0.52 - 2.86	8.95		
	Heating	9.40	4.2 - 10.5	2.02	0.70 - 3.07	8.85		
2.8 + 3.2 + 3.2 + 3.2	Cooling	8.00	2.9 - 9.1	2.03	0.52 - 2.86	8.95		
	Heating	9.40	4.1 - 10.6	2.09	0.70 - 3.10	9.20		
2.8 + 3.2 + 3.2 + 4.0	Cooling	8.00	2.9 - 9.1	2.01	0.52 - 2.88	8.85		
	Heating	9.40	4.2 - 10.6	2.07	0.70 - 3.08	9.15		
3.2 + 3.2 + 3.2 + 3.2	Cooling	8.00	2.9 - 9.2	2.00	0.53 - 2.85	8.80		
	Heating	9.40	4.2 - 10.6	2.11	0.70 - 3.08	9.30		
3.2 + 3.2 + 3.2 + 4.0	Cooling	8.00	3.0 - 9.2	1.98	0.53 - 2.87	8.70		
	Heating	9.40	4.2 - 10.6	2.08	0.70 - 3.06	9.10		

### 3 Features

- Product



- A single OUTDOOR unit enable air conditioning of up to two separate rooms for CU-2E15GBE.
- A single OUTDOOR unit enable air conditioning of up to three separate rooms for CU-3E18EBE and CU-3E23CBPG.
- A single OUTDOOR unit enable air conditioning of up to four separate rooms for CU-4E27CBPG.

CONNECTABLE INDOOR UNIT			OUTDOOR UNIT											
			CU-2E15GBE		CU-3E18EBE			CU-3E23CBPG			CU-4E27CBPG			
ROOM		Type												
		A	B	A	B	C	A	B	C	A	B	C	D	
Floor Type	2.8kW	CS-E9GFEW	⊙	⊙	⊙	⊙	⊙	⊙	⊙	⊙	⊙	⊙	⊙	
	3.2kW	CS-E12GFEW	⊙	⊙	⊙	⊙	⊙	⊙	⊙	⊙	⊙	⊙	⊙	
	5.0kW	CS-E18GFEW	—	—	⊙	⊙	⊙	⊙	⊙	⊙	⊙	⊙	⊙	
Capacity range of connectable indoor units			From 4.4 to 5.4kW		From 5.0 to 9.0kW			From 5.0 to 10kW			From 5.0 to 13.6kW			
Pipe length	1-room maximum pipe length (m)		20		25			25			25			
	Allowable elevation (m)		10		15			15			15			
	Total allowable pipe length (m)		30		50			50			70			
	Total pipe length for maximum chargeless length (m)		20		30			30			40			
	Additional gas amount over chargeless length (m)		20		20			20			20			

**Remarks;**

1. At least two indoor units must be connected.
2. The total nominal cooling capacity of indoor units that will be connected to outdoor unit must be within connectable capacity range of indoor unit. (shown in the above table.)

### 3.1. Remote Control

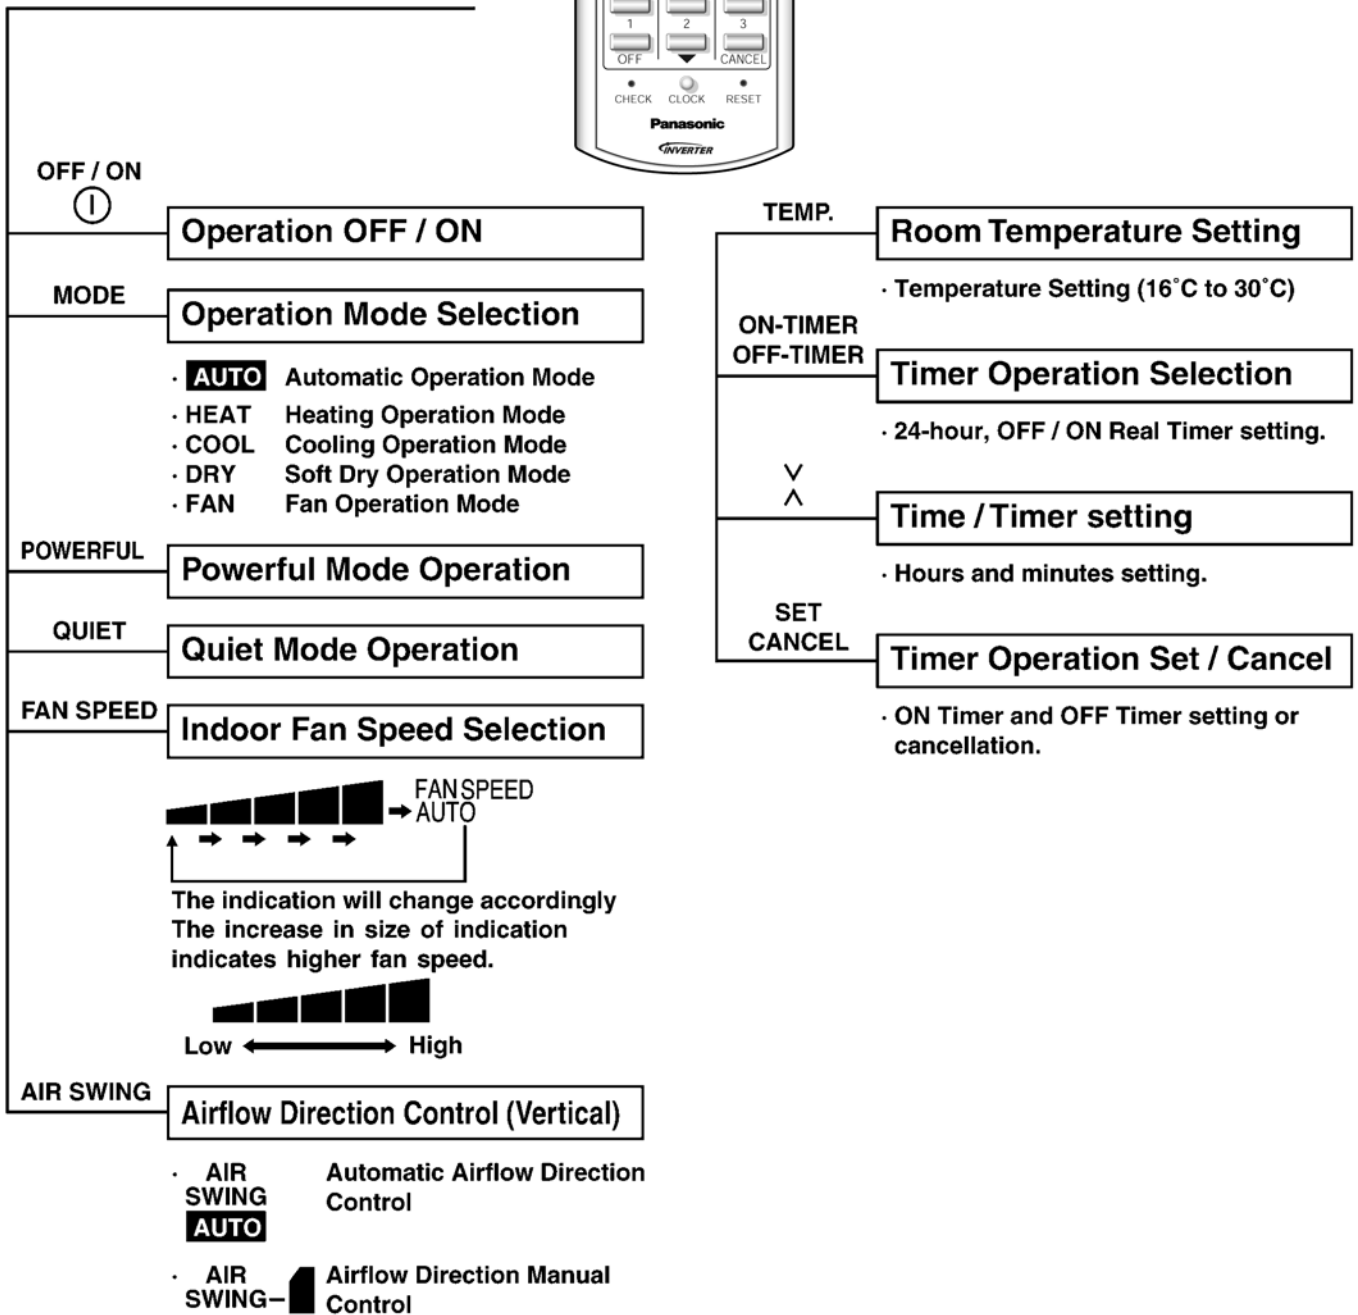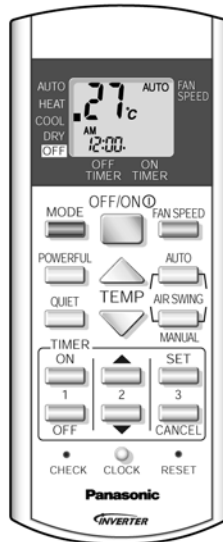

## 3.2. Indoor Unit



### Simultaneous Operation Control

### Auto OFF/ON button

- Press for < 5s to run Automatic Operation. (Used when the remote control cannot be used.)
- Press continuously for 5s and < 8s to run Forced Cooling Operation.
- Press continuously for 8s and < 11s to standby Forced Heating Operation. Then press Timer ▼ button, 2 beep sound is heard, Forced Heating Operation is executed.
- Press Auto OFF/ON button to off Automatic, Forced Cooling, or Forced Heating Operation.

### Operation Indication Lamps (LED)

- POWER (Green) ..... Lights up in operation, blinks in Automatic Operation Mode judging, deice, On Timer sampling and Hot Start operation.
- TIMER (Orange) ..... Lights up in Timer Setting. Blinks in Self Diagnosis Control.
- QUIET (Orange) ..... Lights up in Quiet Mode Operation.
- POWERFUL (Orange) ... Lights up when Powerful Mode is selected.
- AIR SWING (Orange) .... Lights up in Auto Air Swing.

### Four Operation Modes

- Automatic, Heating, Cooling and Soft Dry Operation.

### Automatic and 5 Manual Indoor Fan Speeds

### Airflow Direction Control

- Automatic air swing and manual adjusted by remote control for vertical airflow.
- Manually adjusted by hand for horizontal airflow.

### Powerful Mode

- For quick cooling or heating.

### Quiet Mode

- To provide quiet operation.

### ON Timer and OFF Timer

### Automatic Restart Control

- Operation is restarted after power failure at previous setting mode.

### Microcomputer-controlled Room Temperature Control

### Breakdown Self Diagnosis Function

### Dew Prevention Control

### Freeze Prevention Control

### Cold Draft Prevention Control


### Hot Start

### Intake Air Temperature Control

### High Pressure Control

### Deice Operation

### 3.3. Outdoor Unit

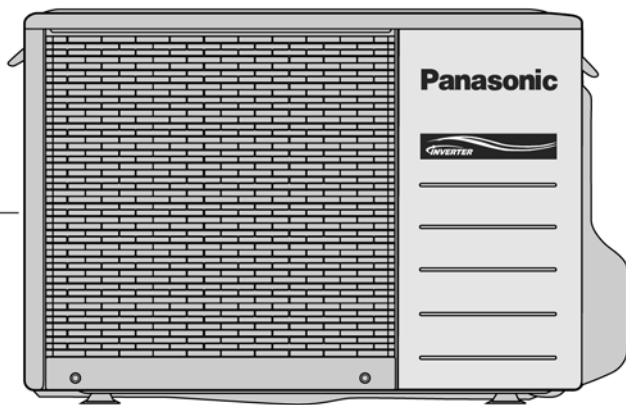

**Time Delay Safety Control**

**30 seconds Forced Operation**

**Overload Protection Control**

**Total Running Current Control**

**Compressor Overheating  
Prevention Control**

**IPM (Power Transistor)  
Overheating Protection Control**

**Low Operation Frequency  
Protection Control**


**Minimum Operation Frequency  
Protection Control**

**Outdoor Air Temperature  
Control**


**Deice Operation**

## 4 Location of Controls and Components


### 4.1. Indoor Unit

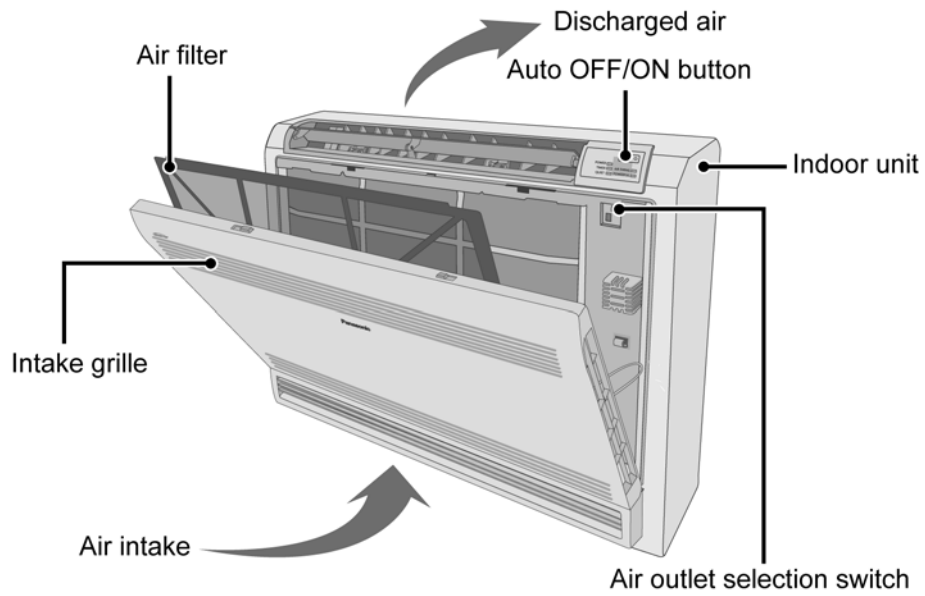

### 4.2. Outdoor Unit

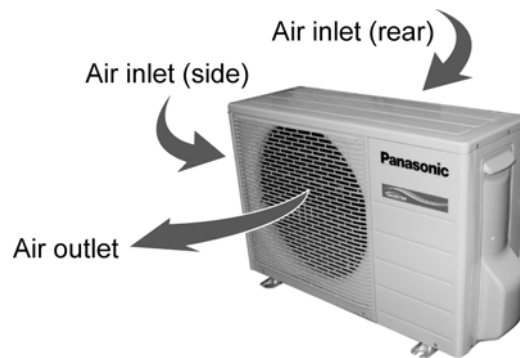


### 4.3. Remote Control

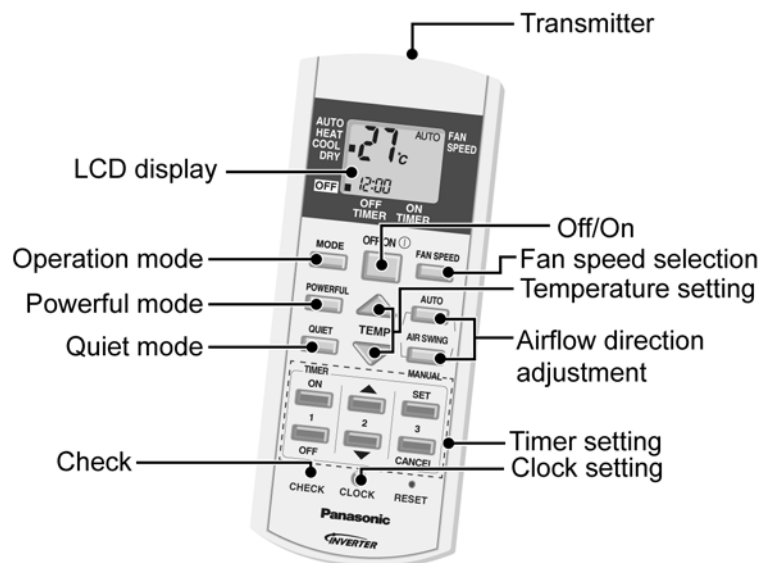




# 5 Dimensions

## 5.1. Indoor Unit

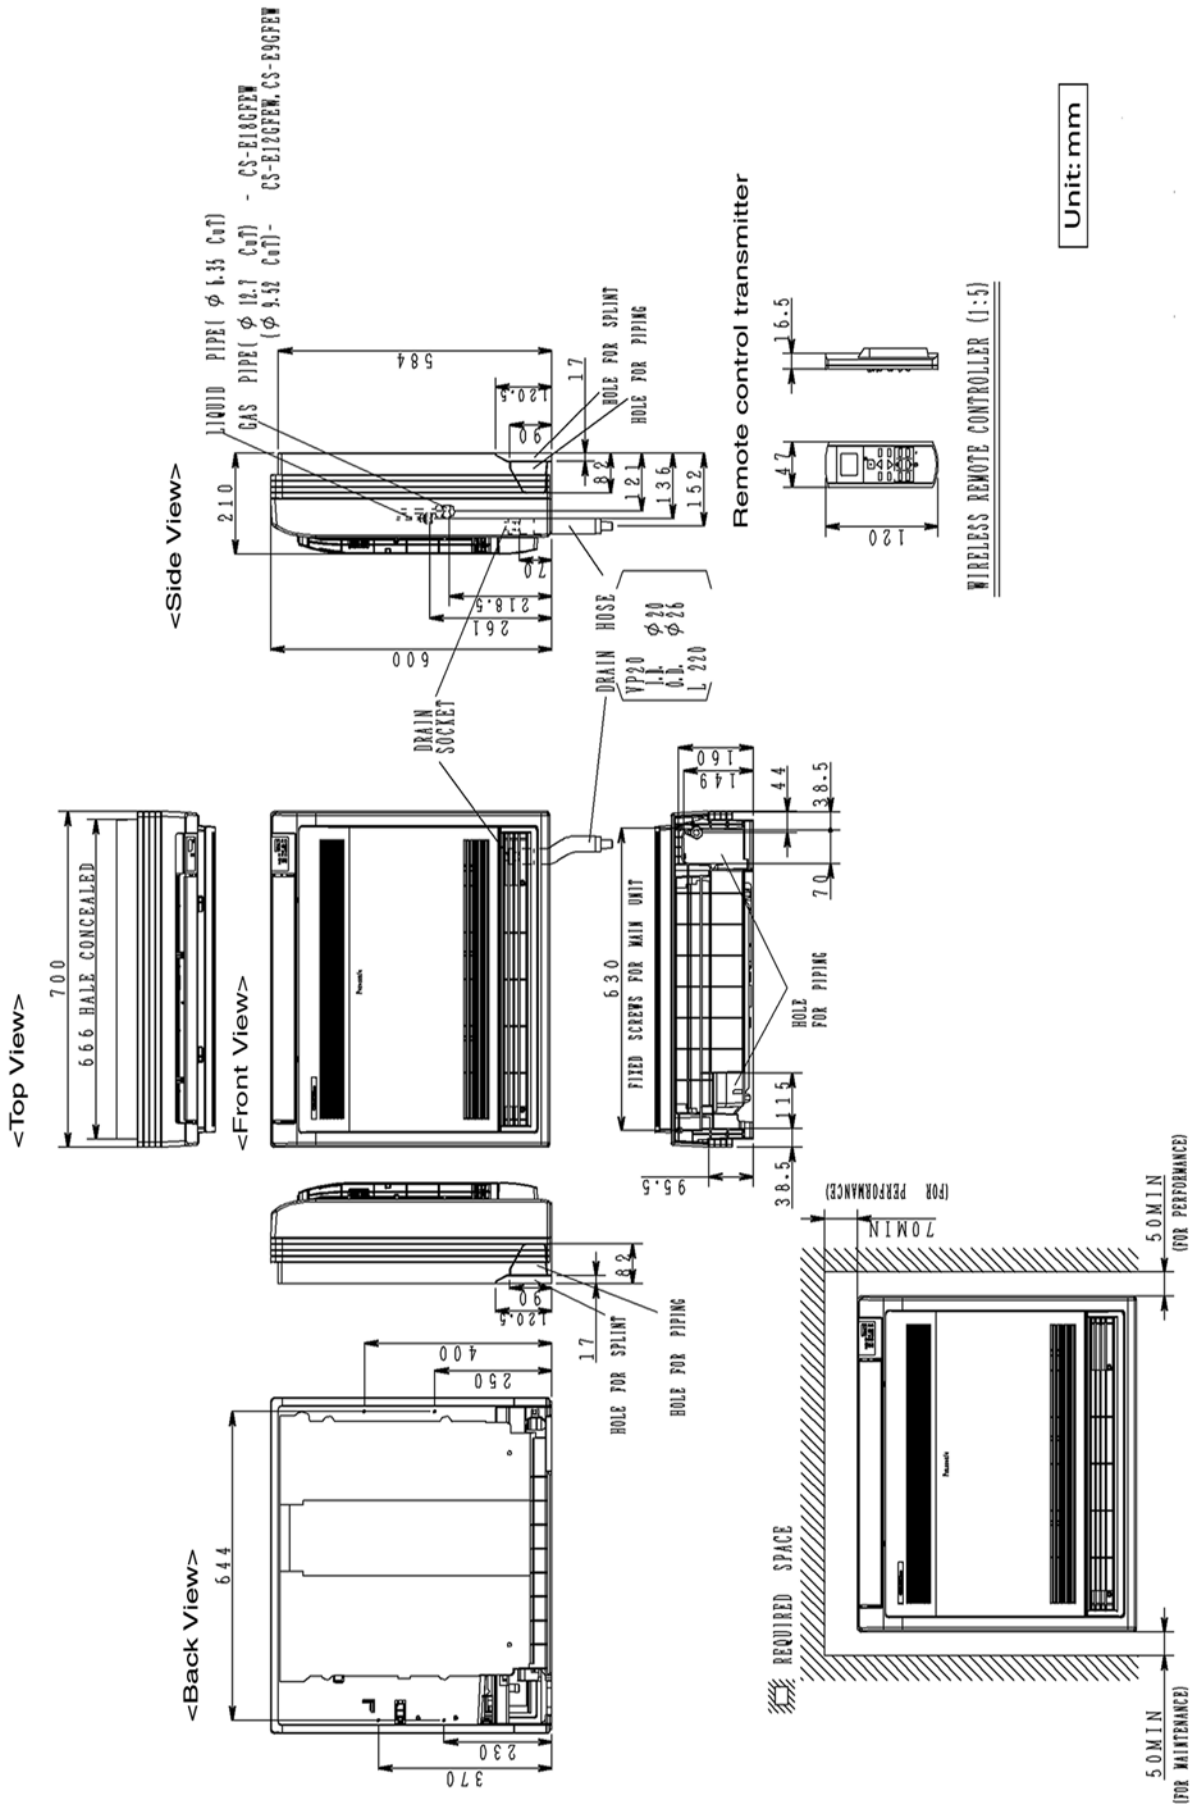


## 5.2. Outdoor Unit

### 5.2.1. CU-E9GFE CU-E12GFE

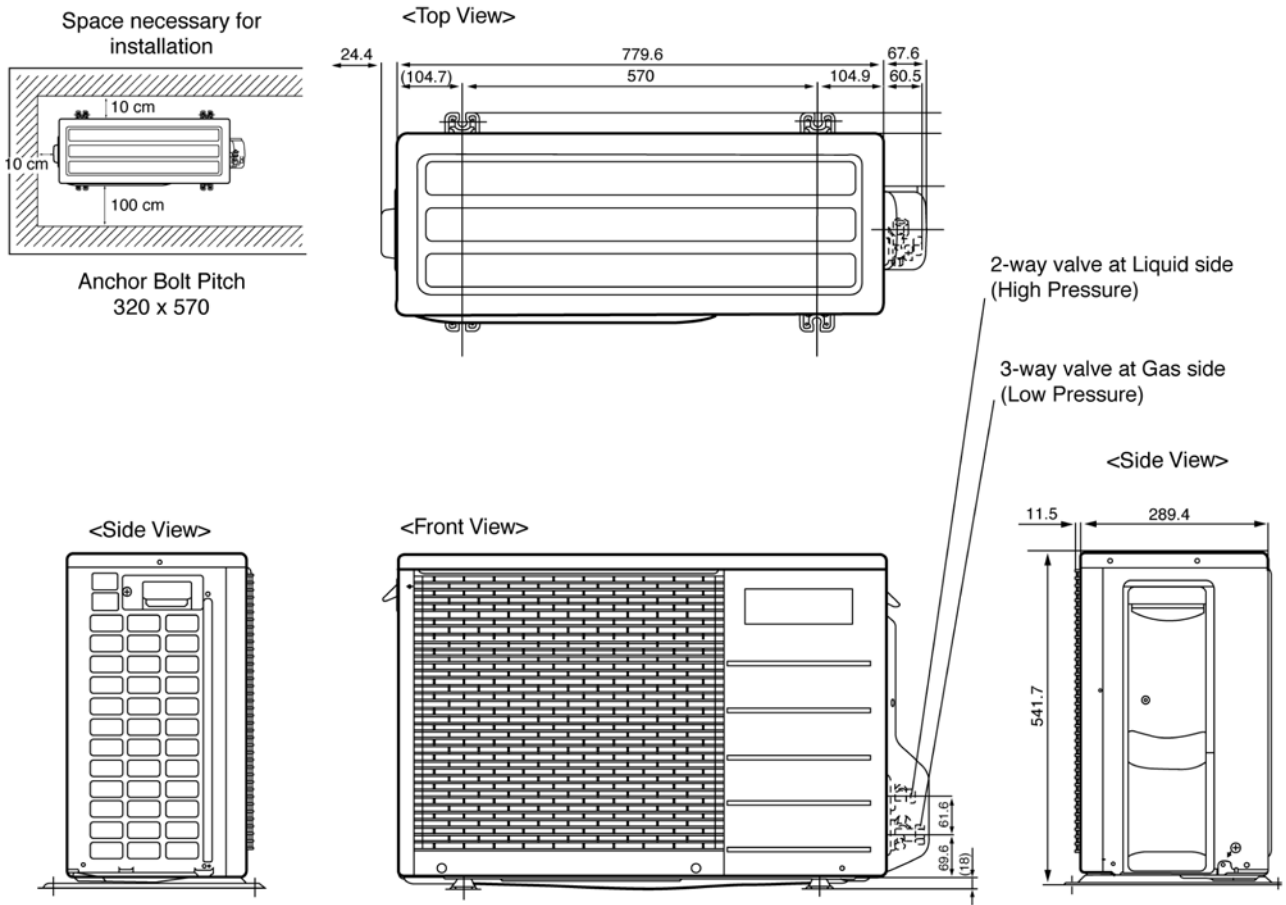


Unit: mm


## 5.2.2. CU-E18GFE

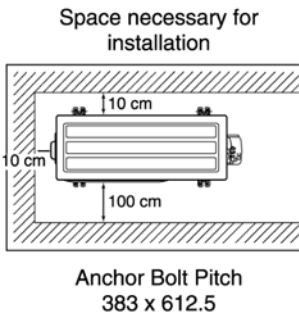


<Top View>

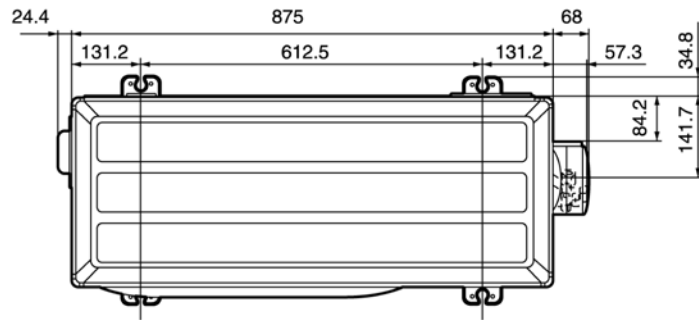


<Side View>

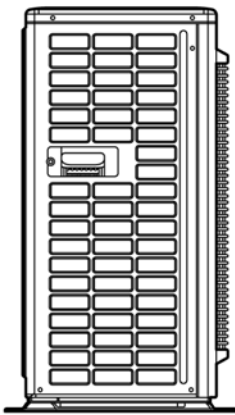

<Front View>

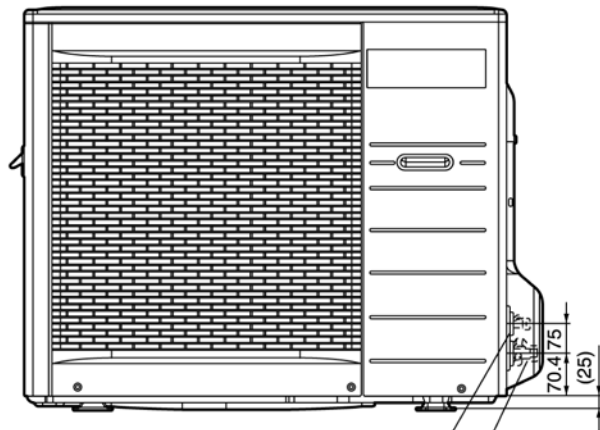

<Side View>

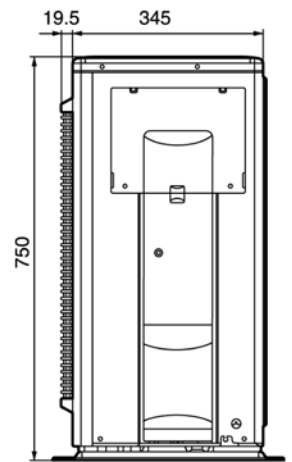


3-way valve at Gas side  
(Low Pressure)

2-way valve at Liquid side  
(High Pressure)


Unit:mm

# 6 Refrigeration Cycle Diagram

## 6.1. CS-E9GFEW CU-E9GFE CS-E12GFEW CU-E12GFE

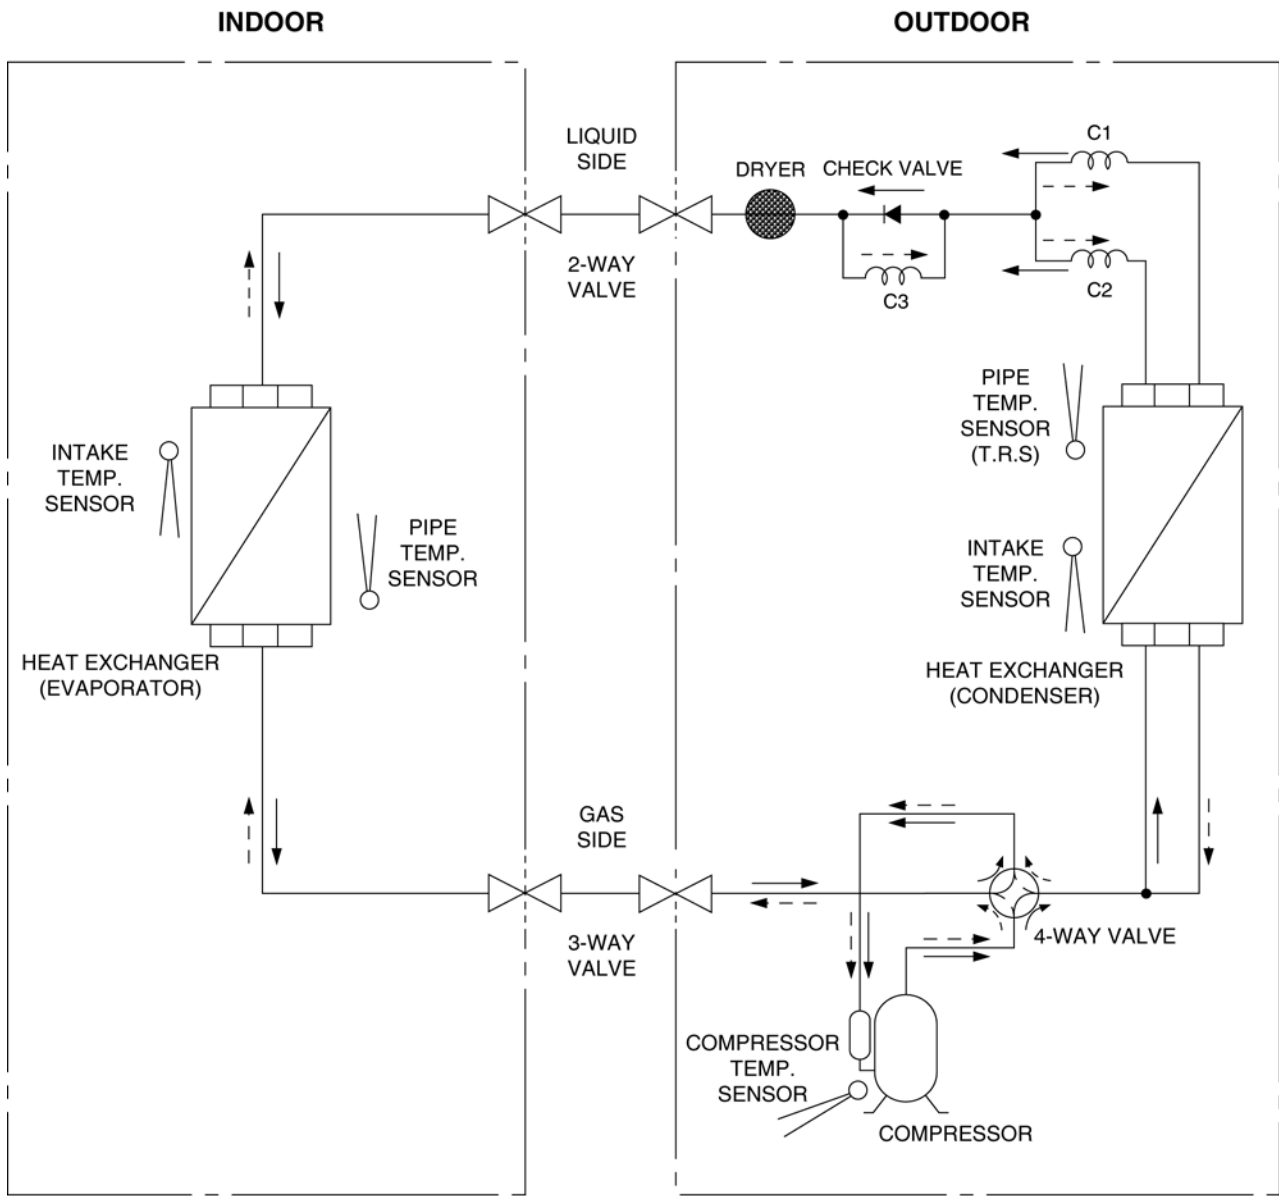


## 6.2. CS-E18GFEW CU-E18GFE

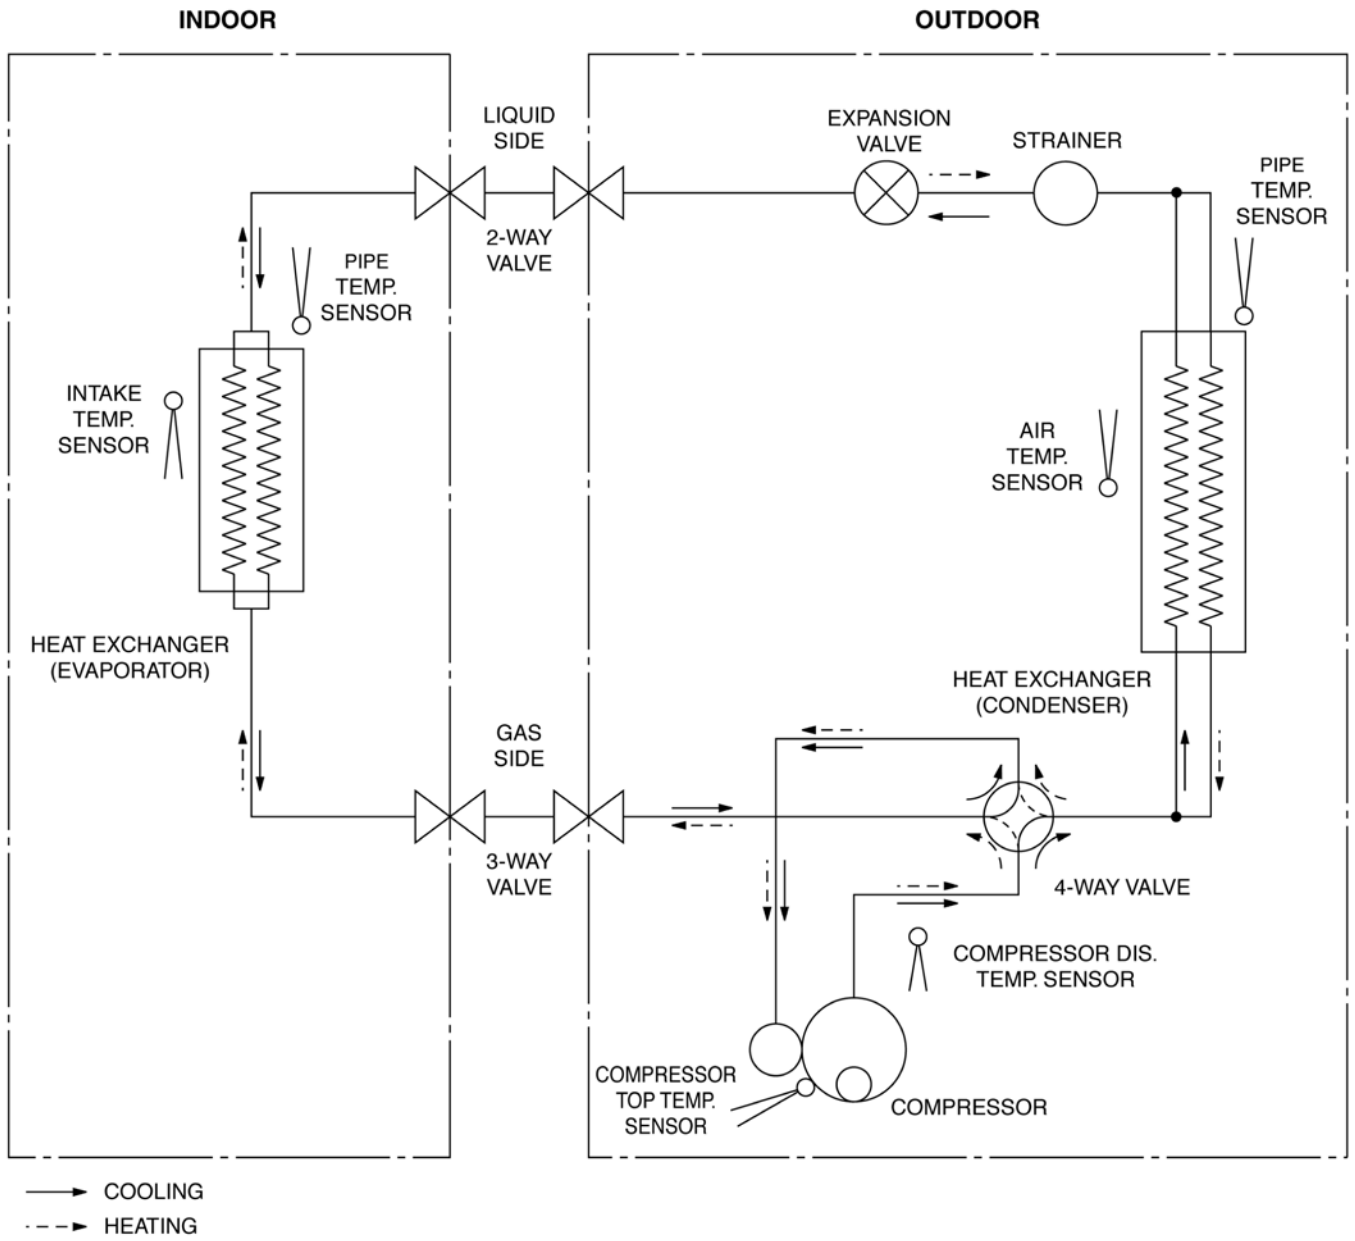



# 7 Wiring Connection Diagram

## 7.1. Indoor Unit

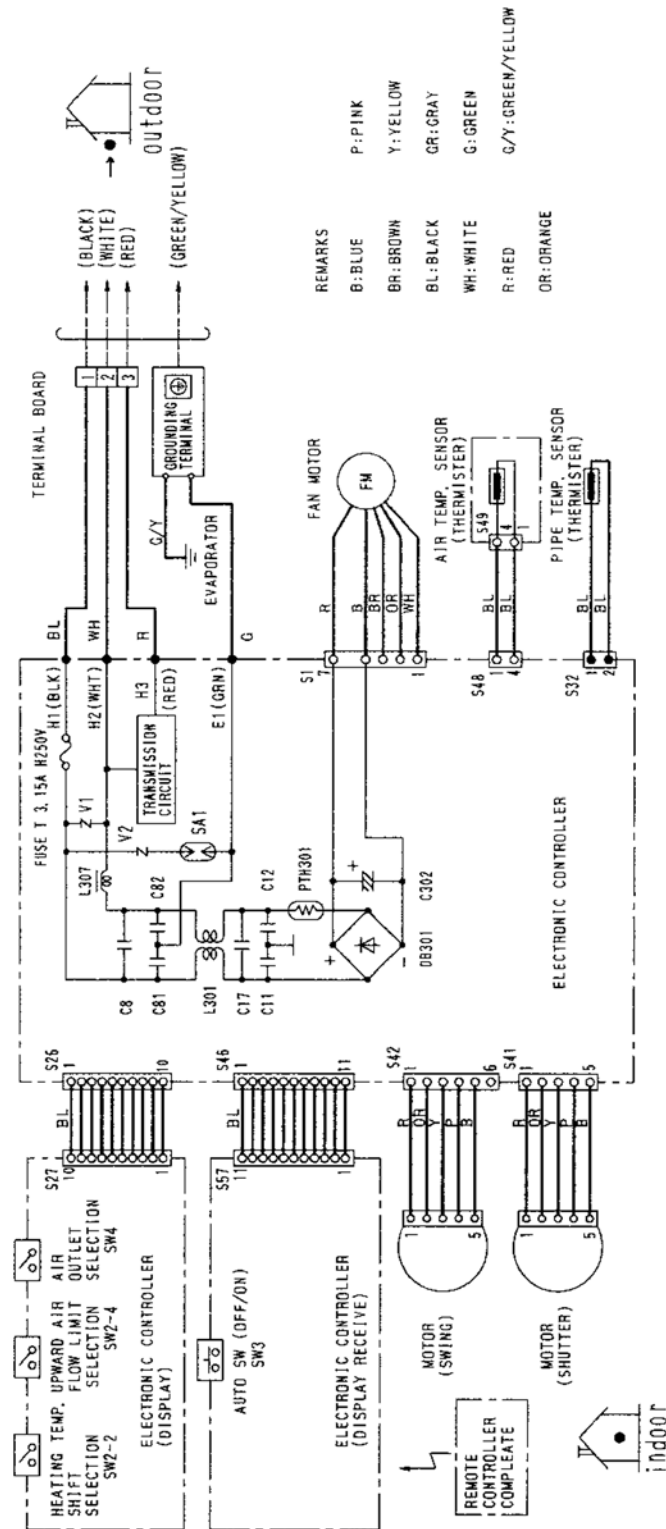

## 7.2. Outdoor Unit


### 7.2.1. CU-E9GFE CU-E12GFE

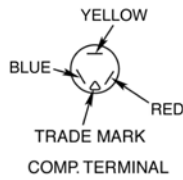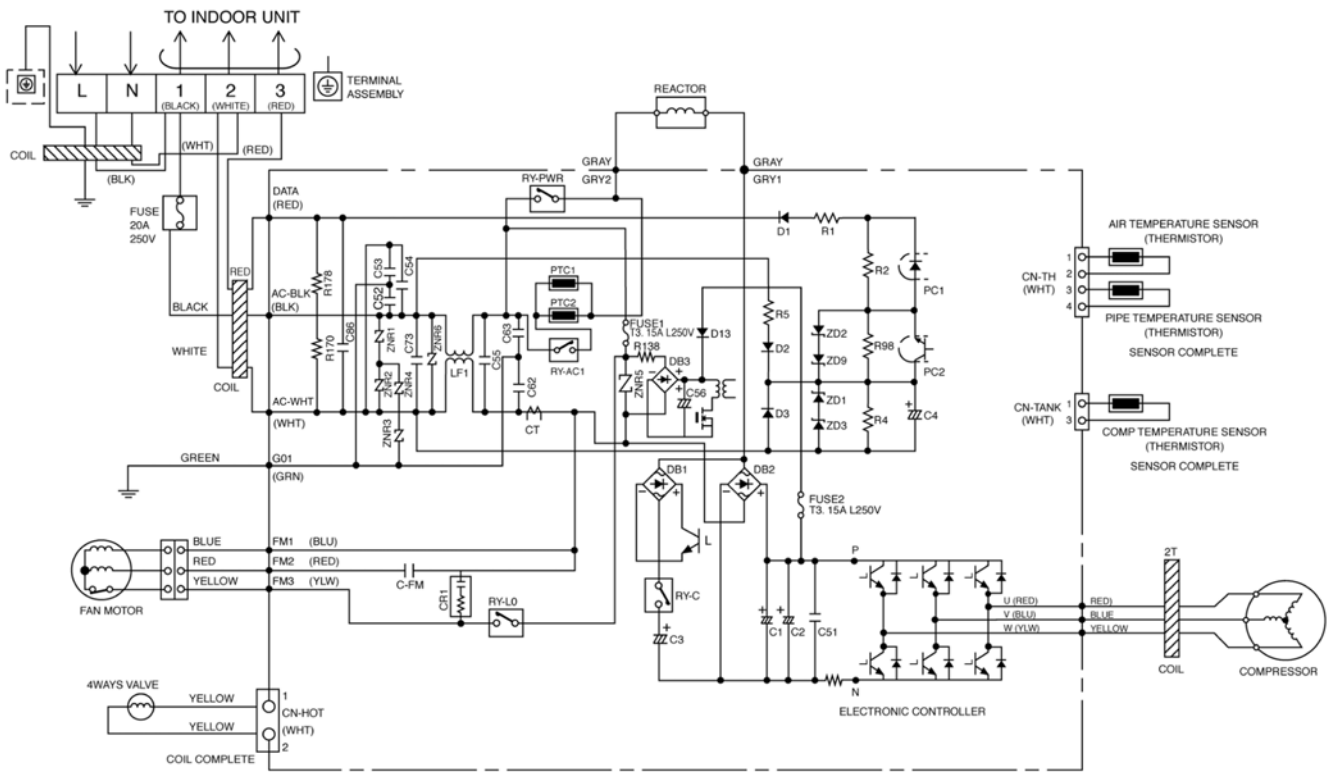

**Resistance of Compressor Windings**


CONNECTION	5RS102XBC01 ( $\Omega$ )
U - V	0.858
U - W	0.858
V - W	0.858

## 7.2.2. CU-E18GFE

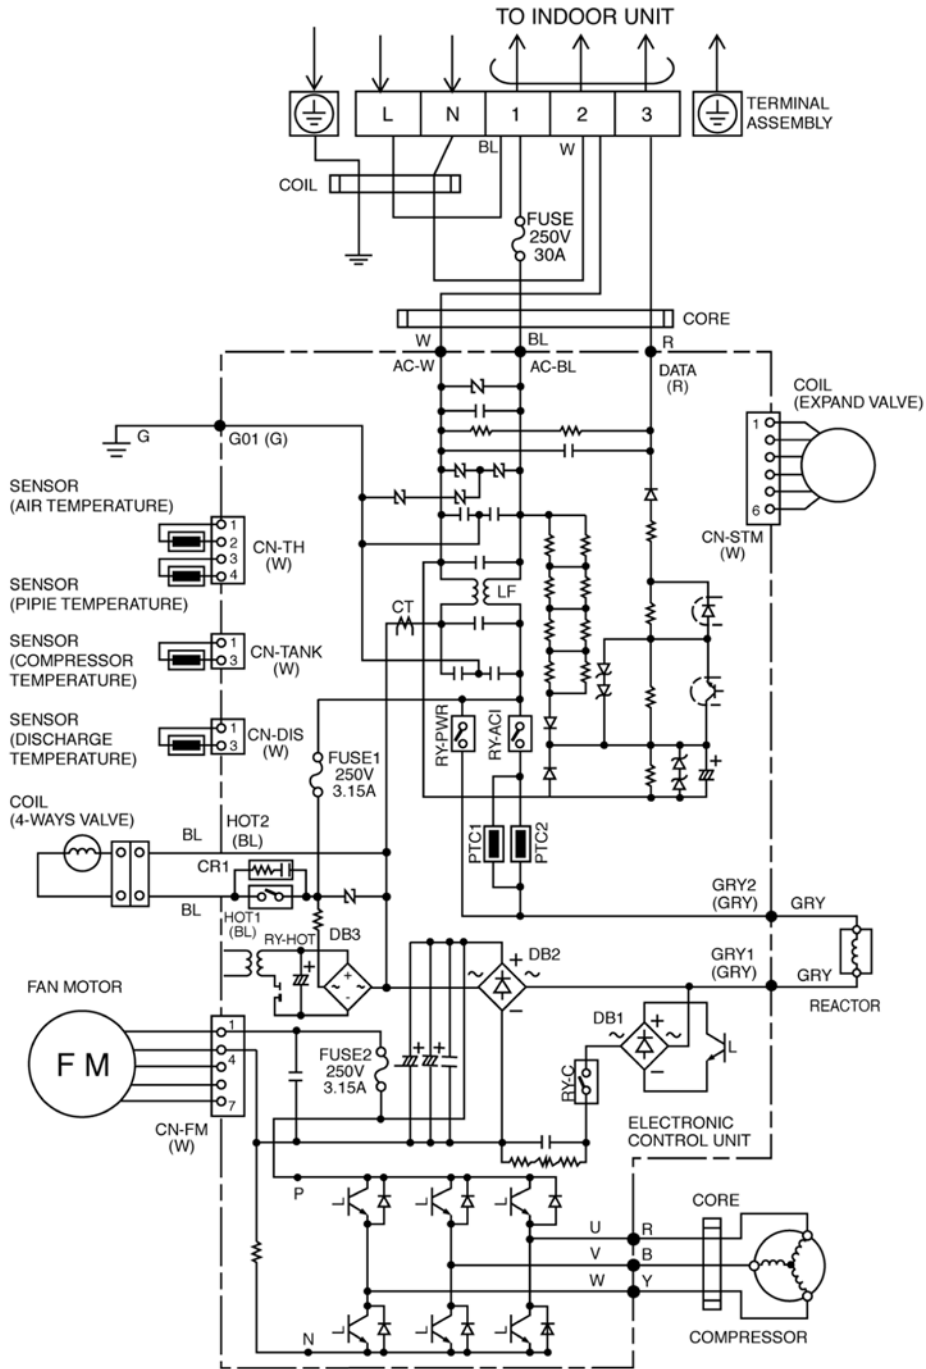

### Remarks:

- B : BLUE
- BR : BROWN
- BL : BLACK
- W : WHITE
- G : GREEN
- R : RED
- O : ORANGE
- P : PINK
- VLT : VIOLET
- GRY : GRAY
- Y/G : YELLOW / GREEN

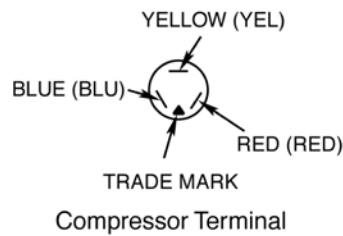


### Resistance of Compressor Windings

CONNECTION	5CS130XAD04 (Ω)
U - V	0.9
V - W	0.9
U - W	0.9




# 8 Electronic Circuit Diagram

## 8.1. Indoor Unit / Remote Controller

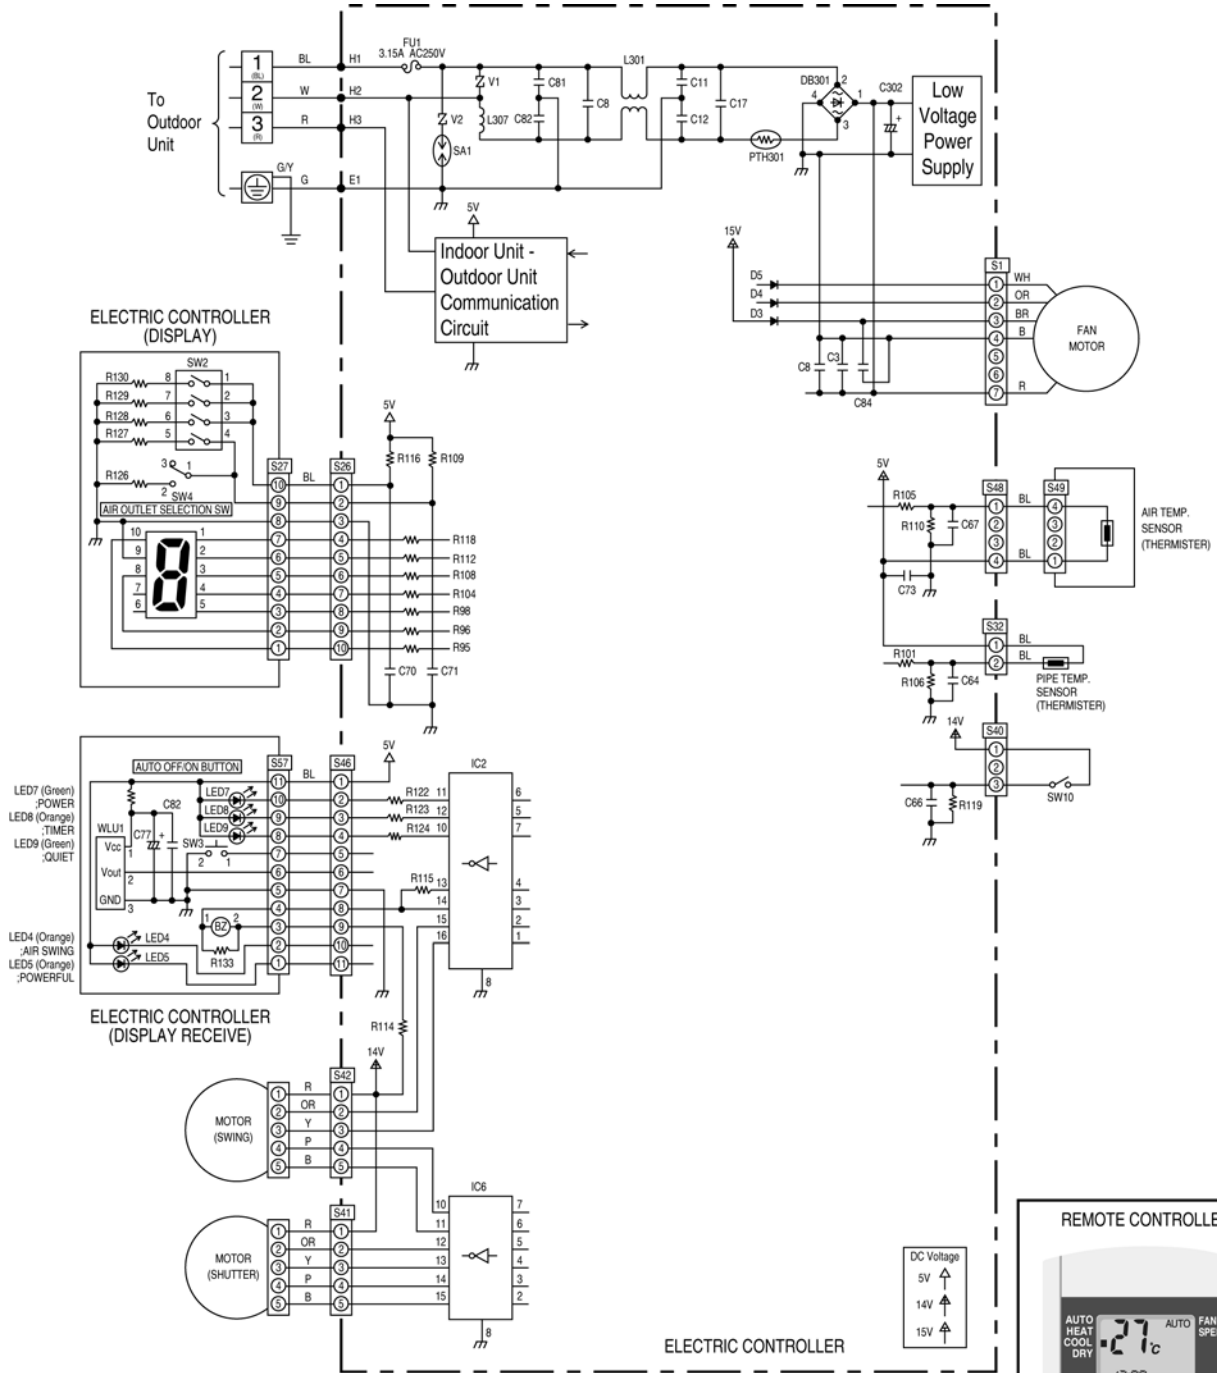


**REMARKS**


- B : BLUE
- BL : BLACK
- BR : BROWN
- G : GREEN
- R : RED
- Y : YELLOW
- GR : GRAY
- OR : ORANGE
- WH : WHITE

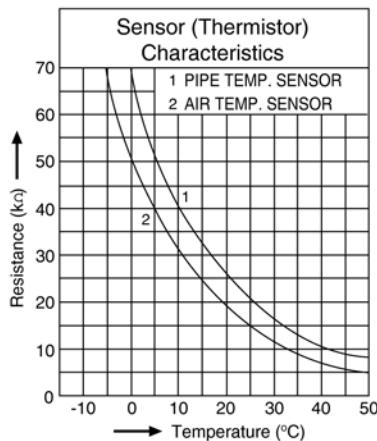


**Control board (MAIN)**

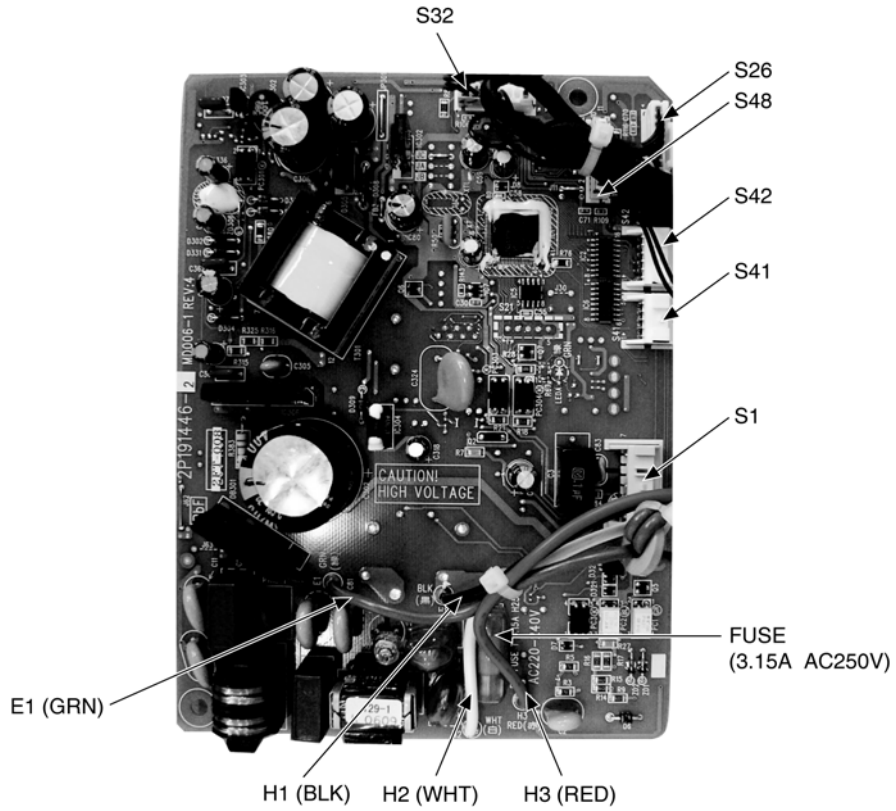

**Control board (DISPLAY & RECEIVE)**



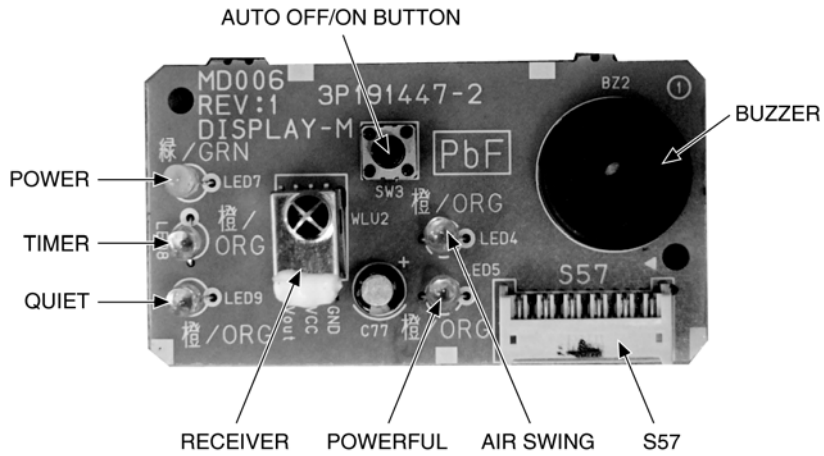


**Control board (DISPLAY)**

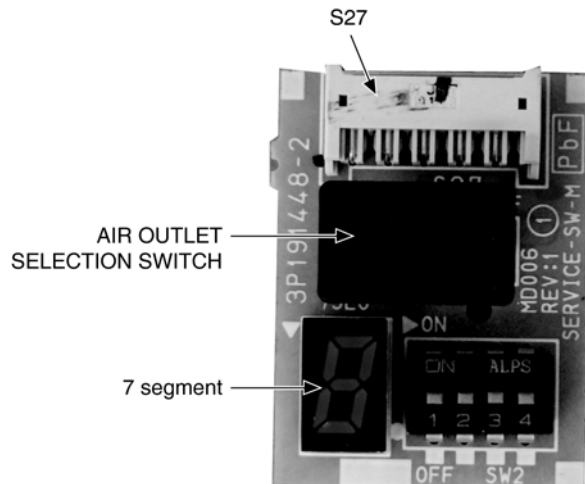


## 8.2. Outdoor Unit



### 8.2.1. CU-E9GFE CU-E12GFE

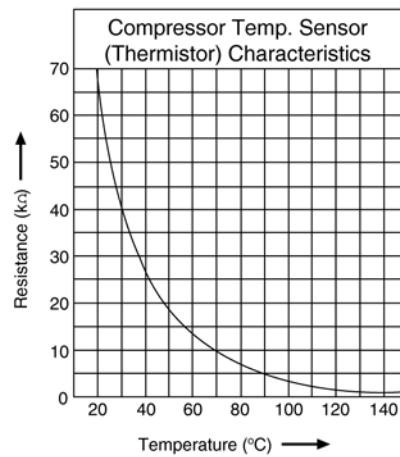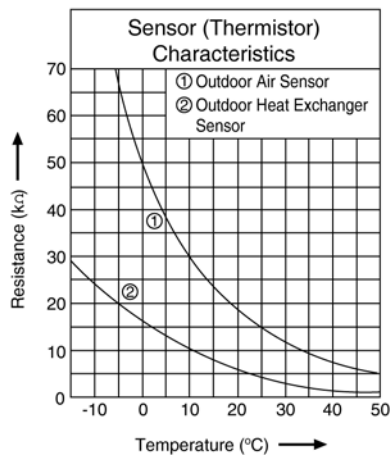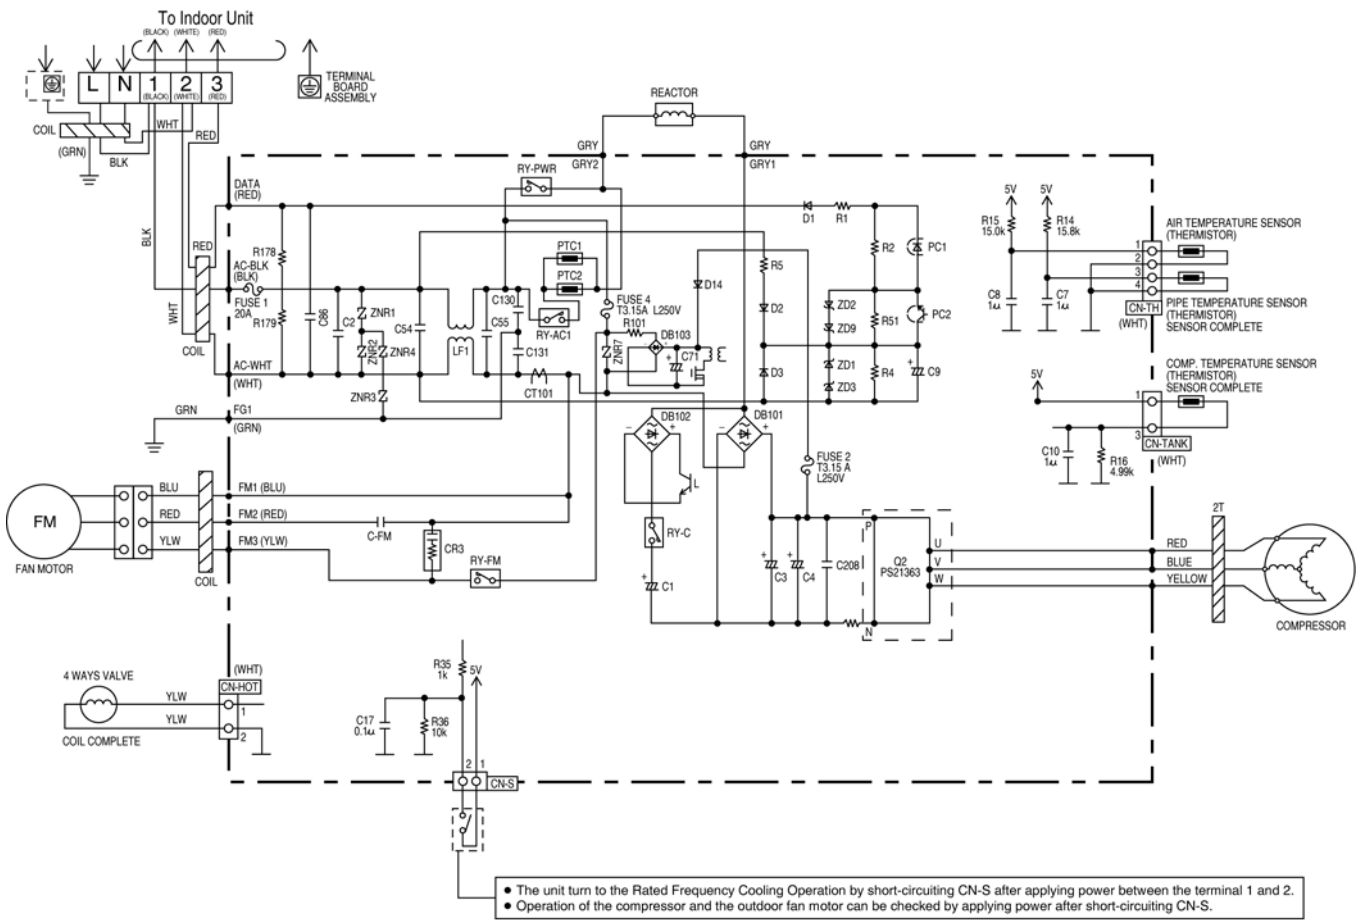

## 8.2.2. CU-E18GFE

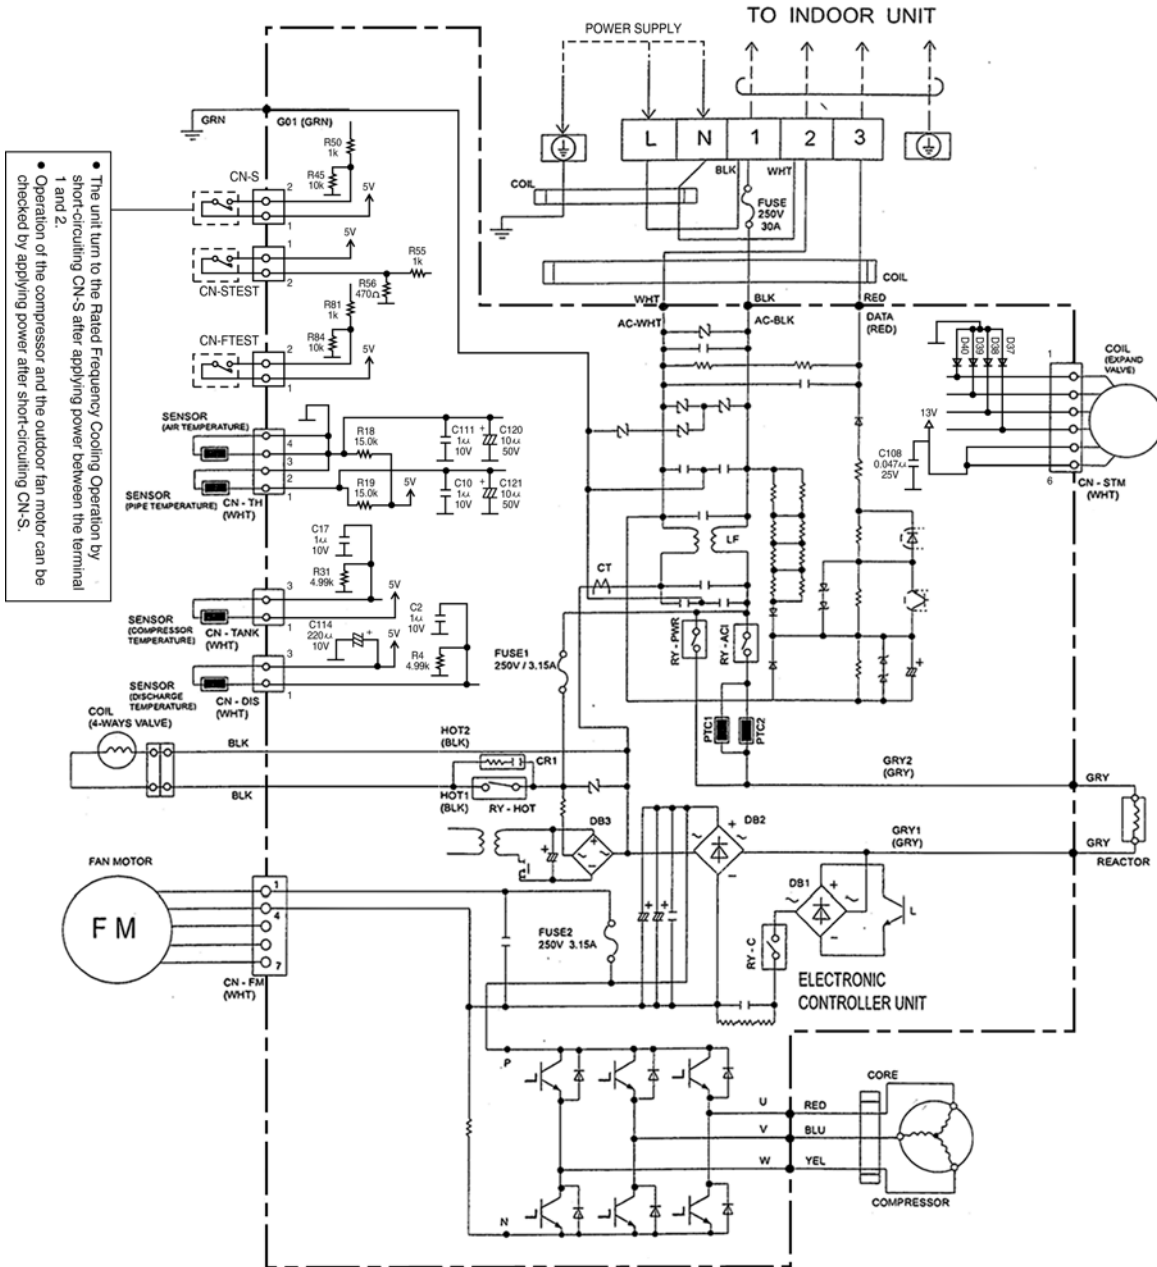

• The unit turn to the Rated Frequency Cooling Operation by short-circuiting CN-S after applying power between the terminal 1 and 2.  
 • Operation of the compressor and the outdoor fan motor can be checked by applying power after short-circuiting CN-S.

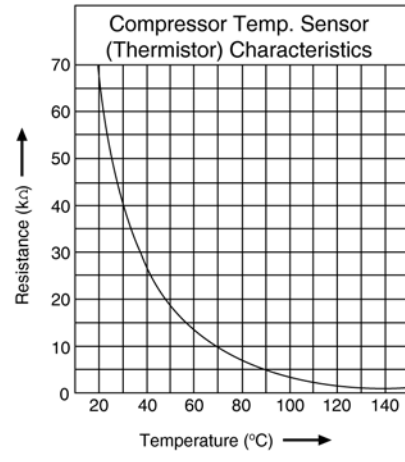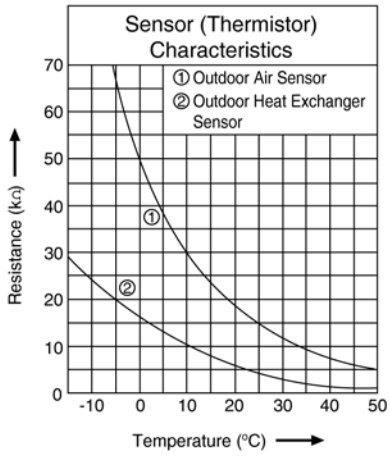



# 9 Operation and Control

## 9.1. Simultaneous Operation Control (Multi Type Only)

1. **Operation modes which can be selected using the remote control unit:** Automatic, Cooling, Dry, Heating, Fan operation mode.

2. **Types of operations modes which can be performed simultaneously**

- Cooling operation and cooling, dehumidifying or fan operation
- Heating operation and heating operation

3. **Types of operation modes which cannot be performed simultaneously**

- While a cooling operation is in progress, a heating operation cannot be performed by an indoor unit in another room.

In the room where the operation button for cooling was pressed first, the operation is continued. In the room where the operation button for heating was pressed afterward, the operation lamp of the indoor unit blinks, where the attempt is made to establish the heating operation. Its fan is stopped, and the air does not discharged.

- While a heating operation is in progress, a cooling operation cannot be performed by an indoor unit in another room.

In the room where the operation button for heating was pressed first, the operation is continued. In the room where the operation button for cooling was pressed afterward, the operation lamp of the indoor unit blinks, where the attempt is made to establish the cooling operation. Its fan is stopped, and the air does not discharged.

4. **Operation mode priority control**

- The operation mode designated first by the indoor unit has priority.
- If the priority indoor unit stops operation or initiates the fan operation, the priority is transferred to other indoor units.

“Waiting” denotes the standby status in which the operation lamp LED blinks (ON for 2.5 sec. and OFF for 0.5 sec.), and the fan is stopped.

		B ROOM			
		Non Priority Unit (2nd. ON)			
A ROOM		Cooling	Dry	Heating	Fan
Priority Unit (1st. ON)	Cooling	C C	C D	Waiting	C F
	Dry	D C	D D	Waiting	D F
	Heating	Waiting	Waiting	H H	Stop
	Fan *	F C	F D	Stop	H F

\* In the fan mode, priority is transferred to a non-priority unit.

**Note**


- C: Cooling operation mode
- D: Dry operation mode
- H: Heating operation mode
- F: Fan operation mode

## 9.2. Basic Function

Inverter control, which equipped with a microcomputer in determining the most suitable operating mode as time passes, automatically adjusts output power for maximum comfort always. In order to achieve the suitable operating mode, the microcomputer maintains the set temperature by measuring the temperature of the environment and performing temperature shifting. The compressor at outdoor unit is operating following the frequency instructed by the microcomputer at indoor unit that judging the condition according to internal setting temperature and intake air temperature.

### 9.2.1. Internal Setting Temperature

Once the operation starts, remote control setting temperature will be taken as base value for temperature shifting processes. These shifting processes are depending on the air conditioner settings and the operation environment. The final shifted value will be used as internal setting temperature and it is updated continuously whenever the electrical power is supplied to the unit.

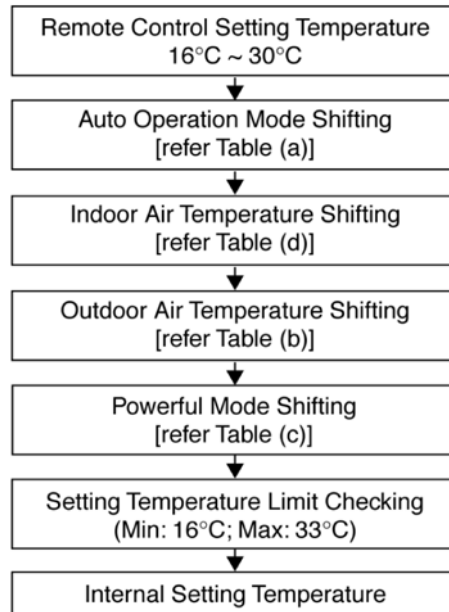

**Table (a): Auto Operation Mode Setting**

Mode Shift:	Temperature Shift (°C)
Cooling/Dry → Heating	-2.0
Heating → Cooling/Dry	+2.0

**Table (b): Outdoor Air Temperature Shifting**

Mode:	Outdoor Temperature, X (°C):	Temperature Shift (°C)
Cooling/Dry	$30 \leq X$	+0.5
	$X < 30$	+1.0
Heating	$9 \leq X$	-1.0
	$5 \leq X < 9$	-0.5
	$1 \leq X < 5$	0.0
	$X \leq 1$	+1.0

**Table (c): Power Mode Shifting**

Mode:	Temperature Shift (°C)
Cooling	-4.0
Dry	-2.0
Heating	+6.0

**Table (d): Indoor Air Temperature Shifting**

1. Target room temperature shift value (dGetaDst)

- To offset the absolute gap between detection temperature with actual room temperature.
- The heat exchanger unit's temperature is different based on operation mode, it becomes the action operation mode value.

Actual operation mode	Target room temperature offset value (dGetaDst)
Cooling	(1)
Heating	(2)
Dry	(3)

2. Room temperature shift value (dGeta)

- When compressor ON/OFF, correction of detected room temperature by shift value during defrost etc.

i) Initial value when operation starts, or changing the actual operation mode.

Set the offset value at each operation mode. However, in order to improve the heating startup efficiency, the offset value will be changed based on the gap between setting temperature and room temperature.

Actual operation mode	Gap between setting temperature and room temperature	Room temperature offset value (dGeta)
Cool	—	(0)
Heat	(Operation start set temp. - room temp.) < 4°C	(4)
	(Operation start set temp.) ≥ 4°C	(4)
Dry	—	(0)

ii) Updating during operation

During operation, it will compare with the target room temperature offset value at specific period, then the room temperature will be updated.

Actual operation mode	Room temperature zone	Updating period (sec.)
Cool	—	(180)
Heat	A, B, C, D zone	(15)
Dry	—	(180)

Update the room temperature offset value (dGeta)

Temperature condition	Room temp. offset value after modified (dGeta)
Target room temp. offset value > Room temp. offset value (dGetaDst > dGeta)	dGeta + (0.5)
Target room temp. offset value < Room temp. offset value (dGetaDst < dGeta)	dGeta - (0.5)
Target room temp. offset value = Room temp. offset value (dGetaDst = dGeta)	Do not change.

However, if the following condition is occurred, temperature cannot detect correctly and therefore no updating will be done.

- Heating zone E and above (Temperature gap is big and great capacity increased.)
- During deice
- After deice complete \*within 600 sec.
- Comp. stop
- Comp. starting \*within 600 sec.

**Table (e)**

Installation position change heating shift	-4°C
--	------


**9.3. Room Temperature Control (Compressor Control)**

Operating frequency of a compressor is decided according to temperature differences between remote controller setting and room temperatures. By adding a relative method, based on current frequency, which gives frequency changes, a room temperature is adjusted.




### 9.3.1. Cooling Operation

- Compressor is OFF when Intake Air Temperature - Internal Setting Temperature  $< -1.5^{\circ}\text{C}$ .
- Compressor is ON after waiting for 3 minutes, if the Intake Air Temperature - Internal Setting Temperature  $>$  Compressor OFF point.

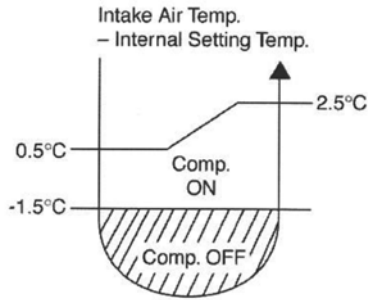


### 9.3.2. Dry Operation

- Compressor is OFF when Intake Air Temperature - Internal Setting Temperature  $< -2.0^{\circ}\text{C}$ .
- Compressor is ON after waiting for 3 minutes, if the Intake Air Temperature - Internal Setting Temperature  $>$  Compressor OFF point.

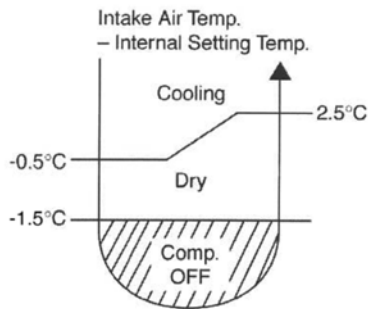

### 9.3.3. Heating Operation


- Compressor is OFF when Intake Air Temperature - Internal Setting Temperature  $< +2.0^{\circ}\text{C}$ .
- Compressor is ON after waiting for 3 minutes, if the Intake Air Temperature - Internal Setting Temperature  $>$  Compressor OFF point.

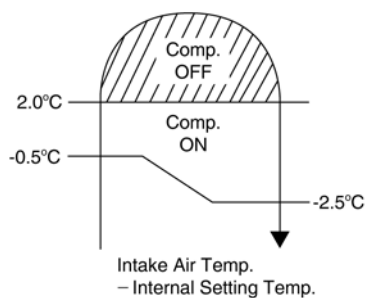

## 9.4. Automatic Operation

This mode can be set using remote control and the operation is decided by remote control setting temperature, indoor intake air temperature and outdoor air temperature.

During operation mode judgment, indoor fan motor (with speed of Lo-) and outdoor fan motor are running for 30 seconds to detect the indoor intake and outdoor air temperature. The operation mode is decided based on below chart.

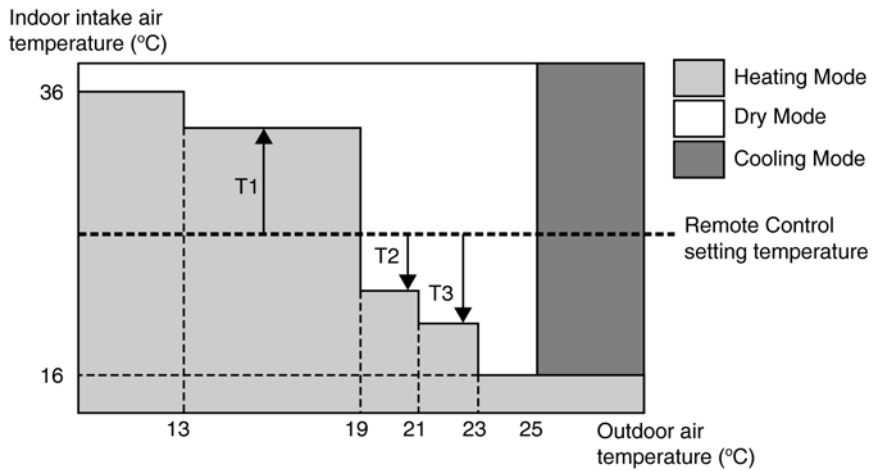

Values of T1, T2, and T3 depend on remote control setting temperature, as shown in below table. After the adjustment of T1, T2 and T3 values, the operation mode for that particular environment and remote control setting is judged and performed, based on the above operation mode chart, every \*(A) minutes.

\*(A); Single Type = 30, Multi Type = 180

Remote Control Setting Temperature (°C)	T1	T2	T3
16 ~ 18	+10	-3	-5
19 ~ 22	+8	-3	-7
23 ~ 26	+7	-3	-7
27 ~ 30	+6	-3	-8

There is a temperature shifting on T1, T2 and T3 if the operation mode judged is changed from Cooling/Dry to Heating or vice versa.


Operation Mode change from	Temperature shifts (°C)
Cooling/Dry → Heating	-2
Heating → Cooling/Dry	+2

Example of operation mode chart adjustment:

From the above table, if remote control setting temperature = 25,

$T1 = 25 + 7 = 32$ ;  $T2 = 25 - 3 = 22$ ;  $T3 = 25 - 7 = 18$

The operation mode chart for this example is as shown in below figure and the operation mode to be performed will depend on indoor intake air temperature and outdoor air temperature at the time when the judgment is made.

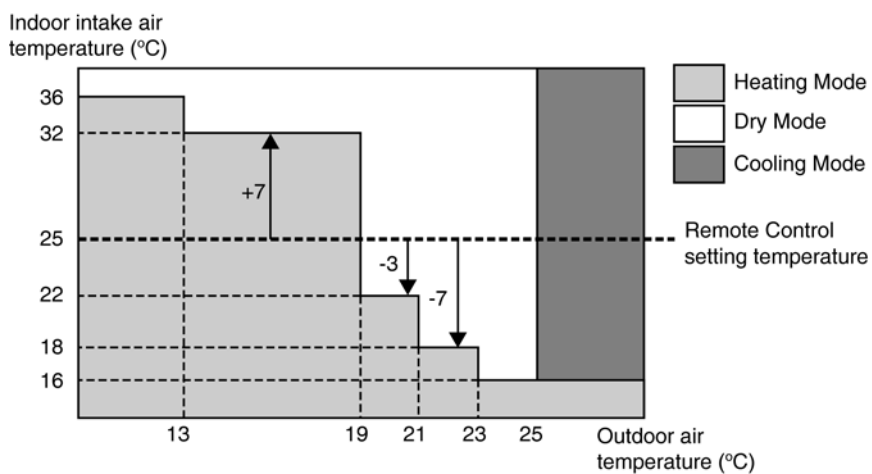

## 9.5. Indoor Fan Motor Operation

### A. Basic Rotation Speed (rpm)

- Required rotation speed for fan is set to respond to the remote control setting (10 rpm unit).

[Cooling, Dry, Fan] During upper air outlet discharge

Remote Control		O	O	O	O	O	QUIET	
Tab (rpm)	SHi	Hi	Me+	Me	Me-	Lo	Lo+	SLo
CS-E9GFEW	660	620	560	510	460	410	360	250
CS-E12GFEW	680	640	580	530	480	430	370	250
CS-E18GFEW	800	760	710	660	610	570	490	250

[Cooling, Dry, Fan] During upper and lower air outlets discharge

Remote Control		O	O	O	O	O	QUIET	
Tab (rpm)	SHi	Hi	Me+	Me	Me-	Lo	Lo+	SLo
CS-E9GFEW	660	620	560	510	460	410	360	250
CS-E12GFEW	680	640	580	530	480	430	370	250
CS-E18GFEW	800	760	710	660	610	570	490	250

[Heating] During upper air outlet discharge

Remote Control		O	O	O	O	O	QUIET	
Tab (rpm)	SHi	Hi	Me+	Me	Me-	Lo	Lo+	SLo
CS-E9GFEW	670	630	570	520	460	410	360	250
CS-E12GFEW	690	650	590	530	470	410	360	250
CS-E18GFEW	910	870	800	740	670	610	490	250

[Heating] During upper and lower air outlets discharge

Remote Control		O	O	O	O	O	QUIET	
Tab (rpm)	SHi	Hi	Me+	Me	Me-	Lo	Lo+	SLo
CS-E9GFEW	670	630	570	520	460	410	360	250
CS-E12GFEW	690	650	590	530	470	410	360	250
CS-E18GFEW	900	870	800	740	670	610	490	250

**B. Indoor Fan Control**

i. Indoor fan control operation outline

1. Cooling / Dry


				Cooling	Dry
Under different mode standby [Multi type]				Stop	
Forced Operation				Hi	—
Other than above	Min. control	Automatic operation mode judgement		Lo-	
		Timer OFF shifting operation		Lo	SLo
	Operation	Automatic operation		Lo	
		Manual operation	Powerful	Setting +40rpm	SLo
			Quiet	Setting +60rpm	
	Other than the above		Remote control setup		
	Automatic operation	Powerful	Powerful automatic	SLo	
		Quiet	Quiet automatic		
		Other than the above	Usually, automatic	SLo	
	Manual operation	Powerful	Setting +40rpm	SLo	
Quiet		Setting +60rpm	SLo		
Other than the above		Remote control setup	SLo		
MAX capability			SHi	—	

2. Heating

				Heating		
Under different mode standby (Multi type)				Stop		
Forced Operation				SHi		
Min. control		Automatic operation mode judging		Lo-		
During hot start				Stop		
Under defrosting operation				Stop		
Ability supply stop (Multi type, only under compressor operation)				Stop		
Other than above	Preparation operation start timer.	Fan speed automatic		Lo		
		Manual operation	Powerful	Setting +40rpm		
			Quiet	Setting +60rpm		
			Other than the above	Remote control setup		
	Other than above	Fan speed shift control		Heating Fan Speed Control		
		Fan speed automatic	Powerful	Pipe temperature control +40rpm		
			Quiet	Pipe temperature control +60rpm		
			Other than the above	Pipe temperature control		
		Fan speed automatic	Powerful	Setting +40rpm		
			Quiet	Setting +60rpm		
Other than the above	Remote control setup					

ii. Auto Fan Speed


1. Cooling

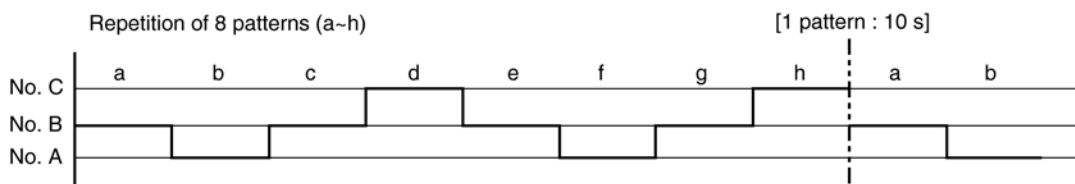

	Model	No. A	No. B	No. C
Powerful Program	CS-E9GFEW	1090	1110	1130
	CS-E12GFEW	1090	1110	1130
	CS-E18GFEW	1210	1230	1250
Normal Program	CS-E9GFEW	1050	1070	1090
	CS-E12GFEW	1050	1070	1090
	CS-E18GFEW	1170	1190	1210
Quiet Program	CS-E9GFEW	1030	1050	1070
	CS-E12GFEW	1030	1050	1070
	CS-E18GFEW	1150	1170	1190

(rpm)

## 2. Heating

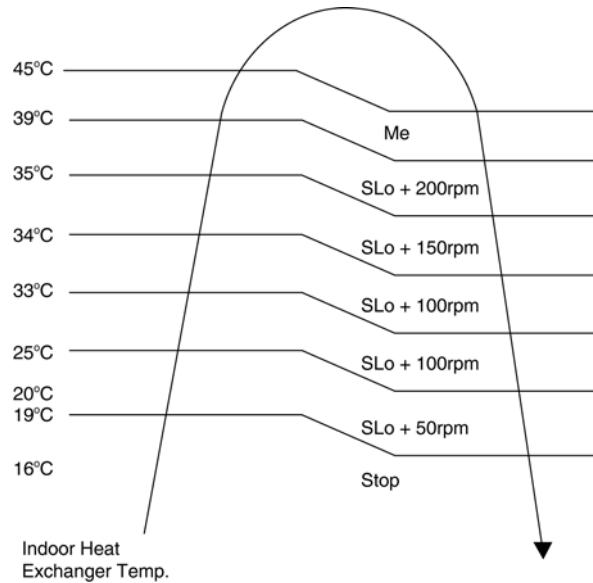

Note:

a. UP:

- If move from Lo, the fan speed will be shifted to Maximum 1,520 rpm.
- If move from Maximum, the fan speed no change.
- In up zone, 10 rpm is added for every 10s until Maximum 1,520 rpm.

b. DOWN:

- The fan speed will be decreased one step every 10 sec. until Minimum 1,270 rpm.

c. Current Output Fixed:

- Maintain at present fan speed.

d. Instantaneous Maximum:


- Fan speed will be increased to maximum auto fan speed.

e. Temperature in ( ) is for Powerful Mode operation.

## 9.6. Airflow Direction Control

### 9.6.1. Air Outlet Selection

- When the Air Outlet Selection Switch is turned to ON, air is blown out from both upper and lower air outlet.
- When the Air Outlet Selection Switch is turned to OFF, air is blown out from upper air outlet only.

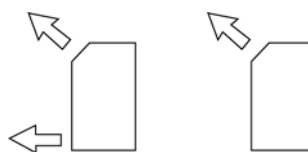


(Fig. a)

## 9.6.2. Cooling/Dry Operation

### AIR SWING; AUTO

- When AIR SWING-AUTO of remote control button is pressed, the upper air outlet swings in the range of the upper limit and the lower limit.
- When fan motor stop, vertical airflow direction louver does not swing.
- When OFF/ON button is pressed again, the vertical airflow direction louver closes.

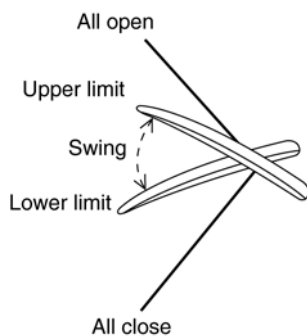

(Fig. b)

### AIR SWING; MANUAL

- When AIR SWING-MANUAL of remote control button is pressed, upper air outlet's vertical airflow direction louver position changes, when button is released, the vertical airflow direction louver position remain at the position.
- When OFF/ON button is pressed again, the vertical airflow direction louver closes.

## 9.6.3. Heating Operation

### AIR SWING; AUTO

- According to indoor unit heat exchanger temperature, the vertical airflow direction louver position is set.
- When OFF/ON button is pressed again, the vertical airflow direction louver closes.


#### Single Type

Heat Exchanger Temperature	Vertical airflow direction louver position
A zone	Position A
B zone	Position B
C zone	Position A


#### Multi Type

Heat Exchanger Temperature	Vertical airflow direction louver position
A zone	Position B
B zone	Position B
C zone	Position A

During defrost operation, as cold draft prevention, the vertical airflow direction louver is set to position C.

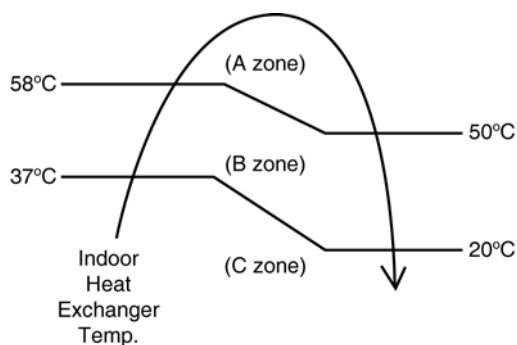

(Fig. c)

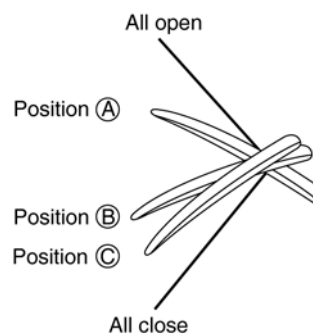

(Fig. d)

## 9.6.4. Lower air outlet Operation

- Air blown out is controlled with open and close of lower air outlet shutter.

## 9.6.5. Left and right wind direction louver Operation

- Manual operation. Position is adjusted with the knob of the left and right louver.

## 9.6.6. Quiet operation (Cooling Mode/Cooling area of Dry Mode)

### A. Purpose

To provide quiet cooling operation compare to normal operation.

### B. Control condition

#### a. Quiet operation start condition

- When "quiet" button at remote control is pressed.  
Quiet LED illuminates.

#### b. Quiet operation stop condition

1. When one of the following conditions is satisfied, quiet operation stops:
  - a. Powerful button is pressed.
  - b. Stop by OFF/ON switch.
  - c. Timer "off" activates.
  - d. Quiet button pressed again.
2. When quiet operation is stopped, operation is shifted to normal operation with previous setting.
3. When fan speed is changed, quiet operation is shifted to quiet operation of the new fan speed.
4. When operation mode is changed, quiet operation is shifted to quiet operation of the new mode.
5. During quiet operation, if timer "on" activates, quiet operation maintains.
6. After off, when on back, quiet operation is not memorised.

### C. Control contents

1. Fan speed is changed from normal setting to quiet setting of respective fan speed.  
This is to reduce sound of Hi, Me, Lo for 3dB.
2. Fan speed for quiet operation is -1 step from setting fan speed.

## 9.6.7. Quiet operation (Heating)

### A. Purpose

To provide quiet heating operation compare to normal operation.

### B. Control condition

#### a. Quiet operation start condition

- When "quiet" button at remote control is pressed.  
Quiet LED illuminates.

#### b. Quiet operation stop condition

1. When one of the following conditions is satisfied, quiet operation stops:
  - a. Powerful button is pressed.
  - b. Stop by OFF/ON switch.
  - c. Timer "off" activates.
  - d. Quiet button pressed again.
2. When quiet operation is stopped, operation is shifted to normal operation with previous setting.
3. When fan speed is changed, quiet operation is shifted to quiet operation of the new fan speed.
4. When operation mode is changed, quiet operation is shifted to quiet operation of the new mode, except fan only mode.
5. During quiet operation, if timer "on" activates, quiet operation maintains.
6. After off, when on back, quiet operation is not memorised.

### C. Control contents

#### a. Fan Speed manual

1. Fan speed is changed from normal setting to quiet setting of respective fan speed.  
This is to reduce sound of Hi, Me, Lo for 3dB.
2. Fan speed for quiet operation is -1 step from setting fan speed.
3. Fan Speed Auto  
Indoor FM RPM depends on pipe temp sensor of indoor heat exchanger.


## 9.7. Powerful Mode Operation

When the powerful mode is selected, the internal setting temperature will shift to achieve the setting temperature quickly.


Single Type: After the startup Powerful, Powerful lamp 20 minutes illumination.

Multi Type: At the time of Powerful driving, Powerful lamp illumination.


### (a) Cooling Operation

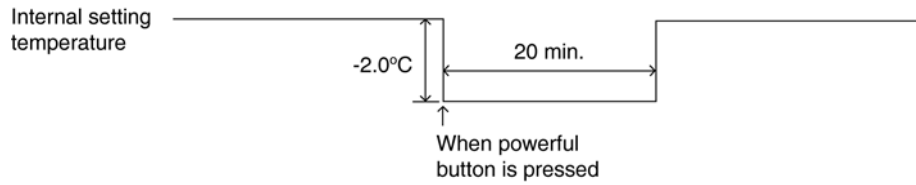

### (b) Dry Operation

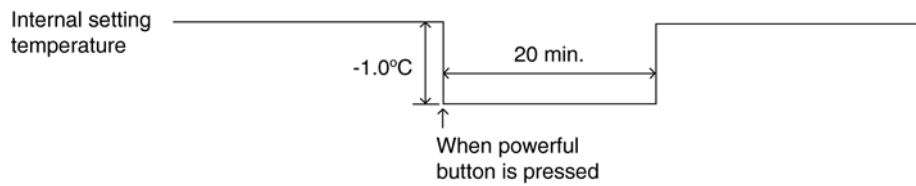

### (c) Heating Operation

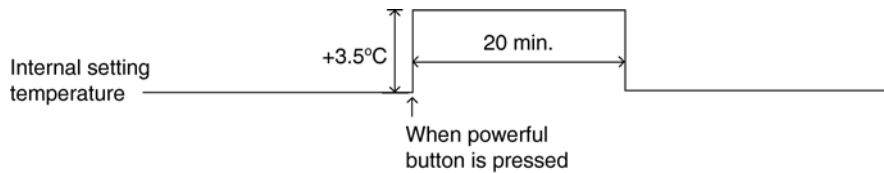


## 9.8. ON Timer Control

ON timer can be set using remote control, the unit with timer set will start operate earlier than the setting time. This is to provide a comfortable environment when reaching the set ON time.

60 minutes before the set time, indoor (at fan speed of Lo-) and outdoor fan motor start operate for 30 seconds to determine the indoor intake air temperature and outdoor air temperature in order to judge the operation starting time.

From the above judgement, the decided operation will start operate earlier than the set time as shown below.

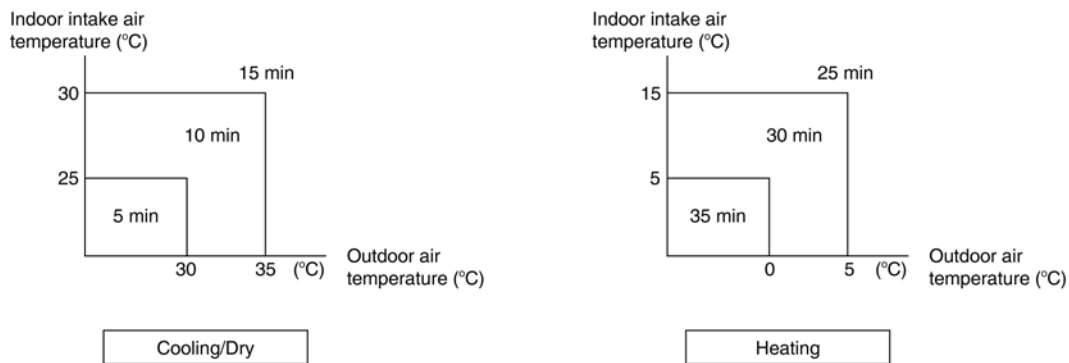

## 9.9. OFF Timer Control

OFF timer can be set using remote control, the unit with timer set will stop operate at set time.



## 9.10. Auto Restart Control

1. When the power supply is cut off during the operation of air conditioner, the compressor will re-operate within three to four minutes (there are 10 patterns between 2 minutes 58 seconds and 3 minutes 52 seconds to be selected randomly) after power supply resumes.
2. This type of control is not applicable during ON/OFF Timer setting.

## 9.11. Indication Panel

LED	POWER	TIMER	QUIET	POWERFUL	AIR SWING
Color	Green	Orange	Orange	Orange	Orange
Light ON	Operation ON	Timer Setting ON	Quiet Mode ON	Powerful Mode ON	Auto Air Swing ON
Light OFF	Operation OFF	Timer Setting OFF	Quiet Mode OFF	Powerful Mode OFF	Auto Air Swing OFF

### Note:

- If POWER LED is blinking, the possible operation of the unit are Hot Start, during Deice operation, operation mode judgment, or ON timer sampling.
- If Timer LED is blinking, there is an abnormality operation occurs.


## 9.12. Auto Operation Switch

Number of "beep":	1	2	3	4
Function:	Auto Operation	Forced Cool	Forced Heat	Various Setting Mode
Duration (s):	0	5	8	11
				16
				21

1. When the switch is pressed between 0 to 5 seconds, Auto Mode operation starts to function.
2. When the switch is pressed between 5 to 8 seconds, the unit is forced to operate in Cooling Mode.
3. When the switch is pressed between 8 to 11 seconds, the unit will enter forced Heating Mode standby. Press timer decrement button for 5s for the unit to operate in Heating Mode.
4. When the switch is pressed between 11 to 16 seconds and together with the signal from remote control (timer decrement button for 5s), the unit can be changed to different controlling setting (4 type of transmission codes).
5. When the switch is pressed between 16 to 21 seconds, either "H14" error detection selection mode or the remote control signal receiving sound can be cancelled or turned on.

## 9.13. Freeze Prevention Control

1. When indoor heat exchanger temperature is lower than 2°C continuously for six minutes, compressor will stop operating.
2. Compressor will resume its operation three minutes after the indoor heat exchanger is higher than 10°C.
3. At the same time, indoor fan speed increase +20 rpm compared to its normal operation.
4. If indoor heat exchanger temperature is higher than 10°C for five minutes, the fan speed will return to its normal operation.

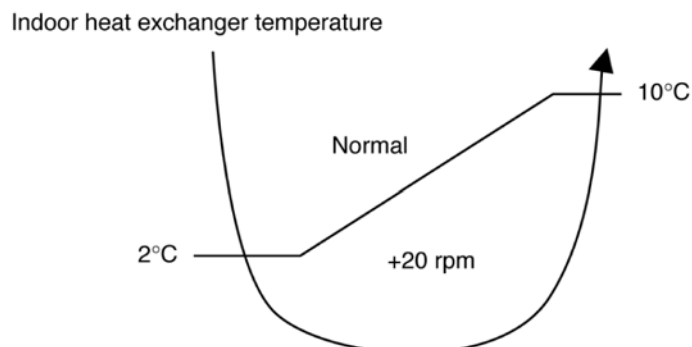

## 9.14. Dew Prevention Control

### a. Purpose

To prevent dew.

### b. Control start conditions

When indoor units are ceiling floor, duct and mini-cassette.

### c. Control contents

Hz control is carried out according to the dew prevention status transmitted from indoor.

Dew prevention status (transmitted indoor)	Control contents	
	Relative control domain	MAX domain
0 (it usually controls)	Usually, control	Usually, control
1 (rise)	Relative change control priority	On tap up/10 seconds
2 (changeless)	Changeless	Changeless
3 (down)	-2 Hz/10 seconds	-2 Hz/10 seconds

Change is once to 10 seconds.

\* Once the stand-up went into the down domain by F<sub>cmax</sub> as for the F<sub>cmax</sub> domain, it shifts to relative changes control domain.

When the higher rank of relative control has this control and the status signal od 2-3 has come out.

Relative change control is stopped and follows directions of spray control.

Priority is given to the which is larger when freeze prevention down status and dew prevention down status are transmitted simultaneously.

In the case of dew prevention status  $\neq$  0, it is referred to as maxF<sub>c</sub>.

## 9.15. Protection Control Features

### 9.15.1. Protection Control For All Operations

#### 9.15.1.1. Time Delay Safety Control

1. The compressor will not start for three minutes after stop of operation.
2. This control is not applicable if the power supply is cut off for 20 seconds and on again or after 4-way valve deices condition.

#### 9.15.1.2. 30 Seconds Forced Operation


1. Once compressor starts operation, it will not stop its operation for 30 seconds.
2. However, it can be stopped using remote control or Auto Switch at indoor unit.

#### 9.15.1.3. Total Running Current Control

1. When the outdoor unit total running current (AC) exceeds X value, the frequency instructed for compressor operation will be decreased.
2. If the running current does not exceed X value for five seconds, the frequency instructed will be increased.
3. However, if total outdoor unit running current exceeds Y value, compressor will be stopped immediately for 3 minutes.

Model	CU-E9GFE		CU-E12GFE		CU-E18GFE	
	X (A)	Y (A)	X (A)	Y (A)	X (A)	Y (A)
Cooling/Dry (A)	4.0	16.8	5.4	16.8	8.74	17
Cooling/Dry (B)	3.6	16.8	5.0	16.8	7.70	17
Heating	5.5	16.8	8.4	16.8	10.71	17

4. The first 30 minutes of cooling operation, (A) will be applied.

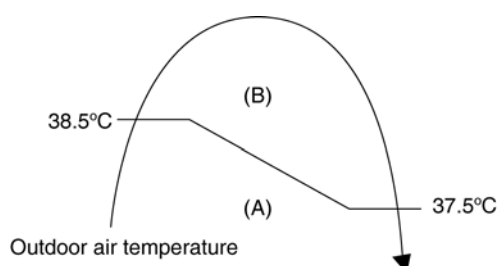

### 9.15.1.4. IPM (Power transistor) Prevention Control

#### A. Overheating Prevention Control


1. When the IPM temperature rises to 100°C, compressor operation will stop immediately.
2. Compressor operation restarts after three minutes the temperature decreases to 95°C.

#### B. DC Peak Current Control

1. When electric current to IPM exceeds set value of 22.33 A, the compressor will stop operate. Then, operation will restart after three minutes.
2. If the set value is exceeded again more than 30 seconds after the compressor starts, the operation will restart after two minutes.
3. If the set value exceeded again within 30 seconds after the compressor starts, the operation will restart after one minute. If this condition repeats continuously for seven times, all indoor and outdoor relays will be cut off.

### 9.15.1.5. Compressor Overheating Prevention Control

Instructed frequency for compressor operation will be regulated by compressor discharge temperature. The changes of frequency are as below figure.

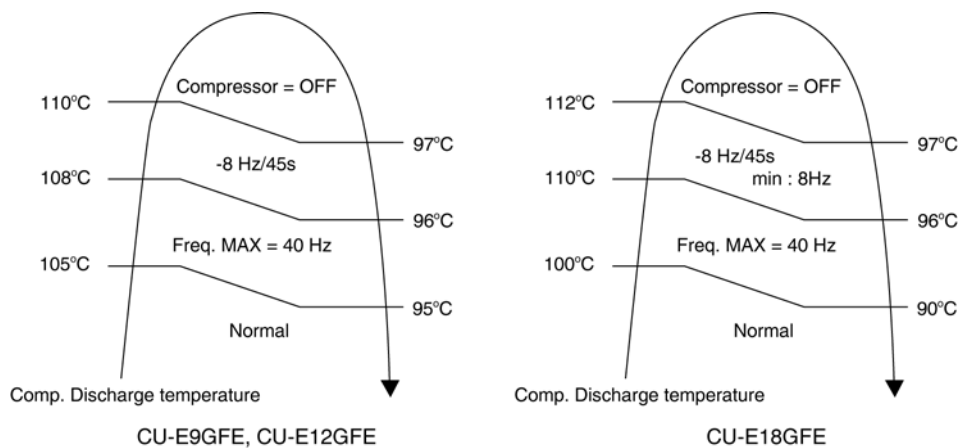

### 9.15.1.6. Low Pressure Prevention Control (Gas Leakage Detection)

#### a. Control start conditions

Control will perform when (1) - (3) condition continues operation for 5 minute and (4) is fulfill.

1. During cooling and dry operation: Frequency more than normal  $F_{cmax}$ .  
During heating operation: Frequency more than normal  $F_h$
2. Outdoor total current  $I$  cooling:  $I_b \leq I < I_a$   
Heating:  $I_b \leq I < I_c$   
 $I_c = I_a = 1.65 A$   
 $I_b = 0.65 A$
3. It is not during deice operation.  
During heating operation: Frequency more than normal  $F_h$
4. During cooling and dry operation: indoor suction-indoor piping temperature is below 4°C.  
During of heating operation: Indoor piping temperature-indoor suction is under 5°C.

Control contents:

- compressor stops (restart after 3 minutes)
- if happen 2 times within (20 minutes), perform the following operation
  - 1) Unit stop operation
  - 2) 7 segment "F91" indicated

### 9.15.1.7. Compressor Tank Temperature Rise Protection Control

#### a. Control start conditions

Control will perform when (1) - (3) condition continues operation for 5 minute and (4) is fulfill.

1. During cooling and dry operation: Frequency more than normal  $F_c$ .  
Air-temperature: Indoor and outdoor 30±5 degrees C  
Remote control Hi; 16 degrees C  
During Heating operation: Frequency more than  $F_h$   
Air temperature: Indoor and outdoor 20±2 degrees C  
Remote control Hi; 30 degrees C

- 2. Outdoor total current I Air conditioning:  $0.65 \leq I < 1.65$ .  
 Heating:  $0.65 \leq I < 1.65$   
 It is not during deice operation
- 3. During cooling and dry operation: indoor suction-indoor piping temperature is below  $4^{\circ}\text{C}$ .  
 During heating operation: Indoor piping temperature-indoor suction is under  $5^{\circ}\text{C}$ .  
 Control contents:
  - compressor stops (restart after 3 minutes)
  - if happen 2 times within (20 minutes), perform the following operation
    - 1) Unit stop operation
    - 2) 7 segment "F91" indicated

### 9.15.1.8. Low Frequency Protection Control 1

When the compressor operate at frequency lower than 25 Hz continued for 20 minutes, the operation frequency will be increased to 20 Hz for two minutes.

### 9.15.1.9. Low Frequency Protection Control 2

When all the below conditions occur, minimum value (Freq. MIN) for the frequency instructed to compressor will change to 30 Hz for cooling mode operation and 20 Hz for heating mode operation.

Temperature, T, for:	Cooling/Dry	Heating
Indoor intake air ( $^{\circ}\text{C}$ )	$T < 15$ or $T \geq 30$	—
Outdoor air ( $^{\circ}\text{C}$ )	$T < 16$ or $T \geq 38$	$T < 4$ or $T \geq 24$
Indoor heat exchanger ( $^{\circ}\text{C}$ )	$T < 30$	$T \geq 0$


### 9.15.1.10. DC Current Protection Control (E9FGE, E12GFE)

#### Purpose


In order to control DC current rise in a compressor low frequency region, load is detected with from indoor/outdoor heat exchanger temperature, Hz control is performed.

#### Control contents

1. During cooling and dry except test mode

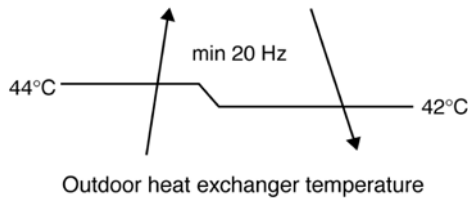


2. During heating compressor operation, except test mode.

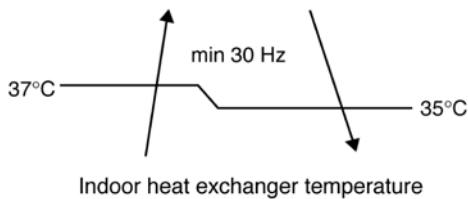

## 9.15.2. Protection Control For Cooling & Dry Operation

### 9.15.2.1. Outdoor Air Temperature Control


The compressor operating frequency is regulated in accordance to the outdoor air temperature as shown in the diagram below. This control will begin 1 minute after the compressor starts.

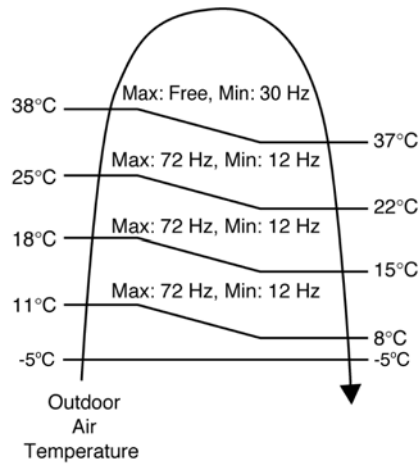

### 9.15.2.2. Cooling Overload Control

#### i. Pipe temperature limitation/restriction

- Detects the Outdoor pipe temperature and carry out below restriction/limitation (Limit the compressor Operation frequency)
- The compressor stop if outdoor pipe temperature exceeds 61°C
- If the compressor stops 4 times in 20 minutes, Timer LED blinking (F95: outdoor high pressure rise protection)

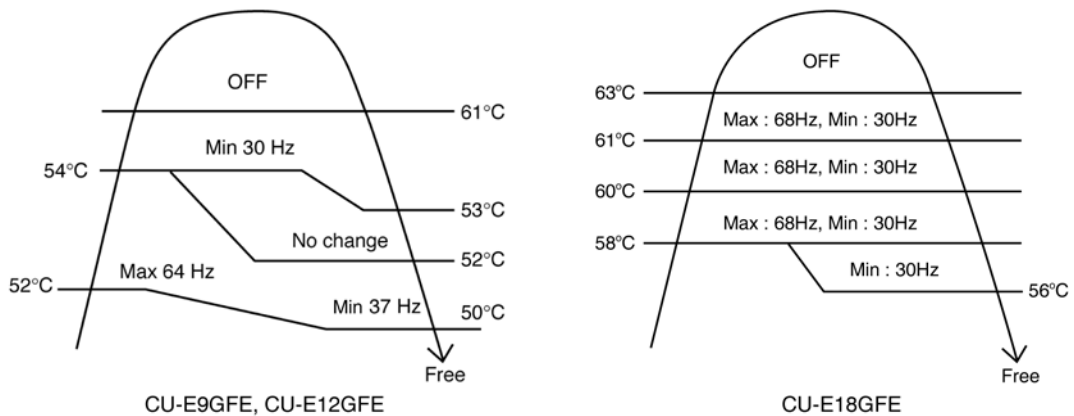


#### ii. Electrical part temperature rise protection control

##### 1. Purpose

To prevent electronic components temperature rise during cooling overload.

##### 2. Judgement Conditions

Outdoor temperature

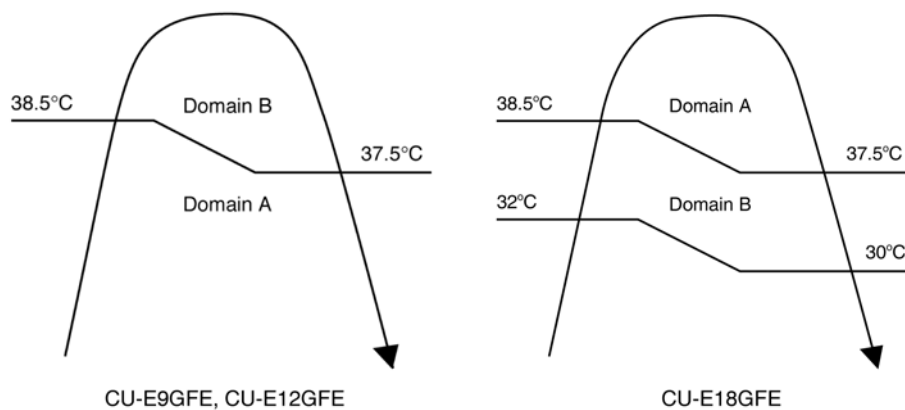

3. Control contents



- Change a current limit value in a protection location A. (Refer to the clause of total running current control value)

4. Condition resolvable

It is canceled when it stops satisfying all of the above-mentioned.

**9.15.2.3. Anti-Freezing Control**

1. When indoor heat exchanger temperature is lower than 2°C continuously for six minutes, compressor will stop operating
2. Compressor will resume its operation three minutes after the indoor heat exchanger is higher than 10°C.
3. At the same time, indoor fan speed increase +20 rpm compared to its normal operation.
4. If indoor heat exchanger temperature is higher than 10°C for five minutes, the fan speed will return to its normal operation.

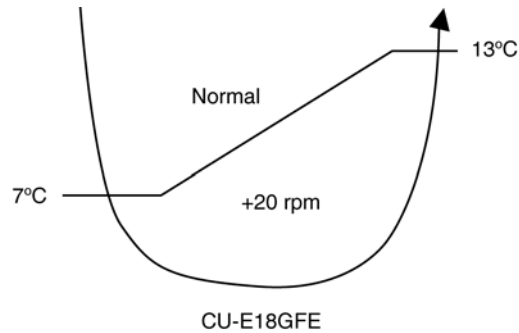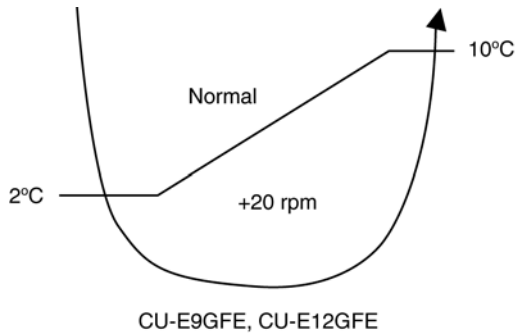

**9.15.2.4. Anti-Dew Formation Control**

1. When indoor fan speed is set at Me- or slower, the compressor operating frequency is regulated by operation time to prevent fog discharged from indoor as shown in below table.

rpm	Operation time, T (min)	CU-E9GFE	CU-E12GFE
Below 710	0 < T ≤ 30	26Hz	39Hz
	30 < T ≤ 90	26Hz	37Hz
	90 < T ≤ 420	26Hz	37Hz
710 ~ 790	0 < T ≤ 30	40Hz	59Hz
	30 < T ≤ 90	33Hz	48Hz
	90 < T ≤ 420	32Hz	47Hz
791 ~ 970	0 < T ≤ 30	50Hz	70Hz
	30 < T ≤ 90	40Hz	59Hz
	90 < T ≤ 420	40Hz	59Hz
970 above	0 < T ≤ 30	52Hz	72Hz
	30 < T ≤ 90	40Hz	59Hz
	90 < T ≤ 420	40Hz	59Hz

rpm	Operation time, T (min)	CU-E18GFE
1170 ~ 1450	0 < T ≤ 30	61Hz
	30 < T ≤ 90	45Hz
	90 < T ≤ 420	43Hz
1310 ~ 1450	0 < T ≤ 30	68Hz
	30 < T ≤ 90	68Hz
	90 < T ≤ 420	47Hz
1310 above	0 < T ≤ 30	86Hz
	30 < T ≤ 90	72Hz
	90 < T ≤ 420	72Hz

2. After 420 minutes, the operation restarts again from the beginning.
3. The operation will restart the above control whenever remote controller setting temperature or fan speed setting is changed.

**9.15.3. Protection Control For Heating Operation**



**9.15.3.1. Intake Air Temperature Control**

Compressor will operate at Max freq 67 if either one of the below conditions occur:

1. When the indoor intake air temperature is less than 20°C and remote control setting fan speed is lower Me-.
2. When the indoor intake air temperature is 30°C or above.



### 9.15.3.2. Outdoor Air Temperature Control

The Max current value is regulated in accordance to the outdoor air temperature as shown in the below figures.

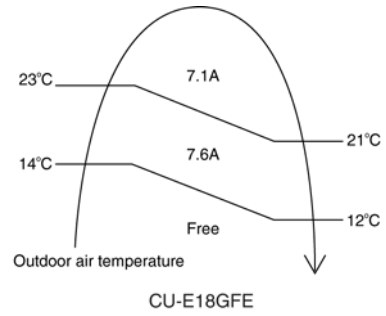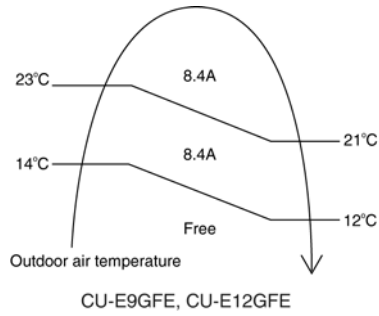

### 9.15.3.3. Overload Protection Control

The compressor operating frequency is regulated in accordance to indoor heat exchanger temperature as shown in below figures.

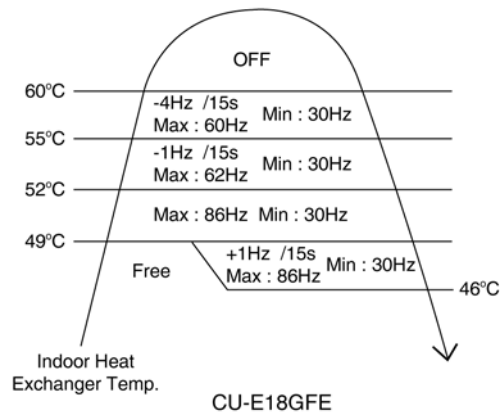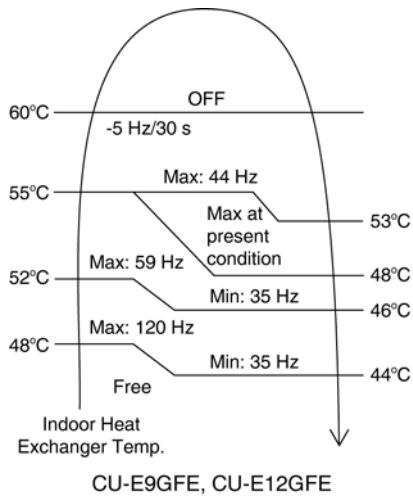


### 9.15.3.4. Deice Control

#### A. Deice operation (Normal Deice Operation)

##### 1. Detection methods

Outdoor heat exchanger temperature sensor, timer.

##### 2. Deice operation time chart

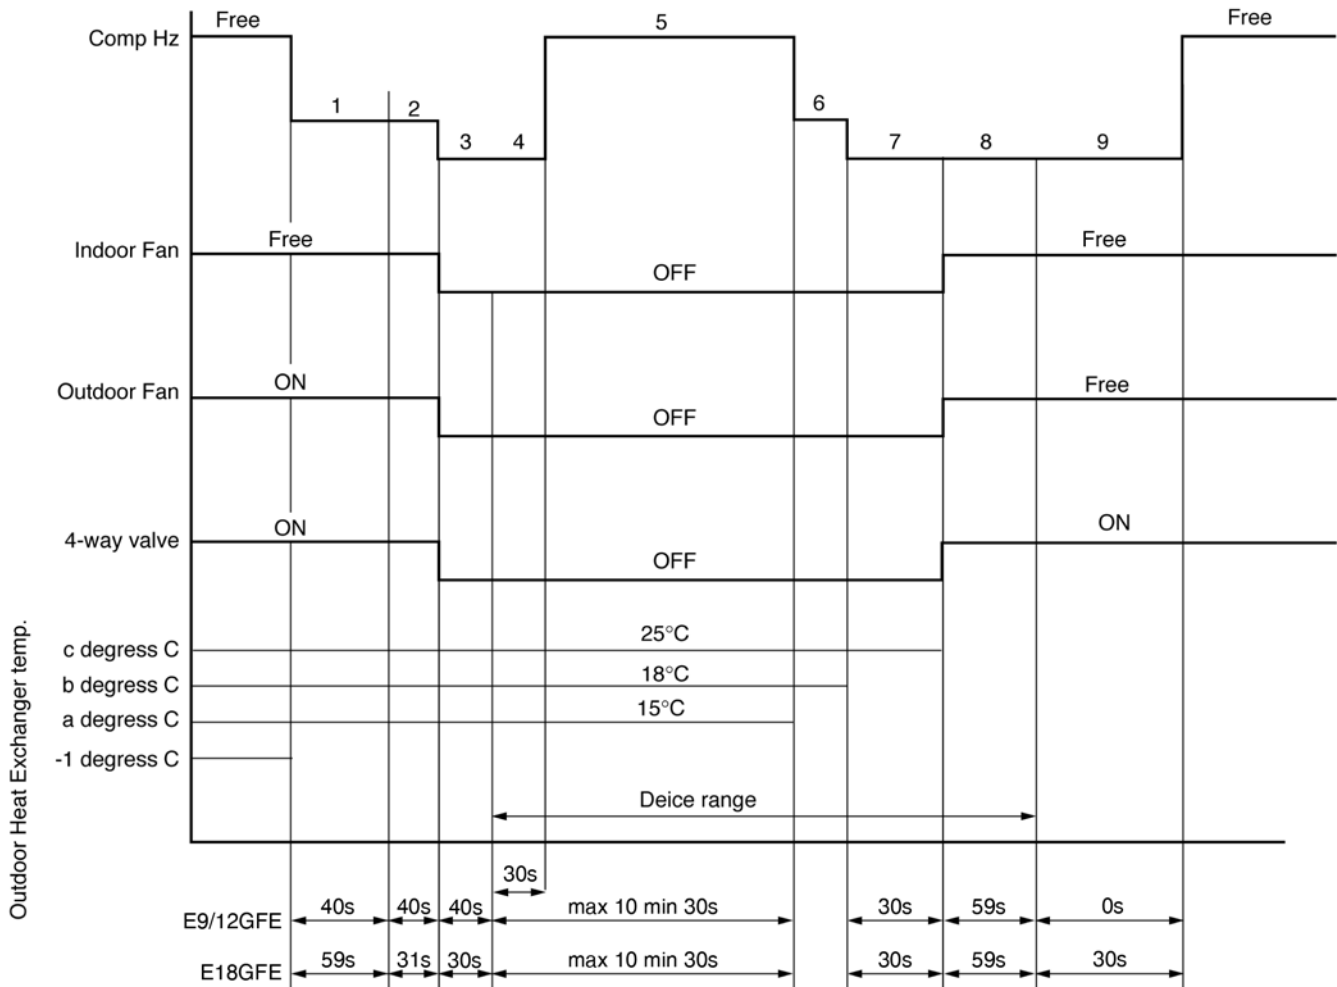

#### Notes

- During deice operation, as relationship for outdoor piping temperature and time T5, the priority given to the condition which is first fulfilled and shift to the next mode.
- First deice after operation restricted to 60 min. & above.
- No restart operation if compressor OFF for sequence No. 8, 9. (Instantaneous, restart)

##### 3. Deice operation judgement condition

When any of below a, b, c, d condition is satisfied, deice signal is produced.

- Continuously, outdoor heat exchanger temperature  $< 3^{\circ}\text{C}$  for 120 minutes and outdoor heat exchanger temperature  $< -6^{\circ}\text{C}$  for 3 minutes and outdoor air temperature  $> -1^{\circ}\text{C}$  and Comp. is ON.
- Continuously, outdoor heat exchanger temperature  $< 3^{\circ}\text{C}$  for 80 minutes and outdoor heat exchanger temperature  $< -7^{\circ}\text{C}$  for 3 minutes and outdoor air temperature  $> -1^{\circ}\text{C}$  and Comp. is ON.
- Continuously, outdoor heat exchanger temperature  $< 3^{\circ}\text{C}$  for 40 minutes and outdoor heat exchanger temperature  $< -9^{\circ}\text{C}$  for 3 minutes and outdoor air temperature  $-3^{\circ}\text{C}$  and Comp. is ON.
- Continuously, outdoor heat exchanger temperature  $< 3^{\circ}\text{C}$  for 40 minutes and outdoor heat exchanger temperature  $< -11^{\circ}\text{C}$  for 3 minutes and outdoor air temperature  $< -3^{\circ}\text{C}$  and Comp. is ON.

However, the first deice will start only after minimum of 60 minutes in operation. (2nd deice and onward shall follow above conditions)




# 10 Self Diagnosis Display

## 10.1. Self Diagnosis Function

- Breakdown contents can be verified by Error Code indicated at indoor unit.  
The Error Code indicator is located inside suction grille. Could be see when suction grille is opened.



- The Error Code could be recalled by pressing the 'CHECK' button at remote control with thin stick.

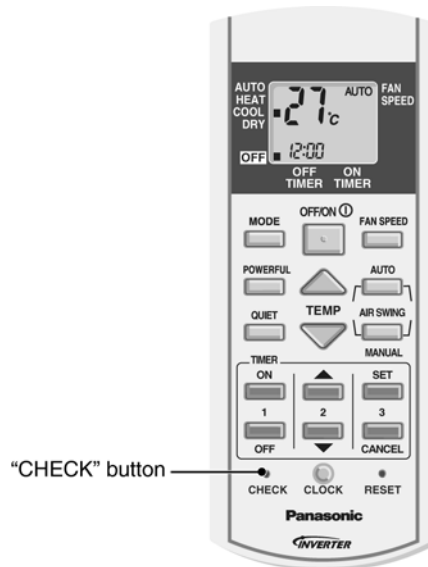

## 10.2. Error Codes Table

Diagnosis display	Abnormality / Protection control	Abnormality Judgement	Emergency operation	Primary location to verify	Note
H11	Indoor / outdoor abnormal communication	> 1 min after starting operation	Indoor fan operation only (single type only)	<ul style="list-style-type: none"> <li>Internal / external cable connections</li> <li>Indoor / Outdoor PCB</li> </ul>	
H12	Indoor unit capacity unmatched	—	—	<ul style="list-style-type: none"> <li>Indoor units total capacity</li> </ul>	Multi type only
H14	Indoor intake air temperature sensor abnormality	—	—	<ul style="list-style-type: none"> <li>Intake air temperature sensor (defective or disconnected)</li> </ul>	
H15	Outdoor compressor temperature sensor abnormality	Continue for 5 sec.	—	<ul style="list-style-type: none"> <li>Compressor temperature sensor (defective or disconnected)</li> </ul>	Single type only
H16	Outdoor Current Transformer open circuit	—	—	<ul style="list-style-type: none"> <li>Decreased amount of refrigerant</li> <li>Outdoor PCB</li> </ul>	
H19	Indoor fan motor mechanism lock	—	—	<ul style="list-style-type: none"> <li>Fan motor</li> <li>Indoor PCB</li> </ul>	
H23	Indoor heat exchanger temperature sensor abnormality	Continue for 5 sec.	—	<ul style="list-style-type: none"> <li>Heat exchanger temperature sensor (defective or disconnected)</li> </ul>	
H27	Outdoor air temperature sensor abnormality	Continue for 5 sec.	O (Single type only)	<ul style="list-style-type: none"> <li>Outdoor temperature sensor (defective or disconnected)</li> </ul>	
H28	Outdoor heat exchanger temperature sensor abnormality	Continue for 5 sec.	O (Single type only)	<ul style="list-style-type: none"> <li>Outdoor heat exchanger temperature sensor (defective or disconnected)</li> </ul>	
H30	Outdoor discharge temperature sensor abnormality	Continue for 5 sec.	—	<ul style="list-style-type: none"> <li>Outdoor discharge temperature sensor (defective or disconnected)</li> </ul>	
H32	Outdoor discharge temperature sensor 2 abnormality	Continue for 5 sec.	—	<ul style="list-style-type: none"> <li>Outdoor discharge temperature sensor 2 (defective or disconnected)</li> </ul>	Multi type only
H33	Indoor/Outdoor wrong connection	—	—	<ul style="list-style-type: none"> <li>Indoor/Outdoor supply voltage</li> </ul>	
H34	Outdoor heatsink temperature sensor at Control Board	Continue for 2 sec.	—	<ul style="list-style-type: none"> <li>Outdoor heatsink temperature sensor at Control Board (defective or disconnected)</li> </ul>	Multi type only
H36	Outdoor gas pipe temperature sensor abnormality	Continue for 2 sec.	—	<ul style="list-style-type: none"> <li>Outdoor gas pipe temperature sensor (defective or disconnected)</li> </ul>	Multi type only
H37	Outdoor liquid temperature sensor abnormality	Continue for 2 sec.	—	<ul style="list-style-type: none"> <li>Outdoor liquid temperature sensor (defective or disconnected)</li> </ul>	Multi type only
H38	Indoor/Outdoor mismatch (brand code)	—	—		
H39	Abnormal indoor operating unit or standby units	—	—	<ul style="list-style-type: none"> <li>Piping connection error</li> <li>Indoor/Outdoor cable connection error</li> </ul>	Multi type only
H41	Abnormal wiring or piping connection	—	—	<ul style="list-style-type: none"> <li>Wiring or piping connection</li> </ul>	CU-2E15GBE
H97	Outdoor Fan Motor lock abnormality	—	—	<ul style="list-style-type: none"> <li>Outdoor Fan Motor</li> </ul>	
H98	Indoor high pressure protection	—	—	<ul style="list-style-type: none"> <li>Air filter dirty</li> <li>Air circulation short circuit</li> </ul>	
H99	Indoor heat exchanger anti-freezing protection	—	—	<ul style="list-style-type: none"> <li>Insufficient refrigerant</li> <li>Air filter dirty</li> </ul>	
F11	Cooling / Heating cycle changeover abnormality	4 times occurrence within 30 minutes	—	<ul style="list-style-type: none"> <li>4-way valve</li> <li>V-coil</li> </ul>	
F17	Indoor standby units freezing	—	—	<ul style="list-style-type: none"> <li>Outdoor expansion valve leakage</li> <li>Indoor unit pipe temperature sensor</li> </ul>	Multi type only
F90	PFC control	—	—	<ul style="list-style-type: none"> <li>Outdoor PCB</li> <li>Outdoor Fan Motor</li> </ul>	

Diagnosis display	Abnormality / Protection control	Abnormality Judgement	Emergency operation	Primary location to verify	Note
F91	Refrigeration cycle abnormality	2 times occurrence within 20 minutes	—	• No refrigerant (3-way valve is closed)	
F93	Outdoor compressor abnormal revolution	4 times occurrence within 20 minutes	—	• Compressor	
F95	Cool high pressure protection	4 times occurrence within 20 minutes	—	• Outdoor refrigerant circuit	
F96	IPM (power transistor) overheating protection	—	—	• Excess refrigerant • Improper heat radiation • Outdoor PCB	
F97	Outdoor compressor overheating protection	4 times occurrence within 10 minutes	—	• Insufficient refrigerant • Compressor	
F98	Total running current protection	3 times occurrence within 20 minutes	—	• Excess refrigerant • Improper heat radiation	
F99	Outdoor Direct Current (DC) peak detection	7 times occurrence continuously	—	• Outdoor PCB • Compressor	

Note:

“O” - Frequency measured and fan speed fixed.

# 11 Installation Instruction

## 11.1. Auto switch operation


The following operations can be performed by pressing the "AUTO" switch.

### 1. AUTO OPERATION MODE

The Auto operation will be activated immediately once the Auto Switch is pressed.


### 2. TEST RUN OPERATION (FOR PUMP DOWN/SERVICING PURPOSE)

The Test Run operation will be activated if the Auto Switch is pressed continuously for more than 5 sec. to below 8 sec. A "pep" sound will occur at the fifth sec., in order to identify the starting of Test Run operation.

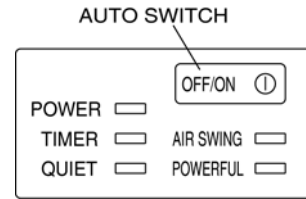

## 11.2. Changing the remote control transmission code

1. Press AUTO SW continuously for 11 seconds (Buzzer sound = pep pep pep).
2. After 11 seconds release AUTO SW, then press Remo-Con TIMER "▼" SW continuously for 5 seconds. Reset code will be transmitted. After transmitted reset code, release TIMER "▼" SW.
3. Press Remo-Con "OFF/ON" switch. The new Remo-Con No. will be accepted and memorized, after which the new Remo-Con No. can be used.

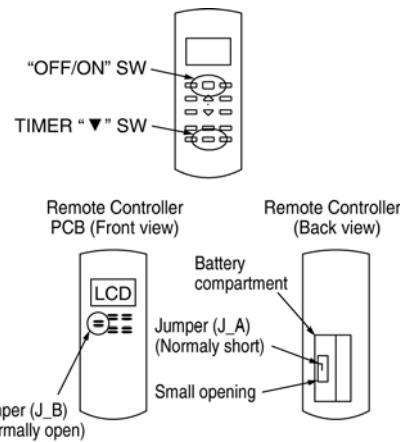

### Remo-Con No. change in Remote Controller

1. Remove battery from the battery compartment in the Remote controller.
2. At left side of battery compartment, there is a small opening at the centre in which a jumper (J\_A) can be seen. Also in Remo-Con PCB shown below Jumper (J\_B) can be seen.

J_A	J_B	Remo-Con No.
Short	Open	A (Default)
Open	Open	B
Short	Short	C
Open	Short	D

## 11.3. Indoor Unit

### 11.3.1. Selecting the Installation Location



#### • Indoor unit

Before choosing the installation site, obtain user approval.


- There should not be any heat source or steam near the unit.
- There should not be any obstacles blocking the air circulation.
- A place where air circulation in the room is good.
- A place where drainage can be easily done.
- A place where noise prevention is taken into consideration.
- Do not install the unit near the door way.
- Locate the indoor unit at least 1m or more from TV, radio, wireless equipment, antenna cables and fluorescent light, and 2m or more away from a telephone.
- Ensure the spaces indicated by arrows from the wall, ceiling, fence or other obstacles.

### Installation diagram

- The indoor unit may be mounted in any of the three styles shown here.

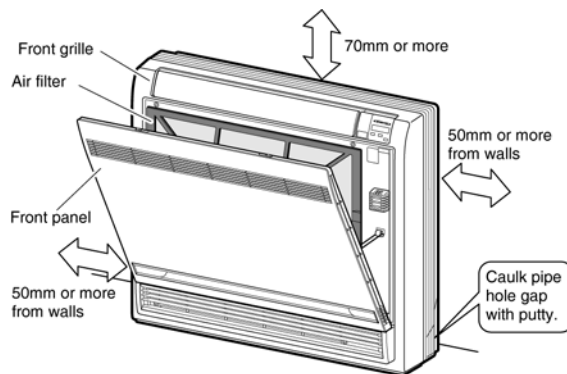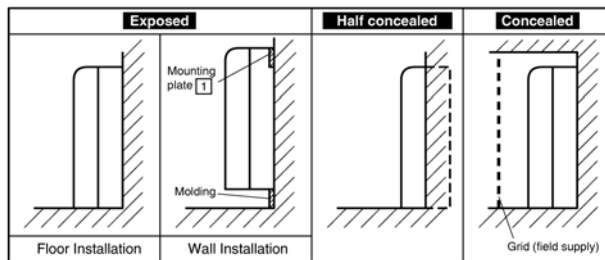


- Location for securing the mounting panel.

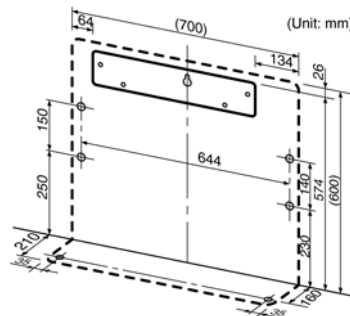

• **Remote controller**

- Signals may not be transmitted and received correctly when the remote controller is operated while in the holder. Take the remote controller in your hand to operate the unit.
- Mount the holder in a location that is not subject to the effects of heat (direct sunlight and stoves, etc.).

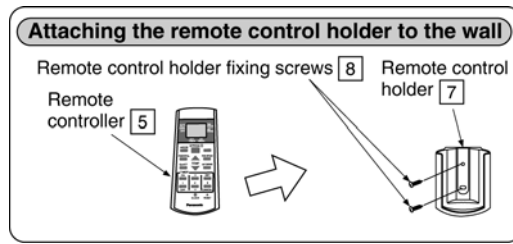

**11.3.2. Selection of Pipe and Heat Insulation Materials**

- When using commercial copper pipes and fittings, observe the following:
  1. Insulation material: Polyethylene form  
Heat transfer rate: 0.041 to 0.052 W/mk (0.035 to 0.045kal/mh°C)  
Refrigerant gas pipe's surface temperature reaches 110°C max.  
Choose heat insulation materials that will withstand this temperature.
  2. Be sure to insulate both the gas and liquid piping and to provide insulation dimension as below.

Model		Pipe Dimension	Thermal Insulation Dimension
E9GF	Gas side	3/8" (O. D. 9.5mm 10.8mm)	I. D. 12.15mm t10mm Min
E12GF	Liquid side	1/4" (O. D. 6.4mm 10.8mm)	I. D. 8.10mm t10mm Min
E18GF	Gas side	1/2" (O. D. 12.7mm 10.8mm)	I. D. 14.16mm t10mm Min
	Liquid side	1/4" (O. D. 6.4mm 10.8mm)	I. D. 8-10mm t10mm Min


3. Use separate heat insulation pipes for gas and liquid refrigerant pipes.

**11.3.3. Installing the Indoor Unit**

**11.3.3.1. Exposed installation**

**Refrigerant piping**

1. Drill a hole (70mm in diameter) in the spot indicated by the ⊗ symbol in the illustration as below.
2. The location of the hole is different depending on which side of the pipe is taken out.
3. For piping, see 5. Connecting the refrigerant piping.
4. Allow space around the pipe for a easier indoor unit pipe connection.

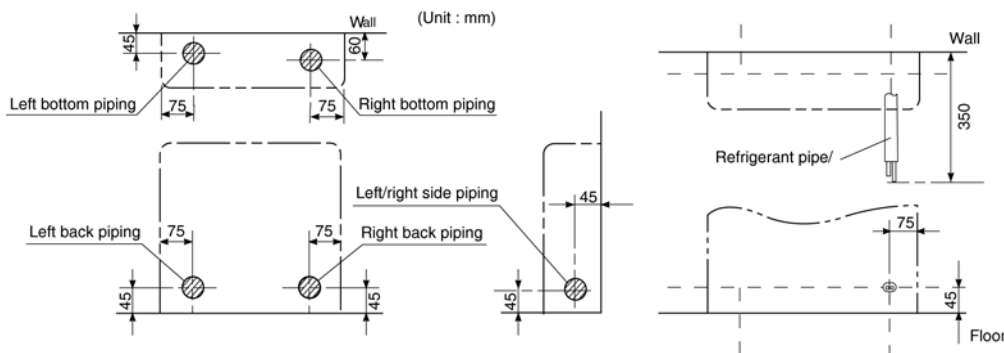

**Caution**

- Min. allowable length
- The suggested shortest pipe length is 2.5m, in order to avoid noise from the outdoor unit and vibration. (Mechanical noise and vibration may occur depending on how the unit is installed and the environment in which it is used.)
  - See the installation manual for the outdoor unit for the maximum pipe length.
  - For multi-connections, see the installation manual for the multi-outdoor unit.


## To drill a hole in the wall and install a sleeve of piping

1. Insert the piping sleeve to the hole.
2. Fix the bushing to the sleeve.
3. Cut the sleeve until it extrudes about 15 mm from the wall.

### Caution



When the wall is hollow, please be sure to use the sleeve for tube ass'y to prevent dangers caused by mice biting the connecting cable.

4. Finish by sealing the sleeve with putty or caulking compound at the final stage.

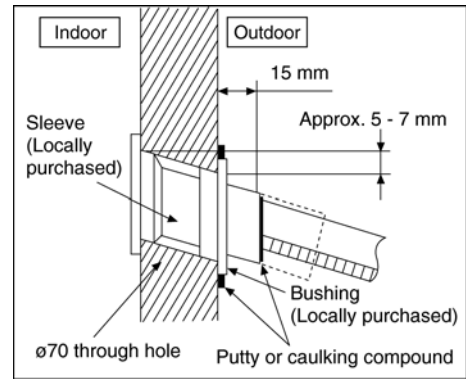

## Drain piping

1. Use commercial rigid polyvinyl chloride pipe (general VP 20 pipe, outer diameter 26mm, inner diameter 20mm) for the drain pipe.
2. The drain hose (outer diameter 18mm at connecting end, 220mm long) is supplied with the indoor unit. Prepare the drain pipe picture below position.
3. The drain pipe should be inclined downward so that water will flow smoothly without any accumulation. (Should not be trap.)
4. Insert the drain hose to this depth so it won't be pulled out of the drain pipe.
5. Insulate the indoor drain pipe with 10mm or more of insulation material to prevent condensation.
6. Remove the air filters and pour some water into the drain pan to check the water flows smoothly.

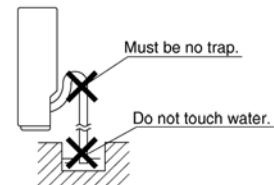
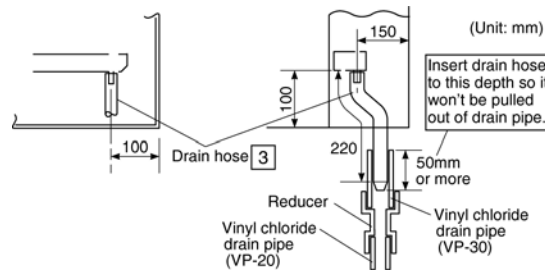




### Caution

Use polyvinyl chloride adhesive agent for gluing. Failure to do so may cause water leakage.

## Indoor unit preparation

- Open the front panel, remove the 4 screws and dismount the front grille.
- Follow the procedure below when removing the slit portions.
- **For Moldings**
  - Remove the pillars. (Remove the slit portions on the bottom frame using nippers.)
- **For Side Piping**
  - Remove the pillars.
    1. Remove the 7 screws.
    2. Remove the upper casing (2 tabs).
    3. Remove the left and right casings (2 tabs on each side).
    4. Remove the slit portions on the bottom frame and casings using nippers.
    5. Return by following the steps in reverse order (3 > 2 > 1).

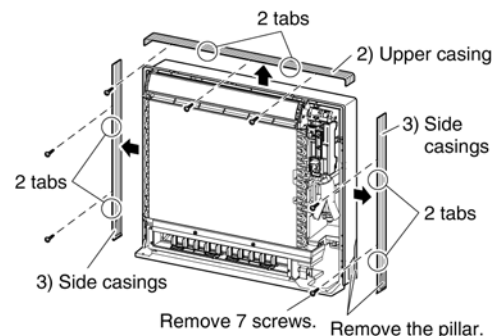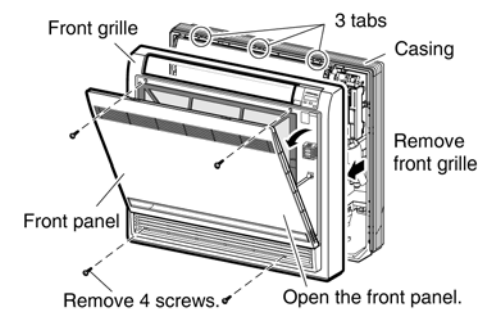


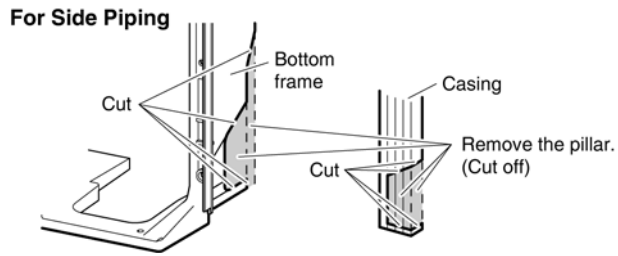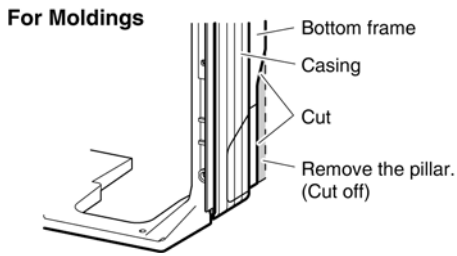

- Connecting the Drain Hose  
See 4. Connecting the Drain Hose

### Indoor unit installation

- Secure using 6 screws for floor installations. (Do not forget to secure to the rear wall.)
- For wall installations, secure the mounting plate **1** using 5 screws and the indoor unit using 4 screws.
- The mounting plate should be installed on a wall which can support the weight of the indoor unit.
  1. Temporarily secure the mounting plate to the wall, make sure that the panel is completely level, and mark the boring points on the wall.
  2. Secure the mounting plate to the wall with screws.

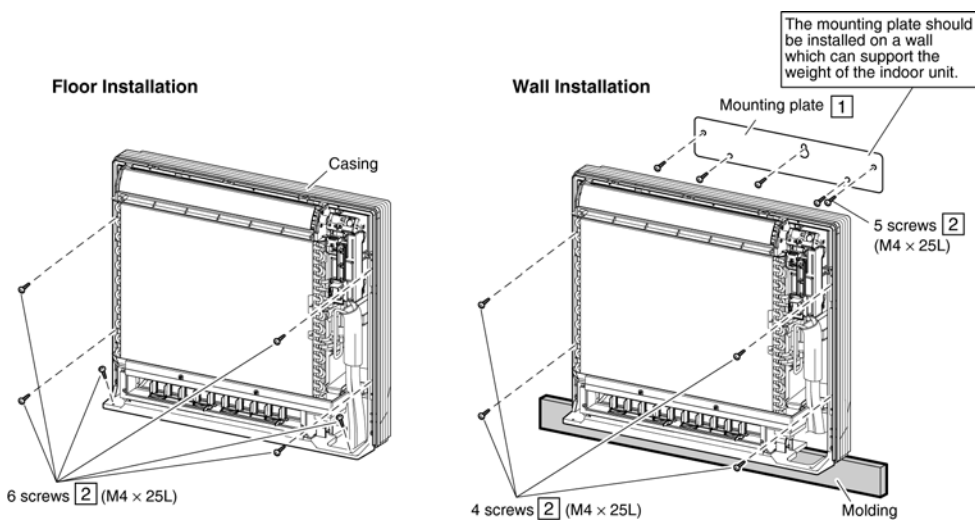


3. Once refrigerant piping and drain piping connections are complete, fill in the gap of the through hole with putty. A gap can lead to condensation on the refrigerant pipe, and drain pipe, and the entry of insects into the pipes
4. Attach the front panel and front grille in their original positions once all connections are complete.

### 11.3.3.2. Half concealed installation

- Only item peculiar to this installation method are given here. See Exposed installation for additional instructions.

#### Wall hole


- Drill a wall hole of the size shown in the illustration on the right.

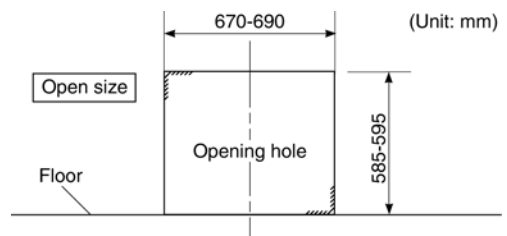



### Installation of supplemental plate for attaching indoor unit

- The rear of the unit can be fixed with screws at the points shown in the illustration as below. Be sure to install the supplemental plate in accordance with the depth of the inner wall.

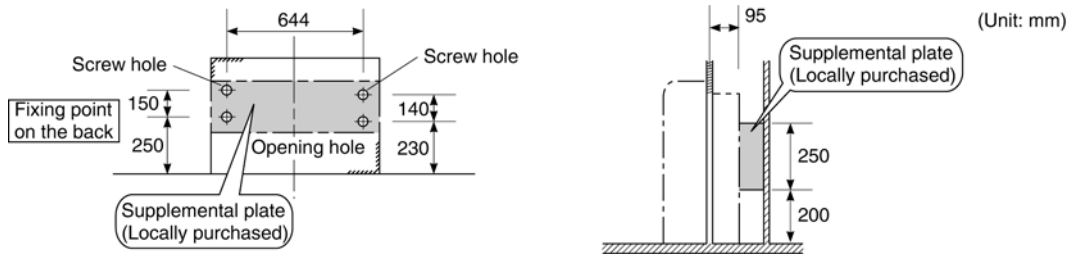


**Caution**

- Use polyvinyl chloride adhesive agent for gluing. Failure to do so may cause water leakage.


### Refrigerant piping

See Refrigerant piping under Exposed Installation.

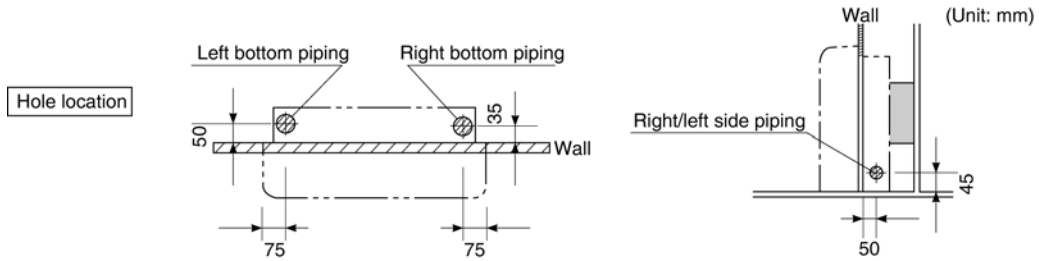

### Indoor unit installation

1. Remove the front grille.
2. Remove 7 screws.
3. Remove the upper casing (2 tabs).
4. Remove the side casings (2 tabs on each side).
5. Attach the indoor unit to the wall and secure using screws in 6 locations (M4 x 25L).

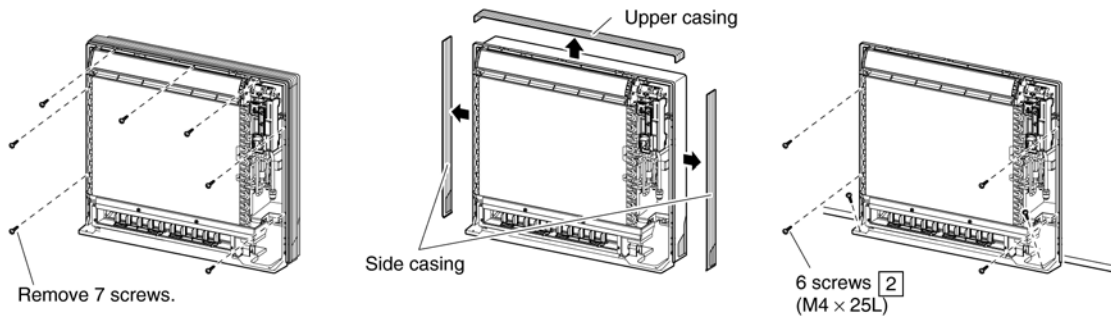

**Caution**

1. Use drain pan edge for horizontal projection of the indoor unit.
2. Install the indoor unit flush against wall.


### 11.3.3.3. Concealed installation

- Only item peculiar to this installation method are given here. See Exposed installation for additional instructions.


#### Preparation

- **Install the unit according to the instructions below. Failure to do so may cause lead to both cooling and heating failure and the condensation inside the house.**

1. Allow enough space between the main unit and ceiling not to obstruct the flow of cool/warm air.
2. Place a partition plate between outlet and inlet sections.
3. Place a partition plate on the right side.
4. Change the upward air flow limit dipswitch.
5. Use a movable lattice at the air outlet to allow the adjustment of cool/warm air flow direction.
6. Lattice size should be 70% or more of open rate.

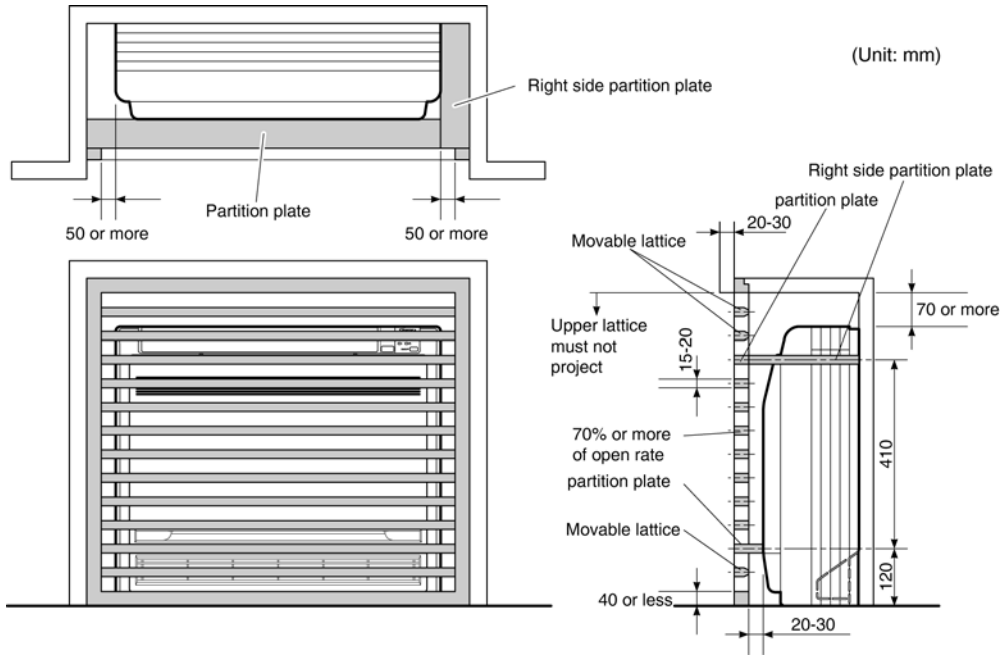


#### Refrigerant piping

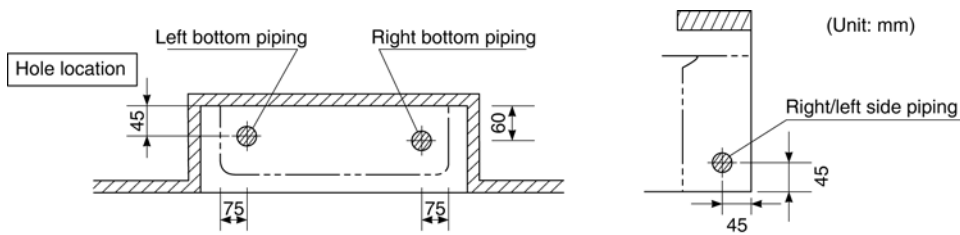

#### Changing upward air flow limit dipswitch

**Change the upward air flow limit dipswitch (SW2-4) to ON to limit the upward air flow.**

1. Remove the front grille.
2. Switch the dipswitch (SW2-4) on the PCB in the electrical equipment box to ON.

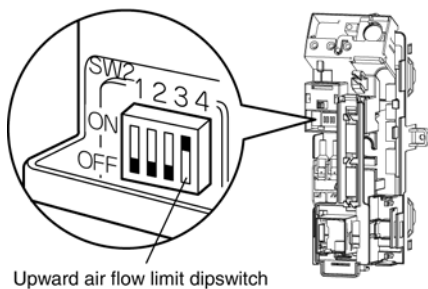

#### • How to set and use the switch


Switch number	SW2-4
Set function	Upward air flow limit
ON	ON
OFF	OFF
Use	Switch to on for embedded units
Factory setting	OFF

**Caution**

Be sure to turn on the upward air flow limit dipswitch. Failure to do so may cause incomplete cooling/heating and formation of condensation inside the house.


### 11.3.4. Connecting the Drain Hose

- Insert the supplied drain hose ③ into the socket of the drain pan.
- Fully insert the drain hose until it adheres to a seal of the socket.

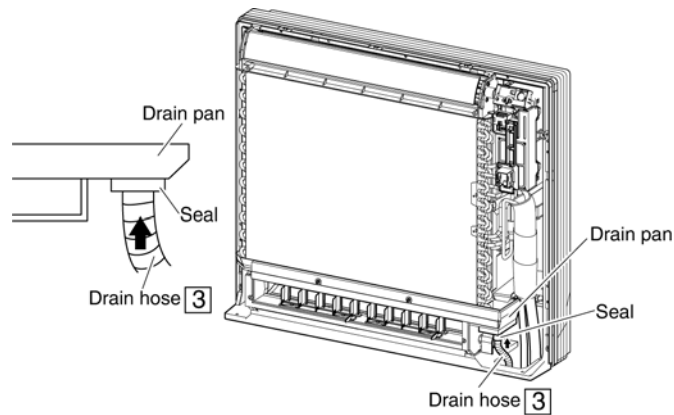


#### Check the drainage

- Pour a glass of water into the drain pan.
- Ensure that water flows out from drain pipe.

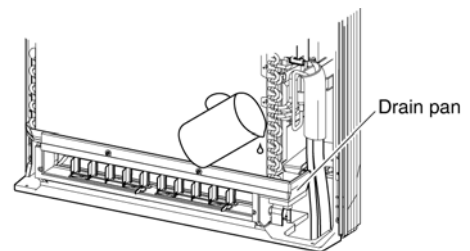


### 11.3.5. Connecting the Refrigerant Piping

1. Please make flare after inserting flare nut (locate at joint point of tube assembly) onto the copper pipe.
2. Align the center of pipe and sufficiently tighten the flare nut with fingers.
3. Further tighten the flare nut with torque wrench in specified torque as stated in the table under 3. Connecting the Refrigerant Piping in OUTDOOR UNIT.

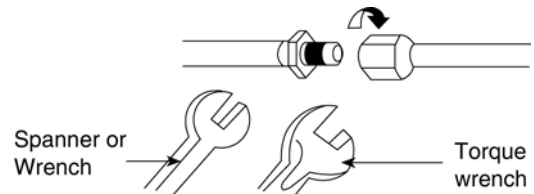


#### Checking for gas leakage

- Check for leakage of gas after air purging.

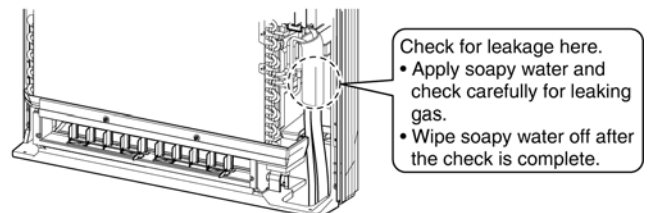

## Insulating the refrigerant piping

- Attach the pipe after checking for gas leakage, described above.
  1. Cut the insulated portion of the on-site piping, matching it up with the connecting portion.
  2. Secure the slit on the auxiliary pipe side with the butt joint on the connection pipe using the tape, making sure there are no gaps.
  3. Wrap the slit and the butt joint with the included insulation sheet **4**, making sure there are no gaps.

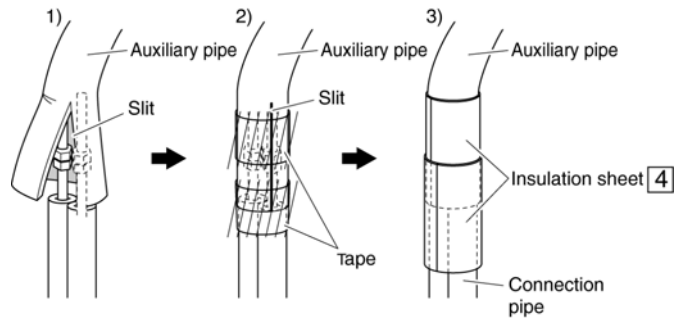


### Caution

1. Insulate the joint of the pipes securely. Incomplete insulation may lead to water leakage.
2. Push the pipe inside so it does not place undue force on the front grille .

## 11.3.6. Connecting the Indoor/Outdoor Connecting Cable

1. Leave the sensor securing plate, remove the front metal plate cover.
  2. Connecting the cable between indoor unit and outdoor unit shall be approved polychloroprene sheathed 4 x 1.5 mm<sup>2</sup> flexible cord. Type designation 245 IEC57 or heavier cord.
- Ensure the colour of wires of indoor unit and the terminal Nos. are the same to the outdoor's respectively.
  - Earth lead wire shall be longer than the other lead wires as shown in the figure for the electrical safety in case of the slipping out of the cord from the anchorage.
  - Secure the cable onto the control board with the holder (clammer).

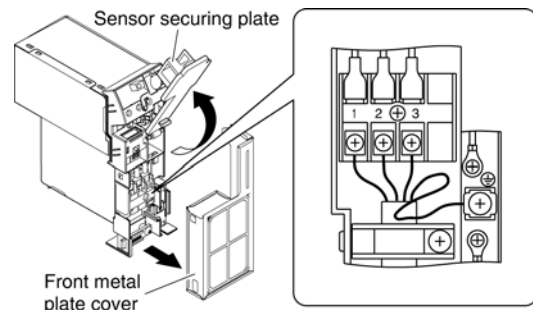

Terminals on the indoor unit	1	2	3	
Colour of wires				
Terminals on the outdoor unit	1	2	3	


## 11.4. Outdoor Unit

### 11.4.1. Selecting the Installation Location

Before choosing the installation site, obtain user approval.


- If an awning is built over the unit to prevent direct sunlight or rain, be careful that heat radiation from the condenser is not obstructed.
- There should not be any animal or plant which could be affected by hot air discharged.
- Keep the spaces indicated by arrows from the wall, ceiling, fence or other obstacles.
- Do not place any obstacles which may cause a short circuit of the discharged air.
- If piping length is over the rated length, additional refrigerant should be added as shown in the table.

Model	Piping size		Rated Length (m)	Max. Elevation (m)	Min. Piping Length (m)	Max. Piping Length (m)	Additional Refrigerant (g/m)
	Gas	Liquid					
E9GF / E12GF	3/8"	1/4"	7.5	5	3	15	20
E18GF	1/2"	1/4"	10	15	3	20	30

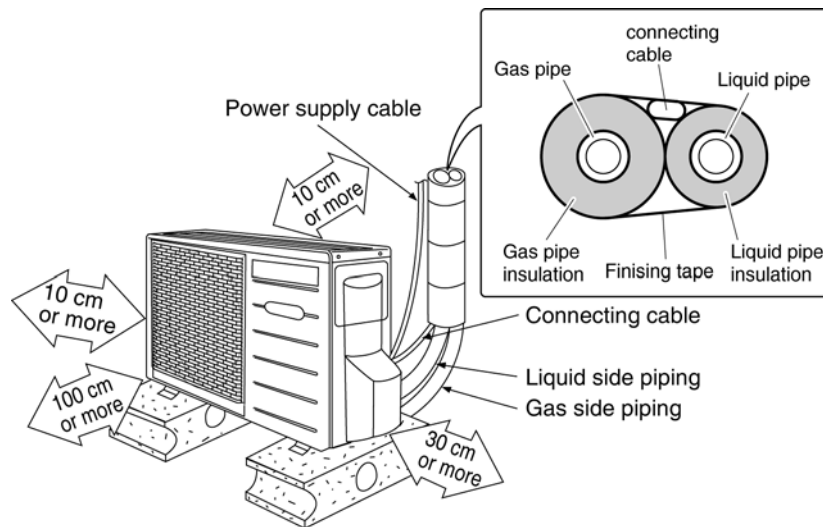


### 11.4.2. Installing the Outdoor Unit

- Fix the unit on concrete or rigid frame firmly and horizontally by bolt nut ( $\varnothing 10$  mm).
- When installing at roof, please consider strong wind and earthquake. Please fasten the installation stand firmly with bolt or nails.

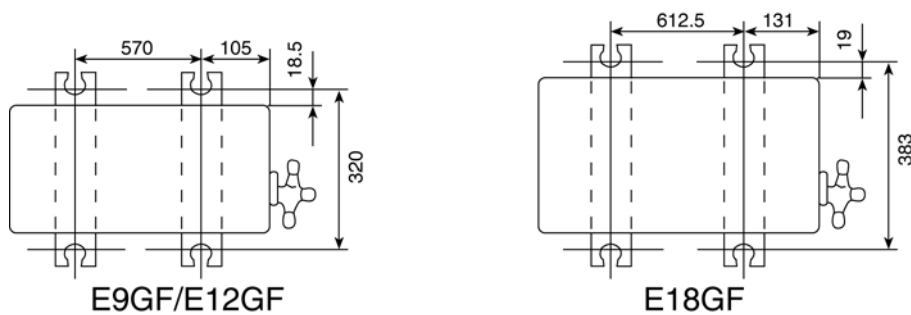

### 11.4.3. Connecting the Refrigerant Piping

 1. Decide piping length and then cut by using pipe cutter. Remove burrs from cut edge.
2. Make flare after inserting the flare nut (locate at valve) onto the copper pipe.
3. Align center of pipe to valve and then tighten with torque wrench to the specified torque as stated in the table.




Model	Piping size (Torque)	
	Gas	Liquid
E9GF / E12GF	3/8" [42 N•m]	1/4" [18 N•m]
E18GF	1/2" [55 N•m]	1/4" [18 N•m]


## Flaring the pipe end

 1. Please cut using pipe cutter and then remove the burrs.
2. Remove the burrs by using reamer. If burrs is not removed, gas leakage may be caused. Turn the piping end down to avoid the metal powder entering the pipe.
3. Please make flare after inserting the flare nut onto the copper pipes.

### ■ Improper flaring ■




When properly flared, the internal surface of the flare will evenly shine and be of even thickness. Since the flare part comes into contact with the connections, carefully check the flare finish.

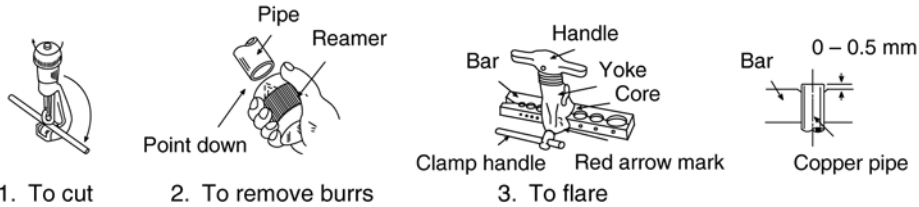

## 11.4.4. Evacuation of the Equipment

WHEN INSTALLING AN AIR CONDITIONER, BE SURE TO EVACUATE THE AIR INSIDE THE INDOOR UNIT AND PIPES in the following procedure.

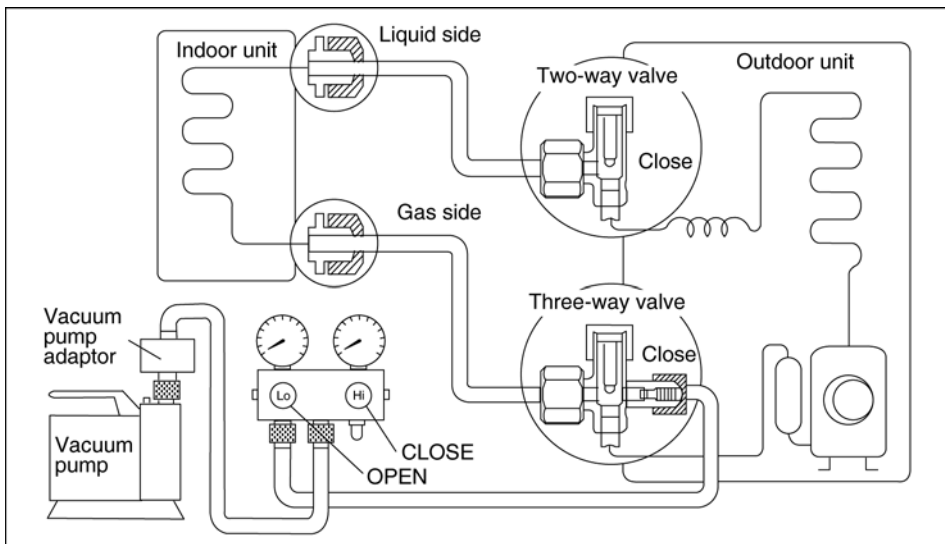

1. Connect a charging hose with a push pin to the Low side of a charging set and the service port of the 3-way valve.
  - Be sure to connect the end of the charging hose with the push pin to the service port.
2. Connect the center hose of the charging set to a vacuum pump with check valve, or vacuum pump and vacuum pump adaptor.
3. Turn on the power switch of the vacuum pump and make sure that the needle in the gauge moves from 0 cmHg (0 MPa) to -76 cmHg (-0.1 MPa). Then evacuate the air approximately ten minutes.
4. Close the Low side valve of the charging set and turn off the vacuum pump. Make sure that the needle in the gauge does not move after approximately five minutes.

Note: BE SURE TO FOLLOW THIS PROCEDURE IN ORDER TO AVOID REFRIGERANT GAS LEAKAGE.
5. Disconnect the charging hose from the vacuum pump and from the service port of the 3-way valve.
6. Tighten the service port caps of the 3-way valve at a torque of 18 N•m with a torque wrench.
7. Remove the valve caps of both of the 2-way valve and 3-way valve. Position both of the valves to "OPEN" using a hexagonal wrench (4 mm).
8. Mount valve caps onto the 2-way valve and the 3-way valve.
  - Be sure to check for gas leakage.


### CAUTION

- If gauge needle does not move from 0 cmHg (0 MPa) to -76 cmHg (-0.1 MPa), in step ③ above take the following measure:
- If the leak stops when the piping connections are tightened further, continue working from step ③.
- If the leak does not stop when the connections are retightened, repair the location of leak.
- Do not release refrigerant during piping work for installation and reinstallation. Take care of the liquid refrigerant, it may cause frostbite.


### 11.4.5. Connecting the Cable

(FOR DETAIL REFER TO WIRING DIAGRAM AT UNIT)

1. Remove the control board cover from the unit by loosening the screw.
2. Connecting cable between indoor unit and outdoor unit shall be approved polychloroprene sheathed 4 x 1.5 mm<sup>2</sup> flexible cord, type designation 245 IEC 57 or heavier cord.

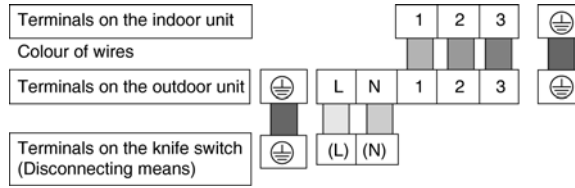

3. Secure the cable onto the control board with the holder (clammer).
  4. Cable connection to the power supply through knife switch (Disconnecting means).
    - Connect the approved polychloroprene sheathed power supply cable (3 x 1.5 mm<sup>2</sup>), type designation 245 IEC 57 or heavier cord to the terminal board, and connect the other end of the cable to knife switch (Disconnecting means).
- Note: Knife switch (Disconnecting means) should have minimum 3.5 mm contact gap. Secure the cable onto the control board with the holder (clammer).

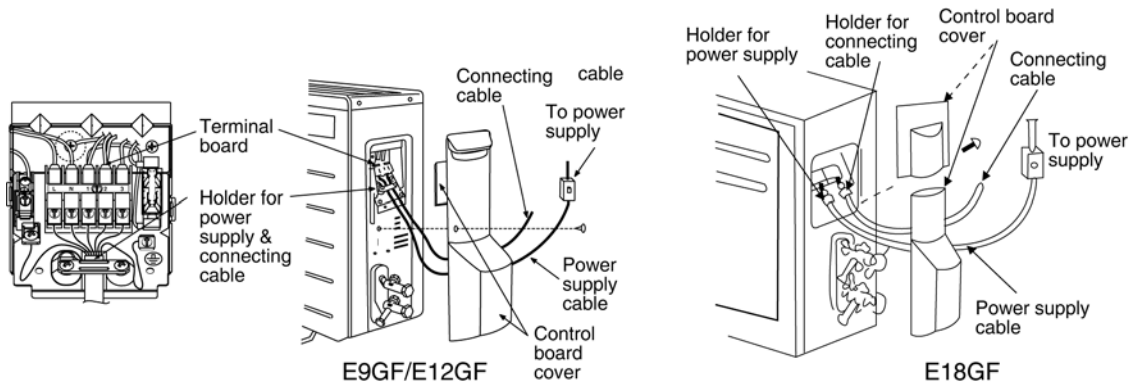

# 12 Disassembly and Assembly Instructions

## WARNING

High voltages are generated in the electrical parts area by the capacitor. Ensure that the capacitor has discharged sufficiently before proceeding with repair work. Failure to heed this caution may result in electric shocks.

### 12.1. Indoor Unit

#### 1. Removal of Suction Grille

Push the knob of Suction Grille (2 places) to the "Open" position to remove Grille.

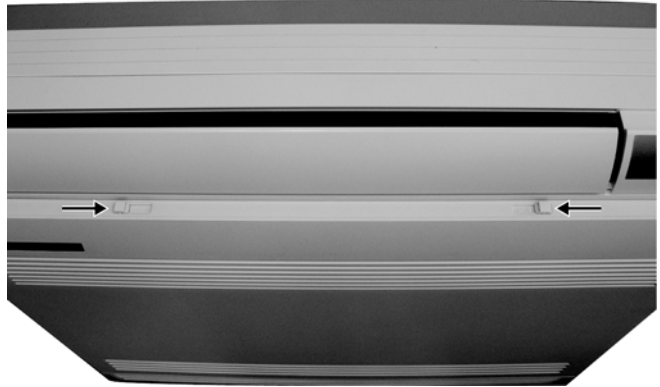


Fig. 1

#### 2. Removal of Front Grille

Remove screws, 2 at top and 2 at bottom to remove the Front Grille.



Fig. 2

#### 3. Removal of Control Board Casing

- a. Remove the ground line of the heat exchanger at right side (1 screw).
- b. Remove the screw of the Control board casing at right side.

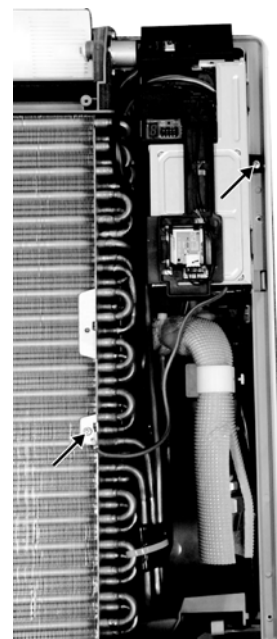


Fig. 3



c. Raise up the resin case, remove the shield plate.

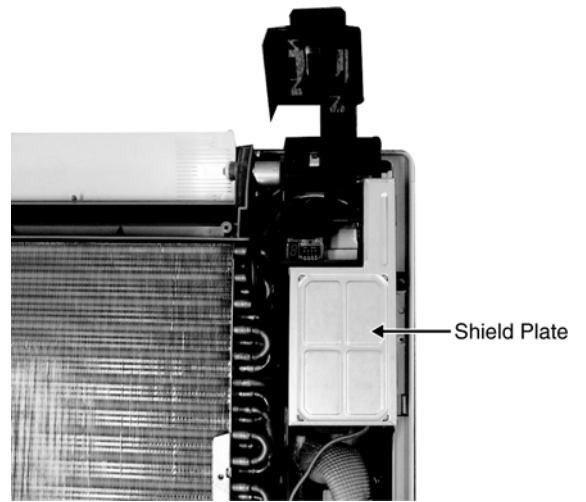


Fig. 4

d. Remove the connectors which connected to PCB.  
(6 places)  
Remove the Pipe Temperature Sensor from the heat  
exchanger.

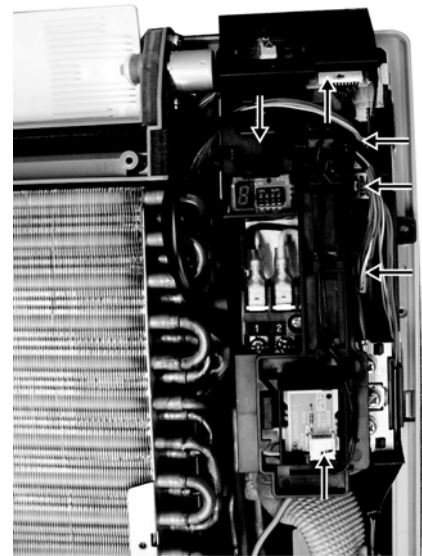


Fig. 5

e. Remove the Shield plate in the Control Board Casing.

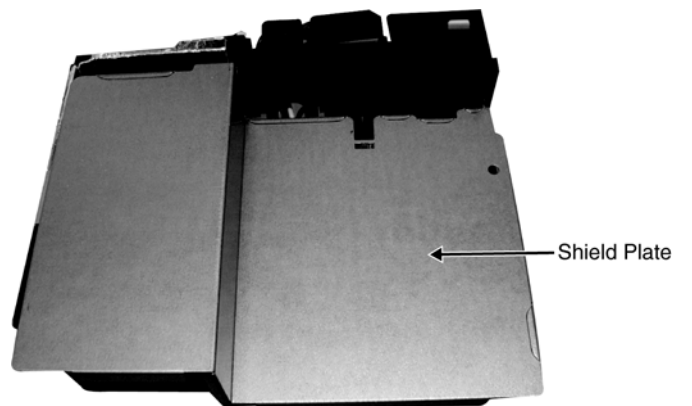


Fig. 6

- f. Remove the terminal cables from the PCB from the Terminal Block (black, white, red)  
Remove the green cable terminal that connected to the ground terminal.

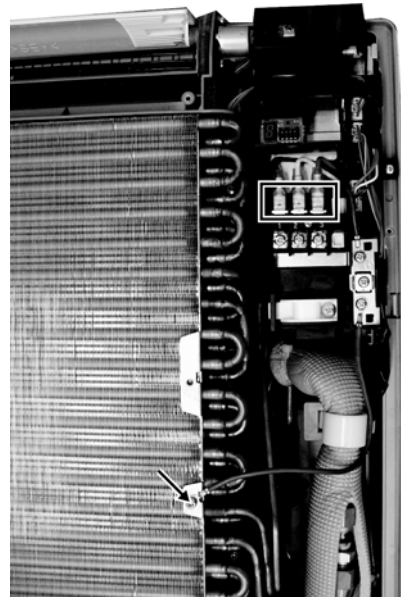


Fig. 7

- g. Remove the screws (2 locations) at PCB and take out the PCB.



Fig. 8

- 4. Removal of Drain Pan Ass'y  
Remove the screws in front of Drain Pan (2 locations) and take out the Drain Pan.

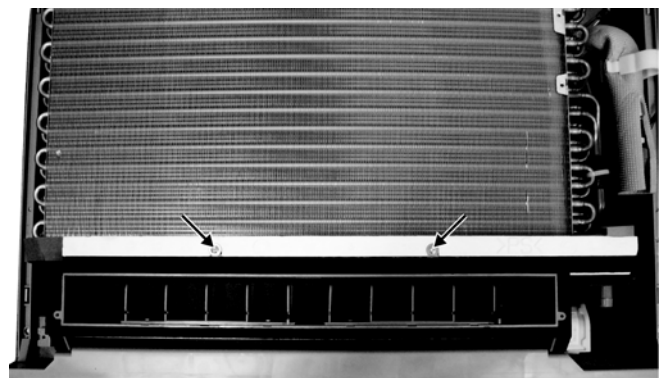


Fig. 9

5. Removal of Evaporator

Push the stoppers at left side of evaporator (2 locations) to loosen the evaporator. At the right side of evaporator, push the stoppers to loosen the evaporator and move the evaporator to right side.



Fig. 10

6. Removal of Turbo Fan and Fan Motor

a. Remove the cover. (4 screws)



Fig. 11

b. Use a spanner to loosen the fan fixed nut in anti-clockwise, remove the fan.

c. Remove the Fan Motor screw (3 locations), remove Fan Motor.



Fig. 12

## 12.2. Outdoor Unit

### 12.2.1. CU-E9GFE CU-E12GFE

1. Remove the top panel and front panel

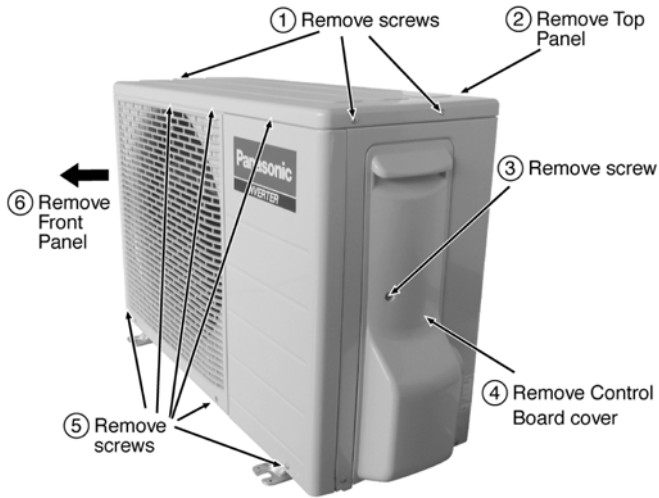


Fig. 13

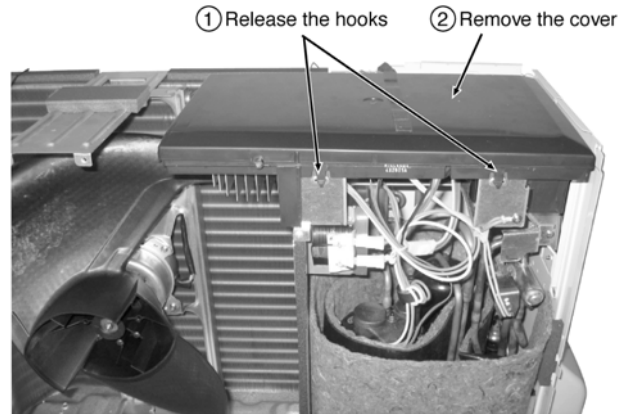
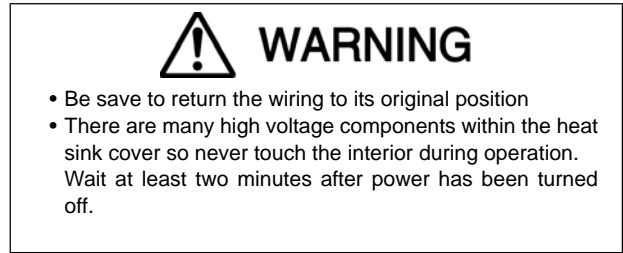


Fig. 14

2. Remove the Outdoor Electronic Controller

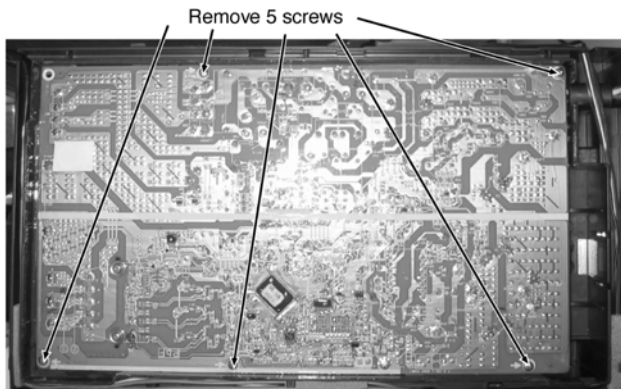


Fig. 15

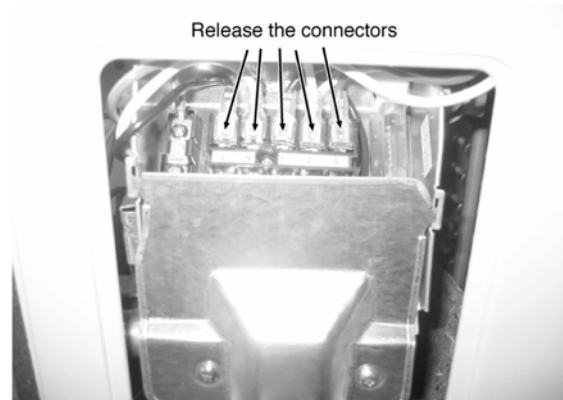


Fig. 17

**⚠Caution!** When handling electronic controller, be careful of electrostatic discharge.

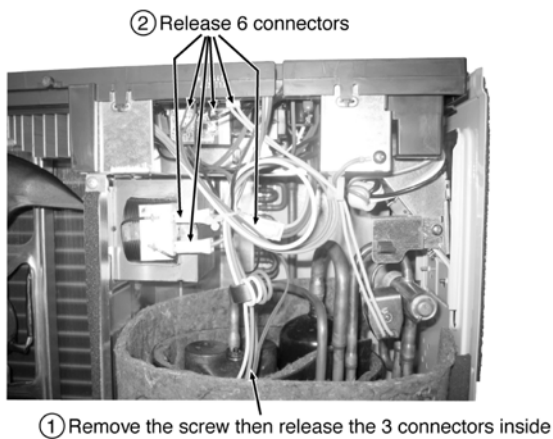


Fig. 16

## 12.2.2. CU-E18GFE

1. Remove the top panel and front panel

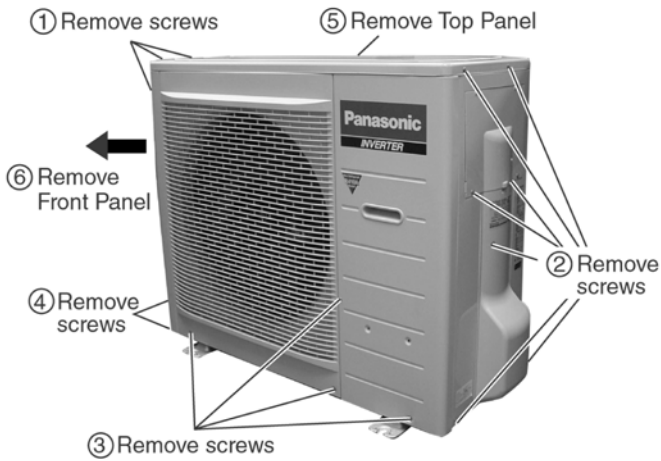


Fig. 18

**⚠ WARNING**

- Be save to return the wiring to its original position
- There are many high voltage components within the heat sink cover so never touch the interior during operation. Wait at least two minutes after power has been turned off.

2. Remove the Outdoor Electronic Controller



Fig. 19

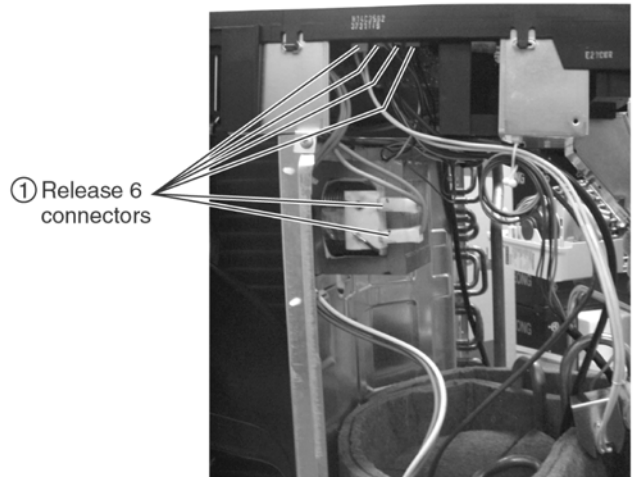


Fig. 20

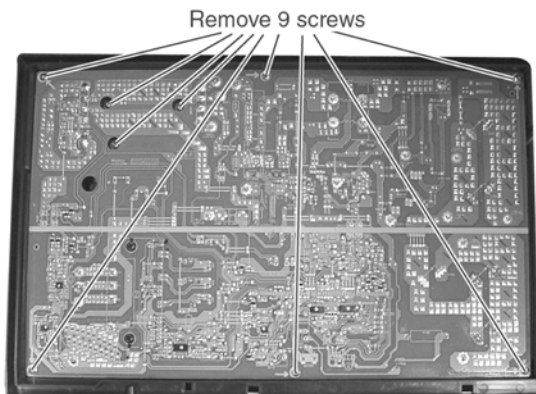


Fig. 21

⚠ Caution! When handling electronic controller, be careful of electrostatic discharge.





# 13 Technical Data

## 13.1. Operation Characteristics

CS-E9GFEW CU-E9GFE





### • Cooling Characteristic

[Condition] Room temperature: 27/19°C  
Cooling operation: At High Fan  
Rated Frequency Operation

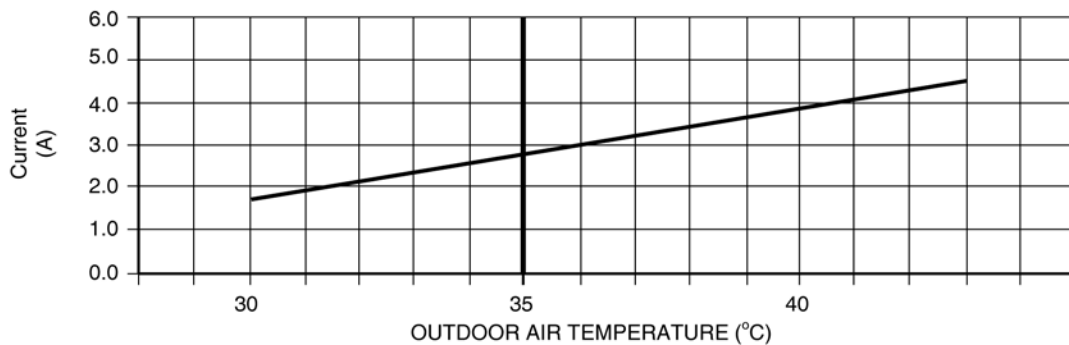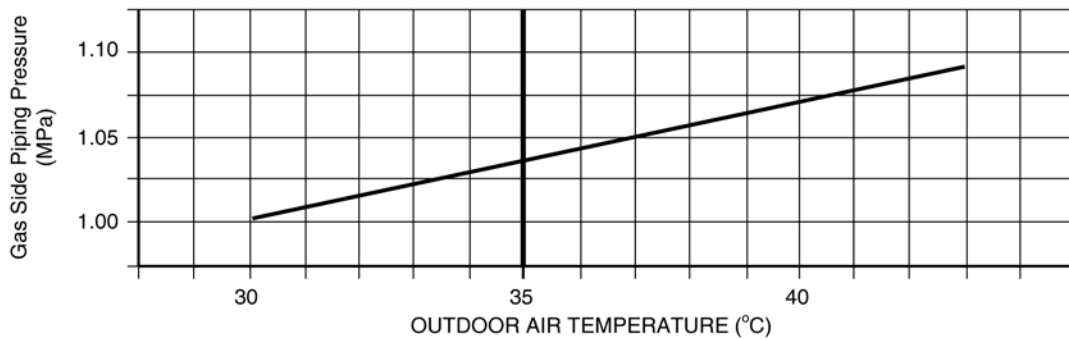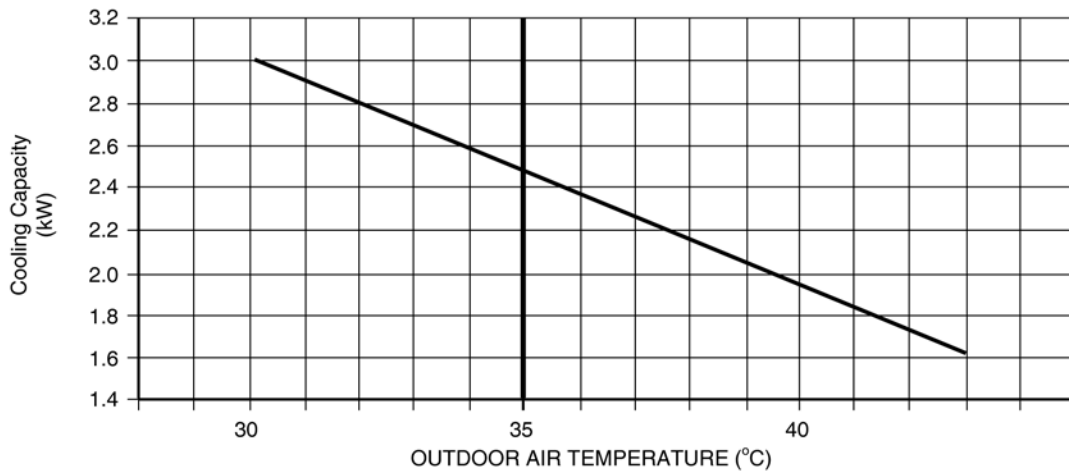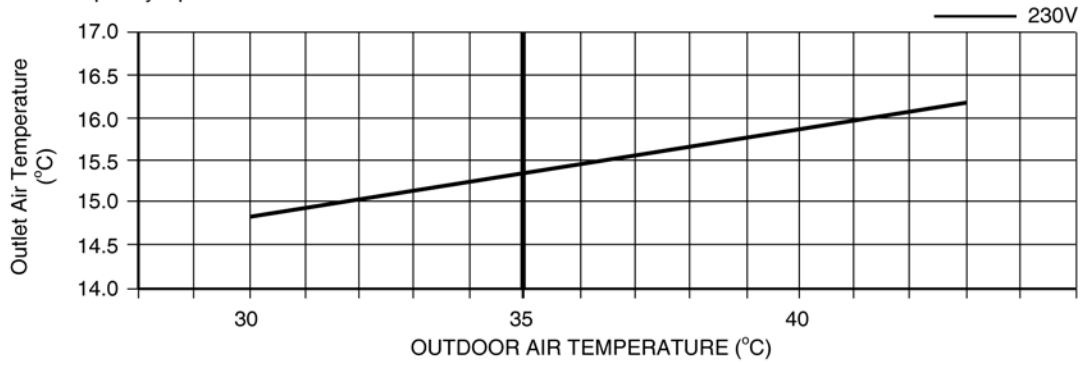





## • Piping Length Characteristic (Cooling)

[Condition] Room temperature: 27/19°C  
Cooling operation: At High fan  
Rated Frequency Operation

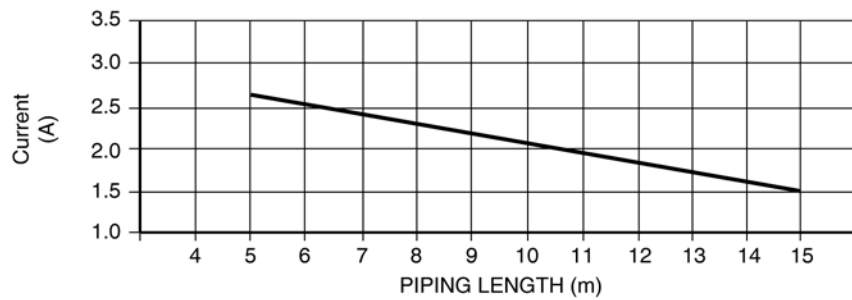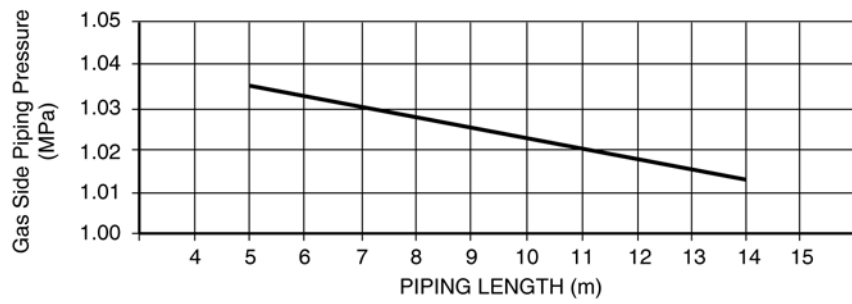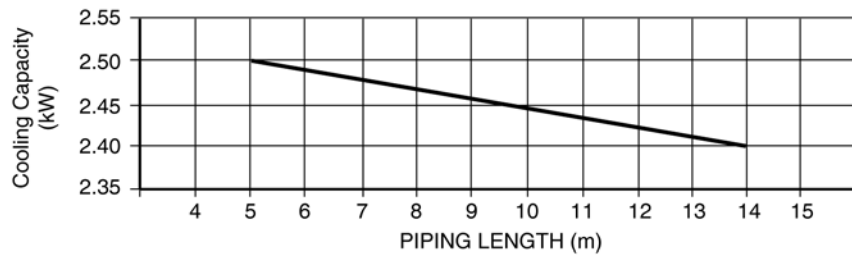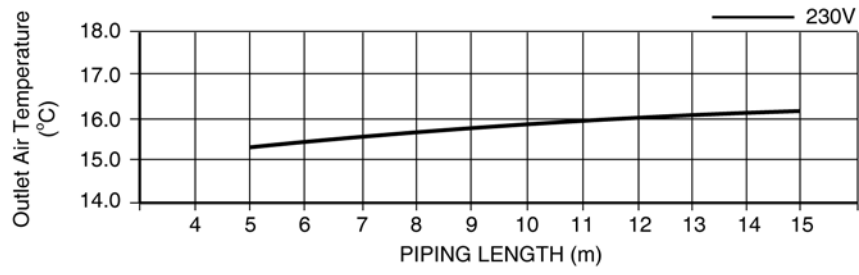

## • Heating Characteristic





[Condition] Room temperature: 20°C  
Heating operation: At High Fan  
Rated Frequency Operation

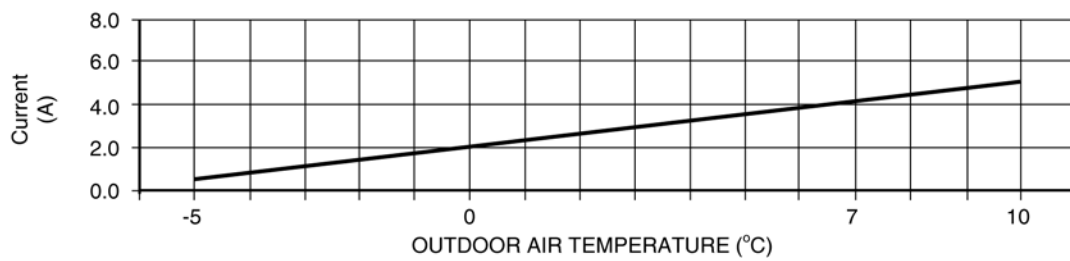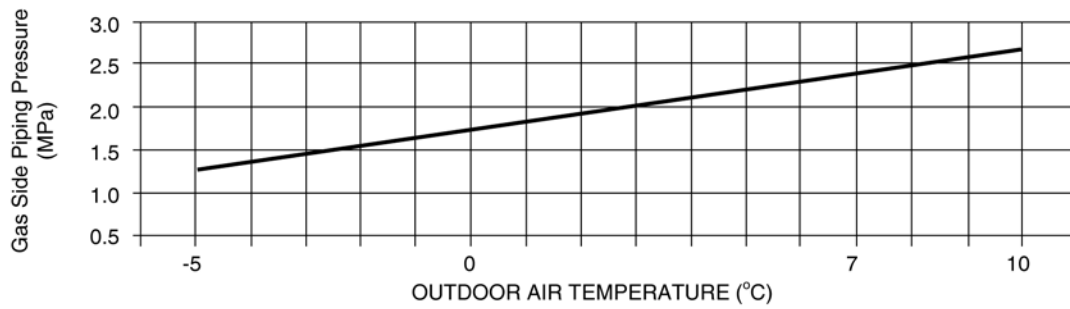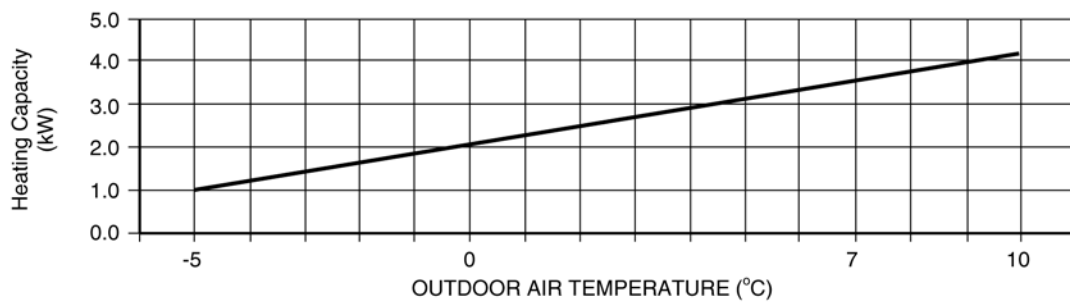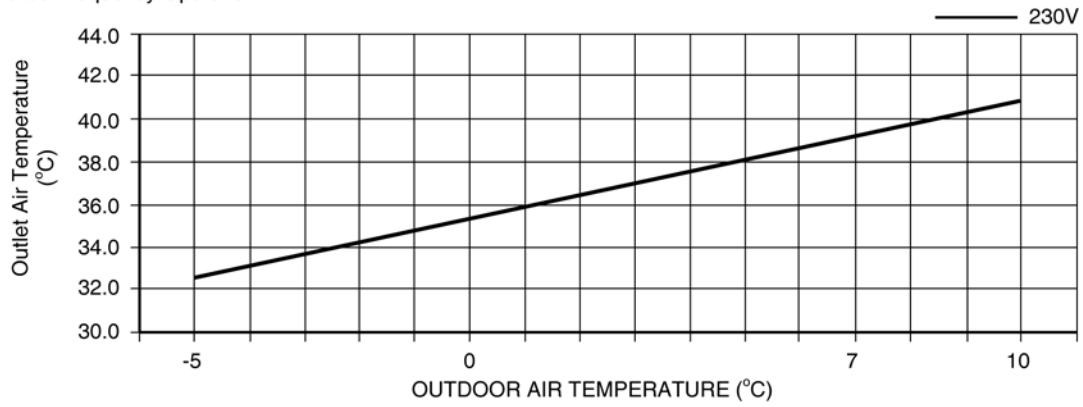



## • Piping Length Characteristic (Heating)





[Condition] Room temperature: 20°C  
Heating operation: 7/6°C  
Rated Frequency Operation

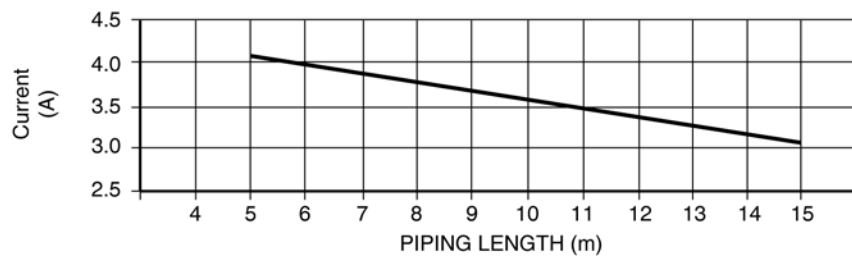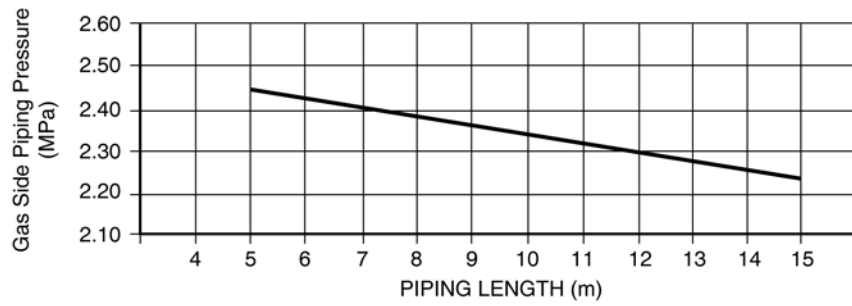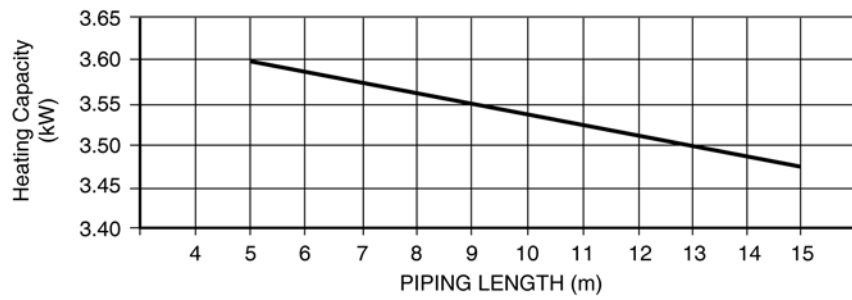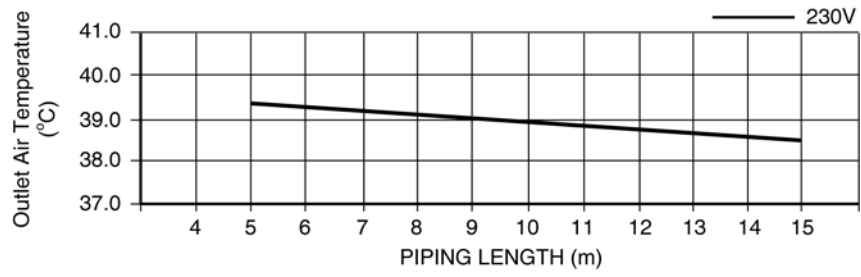

# CS-E12GFEW CU-E12GFE





## • Cooling Characteristic

[Condition] Room temperature: 27/19°C  
Cooling operation: At High Fan  
Rated Frequency Operation

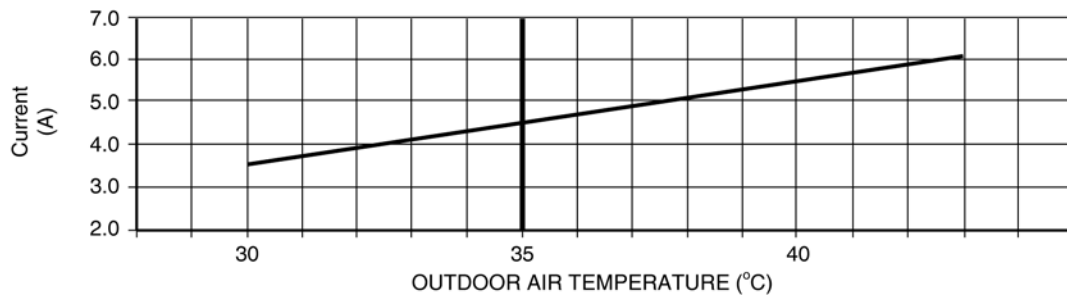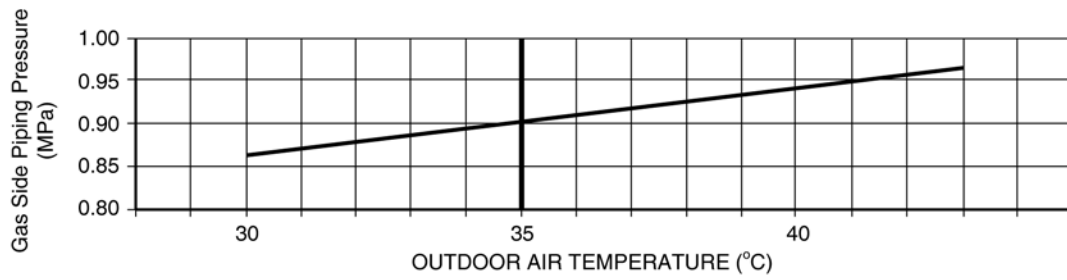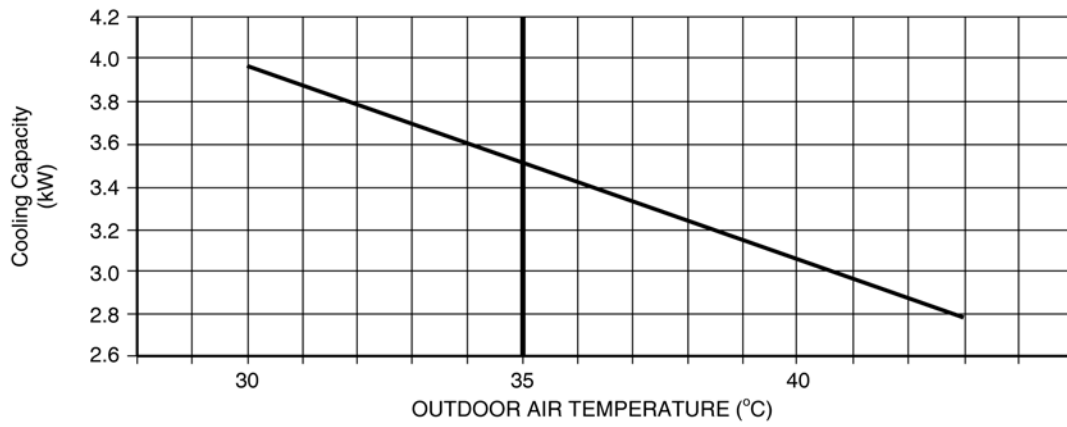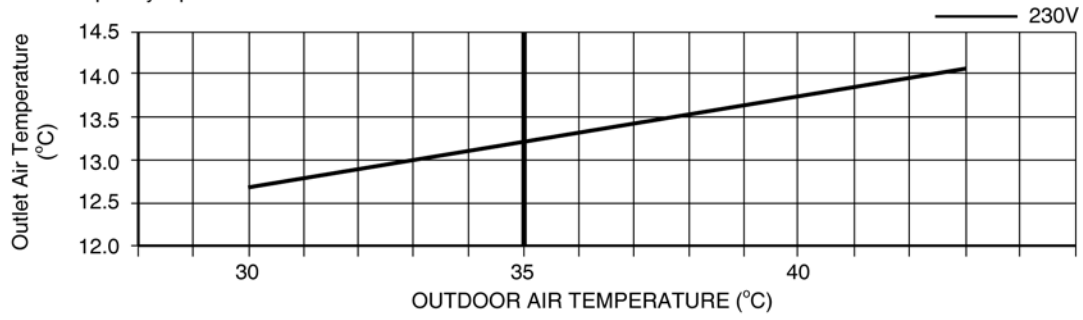





## • Piping Length Characteristic (Cooling)

[Condition] Room temperature: 27/19°C  
Cooling operation: At High fan  
Rated Frequency Operation

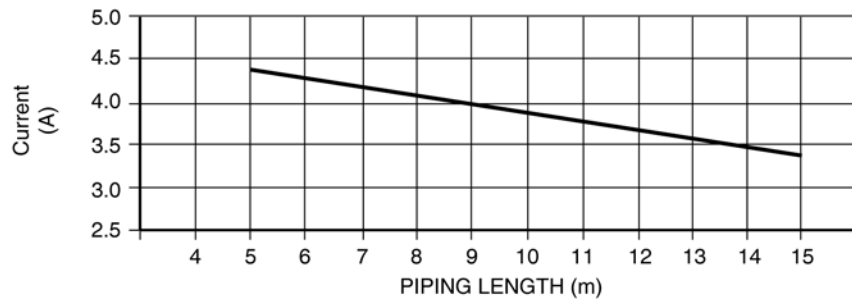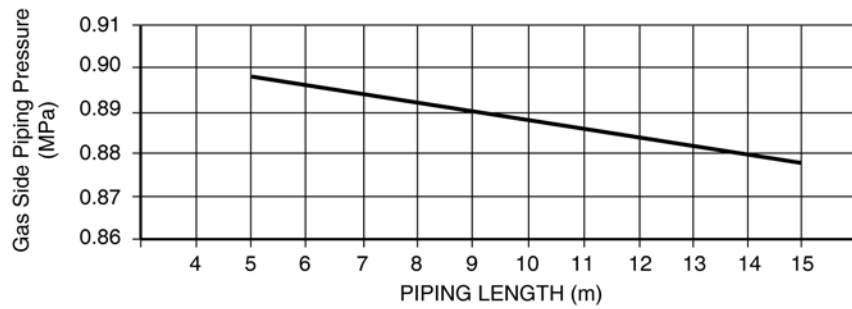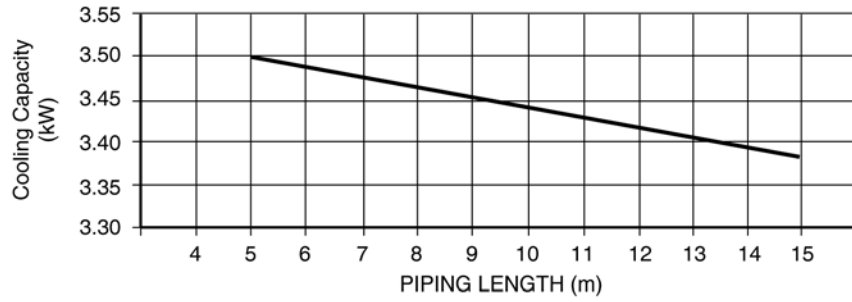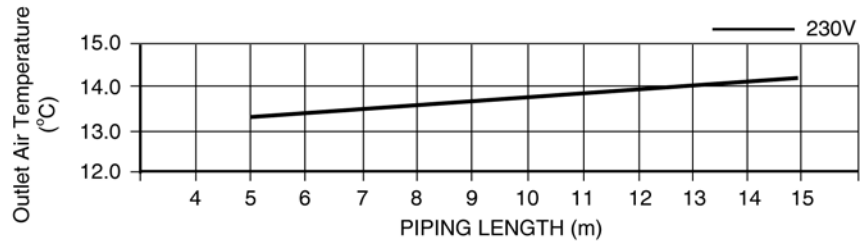





## • Heating Characteristic

[Condition] Room temperature: 20°C  
Heating operation: At High Fan  
Rated Frequency Operation

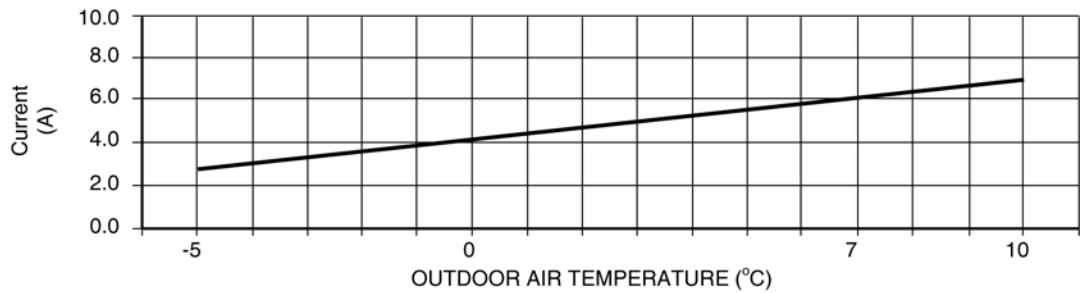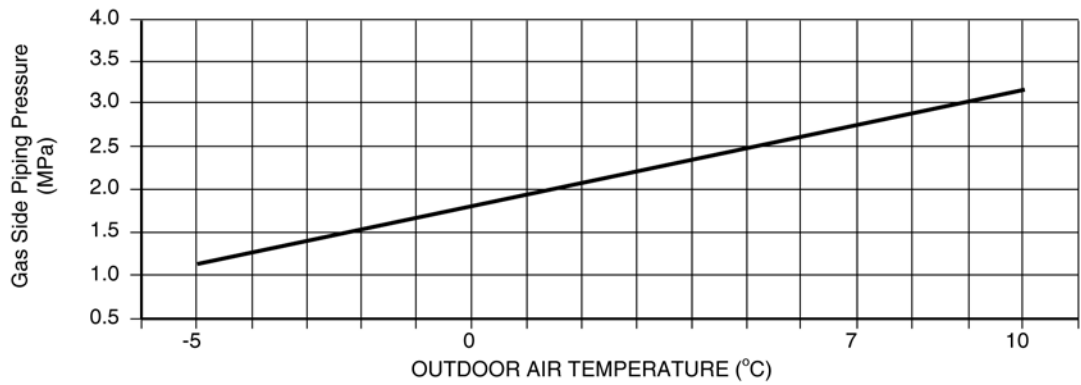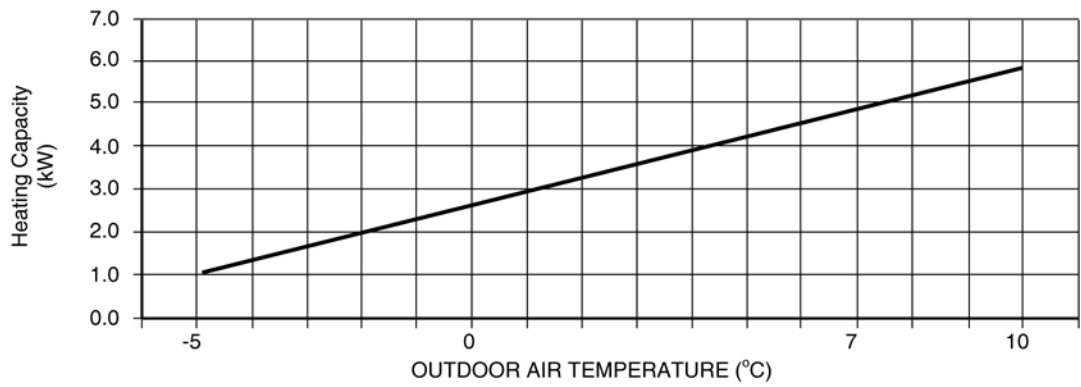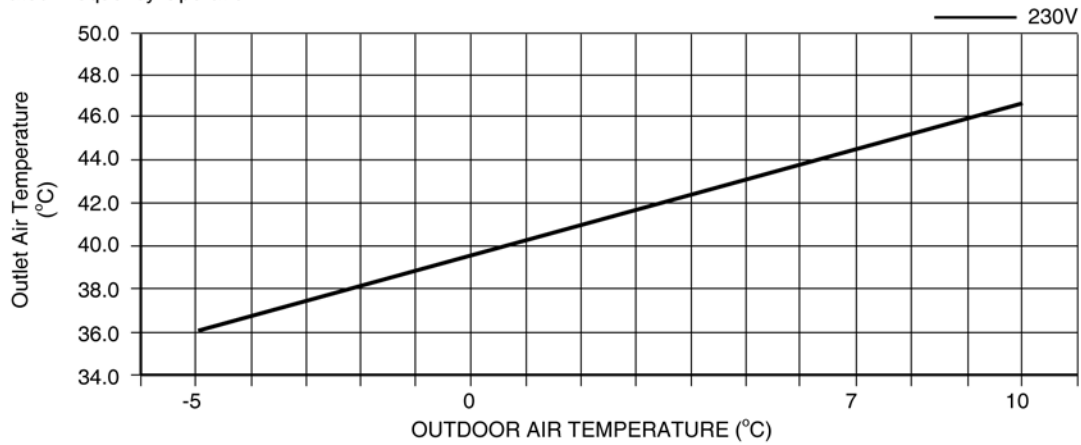

## • Piping Length Characteristic (Heating)





[Condition] Room temperature: 20°C  
Heating operation: 7/6°C  
Rated Frequency Operation

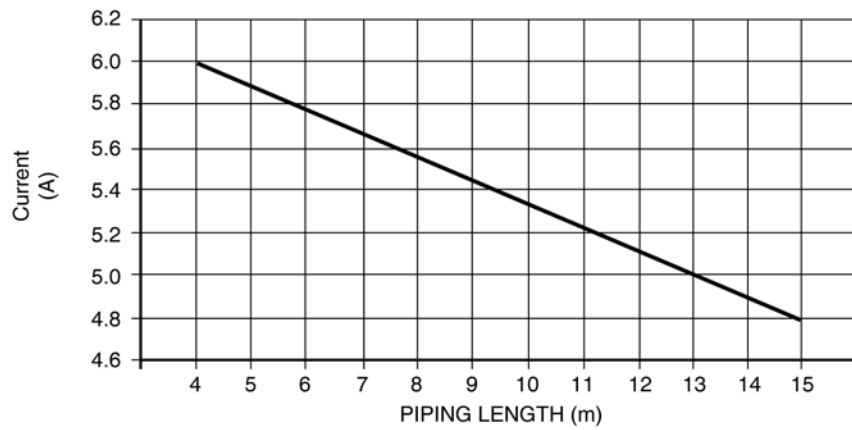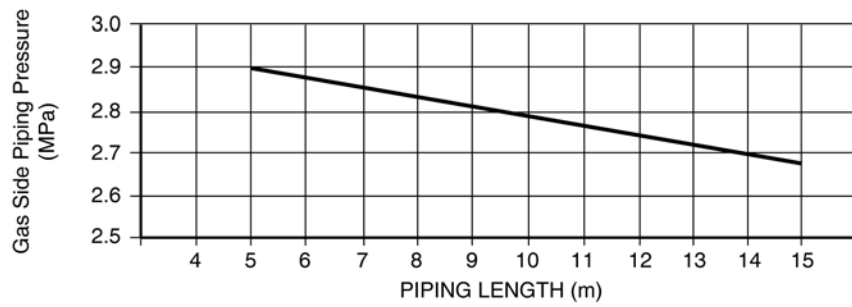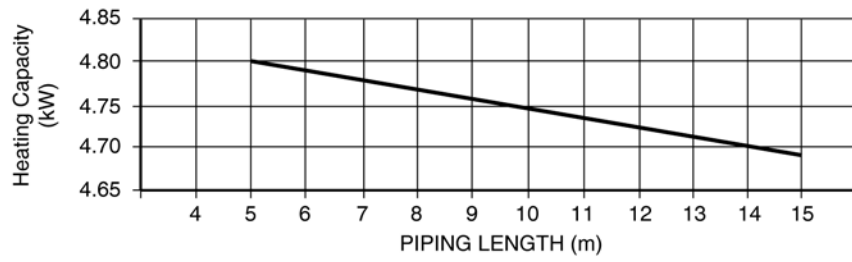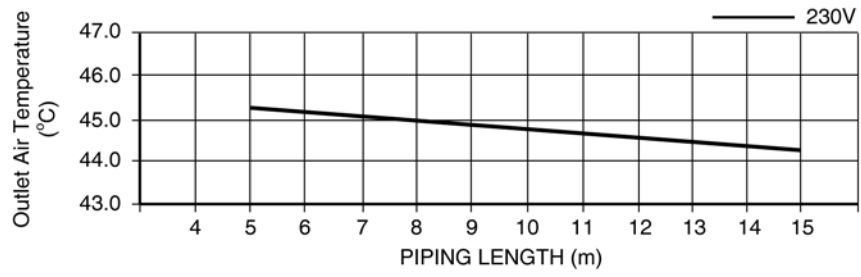

# CS-E18GFEW CU-E18GFE





## • Cooling Characteristic

[Condition] Room temperature: 27/19°C  
Cooling operation: At High Fan  
Rated Frequency Operation

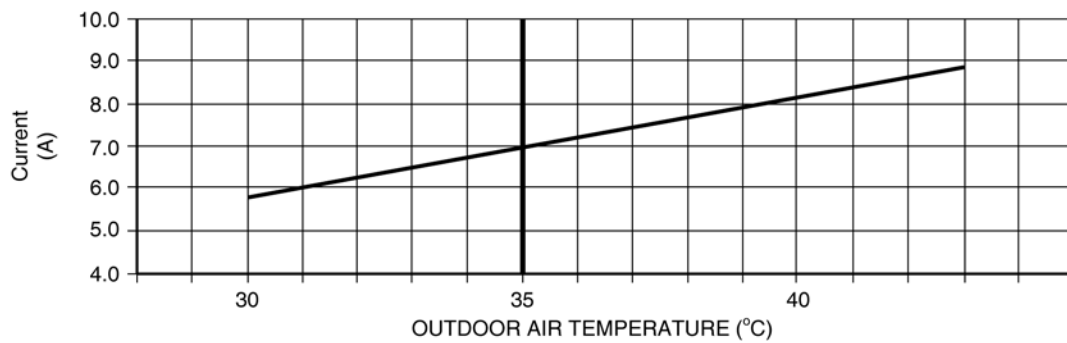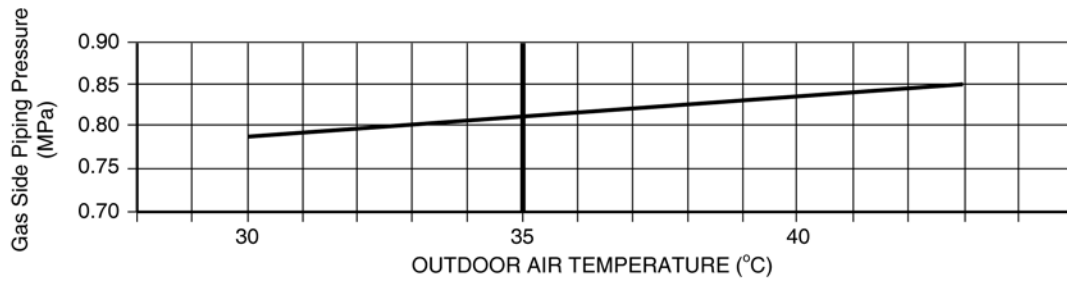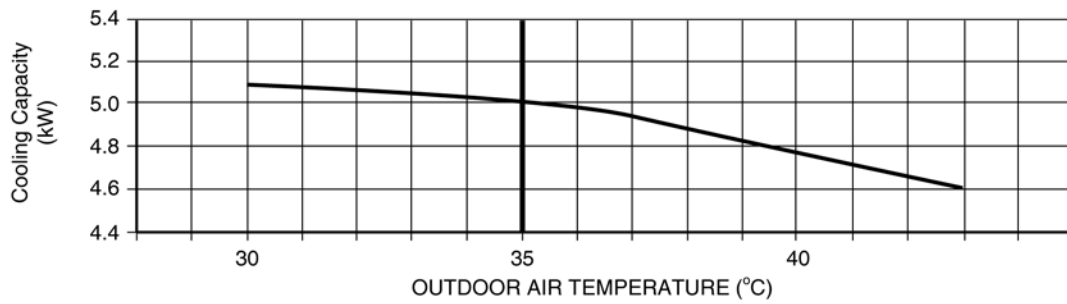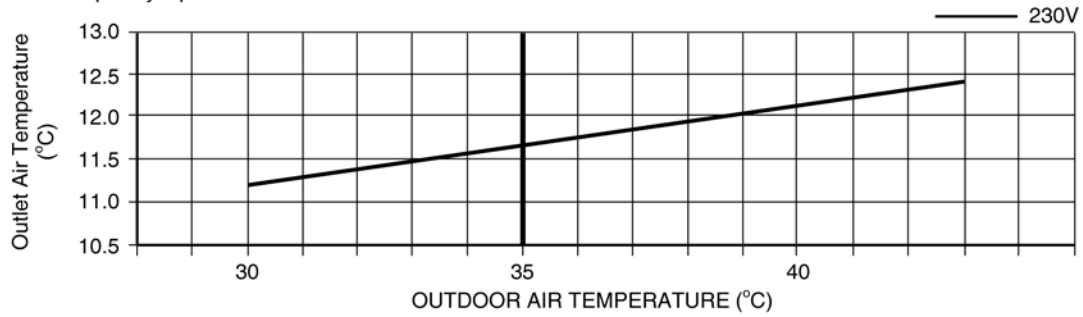





## • Piping Length Characteristic (Cooling)

[Condition] Room temperature: 27/19°C  
 Cooling operation: At High fan  
 Rated Frequency Operation

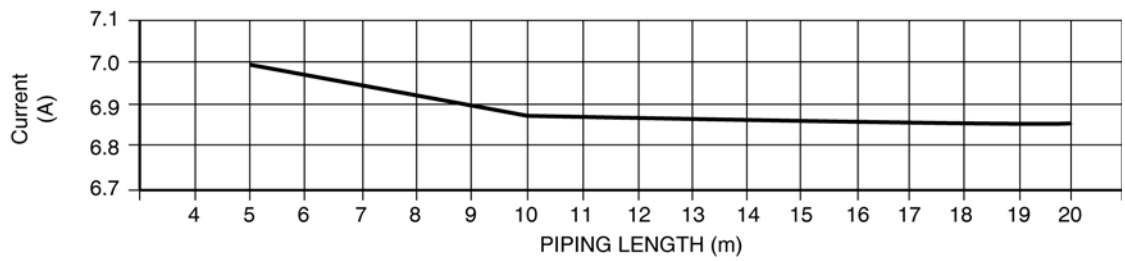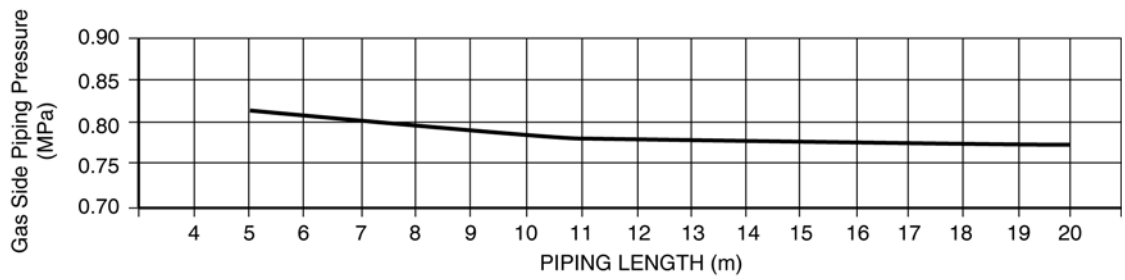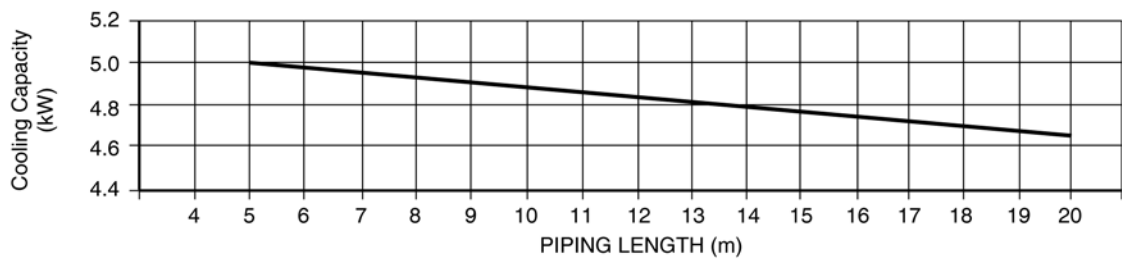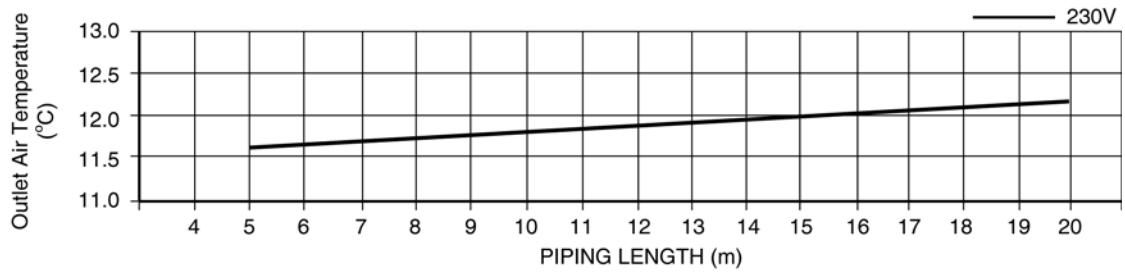

## • Heating Characteristic





[Condition] Room temperature: 20°C  
Heating operation: At High Fan  
Rated Frequency Operation

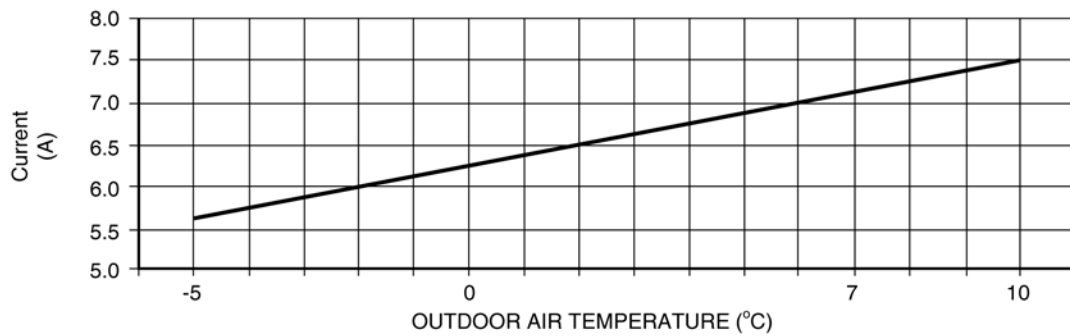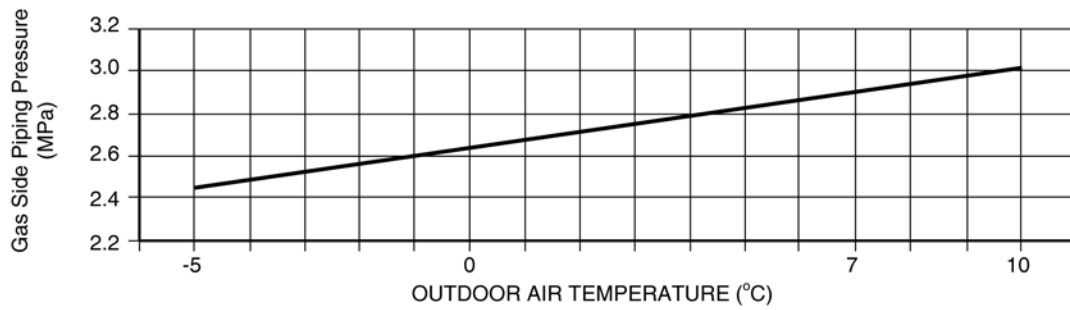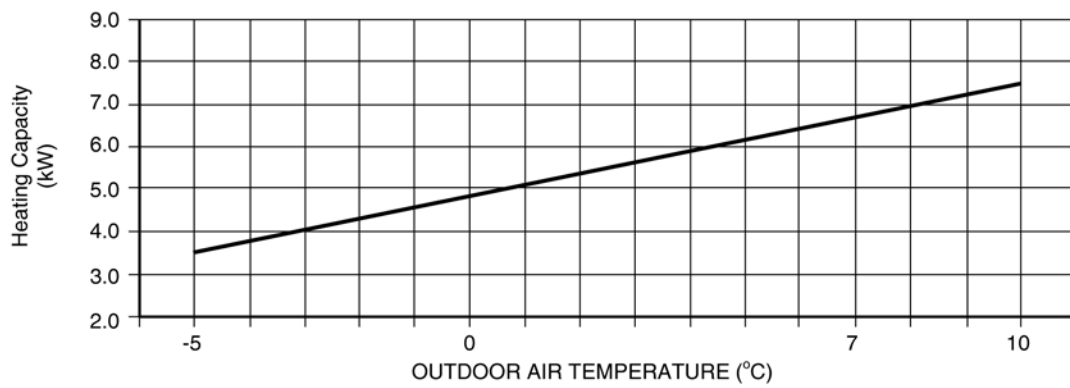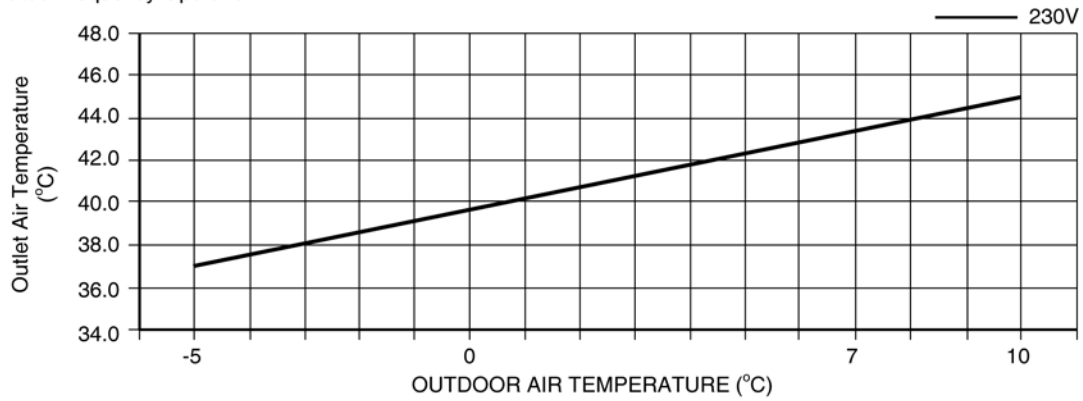



## • Piping Length Characteristic (Heating)

[Condition] Room temperature: 20°C  
 Heating operation: 7/6°C  
 Rated Frequency Operation

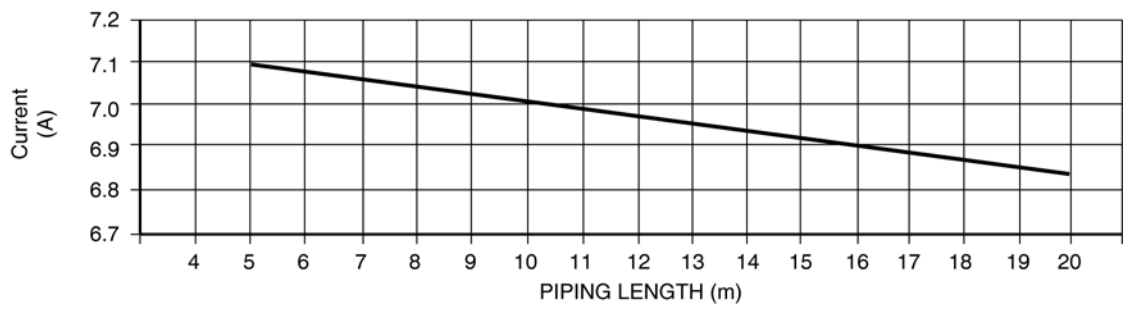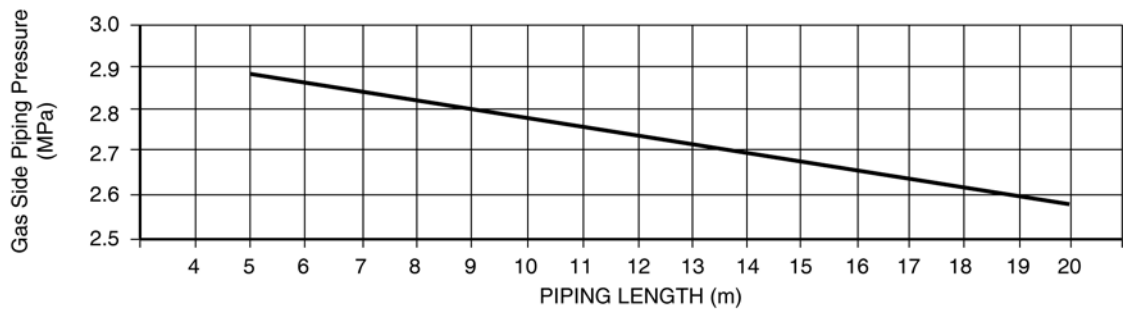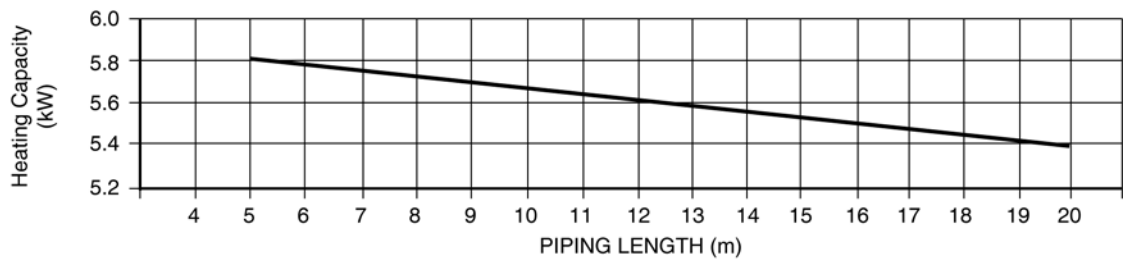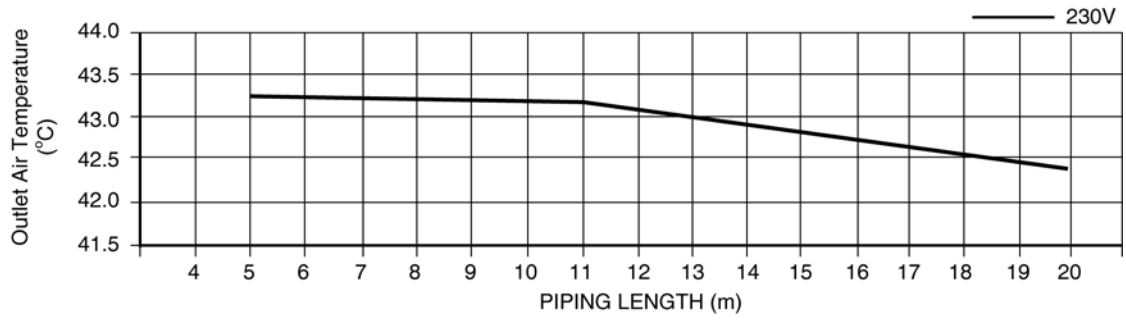

## 13.2. Sensible Capacity Chart

### ● CS-E9GFEW CU-E9GFE

230V		Outdoor Temp. (°C)											
		30°C			35°C			40°C			46°C		
		TC	SHC	IP	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP
D.B.	W.B.	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
27	17.0	2.48	2.13	0.52	2.32	2.05	0.56	2.16	1.97	0.60	1.96	1.88	0.65
	19.0				2.50		0.57						
	19.5	2.72	2.23	0.53	2.55	2.15	0.57	2.37	2.06	0.61	2.15	1.97	0.66
	22.0	2.96	2.31	0.54	2.77	2.22	0.58	2.58	2.13	0.62	2.34	2.03	0.67

### ● CS-E12GFEW CU-E12GFE

230V		Outdoor Temp. (°C)											
		30°C			35°C			40°C			46°C		
		TC	SHC	IP	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP
D.B.	W.B.	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
27	17.0	3.47	2.49	0.89	3.25	2.40	0.96	3.02	2.30	1.03	2.74	2.20	1.11
	19.0				3.50		0.97						
	19.5	3.81	2.61	0.90	3.57	2.51	0.97	3.32	2.41	1.04	3.02	2.30	1.12
	22.0	4.15	2.70	0.92	3.88	2.60	0.98	3.61	2.49	1.06	3.28	2.38	1.14

### ● CS-E18GFEW CU-E18GFE


230V		Outdoor Temp. (°C)											
		30°C			35°C			40°C			46°C		
		TC	SHC	IP	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP
D.B.	W.B.	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
27	17.0	4.96	3.26	1.44	4.64	3.14	1.54	4.32	3.01	1.65	3.92	2.87	1.78
	19.0				5.00		1.56						
	19.5	5.45	3.41	1.45	5.10	3.28	1.56	4.74	3.15	1.67	4.31	3.01	1.80
	22.0	5.92	3.53	1.47	5.55	3.40	1.58	5.16	3.26	1.70	4.69	3.11	1.83

TC - Total Cooling Capacity (kW)  
 SHC - Sensible Heat Capacity (kW)  
 IP - Input Power (kW)

Indoor 27°C/19°C  
 Outdoor 35°C/24°C

# 14 Exploded View and Replacement Parts List

## 14.1. Indoor Unit

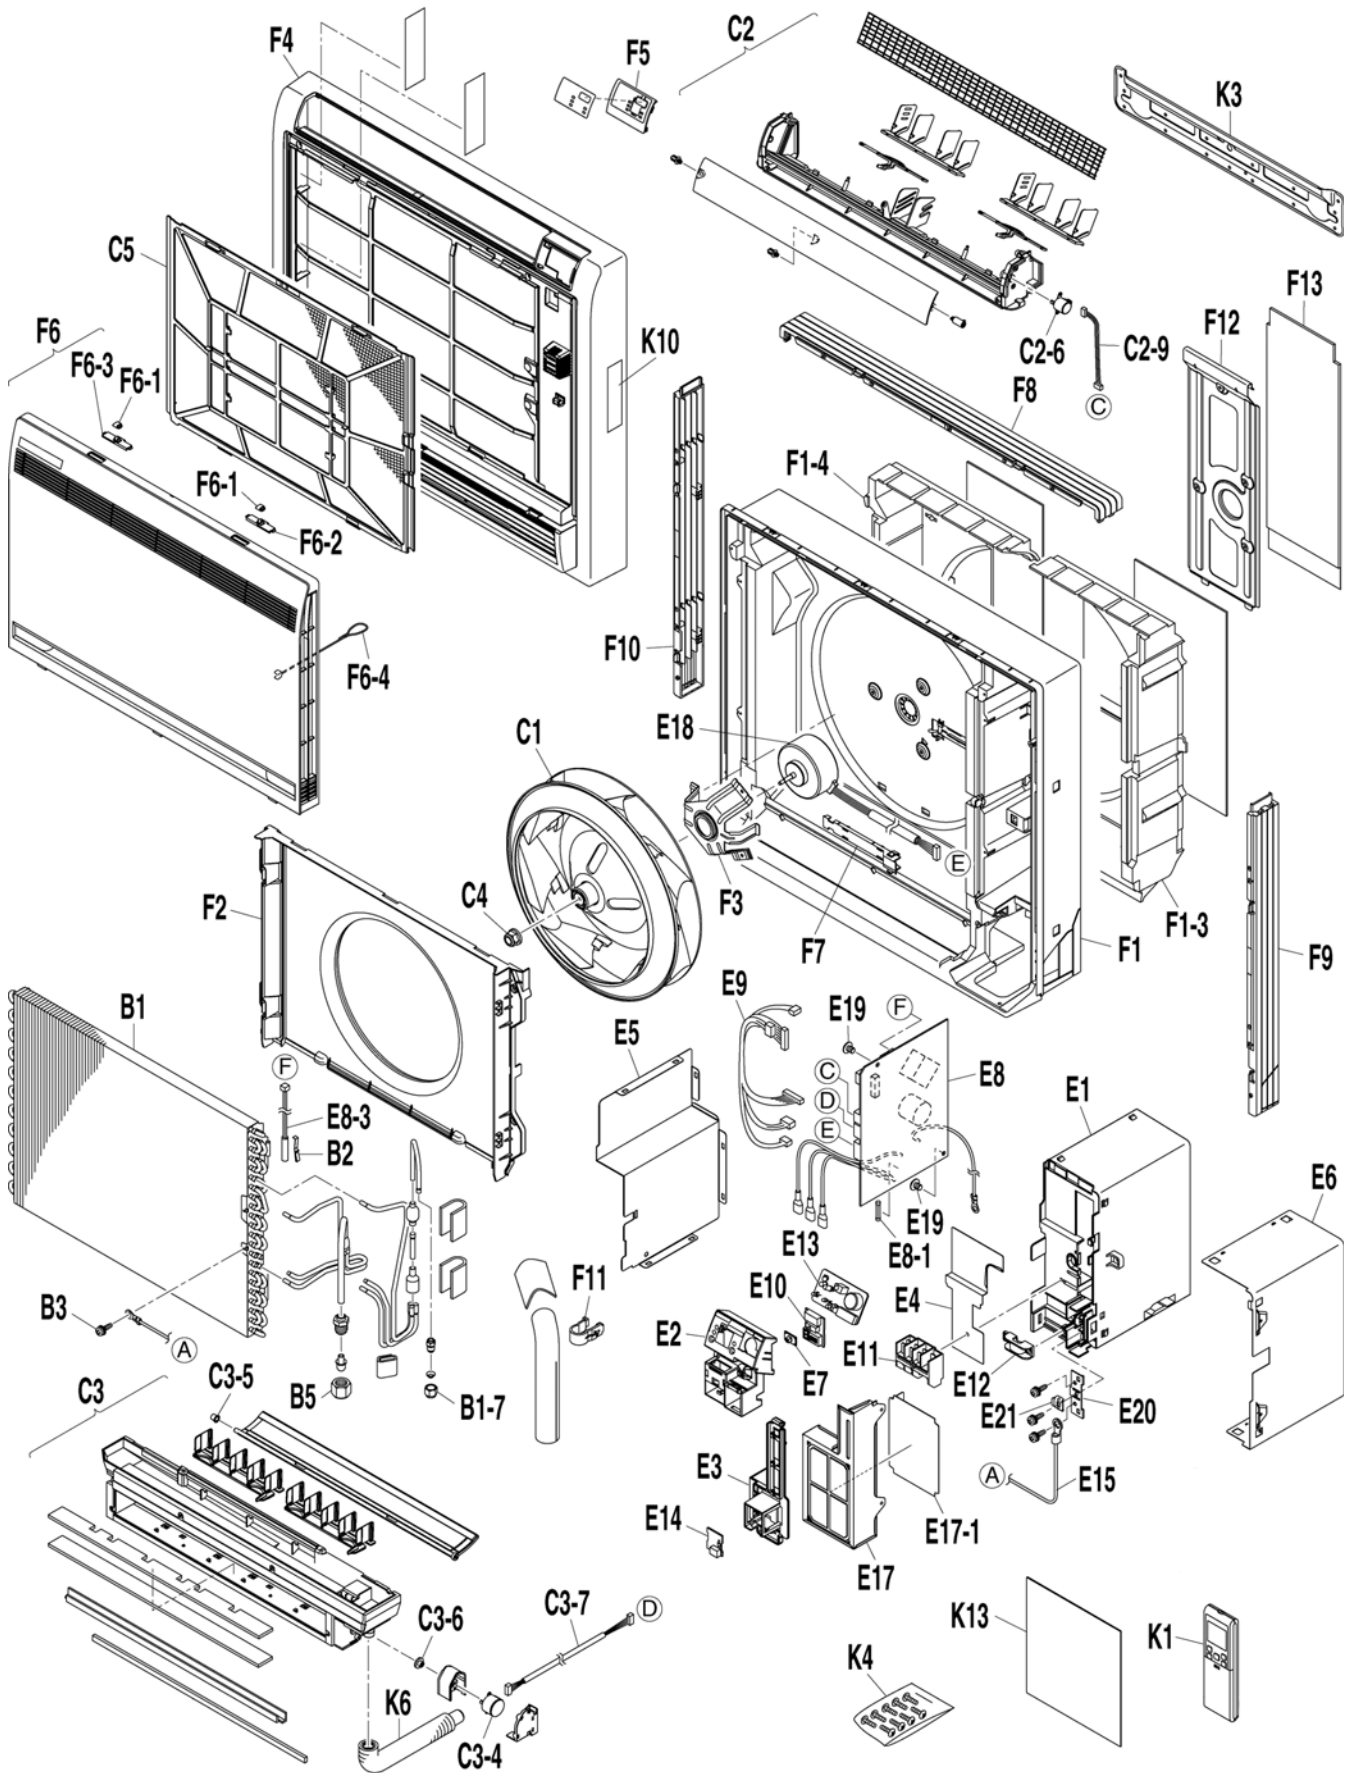


REF. NO.	PART NAME AND DESCRIPTION	QTY.	CS-E9GFEW	CS-E12GFEW	CS-E18GFEW	REMARKS
B1	EVAPORATOR ASS'Y	1	CW1786554	←	CW1767368	
B1-7	FLARE NUT	1	CW1723546	←	←	
B2	FITTING SPRING / THERMISTOR	1	CW380120	←	←	
B3	GROUNDING TIP (W/WASHER)	1	CW113783J	←	←	
B5	FLARE NUT	1	CW119848J	←	CW119849J	
C1	TURBO FAN ASS'Y	1	CW1767414	←	←	
C2	AIR GUIDE PLATE ASS'Y	1	CW1767421	←	←	
C2-6	STEPPING MOTOR	1	CW151065J	←	←	O
C2-9	WIRE HARNESS ASS'Y (UPPER)	1	CW1767546	←	←	
C3	DRAIN PAN ASS'Y	1	CW1767553	←	←	
C3-4	STEPPING MOTOR ASS'Y	1	CW1767591	←	←	
C3-5	SLEEVE BEARING	1	CW1767609	←	←	
C3-6	SHAFT (DAMPER)	1	CW1767616	←	←	
C3-7	WIRE HARNESS ASS'Y (LOWER)	1	CW1767623	←	←	
C4	LOCK NUT/ FAN BLADE	1	CW847002J	←	←	
C5	AIR FILTER	1	CW1767647	←	←	
E1	SWITCH BOX	1	CW1767654	←	←	
E2	INDICATION LAMP COVER	1	CW1786561	←	←	
E3	MOUNTING PLATE, PRINTED CIRCUIT	1	CW1767678	←	←	
E4	SHIELD PLATE	1	CW1767685	←	←	
E5	SHIELD PLATE	1	CW1767692	←	←	
E6	SHIELD PLATE	1	CW1767700	←	←	
E7	SWITCH KNOB	1	CW0728803	←	←	
E8	PRINTED CIRCUIT ASS'Y (CONTROL)	1	CW1786617	CW1786624	CW1786631	O
E8-1	FUSE	1	CW153875J	←	←	
E8-3	THERMISTOR (FOR COIL)	1	CW129970J	←	←	
E9	WIRE HARNESS ASS'Y	1	CW1786648	←	←	
E10	PRINTED CIRCUIT ASS'Y (SERVICE)	1	CW1786794	←	←	
E11	TERMINAL BLOCK	1	CW1786662	←	←	
E12	WIRE CLAMP	1	CW0812847	←	←	
E13	PRINTED CIRCUIT ASS'Y (DISPLAY)	1	CW1786655	←	←	
E14	PRINTED CIRCUIT ASS'Y (SENSOR)	1	CW1767755	←	←	
E15	EARTH WIRE	1	CW1786679	←	←	
E17	SHIELD PLATE ASS'Y	1	CW1767786	←	←	
E17-1	INSULATION SHEET	1	CW1767793	←	←	
E18	DC FAN MOTOR	1	CW1767801	←	←	O
E19	PAN HEAD TAPPING SCREW	2	CW111403J	←	←	
E20	EARTH PLATE	1	CW1786686	←	←	
E21	WASHER (FOR EARTH)	2	CW1786749	←	←	
F1	BOTTOM FRAME ASS'Y	1	CW1767818	←	←	
F1-3	THERMAL INSULATION ASS'Y	1	CW1786756	←	←	
F1-4	THERMAL INSULATION ASS'Y	1	CW1786763	←	←	
F2	BELL MOUTH ASS'Y	1	CW1767849	←	←	
F3	COVER, MOTOR	1	CW1767856	←	←	
F4	FRONT GRILLE ASS'Y	1	CW1767863	←	←	
F5	CONTROL PANEL ASS'Y	1	CW1786693	←	←	
F6	SUCTION GRILLE ASS'Y	1	CW1786718	←	←	
F6-1	KNOB (1)	2	CW1767933	←	←	
F6-2	KNOB (2)	1	CW1768013	←	←	
F6-3	KNOB (2)	1	CW1768020	←	←	
F6-4	STRING	1	CW1768037	←	←	
F7	WIRE CLAMP	1	CW1768044	←	←	
F8	CASING (UPPER)	1	CW1768051	←	←	
F9	CASING (RIGHT)	1	CW1768068	←	←	
F10	CASING (LEFT)	1	CW1768075	←	←	

REF. NO.	PART NAME AND DESCRIPTION	QTY.	CS-E9GFEW	CS-E12GFEW	CS-E18GFEW	REMARKS
F11	FIXTURE, REF. PIPING	1	CW1768082	←	←	
F12	REINFORCE PLATE ASS'Y	1	CW1768099	←	←	
F13	THERMAL INSULATION ASS'Y	1	CW1768107	←	←	
K1	REMOTE CONTROL	1	CWA75C3096	←	←	O
K3	INSTALLATION PLATE	1	CW1768121	←	←	
K4	SCREW KIT	1	CW1786965	←	←	
K6	DRAIN HOSE ASS'Y	1	CW1768138	←	←	
K13	TAPE	1	CW1786871	←	←	
	THERMISTOR (FOR AIR)	2	CW110579J	←	←	

(Note)

- All parts are supplied from ACBU, Japan.
- "O" marked parts are recommended to be kept in stock.

## 14.2. CU-E9GFE CU-E12GFE

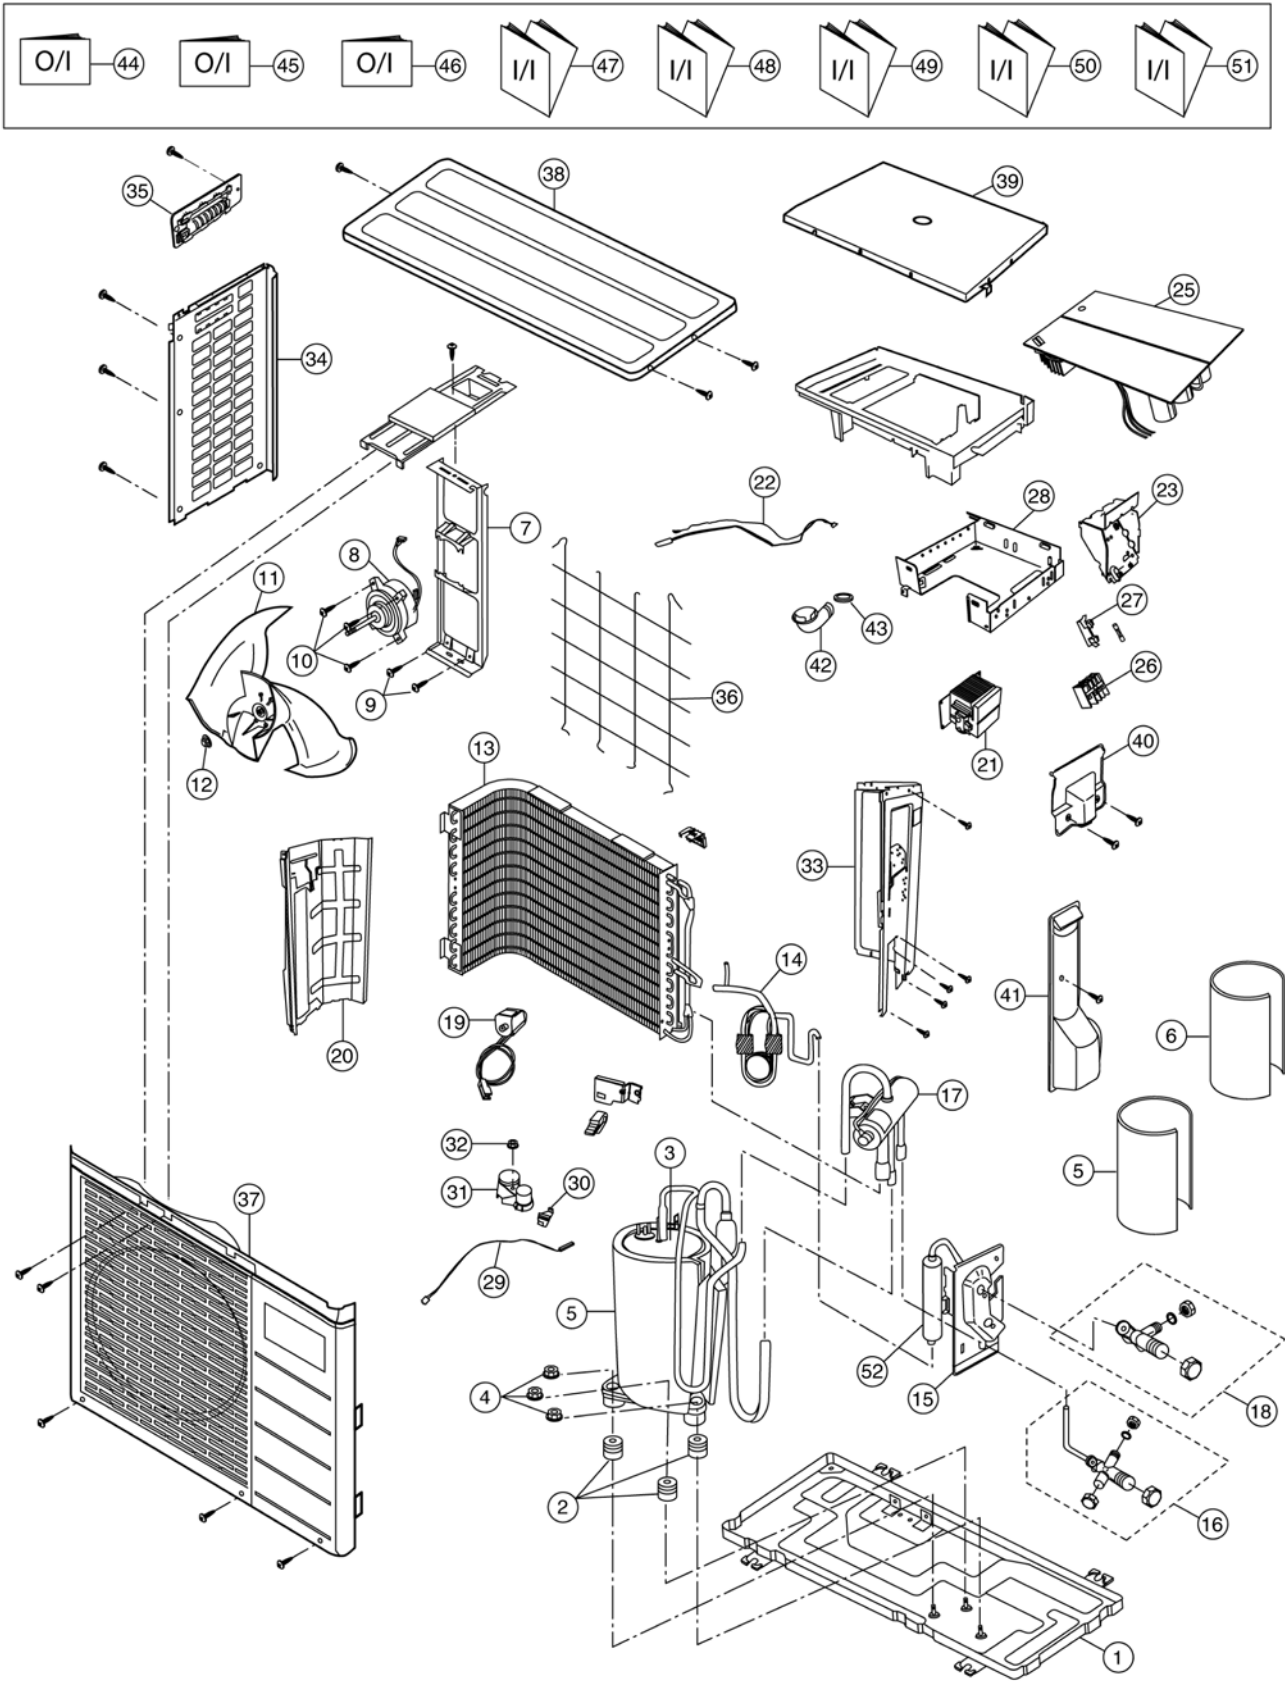

**Note:**


The above exploded view is for the purpose of parts disassembly and replacement.  
The non-numbered parts are not kept as standard service parts.

REF. NO.	PART NAME AND DESCRIPTION	QTY.	CU-E9GFE	CU-E12GFE
1	CHASSY ASSY	1	CWD50K2073	←
2	ANTI-VIBRATION BUSHING	3	CWH50077	←
3	COMPRESSOR	1	5RS102XBC01	←
4	NUT-COMPRESSOR MOUNT	3	CWH56000J	←
5	SOUND PROOF MATERIAL	1	CWG302293	←
6	SOUND PROOF MATERIAL	1	CWG302292	←
7	FAN MOTOR BRACKET	1	CWD541030	←
8	FAN MOTOR (AC 25W SINGLE) (AC 30W SINGLE)	1	CWA951405J	CWA951407J
9	SCREW - FAN MOTOR BRACKET	2	CWH551198	CWH551174J
10	SCREW - FAN MOTOR MOUNT	3	CWH55252J	←
11	PROPELLER FAN ASSY	1	CWH03K1006	←
12	NUT - PROPELLER FAN	1	CWH56053J	←
13	CONDENSER	1	CWB32C1599	←
14	TUBE ASSY CO (CAP/CHK VALVE)	1	CWT01C3257	CWT01C3258
15	HOLDER-COUPLING	1	CWH351023	←
16	3 WAYS VALVE (GAS)	1	CWB011374	←
17	4 WAYS VALVE	1	CWB001037J	←
18	2-WAYS VALVE (LIQUID)	1	CWB021301	←
19	V-COIL COMPLETE	1	CWA43C2143J	←
20	SOUND PROOF BOARD	1	CWH151025	←
21	REACTOR	1	CWA421084	G0A193M00001
22	SENSOR COMPLETE	1	CWA50C2205	←
23	CONTROL BOARD CASING	1	CWH102273	←
24	TERMINAL BOARD ASSY	1	CWA28K1110J	←
25	ELECTRONIC CONTROLLER-MAIN	1	CWA73C2628R	CWA73C2629R
26	FUSE CAP TERMINAL	1	K5D203BBA002	←
27	FUSE HOLDER	1	K3GB1PH00016	←
28	CONTROL BOARD	1	CWH102114	←
29	SENSOR COMPLETE	1	CWA50C2391	←
30	HOLDER SENSOR	1	CWH321023	←
31	TERMINAL COVER	1	CWH171039A	←
32	NUT-TERMINAL COVER	1	CWH7080300J	←
33	CABINET SIDE PLATE CO.	1	CWE04C1011	←
34	CABINET SIDE PLATE (L)	1	CWE041031A	←
35	HANDLE	1	CWE161010	←
36	WIRE NET	1	CWD041054A	←
37	CABINET FRONT PLATE CO.	1	CWE06C1039	←
38	CABINET TOP PLATE	1	CWE031014A	←
39	CONTROL BOARD COVER	1	CWH131104	←
40	CONTROL BOARD COVER	1	CWH131110	←
41	CONTROL BOARD COVER CO.	1	CWH13C1064	←
42	L-TUBE	1	CWH5850080	←
43	PACKING-L.TUBE	1	CWB81012	←
44	OPERATING INSTRUCTION	1	CWF565588	←
45	OPERATING INSTRUCTION	1	CWF565589	←
46	OPERATING INSTRUCTION	1	CWF565628	←
47	INSTALLATION INSTRUCTION	1	CWF613182	←
48	INSTALLATION INSTRUCTION	1	CWF613183	←
49	INSTALLATION INSTRUCTION	1	CWF613184	←
50	INSTALLATION INSTRUCTION	1	CWF613185	←
51	INSTALLATION INSTRUCTION	1	CWF613188	←
52	DRYER	1	CWB101017J	←

(Note)

- All parts are supplied from PHAAM, Malaysia (Vendor Code: 061).
- "O" maked parts are recommended to be kept in stock.

### 14.3. CU-E18GFE

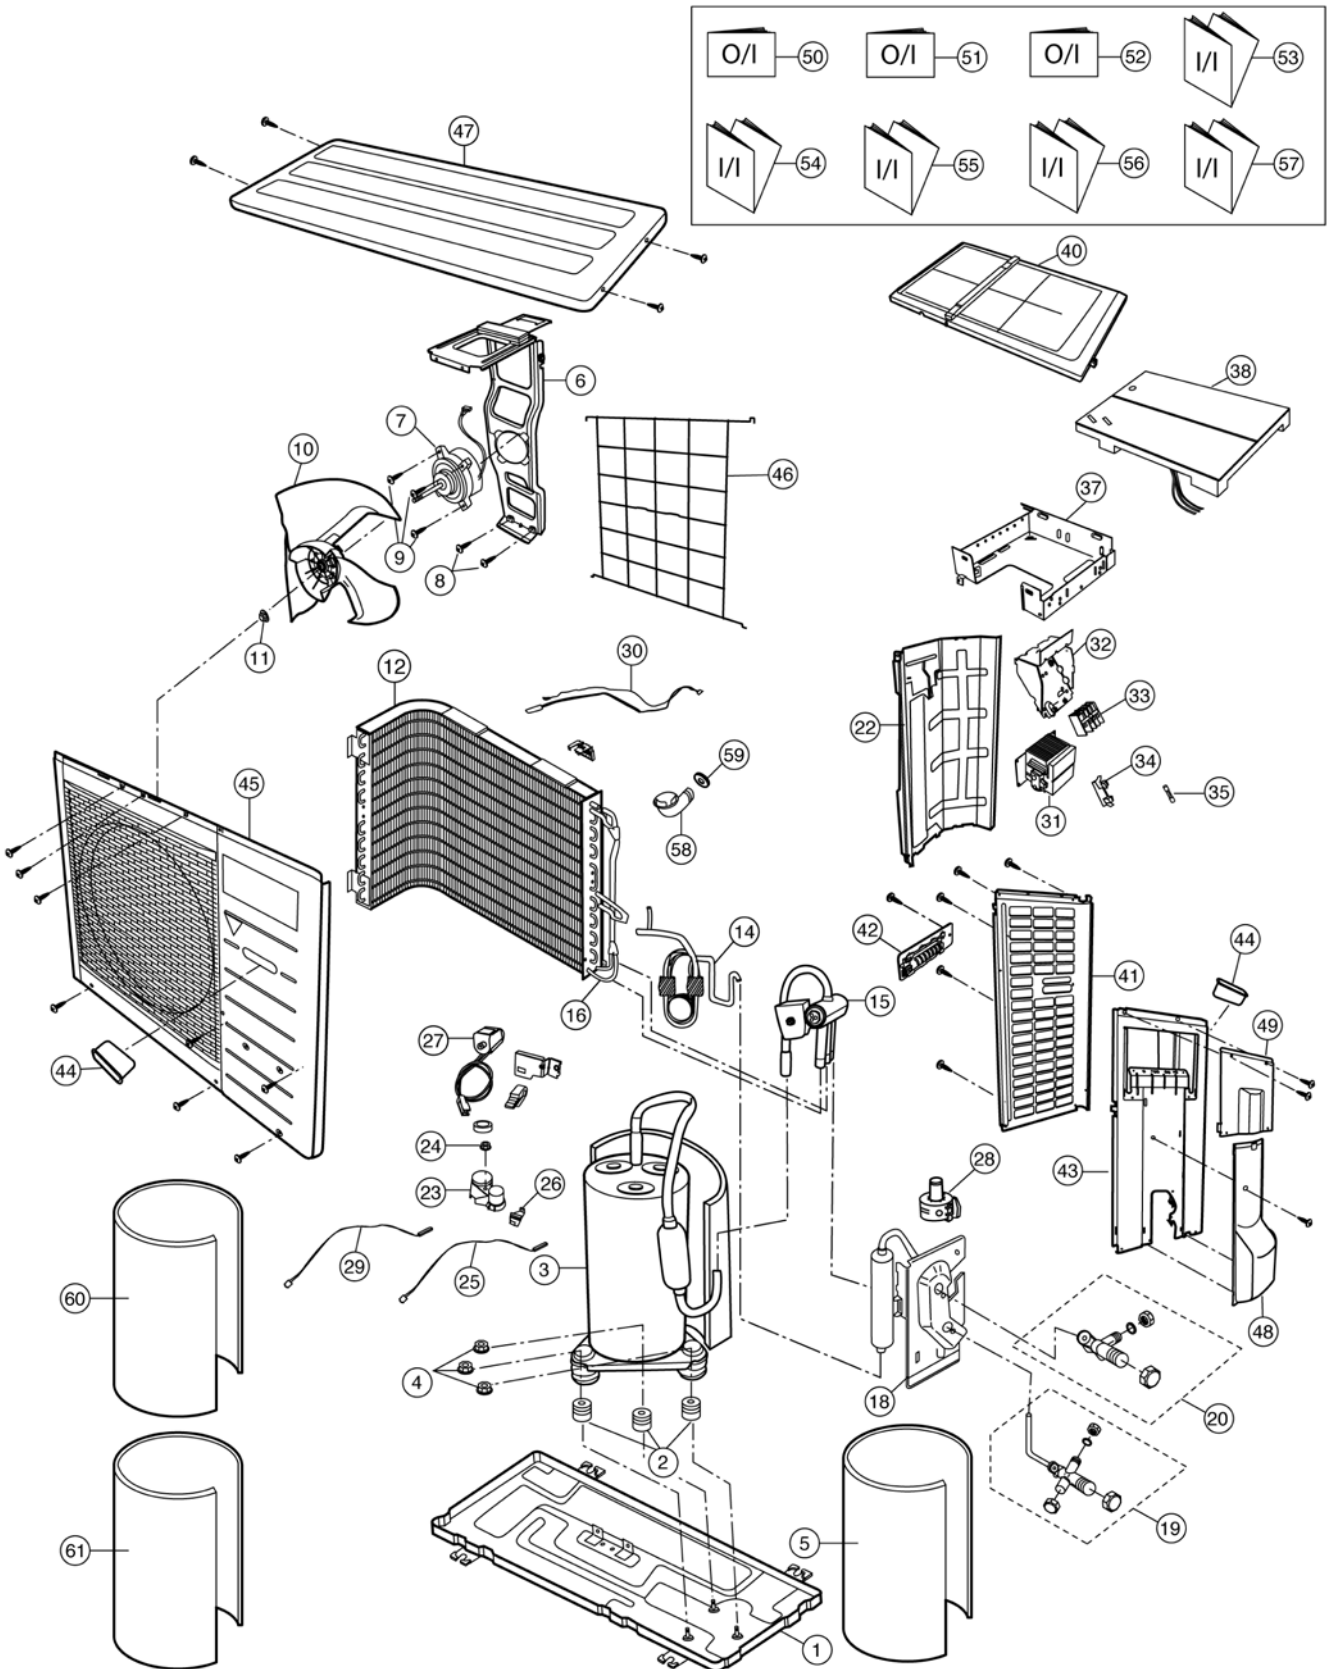

Note:  
 The above exploded view is for the purpose of parts disassembly and replacement.  
 The non-numbered parts are not kept as standard service parts.



REF. NO.	PART NAME AND DESCRIPTION	QTY.	CU-E18GFE
1	CHASSY ASSY	1	CWD50K2085
2	ANTI-VIBRATION BUSHING	3	CWH50077
3	COMPRESSOR	1	5CS130XAD04
4	NUT-COMPRESSOR MOUNT	3	CWH56000J
5	SOUND PROOF MATERIAL	1	CWG302302
6	FAN MOTOR BRACKET	1	CWD541054
7	FAN MOTOR	1	CWA981166J
8	SCREW - FAN MOTOR BRACKET	2	CWH551198
9	SCREW - FAN MOTOR MOUNT	3	CWH551106J
10	PROPELLER FAN ASSY	1	CWH03K1016
11	NUT - PROPELLER FAN	1	CWH56053J
12	CONDENSER	1	CWB32C1527
14	TUBE ASSY COMPLETE (CAP TUBE/EXP. VALVE)	1	CWT023679
15	4 WAYS VALVE	1	CWB001026J
16	STRAINER	1	CWB11094
18	HOLDER-COUPLING	1	CWH351035
19	3 WAYS VALVE (GAS)	1	CWB011361
20	2-WAYS VALVE (LIQUID)	1	CWB021292
22	SOUND PROOF BOARD	1	CWH151050
23	TERMINAL COVER	1	CWH171039A
24	NUT-TERMINAL COVER	1	CWH7080300J
25	SENSOR COMPLETE (COMP. TOP)	1	CWA50C2185
26	HOLDER SENSOR	1	CWH321074
27	V-COIL COMPLETE (4-WAYS VALVE)	1	CWA43C2168J
28	V-COIL COMPLETE (EXPAND VALVE)	1	CWA43C2058J
29	SENSOR COMPLETE (COMP. DISC.)	1	CWA50C2180
30	SENSOR COMPLETE	1	CWA50C2181
31	REACTOR	1	CWA421069
32	CONTROL BOARD CASING (SIDE)	1	CWH102273
33	TERMINAL BOARD ASSY	1	CWA28K1110J
34	FUSE HOLDERS	1	K3GB1PH00016
35	FUSE	1	K5D303BBA002
37	CONTROL BOARD CASING (BOTTOM)	1	CWH102282
38	ELECTRONIC CONTROLLER - MAIN	1	CWA73C2630R
40	CONTROL BOARD CASING (TOP)	1	CWH131167
41	CABINET SIDE PLATE (LEFT)	1	CWE041082A
42	HANDLE	1	CWE161010
43	CABINET SIDE PLATE (RIGHT)	1	CWE041083A
44	HANDLE	2	CWE16000E
45	CABINET SIDE PLATE CO.	1	CWE06K1043
46	WIRE NET	1	CWD041041A
47	CABINET TOP PLATE	1	CWE031031A
48	CONTROL BOARD COVER (BOTTOM)	1	CWH131168
49	CONTROL BOARD COVER (TOP)	1	CWH131169A
50	OPERATING INSTRUCTION	1	CWF565588
51	OPERATING INSTRUCTION	1	CWF565589
52	OPERATING INSTRUCTION	1	CWF565628
53	INSTALLATION INSTRUCTION	1	CWF613182
54	INSTALLATION INSTRUCTION	1	CWF613183
55	INSTALLATION INSTRUCTION	1	CWF613184
56	INSTALLATION INSTRUCTION	1	CWF613185
57	INSTALLATION INSTRUCTION	1	CWF613188
58	DRAIN HOSE	1	CWH5850080
59	PACKING	1	CWB81012
60	SOUND PROOF MATERIAL	1	CWG302270

REF. NO.	PART NAME AND DESCRIPTION	QTY.	CU-E18GFE
61	SOUND PROOF MATERIAL	1	CWG302300

(Note)

- All parts are supplied from PHAAM, Malaysia (Vendor Code: 061).
- "O" maked parts are recommended to be kept in stock.