

SET FREE SERIES FSNM(E)





Service manual

Outdoor Units: RAS-(8~12)FSNM(E)



Contents

otions 0	Model codes and descriptions
lation 1	Units installation
lation 2	Piping installation
viring 3	Electrical wiring
vstem 4	Control systen
etions 5	Available optional functions
st run 6	Test rur
oting 7	Troubleshooting
parts 8	Spare parts
vicing 9	Servicing
parts 1(Main parts
1	Field work instruction



Model codes and descriptionsv				
Units installation	1			
Transportation and handling	4			
1.2.1. Hanging method	4			
1.3.2. Installation location	6			
1.3.4. Foundations				
	11			
	12			
2.1.1 Copper pipes and sizes	12			
2.1.2 Three principles on retrigerant piping work	15			
2.1.4. Tightening torque	16			
2.1.5. Brazing work	17			
Electrical wiring	19			
Electrical wiring for the outdoor unit	21			
3.2.1. Electrical wiring connection for outdoor unit	21			
	25			
·				
Control system	29			
	22			
5.1.2. Description of external input signals	36			
5.1.4. Optional functions	39 41			
Troubleshooting	59			
7.1.1. Emergency operation	61			
7.1.2. Failure of the power supply to the indoor unit and the remote control switch	62			
7.1.4. Abnormal operation of the devices	64			
	Units installation General installation notes Transportation and handling 1.2.1. Hanging method 1.2.2. Center of gravity Outdoor units installation 1.3.1. Before installation 1.3.1. Before installation 1.3.2. Installation location 1.3.3. Service space 1.3.4. Foundations Piping installation Piping most considerations 2.1.1. Copper pipes and sizes 2.1.2. Three principles on refrigerant piping work 2.1.3. Suspension of refrigerant piping 2.1.4. Tightening torque 2.1.5. Brazing work Electrical wiring General check Electrical wiring for the outdoor unit 3.2.1. Electrical wiring onnection for outdoor unit 3.2.1. Electrical wiring between the indoor unit and the outdoor unit Wire size Control system Device control system Device control system 4.1.1. RAS-8-10FSNM(E) refrigerant cycle control Outdoor Units PCB 4.2.1. Pass-8-10FSNM(E) Available optional functions Outdoor units 5.1.1. Setting of external input and output functions 5.1.2. Description of external output signals 5.1.3. Description of external output signals 5.1.4. Optional functions Test run Checking procedure before the test run Test run procedure before the test run Test run procedure from the outdoor unit side Check list Judgement system for refrigerant amount Troubleshooting Initial troubleshooting			

TACHI re the Next	
7 2	
72	
74	
15	\ /

7.2.	Troubleshooting procedure	
	7.2.1. Alarm code indication of remote control switch	72
	7.2.2. Troubleshooting by alarm code	
	7.2.3. Troubleshooting in check mode	
	7.2.5. Running current of the compressor	127
	7.2.6. Protection control code on the 7-segment display	129
	7.2.7. Activating condition of the protection control code	130
8.	Spare parts	132
	8.1. RAS-8~12FSNM(E) Structural and cycle parts	133
	8.2. RAS-8~12FSNM(E) Electrical parts	135
9.	Servicing	137
9.1.	Outdoor Unit FSNM(E)	138
	9.1.1. Removing service cover	138
	9.1.2. Removing air outlet grille	138
	9.1.3. Removing upper cover	138
	9.1.5. Removing outdoor fan motor	139
	9.1.6. Removing Electrical Box	140
	9.1.7. Removing compressor	142
	9.1.8. Removing high pressure switch	145
	9.1.10 Opening electrical box (Power plate) 9.1.11. Removing reversing valve coil and solenoid valve coil (SVA, SVF)	146
	9.1.11. Removing reversing valve coil and solenoid valve coil (SVA, SVF)	147
	9.1.12. Removing electronic expansion valve coil	148 149
	9.1.14. Removing electronic expansion valve	150
	9.1.15. Removing solenoid valve	151
	9.1.16. Remove the control PCB (PCB1)	152
	9.1.17. Removing Relay PCB (PCB3, PCB5)	152 153
	9.1.19. Removing other inverter components	155
10.	Main parts	157
10.1.	Inverter	
	10.1.1. Specifications of inverter	
10.1.		
	10.1.1. Specifications of inverter	
	10.1.2. Inverter time chart	160
	10.1.3. Protective Function	
	10.1.4. Overload Control	162
10.2.	Thermistor	
	10.2.1. Position of thermistor	163
10.3.		
10.5.		
10.4	10.3.1. Electronic expansion valve for the outdoor unit	
	Pressure sensor	
10.5.		
	10.5.1. Reliable mechanism for low vibrating and low sound	168
11.	Field work instruction	169
11.1.	Checking the power source and the wiring connection	
11.2.	Burnt-out compressor due to an insufficient refrigerant charge	
11.3.	Insufficient cooling performance when a long piping is applied	
11.4.	Abnormally high operation sound (in-the-ceiling type indoor unit)	171
11.5.	Alarm Code "31"	172
11.6.	Not cooling well due to insufficient installation space for the outdoor unit	172



Service Manual

11.7.	Guideline for selecting the drain pipe for the indoor unit	173
11.8.	Caution with the refrigerant leakage	174
	11.8.1. Maximum permissible concentration of the HCFC Gas	174 174 174
11.9.	Maintenance work	175
11.10.	Service and maintenance record	176
11.11.	Service and maintenance record by means of the 7-segment display	177
	11.11.1 Data Sheet for Checking by 7-Segment Display	177

0. Model codes and descriptions

◆ Unit code list

MODEL CODIFICATION

Please check by model name your air conditioner type, its abbreviation and reference number in this service manual.


FSN(2)(E) INDOOR UNITS								
4-Way C	Cassette	4-Way Mini	Cassette	2-Way Cas	ssette	Ceiling		
Unit	Code	Unit	Code	Unit	Code	Unit	Code	
RCI-1.0FSN2E	7E400001	RCIM-1.0FSN2	60278011	RCD-1.0FSN2	60278029			
RCI-1.5FSN2E	7E400002	RCIM-1.5FSN2	60278013	RCD-1.5FSN2	60278030			
RCI-2.0FSN2E	7E400003	RCIM-2.0FSN2	60278014	RCD-2.0FSN2	60278031	RPC-2.0FSNE	7E440003	
RCI-2.5FSN2E	7E400004			RCD-2.5FSN2	60278032	RPC-2.5FSN2E	7E440004	
RCI-3.0FSN2E	7E400005			RCD-3.0FSN2	60278033	RPC-3.0FSN2E	7E440005	
RCI-4.0FSN2E	7E400007			RCD-4.0FSN2	60278034	RPC-4.0FSN2E	7E440007	
RCI-5.0FSN2E	7E400008			RCD-5.0FSN2	60278035	RPC-5.0FSN2E	7E440008	
RCI-6.0FSN2E	7E400009					RPC-6.0FSN2E	7E440009	
1								
RCI			RCIM		RCD		RPC	
			*	₩ 1~				

Meaning of model codification:	RPI	3.0	FS	N	2	E
Unit Type (Indoor Unit RCI(M), RCD, RPC, RPI, RPK, RPF(I))						
Compressor power (HP) 1.0 ~ 6.0						
H-Link Set Free / System Free						
R410 A refrigerant						
Series						
E: Made in Europe - Made in Malaysia						



FSN(2)(E) INDOOR UNITS									
Duct Wall			Floor Enclosure		Floor Concealed Enclosure				
Unit	Code	Unit	Code	Unit	Code	Unit	Code	Unit	Code
				RPK-1.0FSNH2M	60277942				
RPI-0.8FSN2E	7E420000	RPIM-0.8FSN2E	7E430000	RPK-1.5FSNH2M	60277942				
RPI-1.0FSN2E	7E420001	RPIM-1.0FSN2E	7E430001	RPK-1.0FSN2M	60277941	RPF-1.0FSN2E	7E450001	RPFI-1.0FSN2E	7E460001
RPI-1.5FSN2E	7E420002	RPIM-1.5FSN2E	7E430002	RPK-1.5FSN2M	60277942	RPF-1.5FSN2E	7E450002	RPFI-1.5FSN2E	7E460002
RPI-2.0FSN2E	7E420003			RPK-2.0FSN2M	60277943	RPF-2.0FSN2E	7E450003	RPFI-2.0FSN2E	7E460003
RPI-2.5FSN2E	7E420004			RPK-2.5FSN2M	60277944	RPF-2.5FSN2E	7E450004	RPFI-2.5FSN2E	7E460004
RPI-3.0FSN2E	7E420005			RPK-3.0FSN2M	60277945	-	-	-	-
RPI-4.0FSN2E	7E420007			RPK-4.0FSN2M	60277946				
RPI-5.0FSN2E	7E420008								
RPI-6.0FSN2E	7E420009								
RPI-8.0FSN2E	7E420010								
RPI-10.0FSN2E	7E420011								
			w .		W 200 P.M.				
RF	Pl	RPIN	Л	RPK		RPF		RPFI	
	※ ☆1~								

Meaning of model codification:	RPF	2.0	FS	N	2	E
Unit Type (Indoor Unit RCI(M), RCD, RPC, RPI, RPK, RPF(I))						
Compressor power (HP) 1.0 ~ 6.0						
H-Link Set Free / System Free						
R410 A refrigerant						
Series						
E: Made in Europe - Made in Malaysia						

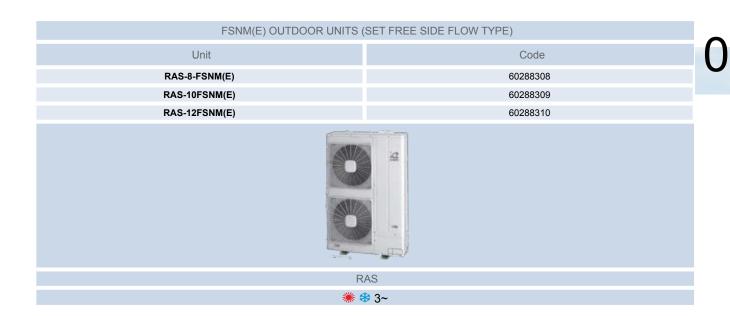

Meaning of model codification:	RAS	10	FS	N	М
Unit Type (Outdoor Unit)					
Compressor power (HP) 8 -10-12					
Set-Free System 2 pipes					
R410 A refrigerant					
Series (Side Flow)					

Service Manual



♦ Complementary systems

Name	Description	Code	Figure
KPI-502E1E		70600001	
KPI-802E1E		70600002	
KPI-1002E1E	Energy recovery ventilation units	70600003	
KPI-1502E1E		70600004	
KPI-2002E1E		70600005	
KPI-3002H1E		70600107	
EF-5NE	Econofresh kit	7E774148	

♦ List of accessories

Name	Description	Code	Figure
PC-ART	Remote control switch with timer	70510000	HETROPH THE STATE OF THE STATE
PSC-A64S	Central control	60291479	HEIRCH
PSC-A16RS	Centralized ON/OFF controller	60291484	50 50 50 50 50 50 50 50 50 50 50 50 50 5
PSC-A1T	Programmable timer	60291482	HINCH

Name	Description	Code	Figure
PC-LH3A	Wireless remote control switch	60291056	
PC-ARH	Optional remote controller	60291486	○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○
PC-ALH	Receiver kit (for RCI-FSN2E -on the panel-)	60291464	Control of the second s
PC-ALHD	Receiver kit (for RCD-FSN2· -on the panel-)	60291467	TTTT
PC-ALHZ	Receiver kit (for RCI, RCD, RPC, RPI, RPK, RPF(I) - (FSN2(E)) -on the wall-)	K, RPF(I) - 60291473	
PC-ALHC	Receiver kit (for RCIM-FSN2 -on the panel-)	60291476	Image not available
PSC-5HR	H-LINK relay		
PCC-1A	Optional function connector	60199286	
PRC-10E1	2-pin extension cord	7E790211	<u>~</u>
PRC-15E1	2-pin extension cord	7E790212	
PRC-20E1	2-pin extension cord	7E790213	
PRC-30E1	2-pin extension cord	7E790214	
THM-R2AE	Remote temperature sensor (THM4)	7E299907	
HC-A32MB	Building Management System Gateway to MODBUS systems.	7E513200	
HC-A16KNX	Building Management System Gateway to KNX systems.	7E513300	Charles

Name	Description	Code	Figure
HARC-BXE (A)	Buildin g Management System Gateway to LONWORKS systems. (max. 64 IU, 8 parameters)	60290874	
HARC-BXE (B)	Building Management System Gateway to LONWORKS systems. (max. 32 IU, 16 parameters)	60290875	
HC-A64BNP	Building Management System Gateway to BAC Net system.	60291569	The Same
CSNET-WEB (v3)	Control System	7E891938	
TS001 WEB SCREEN	15-inch touch-screen display	display 7E891935	
PC-A-1I0	Integration of teams into H-LINK	7E519000	
HC-A160SMS	SMS alarm warning device	7E519100	
DBS-26	Drain discharge connection	60299192	
P-N23WA	Air panel for RCI-FSN2E	70530000	
P-N23WAM	Air panel for RCIM-FSN2E	60197160	
P-N23DWA	Air panel for RCD-FSN2E	60291574	
P-N46DWA	Air panel for RCD-FSN2E	60291575	

Name	Description	Code	Figure
B-23H4	Adapter for deodorant filter	60199790	
F-23L4-K	Antibacteria filter	60199791	
F-23L4-D	Deodorant filter	60199793	
F-46L4-D	Deodorant filter	60199794	
PDF-23C3	Duct connection flange	60199795	
PDF-46C3	Duct connection flange	60199796	
OACI-232	Fresh-air intake kit	60199797	
PD-75	Fresh-air intake kit	60199798	
PI-23LS5	3-way outlet parts	60199799	
TKCI-232	T-duct connecting kit	60199801	
MW-102AN		70522001	
MW-162AN	Branch pipe	70522002	
MW-242AN		70522004	
MW-302AN		70522005	
MH-84AN	Header	70522007	
MH-108AN	. roddol	70522008	244444



Name	Description	Code	Figure
HR-500		70550101	
HR-800		70550102	
HR-1000	Energy exchanger for KPI (heat recovery)	70550103	
HR-1500		70550104	
HR-2000		70550105	
STL-30-200-L600	Sound attenuator (Heat/energy recovery)	70550200	TAXABLE SEC
STL-30-250-L600		70550201	
STL-30-300-L600		70550202	12002
STL-30-355-L600		70550203	
STL-30-450-L600		70550204	



1. Units installation

This chapter provides information about the procedures you must follow to install the Set-Free FSNM(E) outdoor units.

Contents

Units installation	1
1.1 General installation notes	2
1.2. Transportation and handling	4
1.2.1. Hanging method	4
1.2.2. Center of gravity	4
1.3. Outdoor units installation	5
1.3.1. Before installation_	5
1.3.2. Installation location	6
1.3.3. Service space	7
1.3.4. Foundations	9

1.1 General installation notes



warning

Install the outdoor unit with sufficient clearance around it for operation and maintenance as shown in the next pages.

Install the outdoor unit where good ventilation is available.

Do not install the outdoor unit where exists a high level of oil mist, salty air or sulphurous atmosphere.

Install the outdoor unit as far as practical (being at least 3 meters) from electromagnetic wave radiator, such as medical equipment.

Keep clearance between units of more than 50 mm, and avoid obstacles that could hamper air intake, when installing more than one unit together.

Install the outdoor unit in the shade or not exposed to direct sunshine or direct radiation from high temperature heat source

Do not install the outdoor unit in a place where a seasonal wind directly blows into the outdoor fan.

For cleaning, use non-inflammable and nontoxic cleaning liquid. Use of inflammable agent may cause explosion or fire.

Work with sufficient ventilation, for working in an enclosed space could cause oxygen deficiency. Toxic gas may be produced when cleaning agent is heated to high temperature by, e.g., being exposed to fire.

Cleaning liquid shall be collected after cleaning.

Pay attention not to clamp cables when attaching the service cover to avoid electric shock or fire.



caution

Check the foundation to be flat, leveled and strongly enough.

Install the unit in a restricted area not accessible by the general public.

Aluminium fins have very sharp edges. Pay attention to the fins in order to avoid injury.

Do not install the indoor units in a flammable environment to avoid a fire or an explosion.

Check to ensure that the ceiling slab is strong enough. If not strong enough, the indoor unit may fall down on you.

Do not install the indoor units, outdoor unit, remote control switch and cable within approximately 3 meters from strong electromagnetic wave radiators, such as medical equipment.

Do not install the indoor units in a machinery shop or kitchen, where vapor from oil or mist flows to the indoor units. The oil will deposit on the heat exchanger, thereby reducing the indoor unit performance, and may deform. In the worst case, the oil damages the plastic parts of the indoor unit.

To avoid any corrosive action to the heat exchangers, do not install the indoor units in an acid or alkaline environment.

When lifting or moving the indoor unit, use appropriate slings to avoid damage and be careful not to damage the insulation material on units surface.

This appliances are not intended for use by people (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision and instruction concerning the use of the appliance by a person responsible for their safety.

Turn OFF all power switches before maintenance is performed.

Do not start the cleaning procedures before 5 minutes of the stop of the unit.



warning

Check and ensure that the accessories are packed with the indoor unit.

Do not install the indoor units outdoors. If installed outdoors, an electric hazard or electric leakage will occur.

Consider the air distribution from each indoor unit to the space of the room, and select a suitable location so that uniform air temperature in the room can be obtained. It is recommended that the indoor units be installed 2.3 to 3 meters from the floor level. If the unit is installed higher than 3 meters, it is also recommended to use a fan in order to obtain an uniform air temperature in the room.

Avoid obstacles which may hamper the air intake or the air discharge flow.

Children must be supervised to ensure that they do not play with the electrical appliances.

Before obtaining access to terminals, all supply circuits bust be disconnected.

warning

Pay attention to the following points when the indoor units are installed in a hospital or other places where there are electronic waves from medical equipment and similar.


Do not install the indoor units where electromagnetic wave is directly radiated to the electrical box, remote control cable or remote control switch.

Install the indoor units and components as far as practical or at least 3 meters from the electromagnetic wave radiator.

Prepare a steel box and install the remote control switch in it. Prepare a steel conduit tube and wire the remote control cable in it. Then connect the ground wire with the box and tube.

Install a noise filter when the power supply emits harmful noises.

This unit is exclusive non electrical heater type indoor unit. It is prohibited to install a electrical heater in the field. Mount suspension bolts using M10 (W3/8) as size, as shown below:

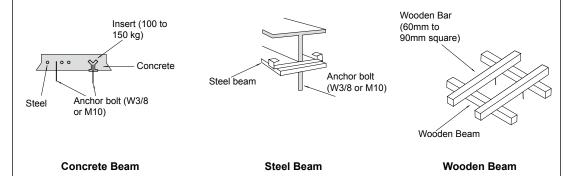

Do not put any foreign material into the indoor unit and check to ensure that none exist in the indoor unit before the installation and test running. Otherwise a fire or failure may occur.




Note

Hitachi indoor units are designed for free air discharge (Static Pressure, Pst=0), except ducted indoor units as RPIM, which require to be connected to discharge air ducts. For these units see flow-static pressure chart.

1.2. Transportation and handling

Transport the product as close to installation location as practical before unpacking.




1.2.1. Hanging method

When hanging the unit, ensure a balance of the unit, check safety and lift up smoothly.

For transportation

- Do not remove any packing materials.
- Hang the unit without removing the packaging with ropes through each square hole and apply the splints or corrugated paper for unit protection



Over 60° 0.7 to 1.0 m Do not remove the plastic band or the corugated paper frame Pass the wire ropes through each lifting hole in the wooden base as

shown.

■ When Using Handles


When manually lifting the unit using the handles, pay attention to the following points.

- 1 Do not remove the wooden base from outdoor unit.
- 2 To prevent the unit from overturning, pay attention to the center of gravity as shown in the below figure.
- 3 Two or more personnel should be used to move the unit.

I	Model	Unit gross weight (kg)
RAS-8I	FSNM(E)	179
RAS-10	0FSNM(E)	
RAS-12	2FSNM(E)	182

1.2.2. Center of gravity

The figure shows the location of the center of gravity

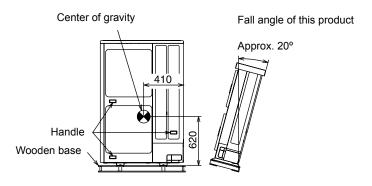

1.3. Outdoor units installation

A

WARNING

- Install the outdoor unit with sufficient clearance around it for operation and maintenance as shown in the next figures.
- Install the outdoor unit where good ventilation is available
- Do not install the outdoor unit where is a high level of oil mist, salty air or sulphurous atmosphere.
- Install the outdoor unit as far as practical (being at least 3 meters) from electromagnetic wave radiator (such as medical equipment).
- Keep clearance between the units of more than 50 mm, and avoid obstacles that may hamper air intake, when installing more than one units together.
- Install the outdoor unit in the shade or not exposed to direct sunshine or direct radiation from high temperature heat source.



CAUTION

- Check to ensure that the foundation is flat, level and sufficiently strong.
- Install the unit in a restricted area not accessible by the general public
- Aluminum fins have very sharp edges. Pay attention to the fins to avoid injury.



CAUTION

Pay attention to the followings to run through the cables under the unit using conduit for piping and wiring works. (The pipe cover is required to remove before performing piping and wiring works.)

- 1. Attach the pipe cover to avoid entering rats or other small animals into the unit.
- 2. Completely seal the conduit inlet with sealing materials.
- 3. Make a drain hole at the lowest part of the conduit.

1.3.1. Before installation

Before installation work, check the availability of the following parts that are packed inside the outdoor unit


Accessory	Quantity	Purpose
Pipe with flare nut for refrigerant piping	1	




1.3.2. Installation location

■ Installation place

- Install the outdoor unit where good ventilation is available, and where it is dry.
- Install the outdoor unit where the sound or the discharge air from the outdoor unit does not affect neighbors or surrounding vegetation. The operating sound at the rear or right/left sides is higher than the value in the catalog at the front side.
- Check to ensure that the foundation is flat, level and sufficiently strong.
- Do not install the outdoor unit where there is a high level of oil mist, salty air or harmful gases such as sulphur.
- Do not install the outdoor unit where the electromagnetic wave is directly radiated to the electrical box.
- Install the outdoor unit as far as practical, being at least 3 meters from the electromagnetic wave radiator.
- When installing the outdoor unit in snow-covered areas, mount the field-supplied hoods at the discharge side of the outdoor unit and the inlet side of the heat exchanger.
- Install the outdoor unit where it is in the shade or it will not be exposed to direct sunshine or direct radiation from high temperature heat source.
- Do not install the outdoor unit where dust or other contamination could block the outdoor heat exchanger.
- Install the outdoor unit in a space with limited access to general public.
- Do not install the outdoor unit in a space where a seasonal wind directly blows to the outdoor heat exchanger or a wind from a building space directly blows to the outdoor fan
- In case of installation in the open spaces unavoidably where there is no buildings or surrounding structures, adopt the wind guard set or install near the wall to avoid facing the wind directly. Ensure that the service space should be secured.

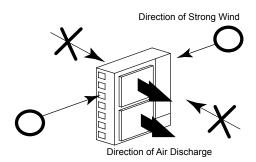

Using wind guard

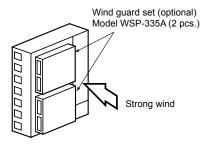

(1)

NOTE

If the extreme strong wind blows directly against the air discharge portion, the fan may rotate reversely and be damaged.

If the unit is installed on the roof or the place forced directly against strong wind such as storm, fix the unit securely with wire ropes as shown in the figure.





CAUTION

Aluminum fins have very sharp edges.

Pay attention to the fins to avoid any injury.

A wall to guard againts the wind

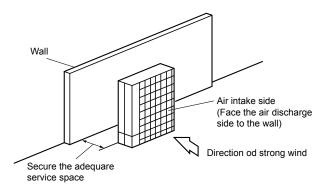

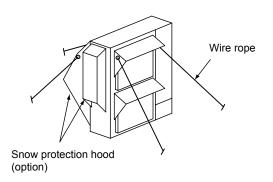


1.3.3. Service space


Install the outdoor unit with a sufficient space around the outdoor unit for operation and maintenance as shown below.

■ Obstacles on inlet side

- Upper side is open

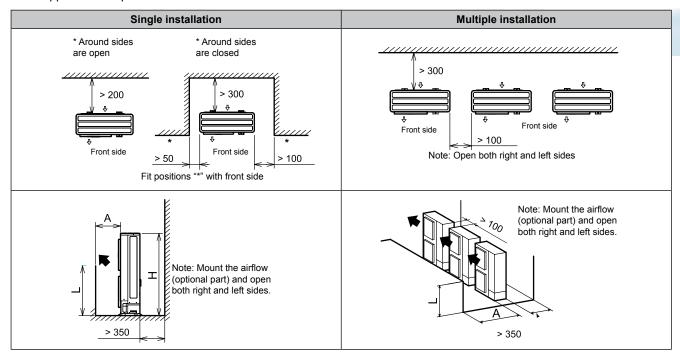


Obstacles in above

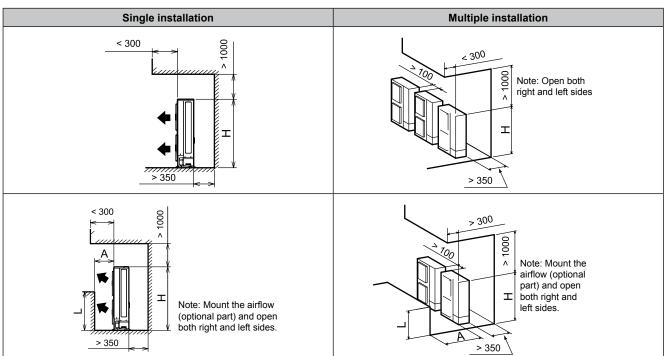



■ Obstacles on discharge side


- Upper side is open

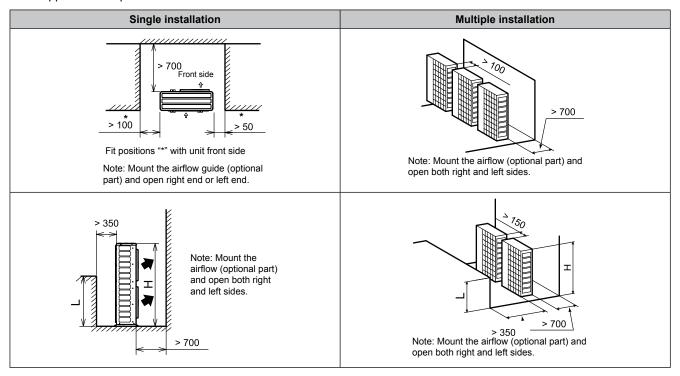

■ Obstacles in right and left

- Upper side is open

- Obstacles in above

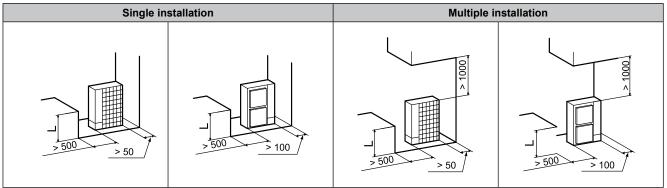


If L is higher than H, mount the units on a base so that H is greater or equal to L. H: Unit Height (1650mm) + Base Concrete Height In this situation ensure that the base is closed and does not allow the $0.5H < L \le H$ 1400 or more

SMGB0059 rev.0 - 04/2009

In this situation ensure that the base is closed and does not allow the airflow to short circuit. In each case, install the outdoor unit so that the

discharge flow is not short-circuited.

■ Multi-row and multiple installations

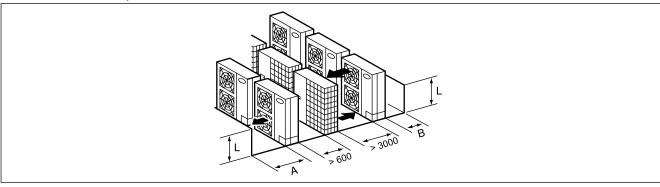

Keep a distance of more than 100mm between other units and do not put obstacles on the right and left sides. Dimension B is as shown beside.

L	Α	В
0 < L ≤ 0.5H	600 or more	300 or more
0.5H < L ≤ H	1400 or more	350 or more

1


NOTE

If L is larger than H, mount the units on a base o that H is greater or equal to L.

In this situation ensure that the base is closed and does not allow the airflow to short circuit...


1.3.4. Foundations

- Secure the outdoor unit with the anchor bolts.
- Fix the outdoor unit to the anchor bolts by special washer of factory-supplied accessory.

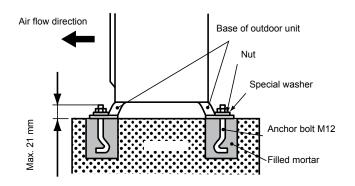


 When installing the outdoor unit, fix the unit by anchor bolts. Refer to figure regarding the location of fixing holes.

When the mark * dimension is secured, piping work from bottom side is easy without interference of foundation.

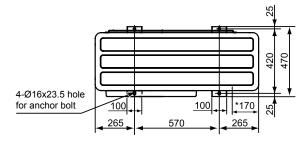

- Example of fixing outdoor unit by anchor bolts.

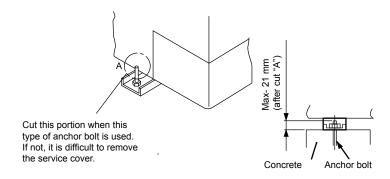

SMGB0059 rev.0 - 04/2009


 (4) Fix the outdoor unit firmly so that declining, making noise, and falling down by strong wind or earthquake is avoided.


- When installing the unit on a roof or a veranda, drain water sometimes turns to ice in a cold morning.
 Therefore, avoid draining in an area where people often use because it is slippery.
- In case of the drain piping is necessary for the outdoor unit, use the drain-kit (DBS-26: Optional Parts)

The whole of the base of the outdoor unit should be installed on a foundation. When using vibration-proof mat, it should also be positioned the same way.
 When installing the outdoor unit on a field supplied frame, use metal plates to adjust the frame width for stable installation as shown in the figure.


Recommended Metal Plate Size (Field-Supplied)
Material: Hot-Rolled Mild Steel Plate (SPHC)

Plate Thickness: 4.5T

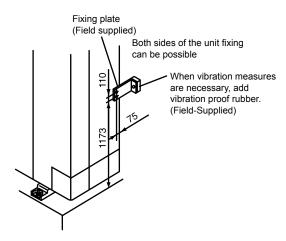


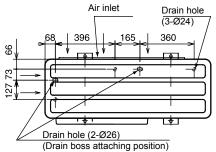


Incorrect

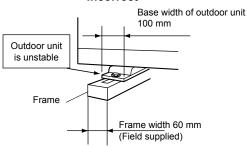

Correct

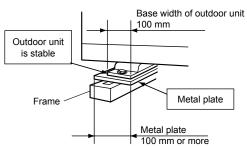

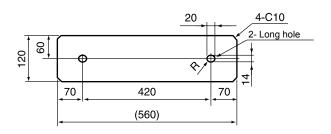

2. Piping installation

Contents

2. Piping installation		11
2.1. P	iping work considerations	12
2.1.1	Copper pipes and sizes	12
2.1.2	Three principles on refrigerant piping work	 15
2.1.3	Suspension of refrigerant piping	 15
2.1.4.	. Tightening torque	16
	. Brazing work	 17

Service Manual

2.1. Piping work considerations

- 2.1.1 Copper pipes and sizes
- 1. Prepare locally-supplied copper pipes.
- 2. Select the piping size with the correct thickness and correct material which can have sufficient pressure strength. Use the table below to select the required pipe.


Nominal Diameter		Thickness	Copper type
(mm)	(in)	(mm)	
6.35	1/4	0.80	Roll
9.53	3/8	0.80	Roll
12.70	1/2	0.80	Roll
15.88	5/8	1.00	Roll
19.05	3/4	1.00	Pipe
22.23	7/8	1.00	Pipe
25.40	1	1.00	Pipe
28.60	1 1/8	1.00	Pipe
31.75	1 1/4	1.10	Pipe
34.93	1 3/8	1.25	Pipe
38.10	1 1/2	1.35	Pipe
41.28	1 5/8	1.20	Pipe
44.45	1 3/4	1.55	Pipe



Note

- In case of using copper pipes for piping sections bigger than \emptyset 19.05 mm (3/4 inches), flaring work cannot be performed. If necessary, use a joint adapter.

- 3. Select clean copper pipes. Make sure there is not dust and moisture inside. Blow the inside of the pipes with oxygen free nitrogen to remove any dust and foreign materials before connecting the pipes.
- 4. After connecting the refrigerant piping, seal the open space between Knockout hole and refrigerant pipes by using insulation material as shown below:

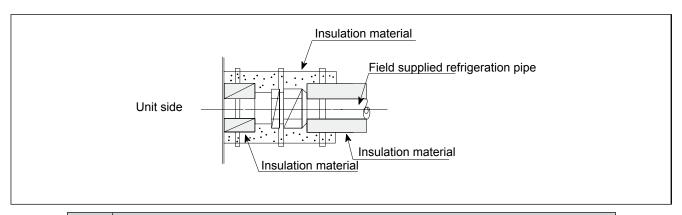


A

caution

- Do not use a saw and a grindstone or other tools which cause copper powder.
- When cutting pipes, secure the part for brazing in accordance with both national and local regulations.
- Use security glasses and gloves for cutting or welding works.

■ Piping Connection

When connecting liquid piping for units with piping longer than 15 meters, apply a piping size of Ø9.53 mm (3/8 inches). Fix the connecting pipe as shown in the following figure using the insulation attached to the Indoor Unit.

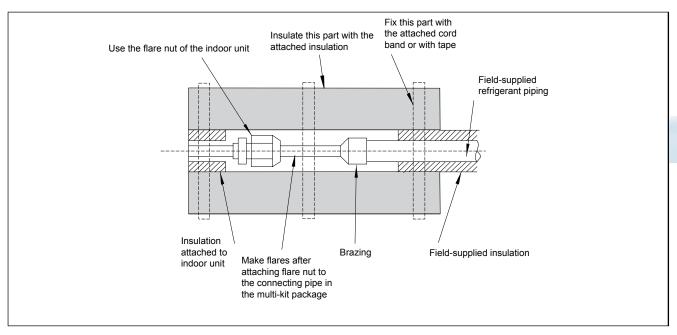



Note

- A system with no moisture or oil contamination will give maximum performance and lifecycle compared to a
 poorly prepared system. Take particular care to ensure that all copper piping is clean and dry internally.
- To ensure this, blow oxygen-free nitrogen through the pipes.



caution


- When inserting a pipe through any hole protect the end with a cap.
- Do not put pipes on the ground directly without a cap or vinyl tape at the end of the pipe
- If the piping installation is not completed until the next day or even over a longer period of time, braze off the ends of the piping and charge the pipe with oxygen-free nitrogen through a Schrader-valve-type access-fitting, to prevent moisture and particle contamination entering.
- Do not use insulation material that contents NH3. NH3 can damage the cooper pipe material and can be a source of future leakages

Correct	Incorrect
	777777777777777777777777777777777777777

Service Manual

Insulation

Attach the pipe insulation to each branch using vinyl tape. Attach also insulation to field supplied pipes in order to prevent the capacity decrease according to the ambient air conditions and dewing on the low pressure pipe surface.

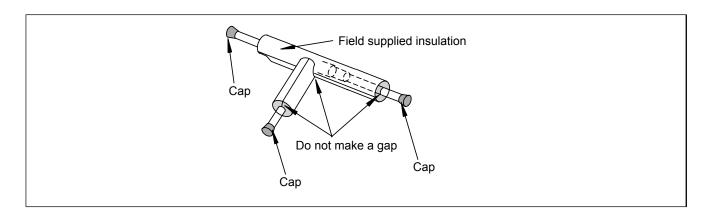



Note

- When polyethylene foam is applied, it is recommended the usage of a wall thickness of 10 mm for the liquid piping and 15 mm to 20 mm for the gas piping.



caution

- Perform the insulation work after the pipe surface temperature decreases to the room temperature, if not the insulation material may melt.
- If the ends of the piping system are open after ending the piping work, attach caps or vinyl bags securely to the ends of the piping, avoiding moisture and dust entering.

2.1.2 Three principles on refrigerant piping work


In case of using refrigerant R410A in the refrigeration cycle, the refrigeration oil should be of a synthetic type one. In order to avoid oxidation, pay much careful attention to basic piping work control to avoid infiltration of moisture or dust during the refrigerant piping work.

Three principles	Cause of failure	Presumable failure	Preventive action
1. Dry Keep good dryness	 Water infiltration due to insufficient protection at pipe ends Dewing inside of pipes Insufficient vacuum pumping time 	Icing inside tube at ex. valve (Water choking) + Generation of hydration and oxidation of oil Clogged Strainer, etc., insulation failure and compressor failure	Pipe protection 1 Pinching 2 Taping Flushing Vacuum Drying One gram of water turns into gas (approx. 1000 Irs) at 1 Torr Therefore, it takes long time to vacuum pump
2. Clean No dust Inside of pipes	 Infiltration of dust or other through the pipe ends Oxidation film during brazing without blowing nitrogen Insufficient flushing by nitrogen after brazing 	Clogging of expansion valve, capillary tube and filter Oxidation of oil Compressor failure Insufficient cooling or heating compressor failure	Pipe Protection 1 Mounting Caps 2 Taping 3 Pinching Flushing
3. No leakage No leakage shall exist	Brazing failure Failed flaring work and insufficient torque of squeezing flare Insufficient torque of squeezing flanges	Refrigerant shortage Performance decrease Oxidation of oil Overheating of compressor Insufficient cooling or heating compressor failure	Careful Basic Brazing Work Use

2.1.3 Suspension of refrigerant piping

Suspend the refrigerant piping at certain points and prevent the refrigerant piping from touching weak parts of the building such as walls, ceiling, etc. (If touched, abnormal noises may occur due to the vibration of the piping. Pay special attention in case of short piping length).

In order to fix the piping to wall or ceilings use suspension and clamping systems as shown in the following figure.

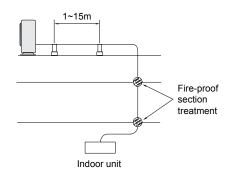







Service Manual


2.1.4. Tightening torque

- 1. Flaring connections (smaller than a diameter of Ø19.05) are generally used. However, if incorrect flaring is performed, it will cause serious refrigerant leakage.
- 2. Shape after Flaring, it should be rectangular and flat, and no uneven thickness, cracks and scratches should exist.


Nominal diameter Ød		Dimension	90° ±2°
(inches)	(mm)	A+0.0/-0.4 (mm)	45° ±2°
1/4	6.35	9.1	
3/8	9.53	13.2	0.4~0.8R
1/2	12.70	16.6	
5/8	15.88	19.7	
3/4	19.05	(*)	Ød ØA

(*) It is impossible to perform the flaring work. In this case, use a joint selected from the table in point 3. When tightening the flare nuts, use two spanners, as shown in the figure.

Pipe diameter (mm)	Size B (R410A)	Tightening torque (Nm)
Ø6.35	17	20
Ø9.53	22	40
Ø12.70	26	60
Ø15.88	29	80
Ø19.05	36	100



Stop valve FSNM(E)

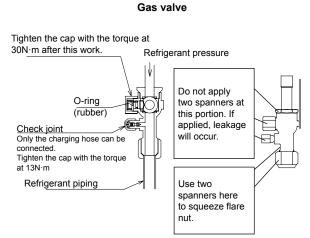


(i)

Note

- This valve is a ball valve.

 The stem is turned to arrow direction for valve open and close as below.
- 2 Use adjustable wrench for the stem operation. Turn the stem until contact to the pin.
- 3 Attach the ring securely after the stem operation.
- 4 Do not leave the stem at half opening position.

Liquid valve

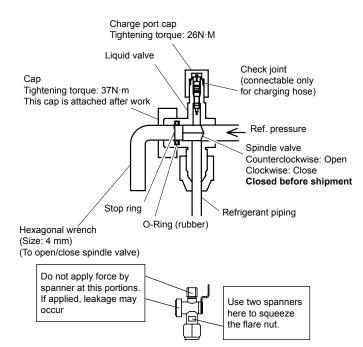

2.1.5. Brazing work


The most important work in the refrigerant piping installation work is the brazing of the pipes. If it accidentally occurs a leakage due to a careless brazing process, it will cause clogged capillary pipes or serious compressor failure. In order to guarantee a proper brazing neck between different pipes surfaces, accurate pipe dimensions after the expansion process (see the table below):

It is important to control the clearance of the pipe fitting portion as shown below. In the case that a cooper tube expansion jig is used, following dimensions should be secured.

Copper pipe size	Ød1	Gap	а	Copper pipe size	Ød1	Gap	а
+0.08	+0.1	0.33		+0.09	+0.1	0.39	
Ø6.35	Ø6.5		6	Ø22.22	Ø22.42		10
-0.08	0	0.07		-0.09	0	0.11	
+0.08	+0.1	0.35		+0.12	+0.1	0.42	
Ø9.53	Ø9.7	0.00	8	Ø25.4	Ø25.6		12
-0.08	0	0.09		-0.12	0	0.08	
+0.08	+0.1	0.38		+0.12	+0.1	0.42	
Ø12.7	Ø12.9		8	Ø28.58	Ø28.78		12
-0.08	0	0.19		-0.12	0	0.08	
+0.09	+0.1	0.41		+0.12	+0.1	0.47	
Ø15.88	Ø16.1		8	Ø31.75	Ø32.0		12
-0.09	0	0.13		-0.12	0	0.13	
+0.09	+0.1	0.44		+0.12	+0.1	0.52	
Ø19.05	Ø19.3		10	Ø38.1	Ø38.3		14
-0.09	0	0.16		-0.12	0	0.18	

A basic brazing method is shown below.

- Pre-heat the outer tube for better flowing of the filler metal
- Heat inner side tube evenly ค
- Rubber plug 0
- Packless valve
- 0 High pressure hose
- 0.03 to 0.05 MPa (0.3 to 0.5 Kg/cm² G) 0
- Reducer valve: open this valve only when the gas is needed
- Nitrogen gas flow 0.05m3/h or smaller

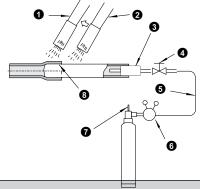



caution

- Use nitrogen gas for blowing during pipe brazing. If oxygen, acetylene or fluorocarbon gas is used, it will cause an explosion or poisonous gas.
- During the brazing work, a lot of oxidation film will be generated inside of the pipes if no oxygen-free nitrogen gas is blown through the pipes. This film will be flecked off after operation and will circulate in the refrigeration cycle, resulting in clogged expansion valves, etc. This coud origin problems in the compressor.
- Use a reducer valve when nitrogen gas blowing is performed during brazing. The gas pressure should be maintained within 0.03 to 0.05 MPa. If an excessively high pressure is applied to a pipe, it could origin an explosion.

HITACHI Inspire the Next

3. Electrical wiring

Contents

3. Electrical wiring	19
3.1. General check	20
3.2. Electrical wiring for the outdoor unit	21
3.2.1.Electrical wiring connection for outdoor unit	21 22
3.3. Common wiring	25
3.3.1. Electrical wiring between the indoor unit and the outdoor unit	25
3.4 Wire size	27

3.1. General check



DANGER

- Before installing the electrical wiring or before performing a periodical check, turn OFF the main switch to the indoor unit and the outdoor unit. For safety reasons, be sure that the indoor fan and the outdoor fan have stopped.
- Prevent the wires from touching the refrigerant pipes, the plate or cutting edges and the electrical components inside the unit, to prevent them getting damaged. In worst cases, a fire may occur.
- Tightly secure the wires with the cord clamp inside the indoor unit.



NOTE

- In case of performing a test run operation take especially care because some security features are disabled: the
 units will operate during 2 hours without Thermo-OFF, and the 3-minute guard for compressor protection will not
 be effective during the test.
- Fix rubber bushes with an adhesive on the panel when the conduit pipes to the outdoor unit are not used.
- In forced stopped compressor mode, the compressor operation is OFF.
- 1. Make sure that the field-selected electrical components (main switches, circuit breakers, wires, conduit connectors and wire terminals) have been properly selected according to the electrical specifications in this service manual. Make sure that the electrical components comply with the National Electrical Code (NEC).
- 2. Following the Council Directive 89/336/EEC and its amendments 92/31/EEC and 93/68/EEC, relating to electromagnetic compatibility, next table indicates maximum permissible system impedance Zmax at the interface point of the user's supply, in accordance with EN61000-3-11

MODEL	Zmax (Ω)
RAS-8FSN2	
RAS-10FSN2	
RAS-12FSN2	

- 3. Make sure that the power supply voltage is within $\pm 10\%$ of the rated voltage.
- 4. Check the capacity of the electrical wires. If the power source capacity is too low, you cannot start the system due to the voltage drop.
- 5. Make sure that the ground wire is connected.
- 6. Main Switch

Install a multi-pole main switch with a distance of 3.5 mm or more between each phase.


3.2. Electrical wiring for the outdoor unit


3.2.1. Electrical wiring connection for outdoor unit

■ FSNM(E)

The electrical wiring connection for the outdoor unit is shown beside.

- Connect the power supply wires to L1, L2, L3 and N (for 400V\50Hz) for the three-phase power source on the terminal board. Connect the ground wires to the terminals in the electrical box.
- Connect the control cables between the outdoor unit and the indoor unit to the terminals 1 and 2 on the terminal board.
- 3. Do not run the wires in front of the fixing screw of the service access panel. If you do so, you cannot remove the fixing screw.

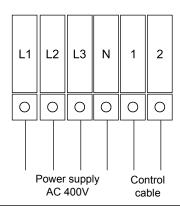

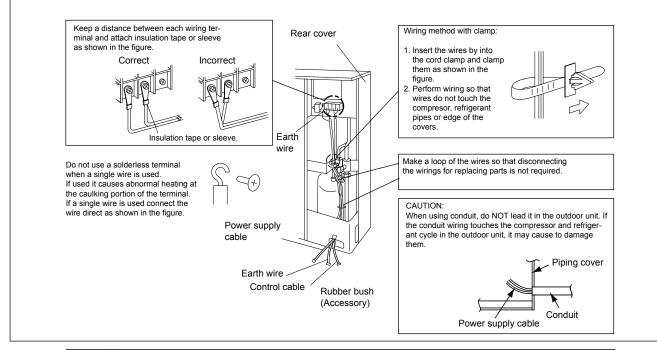


Δ

CAUTION

Fix the shielded operation wires between the indoor unit and outdoor unit with a cord band at only one point. You must connect the shielded operation wires to the earth of the indoor unit only.

4. Before turning ON the main switch, check the item below. If the nominal voltage for the outdoor unit is 415V, change the connector CN4 to CN5 of the transformer TF in the electrical box as shown in the figure below.

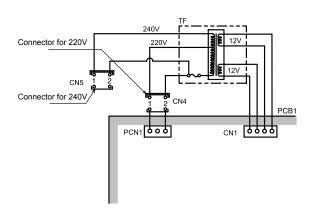




3.2.2. Setting the DIP switches for the outdoor unit


Quantity and location of DIP switches

Push switch PSW1: manual defrost

Push switches PSW2, PSW3: Ckecking by 7-segment

PCB1

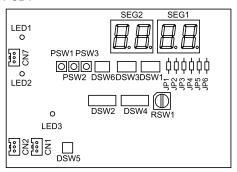



The mark "■" indicates position of dips switches. Figures show setting before shipment or after selection. Not mark "■" indicates pin position is not affecting



CAUTION

Before setting dips switches, firstly turn off power source and set the position of the dips switches. If the switches are set without turning off the power source, the contents of the setting are invalid.

Dip switches setting

DSW1: Test operation and service setting 1
 Setting is required, for test operation and operating the compressor)

	DSW1
Setting before shipment	ON 1 2 3 4
Test cooling operation	ON 1 2 3 4
Test heating operation	ON 1 2 3 4
Compressor forced stop	ON 1 2 3 4

Number 3 pin should be remained at OFF position

- DSW2: Optional function setting

Setting is required, when optional functions are required

Setting before shipment	ON 1 2 3 4 5 6
Function setting	ON 1 2 3 4 5 6
External input/output selection	ON 1 2 3 4 5 6

DSW3: Capacity setting
 No setting is required

RAS-8FSNM(E)	ON 1 2 3 4
RAS-10FSNM(E)	ON 1 2 3 4
RAS-12FSNM(E)	ON 1 2 3 4

 DSW4 and RSW1: Refrigerant cycle number setting Setting is required.

Setting for the tenth digit (first digit)	ON 1 2 3 4 5 6
Seting for the units digit (last digit) Set by inserting slotted screwdriver into the grove	

DSW5: End terminal resistance
 No setting is required

12

3



DSW6: Height difference
 Setting is required

Setting before shipment	ON 1 2 3
The indoor unit is located higher than outdoor unit (20 to 30 m)	ON 1 2 3
Fine-tuning of heating capacity	ON 1 2 3

- JP1~6: Jumper cable

Power supply	JP1	JP2	JP3	JP4	JP5	JP6	
380-415V 50Hz O X X O O							
O: with jumper cable							
X: without jumper cable							

Setting for transmitting

It is required to set the refrigerant cycle numbers and end terminal resistance for this H-LINK or H-LINKII system.

- Setting of Refrigerant Cycle No.

In the same refrigerant cycle, set the same refrigerant cycle number for the outdoor unit and the indoor units as shown below.

As for setting indoor unit refrigerant cycle number, set the RSW2 and DSW5 on the indoor unit PCB.

Setting switch		
ten digit unit digit		
ON 1 2 3 4 5 6		
DSW4	RSW1	
DSW5	RSW2	
	T	
	ten digit ON 1 2 3 4 5 6 DSW4	

Example in case of setting refrigerant cycle number 25	ON 1 2 3 4 5 6	
--	-------------------	--

DSW and RSW setting before shipment is 0.

Maximum in setting refrigerant cycle number is 63

3.3. Common wiring


3.3.1. Electrical wiring between the indoor unit and the outdoor unit

Δ

CAUTION

Use the shielded twisted pair cable or the shielded pair cable for the transmission cables between the indoor unit and the outdoor unit. Connect the shielded part to the earth screw in the electrical box of the indoor unit as shown below. Also use these cables for the operation wiring between one indoor unit and another indoor unit (H-LINK connection).

- Shielded part
- 2 Transmission cables
- Power supply cables
- Earth screw

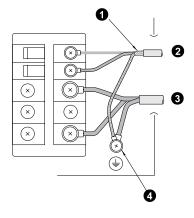

3

- Connect the electrical cables between the indoor unit and the outdoor unit as shown in the wiring diagram.
- Make sure that the terminals for the power supply wiring and the terminals for the intermediate wires between the indoor unit and the outdoor unit coincide correctly. The terminals for the power supply wiring are "L1" to "L1", "L2" to "L2", "L3" to "L3" and "N" to "N" of each terminal board. For the operating line, the terminals for the intermediate wires are "1 and 2" to "1 and 2" of each terminal board for DC 5V. Otherwise, you may damage some components.
- When you are installing the electrical wiring, follow the local codes and the local regulations.
- Connect the operation wiring to the units in the same refrigerant cycle. (You should connect the refrigerant piping and the control wiring to the same indoor units). If you connect the refrigerant piping and the control wiring to the units in the different refrigerant cycle, an abnormal operation may occur.
- You must connect the shielded part to earth only in one cable side.
- Do not use more than three cores for the operation wiring (H-LINK II). Select the core sizes according to the national regulations.
- If there are multiple outdoor units that are connected to one power supply wire, open a hole near the connection hole for the power supply wiring.

The recommended breaker sizes are shown in the table of electrical data and recommended wiring.


- If a conduit tube for the field wiring is not used, fix the rubber bushes on the panel with adhesive.
- All the field wiring and the equipment must comply with the local codes and the international codes.
- Make sure that the power source voltage is correct.
- An incorrect wiring may cause a breakdown of the transformer PSC-5HR or the units
- Especially, DO NOT connect the power source to the terminal board for transmission.
- DO NOT install the H-LINK II wires along the power supply wire, other signal wires, and others. If you install the H-LINK II wires along those wires, there may be a malfunction due to the electrical noise. If you need to install the H-LINK II wires near those wires, provide a distance of 15cm or more. Or alternatively, insert the wires into the steel pipe and ground one end of the pipe.



Electrical wiring connection

Models: RAS-8~12FSNM(E)

Max. 1 Outdoor Unit / Power Supply Line
The Power source for outdoor units must be made individually.
If not, fire may occur in the worst case.

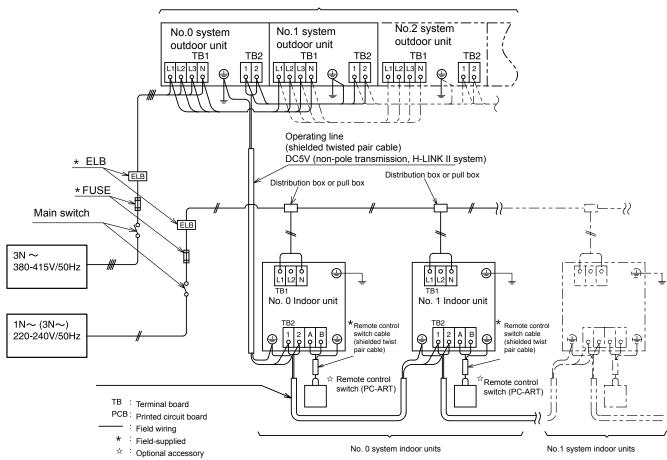

3.4.wire size

■ Electrical wiring connection. Field minimum wire sizes for power source.

- Indoor units

		Maximum	Power Source Cable Size Transmitting Cable S		ing Cable Size	
Model	Power Source	Current (A)	EN60 335-1 ①	MLFC 2	EN60 335-1 ①	Shielded Twist Pair Cable
All indoor units	1~230V/50Hz	5.0	0.75 mm ²	0.75 mm ²	m ² 0.75mm ² 0.5i	0.5mm ²
RPI-(8.0/10.0)FSN2E		10.0	1.5 mm ²	0.75 11111		U.5mm ⁻

- Outdoor units

		Maximum	Power Source Cable Size Transmitting Ca		•	
Model	Power Source	Current (A)	EN60 335-1 ①	MLFC 2	EN60 335-1 ①	Shielded Twist Pair Cable
RAS-8FSN2		14.0	2.5 mm ²	2.0 mm ²		
RAS-10FSN2	3~380-415V/50Hz	18.0	4.0 mm ²	3.5 mm ²	0.75mm ²	0.75mm ²
RAS-12FSN2		23.0	4.0 mm ²	3.5 mm ²		

Refer the notes for selection of the power source cable size in next page

(i) NOTES:

- 1. Follow local codes and regulations when selecting field wires.
- 2. The wire sizes marked with 1 in the table of this page are selected at the maximum current of the unit according to the European Standard, EN60 335-1. Use the wires which are not lighter than the ordinary tough rubber sheathed flexible cord (code designation H05RN-F) or ordinary polychloroprene sheathed flexible cord (code designation H05RN-F).
- 3. The wire sizes marked with 🥹 in the table of this page are selected at the maximum current of the unit according to the wire, MLFC (Flame Retardant Polyflex Wire) manufactured by Hitachi Cable Ltd., Japan.
- 4. Use a shielded cable for the transmitting circuit and connect it to ground.
- 5. In the case that power cables are connected in series, add each unit maximum current and select wires below.
- 6. The earth cable size complied with local code: IEC 245, No 571.




	according to 0 335-1	Selection according to MLF (at cable temp. of 60 °C)	
Current i (A)	Wire Size (mm²)	Current i (A)	Wire Size (mm²)
I ≤ 6	0.75	I ≤ 15	0.5
6 < i ≤ 10	1	15 < i ≤ 18	0.75
10 < i ≤ 16	1.5	$18 < i \leq 24$	1.25
16 < i ≤ 25	2.5	$24 < i \leq 34$	2
25 < i ≤ 32	4	$34 < i \leq 47$	3.5
32 < i ≤ 40	6	47 < i ≤ 62	5.5
40 < i ≤ 63	10	$62 < i \leq 78$	8
63 < i	8	78 < i ≤ 112	14
		112 < i ≤ 147	22

1 In the case that current exceeds 63A, use MLFC cables, and do not connect cables in series.



CAUTION:

- Install a multi-pole main switch with a space of 3.5 mm or more between each phase.
- Use shielded wires for transmission wires between the indoor and the outdoor units, and connect the shielded part to the earth screw in the electrical box of the indoor unit as shown below.



Earth screw

■ Select the Main Switches in accordance with the following table:

- Indoor units

Model	Power Source	Maximum Running Current (A)	CB(A)	ELB no. poles/A/mA
All indoor units	1~230V/50Hz	5.0	6	2/40/20
RPI-(8.0/10.0)FSN2E	1~2307/3002	10.0	16	2/40/30

- Outdoor units

Model	Power Source	Maximum Running Current (A)	CB(A)	ELB no. poles/A/mA
RAS-8FSNM		14.0	20	4/20/30
RAS-10FSNM	3~380-415V/50Hz	18.0	30	4/30/30
RAS-12FSNM		23.0	30	4/30/30

ELB: Earthleakage Breaker; CB: Circuit Breaker

4. Control system

This chapter presents the control system flowcharts for the Set-FREE FSNM(E) Outdoor Units series

Contents

4. Control system	29
4.1. Device control system	30
4.1.1. RAS-8~10FSNM(E) refrigerant cycle control	30
4.2. Outdoor Units PCB	32
4.2.1 DAS 8~12ESNM(E)	32

4.1. Device control system

4.1.1. RAS-8~10FSNM(E) refrigerant cycle control

Control subject	Control subject Cooling		ocess Heating pro		Defrost operation	
	Purpose	Contents	Purpose	Contents	Contents	
Inverter frequency of the compressor	Total operation capacity of the indoor unit Connection according to piping length Discharge Pre. Pd	 8Hz/I.U. HP 10 Hz/I.U.HP (setting DSW6 for piping length setting) Pd ≥ 1,0MPa 	Total operation capacity of the indoor unit Connection according to piping length Pd	1. 8Hz/I.U. HP 2. 10 Hz/I.U.HP (setting DSW6 for piping length setting) 3. Pd ≥ 1,0MPa	All compressors are operated	
Opening degree of expansion valve for the outdoor heat exchanger	Capacity control Changeover of total indoor unit capacity	Fully open (unused heat exchanger: fully close)	Discharge gas super-heat (TdSH) control	Td0 = Tc + 30 ≤ 90	Fully open	
Opening degree of expansion valve for indoor	1. For controlling temp. of discharge gas super-heat (TdSH) 2. For controlling the temperature difference between the gas pipe and the liquid pipe of the indoor heat exchanger 3. For balancing the temperature differences between the gas pipe and the liquid pipe of each indoor unit	 Tdo=Tc+30≤95 Temperature difference between the gas pipe and the liquid pipe of each indoor unit = 4 deg 	For controlling temp. difference between air outlet and air inlet of I.U For balancing the temp. difference between air outlet and air inlet of I.U	Air outlet temp air inlet temp. ≤ 24 °C	Opening degree is fixed	
Outdoor fan	Fan controlling discharge pressure (Pd)	2,5≤Pd≤2,9MPa PWM control by DC motor + constant speed fan motor	Fan controlling outdoor air temp.	Outdor air temp. PWM control by DC fan motor + constant speed fan motor	Stop	
Solenoid valve equalized pressure (SVA)	For equalizing the pressure of the inverter compressor during the stop	In case of stopping inverter comp. after operation	For controlling inner pressure of stopag comp.	In case of stopping inverter comp. after operation	_	
Solenoid valve for the oil return (SVF)	For controlling temp. oil circulation volume from the oil separator to each compressor	Turn ON in comp. operation Turn OFF in comp. stoppage	For controlling temp. oil circulation volume from the oil separator to each compresso	Turn ON in comp. operation Turn OFF in comp. stoppage	Same as cooling/ heating operation	

I.U.: Indoor Unit


Tc / Te: Condensing Temperature / Evaporating Temperature

Td: Discharge Temperature TI: Liquid Temperature Gas Temperature Tg: Cap: Temp.: Capacity

Temperature Compressor comp.:

The figure below shows the outline of the control system

Example: RAS-10FSNM(E) + Indoor unit

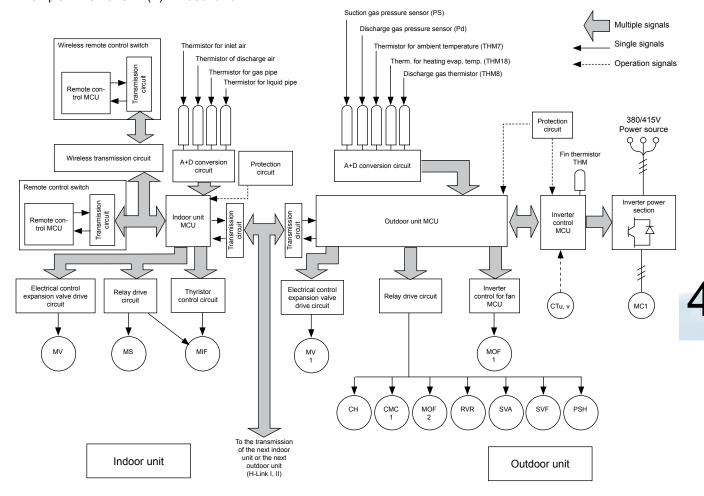

Symbol	Name
MC1	DC Motor (for Inverter Compressor)
MOF ₁	DC Motor (for Outdoor Fan)
MOF ₂ ,	AC Motor (for Outdoor Fan)
MIF	Motor (for Indoor Fan)
MS	Motor (for Auto-Louver)
MV	Electronic Expansion Valve (for Indoor Unit)
MV1	Electronic Expansion Valve (for Outdoor Unit)
CMC1	Magnetic Contactor for Compressor


Symbol	Name
SVA	Solenoid Valve
SVF	Solenoid Valve
RVR	Reversing Valve
PSH	High Pressure Switch
Ps	Suction Gas Pressure Sensor
Pd	Discharge Gas Pressure Sensor
CTu, v	Current Sensor
СН	Crankcase Heater

31

4.2. Outdoor Units PCB

4.2.1. RAS-8~12FSNM(E)

■ PCB drawing

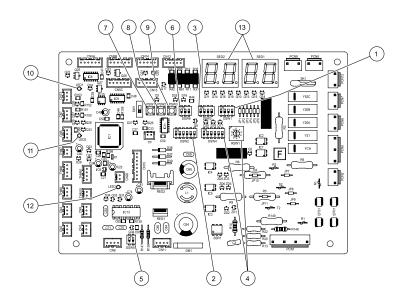

	LED INDICATION			
14	LED1 (Red)	Power Source for PCB1 Normal Condition: Activated Abnormal Condition: Deactivated		
15	LED2 (Green)	This LED2 indicates the transmission state between the PCB1 and PCB2. Normal Condition: Flickering Abnormal Condition: Activated or Deactivated		
16	LED3 (Yellow)	This LED3 indicates the transmission state between the indoor unit and outdoor unit. Normal Condition: Flickering Abnormal Condition: Activated or Deactivated		

No.	Part Name	Contents of functions	
1	DSW1	Test running for cooling or heating. The outdoor unit can be run for testing. When testing has been finished, reset the function. Forced stoppage of compressor. When performing test running or inspection, compressors can be forcedly stopped to ensure safety.	
2	DSW2	Setting of optional functions	
3	DSW3	Setting of capacity code	
4	DSW4 and RSW1	Setting of outdoor unit number	
5	DSW5	Setting of transmitting	

No.	Part Name	Contents of functions
6	DSW6	Setting of height difference
7	PSW1	Manual defrosting switch. The defrosting operation is manually available under the forced defrosting area.
8	PSW2	Checking switch push PSW2 for 3 seconds or more, to start/finish the check mode. Push PSW2, check mode function is indicated to forward.
9	PSW3	Checking switch push PSW3, check mode function is indicated to backward.
13	SEG1 SEG2	These indicate the following: "alarm", "protective safety device has tripped" or "checking items".

5. Available optional functions

Contents

5. Available optional functions	33
5.1. Outdoor units	34
5.1.1. Setting of external input and output functions	34
5.1.2. Description of external input signals	36
5.1.3. Description of external output signals	39
5.1.4. Optional functions	41



5.1. Outdoor units

5.1.1. Setting of external input and output functions

On the outdoor unit printed circuit board, there are three input terminals to receive external signals and two output terminals to send signals outwards. These signals are available by setting as shown below.

Control Function No. (SEG1)	Input	Output
1	Fixing Heating Operation Mode	Operation Signal
2	Fixing Cooling Opeation Mode	Alarm Signal
3	Demand Stoppage	Compressor ON Signal
4	Snow Sensor (Outdoor fan ON/OFF)	Defrosting Signal
5	Forced Stoppage	
6	Demand Current Control 60%	
7	Demand Current Control 70%	
8	Demand Current Control 80%	
9	Demand Current Control 100%	


Each input terminal and output terminal setting as shown below.

Input/Output Terminal Indication (SEG2)	Connector (Pin No.)	Setting Function (Control Function No.)
Input 1	CN17 (1-2)	Fixed Heating Operation Mode (1) *
Input 2	CN1 (1-2)	Fixed Cooling Operation Mode (2) *
Input 3	CN1 (2-3) CN2 (1-2)	Demand Stoppage (3) * Snow Sensor (Outdoor fan ON/OFF) (4) Forced Stoppage (5) Demand Current Control (6 to 9)
Output 1	CN16 (1-2)	Operation Signal (1) *
Output 2	CN7 (1-2) CN7 (1-3)	Alarm Signal (2) * Compressor ON Signal (3) Defrosting Signal (4)

^{*:} Setting before Shipment


1 Set DSW2-#6 of the outdoor PCB at the "ON" side while the main power to the outdoor unit is being supplied. By setting, function selection mode is available and the following appears on the 7-segment display.

(The setting should be performed during the outdoor unit stoppage. Also, set DSW1-#4 of outdoor unit PCB at the "ON" side before performing in order to prevent the malfunction of compressor.)




This display indicates that the control function No. 1 (Fixed Heating Operation Mode) is set at input 1.

2 By pressing the push-switches PSW2 and PSW3, input/output terminal indication is changed. The following shows the display changes when PSW2 and PSW3 are pushed.

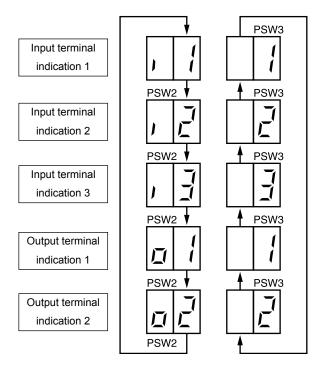

3 After the input/output terminal indication is selected, select your required control function No. by pushing PSW2 or PSW3 while PSW1 is being pushed.

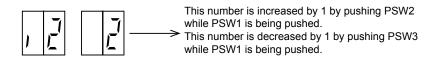

4 After selecting the function No., return No. 6 pin at the "OFF" side on the DSW2. The selected contents are memorized in the outdoor unit printed circuit board and the function selection mode is stopped. The memorized data is maintained even power source lines are disconnected. The connecting details of each function are described, and the required parts are also indicated in the table.

5



5.1.2. Description of external input signals

■ Input 1 – Fixing heating operation mode (Control function No.1),

■ Input 2 – Fixing cooling operation mode (Control function No.2)

In the case that the fixing input terminals of the operation mode on the outdoor unit PCB1 are short-circuited, the operation mode can be fixed at the cooling or heating mode.

Short-circuit between Terminals 1 and 2 of CN1. Fixed Heating Operation Mode


Short-circuit between Terminals 2 and 3 of CN1: Fixed Cooling Operation Mode

During this fixed heating (or cooling) mode, no cooling (or heating) operation is available. The indoor units under the cooling or dry operation (or heating operation) will be changed to the Thermo-OFF condition during this mode, and stoppage code No. "20" is given.

- Setting Example

Fixing Heating Operation at Input 1 (between 1 and 2 pins of CN17)

Fixing Cooling Operation at Input 2 (between 3 and 2 pins of CN1)

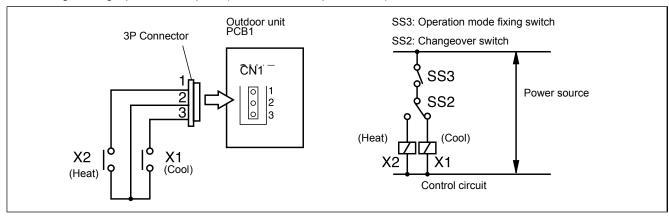

Wiring diagram example of fixing operation mode


■ Input 3 – Demand stoppage (Control function No.3)

In the case that the demand input terminals on the outdoor unit PCB1 are short-circuited, compressor(s) is stopped. (In this case, the indoor unit(s) is put under Thermo-OFF condition. Cooling operation: Air-flow setting, Heating operation: Lo setting)

The stoppage code No. "10" is given. By disconnecting the demand switch contact, restarting is available.

- Setting Example

Demand Stoppage at Input 3 (between 1 and 2 pins of CN2)

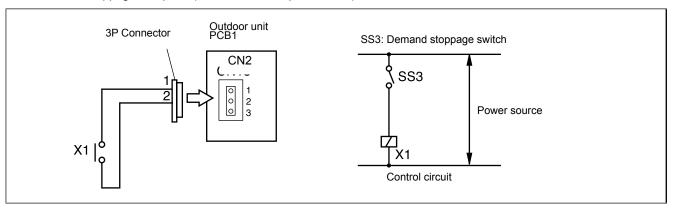


Wiring diagram example of demand stoppage

■ Input 3 – Snow sensor (Control function No.4)

In the case that the input terminals of the snow sensor on the outdoor unit PCB1 are short-circuited during compressor stoppage, all the outdoor fan motors are operated at the full speed. However, if the compressor is called for compressor operation, the fan operation is changed to the normal operation. If the input terminal is opened, the fan(s) is stopped. This function protects the outdoor units from a condition covered with snow.

- Setting Example

Snow Sensor at Input 3 (between 1 and 2 pins of CN2)

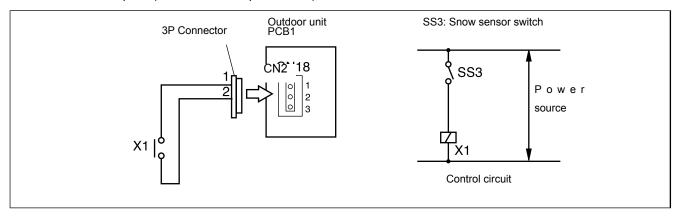


Wiring diagram example of snow sensor

■ Input 3 - Forced stoppage (Control function No.5)

The compressor is stopped and the indoor fan motor is stopped when the forced stoppage input terminals on the outdoor unit PCB1 is short-circuited during running. However, the remote control switch display remains at the same mode with the stoppage code No. "10".

In this case, if the input terminals are opened, operation is resumed.

Setting Example Forced Stoppage at Input 3 (between 1 and 2 pins of CN2)

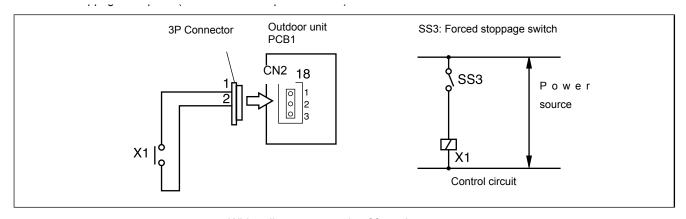

Wiring diagram example of forced stoppage




■ Input 3 – Demand current control (Control function No.6 to 9)

In the case that the demand input terminals on the outdoor unit PCB1 are short-circuited, the compressor frequency is controlled that the maximum limit of the outdoor running current is set 100%, 80%, 70% and 60%.

(The maximum limit of the outdoor unit running current can be selected according to the item "Setting of external input and output functions".)

If the outdoor unit running current decreases beyond the maximum limit, the indoor unit is put under thermo-OFF condition. The stoppage code No. "10" is given. When the input terminal is opened during the demand current control, its control is reset.

Setting Example Demand Current Control at Input 3 (between 1 and 2 pins of CN2)

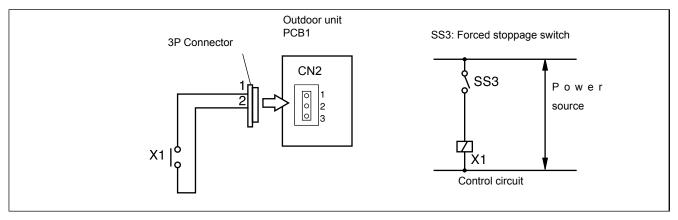

Wiring diagram example of demand current control

Table 5.1 Specifications of required main parts

Parts		Specifications	Remarks
Auxiliary Relay (X1, X2)		Mini-Power Relay, MY1F (or 2F) made by OMRON	220V/240V
Changeover Switch (SS2, SS3)		Manual Switch	220V/240V
3 Pin Connector Cord		PCC-1A	Five Cords with
3 Fill Collinector Cold		(Connected to JST Connector, XARP-3)	Connectors as One Set
Cord	Low Volt.	0.3mm ²	lower than 24V
(Inside of Unit) 220/240V		0.5 to 0.75mm ²	
Cord Low Volt.		0.5 to 0.75mm ²	lower than 24V
(Outside of Unit) 220/240V		2mm²	

1

NOTES

- 1. Make the wire to the terminals as short as possible.
- 2. Do not run the wires along high voltage cable. (crossing is applicable.)

If necessary to run wires along high voltage cable, insert the low voltage cable(s) into metal tube and ground it at one end. If sealed wires are used at the low voltage wire side, ground it at one end of shield wires. The maximum length should be 70m.

5.1.3. Description of external output signals

The following signals can be picked up from the outdoor PCB.


Refer to the table 5.2 for the required main parts.

■ Output 1 – Operating signal (Control function No.1)

Auxiliary relay contacting (RYa) is closed during the operation. Operating signal will be sent when the indoor units are operating. (Even when one (1) indoor unit is operating, the signal will be sent.) This function can be used for circulator or humidifier operation.

Setting Example

Operation Signal at Output 1 (between 1 and 2 pins of CN7)

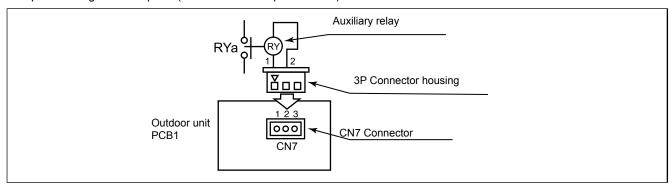


Wiring diagram example of operation signal

■ Output 2 – Alarm signal (Control function No.2)

Auxiliary relay contacting (RYa) is closed when the alarm occurs. Alarm signal will be sent when the alarm occurs from the indoor units. (The signal will be sent even when the alarm occurs from one (1) indoor unit.)

- Setting Example

Alarm Signal at Output 2 (between 1 and 3 pins of CN7)

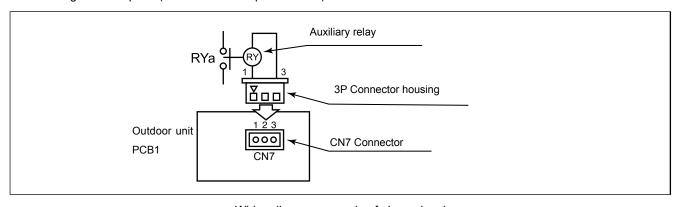


Wiring diagram example of alarm signal



■ Output 2 – Compressor ON signal (Control function No.3)

Auxiliary relay contacting (RYa) is closed during the compressor operation.

Setting Example
 Compressor ON Signal at Output 2 (between 1 and 3 pins of CN7)

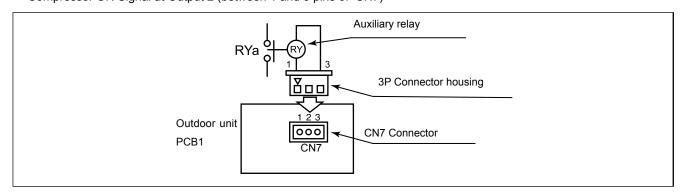


Wiring diagram example of compressor ON signal

■ Output 2 – Defrosting signal (Control function No.4)

Auxiliary relay contacting (RYa) is closed during the defrosting.

Setting Example
 Defrosting Stoppage at Output 2 (between 1 and 3 pins of CN7)

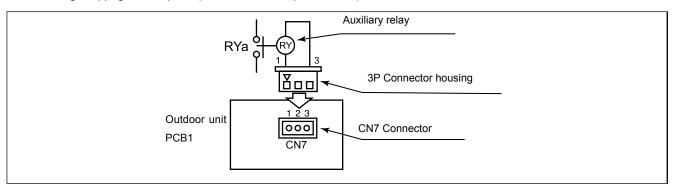


Wiring diagram example of defrosting signal

Table 5.2 Specifications of required main parts

Parts	Specifications
Auxiliary Relay *	High-Power Relay, LY2F DC12V made by OMRON

- * Do not use the relay with diode built-in.
- * Refer to the table 5.1 for the connector parts.

5.1.4. Optional functions

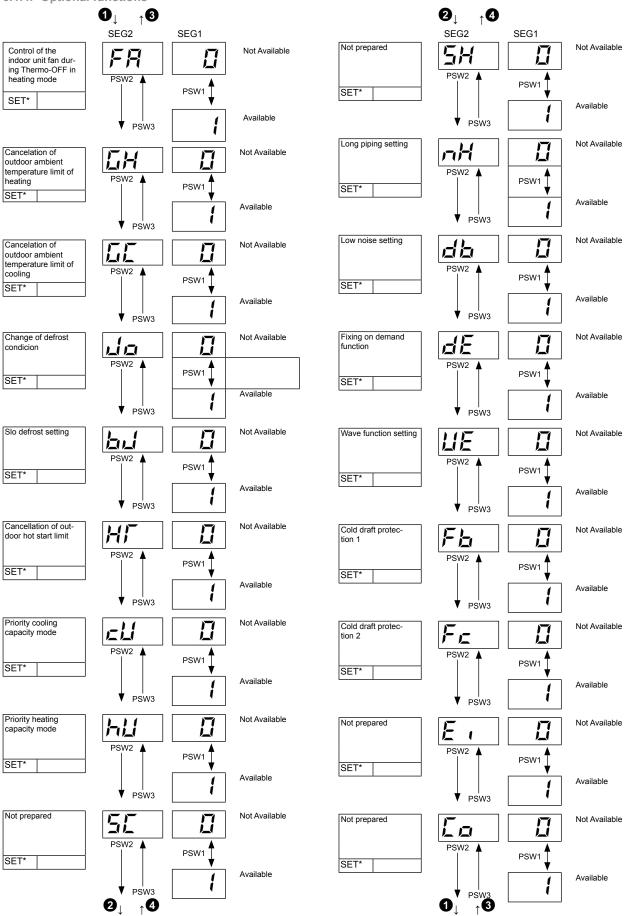




Circulator function at heating thermo-OFF

Press "RSW1" and select the setting condition "1" at the circulator function at heating thermo-OFF " FR".

In case that the fan speed is changed to "LOW" at heating Thermo-OFF, there is a case that the room air temperature is too high at heating Thermo-OFF.

In this case, the circulator function at heating thermo-OFF is recommended, and its function explains below.

The indoor fan operates for 2 minutes and stops for 6 minutes as a cycle when the activation conditions are satisfied.

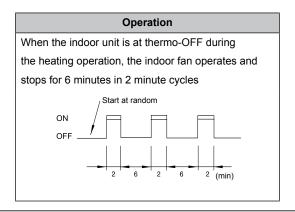



NOTE

When the indoor fan is stopped by another control, it is not available to operate indoor fans.


■ Night-Shift (Low noise)

Press "PSW1" and select the setting condition "1" at the night shift (low noise) "7 ". Then, this function can be set.

The outdoor fan operation is controlled by fan controller as shown below.

The night shift operation shall be applied in case that the cooling capacity has the margin to be allowed for the capacity decrease and the low sound operation is required especially in the nighttime.

Outdoor Fan

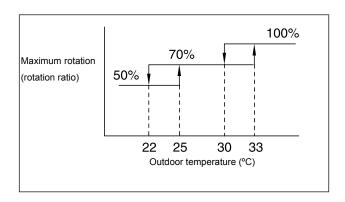



NOTE

The maximum rotation is always 100% (rotation ratio) for the standard unit. (No limitation of the outdoor temperature)

■ Frequency range (Cooling operation)

	Outdoor Unit Capacity (HP)	Minimum Frequency (Hz)	Maximum Frequency (Hz)	Conditions
	8	15	68	
When night shift is not set	10		85	Except for the conditions on the right
111 0	12		100	


	Outdoor Unit Capacity (HP)	Minimum Frequency (Hz)	Maximum Frequency (Hz)	Conditions
	8	15	60	
When night shift is set	10		60	(1) ni=1 (2) Outdoor fan: Below 70%
	12		60	20.011 7070



■ Cancellation of outdoor ambient temperature limit of heating

Press "PSW1" and select the setting condition "1" at the cancellation of outdoor ambient temp. limit of heating " $\frac{L}{L}H$ ". Then, this function can be set.

The heating operation is continued under a high outdoor temperature.

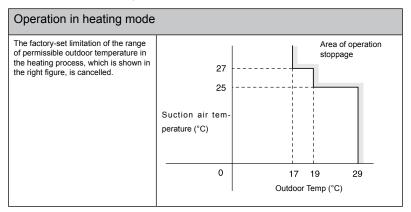




Note

The operation may be OFF due to high outdoor temperature protection control, since protection control is not cancelled.

■ Cancellation of outdoor ambient temperature limit of cooling

Press "PSW1" and select the setting condition "1" at the cancellation of outdoor ambient temp. limit of cooling " $\mathcal{L}\mathcal{L}$ ". Then, this function can be set.

The cooling operation is continued under a low temperature.

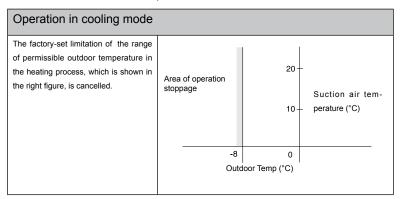




Note

The operation may be OFF due to low outdoor temperature protection control since protection control is not cancelled.

■ Change of defrost condition

Press "PSW1" and select the setting condition "1" at the change of defrost condition " 🔟 🗷 ".

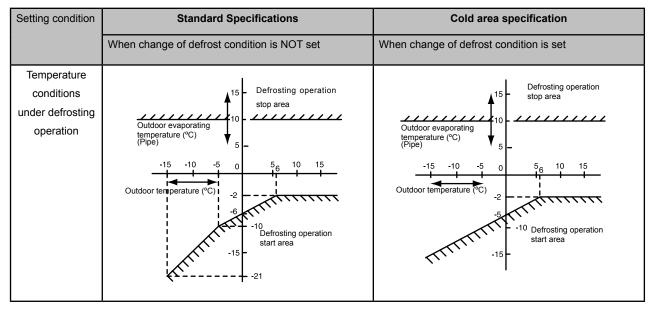

■ SLo defrost setting

Indoor fan operation is stopped during the defrost operation. However, this function can be operated the indoor fan at low speed during the defrosting operation.

5

Long piping setting

Press "PSW1" and select the setting condition "1" at the long piping setting "¬¬¬¬".

If cooling capacity or heating capacity is not enough under the long-distance piping condition, this function can be set the target compressor frequency higher than normal target value.

Low noise setting

Press "PSW1" and select the setting condition "1", so the low noise setting " to can be set.

The outdoor fan maximum rotation is set lower than normal setting regardless of outdoor temperature.

However, continuous operation can not be operated under the condition below.

- a) Outdoor temperature is over 40 °C.
- b) Total combination horsepower is over 100%.



Fixing of demand function

Press "PSW1" and select the setting condition "1", so that the fixing of demand function "\(\mu \) E" can be set.

However, it is not necessary to short-circuit the demand input terminals on the outdoor unit PCB. (Refer to the item "Input 3 – Demand Current Control")


The table below is the limit of the running current for this function.

Control Function No. *	Demand Running Current Control
1 to 5	100%
6	60%
7	70%
8	80%
9	100%

This function can be activated when demand function is selected at one of the input terminal indications $i \in \mathcal{A}$, $i \in \mathcal{A}$ and $i \in \mathcal{A}$.

In case that multiple demand functions are set at the input terminal indications il, $i\vec{z}$ and $i\vec{z}$, the demand running current is selected as below.

* Demand Control
Adopting self-demand function which drastically decreases power consumption has largely improved energy-saving.

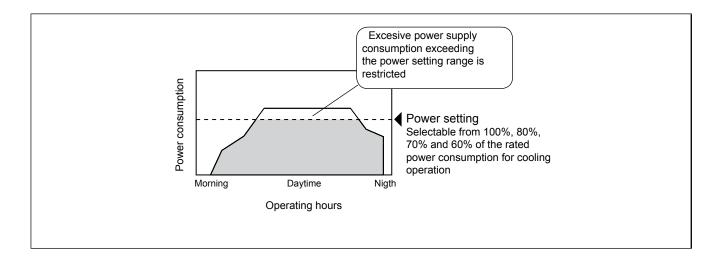


■ Wave function setting

Press "PSW1" and select the setting condition "1", so that the wave function setting "LE".

While this function is activated, the maximum limit of running current is changed from 60% to 100% as shown in the figure.

* Wave function cannot be available when the setting condition "1" at the fixing of demand function "dE" is selected and the demand current control from the external input signal is set.

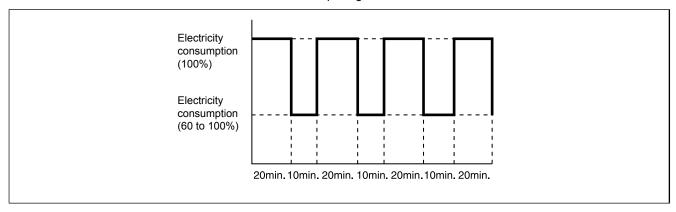

* Wave function can be activated when demand function is selected at one of the input terminal indications if, in and if.

The minimum limit of running current control is according to the set value of the demand function.

If demand function is not set at the input terminal indication, this function can not be activated.

Cold draft protection 1

Press PSW1 and select the setting condition "1" at the cold draft protection 1 "Fb", so the cold draft protection can be set. When the minimum Indoor unit discharge air temperature falls down to 12 °C and below at cooling operation, outdoor fan stops and compressor frequency forcibly decreases to prevent a drop in discharge air temperature.

5

■ Cold draft protection 2

Press PSW1 and select the setting condition "1" at the cold draft protection 2 " F_c ", so this function can be set. When Indoor unit minimum discharge air temperature falls down to 10 °C and below at cooling operation, the compressor stops. In this case, stoppage code number "28" is given.



6. Test run

Contents

6.	Test run	49
6.1.	Checking procedure before the test run	50
6.2.	Test run procedure from the outdoor unit side	52
6.3.	Check list	53
6 4	Judgement system for refrigerant amount	56

6.1. Checking procedure before the test run

Test run should be performed according to the Table 6.2. And use the Table 6.1 for recording test run .



WARNING

- Do not operate the system until all the check points have been cleared.
 - A) Check to ensure that the refrigerant piping and transmission between outdoor unit and indoor units are connected to the same refrigerant cycle. If not, it will cause an abnormal operation and a serious accident .
 - B) Check to ensure that the electrical resistance is more than 1 megohm, by measuring the resistance between ground and the terminal of the electrical parts. If not, do not operate the system until the electrical leakage is found and repaired.
 - C) Check to ensure that the stop valves of the outdoor unit are fully opened, and then start the system .
 - D) Check to ensure that the switch on the main power source has been ON for more than 12 hours, to warm the compressor oil by the oil heater.
 - E) Check that the refrigerant piping and the electrical wiring conform to the same system, and check that the dip switch setting of the refrigerant cycle No. (DSW1 & RSW1 [O.U.], DSW5 & RSW2 [I.U.]) and the unit number (RSW) for the indoor units apply to the system.
 - Confirm that the dip switch setting on the printed circuit board of the indoor units and the outdoor units are correct .
 - Especially, pay attention to the setting of lift between indoor units and outdoor unit, the refrigerant No. and the end terminal resistance. Refer to the chapter "6. Electrical Wiring".
 - F) Check to ensure that the electrical resistance is more than 1 megohm, by measuring the resistance between ground and the terminal of the electrical parts. If not, do not operate the system until the electrical leakage is found and repaired. Do not impress the voltage on the terminals for transmission 1 and 2.
 - G) Check to ensure that each wire, L1, L2, L3 and N (R, S and T) is correctly connected at the power source .
 - If incorrectly connected, the unit will not operate and the remote control switch will indicate the alarm code "05". In this case, check and change the phase of the power source according to the attached seat on the reverse side of the service cover.
 - H) Check to ensure that switch on the main power source has been ON for more than 12 hours, to warm the compressor oil by the oil heater.
- FSN2 series outdoor units does not operate within 4 hours after power supply (Stoppage Code d1-22). In case of operating within 4 hours, release the protection control as follows:
 - 1. Supply power to the outdoor unit and indoor units .
 - 2. Wait for 30 seconds.
 - 3. Push PSW1 on PCB more than 3 seconds.
- Pay attention to the following items while the system is running.
 - A) Do not touch any of the parts by hand at the discharge gas side, since the compressor chamber and the pipes at the discharge side are heated higher than 90°C.
 - B) DO NOT PUSH THE BUTTON OF THE MAGNETIC SWITCH(ES). It will cause a serious accident .
- Do not touch any electrical components for at least 3 minutes after turning OFF the main switch.
- Check that the refrigerant piping setting and electrical wiring setting are for the same system, by operating the indoor unit one by





A CAUTION

■ Caution for Insulation Resistance

If total unit insulation resistance is lower than 1 megohm, the compressor insulation resistance may be low due to retained refrigerant in the compressor. This may occur if the unit has not been used for long periods .

- 1. Disconnect the cables to the compressor and measure the insulation resistance of the compressor itself. If the resistance value is over 1 megohm, then insulation failure has occurred of other electrical parts .
- 2. If the insulation resistance is less than 1 megohm, disconnect the compressor cable from the inverter PCB. Then, turn on the main power to apply current to the crankcase heater .

After applying current for more than 3 hours, measure insulation resistance again. (Depending on the air conditions, pipe length or refrigerant conditions, it may be necessary to apply the current for a longer period of time.) Check the insulation resistance and reconnect the compressor.

If the leakage breaker is activated, check the recommended size shown in Table 6.1.



- 1. Confirm that field-supplied electrical components (main switch fuse, fuse-free breaker, earth leakage breakers, wires, conduit connectors and wire terminals) have been properly selected according to the electrical data given in this Technical Catalog of the unit and ensure that the components comply with national and local codes .
- 2. Use shielded wires (≥0.75mm2) for field wiring to protect electrically noise obstacle. (Total length of shielded wire shall be less then 1000m, and size of shielded wire shall comply with local codes.)
- 3. Check to ensure that the terminal for power source wiring (terminals "L1" to "L1" and "N" to "N" of each terminal board: AC 380-415V, terminals "R" to "L1" and "S" to "L2" of each terminal board: AC 220V).
 - If not, some component will be damaged.

6.2. Test run procedure from the outdoor unit side

The test run procedure from the outdoor unit side is shown below. You can set this DIP switch while the power source is ON **Setting of Dip Switch (before shipment)**

DSW1				
	1	Test run		
		COOL/HEAT setting		
		(ON: Heating operation)		
ION		(OFF: Cooling operation)		
	3	OFF (mixed)		
1234	4	Manual compressor OFF		



A Warning:

- Do not touch any other electrical components while you are setting the switches on the PCB.
- Do not attach or detach the service access panel when the power source for the outdoor unit is ON and the outdoor unit is operating.
- Set all the DIP switches of DSW1 to OFF after completing the test run.

	Din switch sating	Operation	Domarko		
	Dip switch seting	Operation	Remarks		
Test run	1. Setting operation mode Cooling: Set DSW1-2 OFF ON 1 2 3 4 Heating: SET DSW1-2 ON ON 1 2 3 4 Starting the test run: Set DSW1-1 at ON. The operation starts after 20 s. In case of heating process, leave DSW1-2 at ON ON 1 2 3 4	 The indoor unit automatically starts to operate when the test run of the outdoor unit is set. You can perform the ON/OFF operation from the remote control switch or the DSW1-1 of the outdoor unit. Continuous operation during 2 hours is performed without the Thermo-OFF condition. 	 Make sure that the indoor units start to operate in accord with the test run of the outdoor unit. If you start the test run from the outdoor unit and you stop the test run from the remote control switch, the test run function of the remote control switch is cancelled. However, the test run function of the outdoor unit is not cancelled. Check to ensure that the DSW1-1 of the outdoor unit PCB is turned OFF In case that more than one indoor units are connected with one remote control switch, perform the test run operation at each refrigerant system one by one. Then, make sure to turn the power source OFF for the indoor units at other refrigerant system not to operate test run. 		
Manual compressor OFF	Setting the compressor manually OFF: Set DSW1-4 at ON ON 1 2 3 4 ON: Set DSW1-4 at OFF — Manual defrost operation	 When DSW1-4 is ON during the compressor operation, the compressor stops operating immediately and the indoor unit is under the Thermo-OFF condition. When DSW1-4 is OFF, the compressor starts to operate after the cancellation of the 3-minute guard. The defrost operation is 	Do not turn ON and OFF the compressor frequently Do not repeat the defrect operation frequently.		
manual derrost	Manual defrost operation starts. Press the PSW1 for more than three seconds during the heating process. The defrost operation starts after two minutes. This function is available once the heating process has been running for five minutes. Manual defrost operation finishes. The defrost operation automatically finishes and the heating process starts.	 The defrost operation is available regardless of the frosting conditions and the total time of the heating process. The defrost operation is not performed when the temperature of the outdoor heat exchanger is higher than 10°C, the high pressure is higher than 2.0 Mpa or under the Thermo-OFF condition. 	- Do not repeat the defrost operation frequently. - When the PSW1 accepts the manual defrost operation, the remaining time before starting the defrost operation is displayed at the 7-segment display on the PCB.		

6.3. Check list

■ Check list on test run

Client:		Installer:		Date:				
Outdoor unit model:		Outdoor unit serial No.:		Checker:				
Indoor unit model:								
Indoor unit serial No.								

Piping lenght [m]	
Additional refrigerant charge [kg]	

1. General

No.	Check item	Result
1	Was the DIP switch DSW6 for the piping length in the outdoor unit set?	
2	Are the power supply wires of the transmission cable making contacts on the piping?	
3	Was a ground wire connected?	
4	Is there any short circuit?	
5	Is there any voltage malfunction among the different phases (L1-L2, L2-L3, L3-L1, L1-N)?	

2. Refrigerant cycle

a. Cooling/heating process

No.	No. Check item	
1	Operate all the indoor units. (TEST RUN mode).	
2	Operate all the indoor units at the "HIGH" speed.	

b. Sampling data (cooling/heating process: if the indoor temperature is between 21°C and 30°C)

No.	Check item	Result
1	After operating for more than 20 minutes.	
2	Check Pd. and Td. Is TdSH 15 to 45 degrees?	
3	Is Ps 0.2 to 1.1?	
4	Is Pd 1.0 to 3.5? (If the outdoor temperature is high, the Pd. becomes high.)	

3. Check item after sampling data

a. Cooling process (if the outdoor temperature is higher than 15 $^{\circ}\text{C})$

No.	Check item	Standard	Causes	Result
1	Is <u>H1</u> (compressor frequency) abnormally low or high? (It is applicable when the inlet air temperature is three degrees higher than the setting temperature).	Running horsepower of the indoor units X 8Hz.	Low: excessive refrigerant; High: insufficient refrigerant; DSW for capacity of indoor units: Incorrect setting.	
2	Is the fan actually running when Fo (airflow rate of fan) is other than "0"?	-	Failure of the fan motor; Failure of the PCB1; Failure of the condenser.	
3	Is the total of <u>iE</u> (indoor expansion valves opening) abnormally low or high?	Total % of iE: horsepower of the outdoor unit X (0.7 to 1.5).	Low: excessive refrigerant; High: insufficient refrigerant, excessive pipe resistance.	
4	Is <u>TL</u> (liquid pipe temperature of the heat exchanger of the indoor unit) lower than <u>Ti</u> (air inlet temperature of the indoor unit)?	It is normal when TL-Ti < -5 deg.	Failure of the TL thermistor; Fully closed expansion valve; Short circuit.	
5	Is <u>TG</u> (gas pipe temperature of the heat exchanger of the indoor unit) lower than Ti (air inlet temperature of the indoor unit.)?	It is normal when TG-Ti < -5 deg.	Failure of the TG thermistor; Fully closed expansion valve or slightly open expansion valve; Short circuit.	
6	Is there any excessive difference among indoor units at SH(<u>TG-TL</u>) of the heat exchanger of the indoor units? (It is applicable when the inlet air temperature is three degrees higher than the setting temperature.)	It is normal if the difference among units is within 3 - 7 deg. lower than other units.	Failure of the TL/TG thermistor; Fully open expansion valve, slightly open expansion valve or fully closed expansion valve.	
7	Is there any excessive different among indoor units at SH (<u>TG-TL</u>) of the heat exchanger of the indoor units and is iE lower than [7]? (It is applicable when intake air temp. is 3 deg. higher than setting temp.	It is normal if SH is within 3 deg. lower than other units.	Expansion valve locked in fully open position; The refrigerant cycle number does not match; Mismatched between wiring and piping.	
8	Is there any indoor unit with SH (TG-TL) excessively lower than the value of other units, under the condition of IE (indoor unit expansion valve) \[\ \frac{100}{?} \]	It is normal if SH is within 3 deg. higher than other units.	Expansion valve locked in slightly open position or closed expansion valve; The refrigerant cycle number does not match; Mismatched between wiring and piping.	
9	Is the difference between the discharge air temperature and the inlet air temperature more than 7 deg.? * The temperature difference between I.U. means the following: b3 (Discharge Air Temp.) - b2 (Intake Air Temp.) indicated on the remote control switch by check mode.	_	_	



b. Heating process (if the outdoor temperature is higher than 0 °C)

No.	Check item	Standard	Causes	Result
1	Is oE (outdoor unit expansion valves opening) abnormally low or high when TdSH is 15 to 45 degrees?	Total of oE: total frequency of compressor x 0.2 to 0.6	Low: excessive refrigerant; High: insufficient refrigerant.	
2	Is Pd [1.6] to [3.5]? (Pd is high when the indoor temperature is high).		Low: leakage of the SVA (solenoid valve); High: excessive gas pipe resistance.	
3	Is H1 (compressor frequency) abnormally low or high? (The lower the room temperature and the outdoor temperature, the higher the above value).		Low: excessive refrigerant; High: insufficient refrigerant, excessive pipe resistance.	
4	Is Ps [0.2] to [1.1]? (Only under the condition that the electrical expansion valve (SVA) is OFF).		Low: short circuit of the indoor unit; Low/High: failure of the following components: outdoor unit fan motor or outdoor ambient thermistor.	
5	Is the temperature difference among the indoor units* more than 10 degrees when iE (indoor unit expansion valve) is "100"? *The temperature difference among the indoor units means the following: b3 (Discharge Gas Temperature) - b2 (air inlet temperature) that is displayed on the remote control switch by means of the check mode. However, this is applicable only when b2 (Air Inlet Temperature) - b1 (setting temperature) is higher than three degrees.		Failure of components such as the PCB, the wiring, the coil, the valve; Excessive pipe resistance; Failure of the thermistor for the discharge air temperature.	

i NOTE:

1. The symbol with an underline indicates a check item. The mark ∫ indicates the checking data.

35

15

20

Indoor air temp. (°C)

30




6.4. Judgement system for refrigerant amount

You can check the excess or the deficiency of the refrigerant by means of the data that is provided by the check mode of the 7-segment display. The following checking procedure is useful during the test run and the maintenance. Outdoor air temp. (°C)



- 1. Operate all the indoor units at the TEST RUN mode and operate all the indoor units at the HIGH speed.
- 2. Check the following items in order to make sure that the refrigerant cycle is stable.



- 2) Td·SH is 25 to 45 °C in cooling or 15 to 45 °C in heating
- 3) Ps is 0.4 to 1.1 MPa in cooling or 0.2 to 1.1 MPa in heating
- 4) Pd is 2.0 to 3.5 MPa in cooling or 1.6 to 3.5 MPa in heating

Td SH: Discharge gas temperature superheat

Ps: Suction pressure, Pd: Discharge pressure

- 3. Collect the checking data that is provided by the check mode of the 7-segment display.
- 4. Perform the checking according to the following procedure.

Judge according to the following target value:

Cooling	Refrigerant flow charge is controlled by indoor unit expansion valve
Heating	Refrigerant flow charge is controlled by outdoor unit expansion valve

Applicable air temperatures for the checking procedure:

Cooling	Room temperature: 20°C~30°C (DB)
Cooling	Outdoor temperature: 15°C (DB) or more
Llooting	Room temperature: 20°C~30°C (DB)
Heating	Outdoor temperature: 0°C~15°C (DB)

Checking procedures for cooling

Process

1. Convert iE (indoor unit expansion valve opening) with the following table:

Indoor Unit HP	Conversion
0.8 to 6 HP	iE
8 and 10 HP	iE × 2.0

- 2. Sum up the converted values of iE.
- 3. Calculate the total frequency (=H1(Inverter frequency))

Judgement

- If total of converted iE/Total frequency < 0.7 = Insufficient refrigerant
- If total of converted <u>iE</u>/Total frequency > 1.6 = Excessive refrigerant

Checking procedures for heating


♦ Process

- 1. Detect oE (total outdoor unit expansion valve opening)
- 2. Calculate the total frequency (=H1(Inverter frequency)).

Judgement

- If total oE/Total frequency < 0.8 x Target value = Insufficient refrigerant
- If total oE/Total frequency > 1.2 x Target value = Excessive refrigerant

Refer to the following table to use the target value in heating.

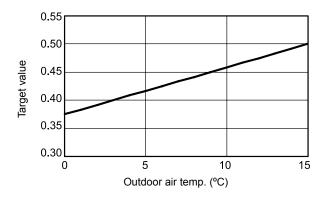

♦ Examples

♦ Cooling process

	Indoor units				
	2HP	2HP	2HP	2HP	2HP
iE (%) (from the checking data)	32	38	30	20	18
Calculate value of iE	32 (Hold)	38 (Hold)	30 (Hold)	20 (Hold)	18 (Hold)
Total of <u>iE</u> (a)	138 (32+38+30+20+18)				
Total frequency (b) 90					
Judgement	OK: $0.7 \le (a) / (b) \le 1.6$				

Heating process

	Indoor units				Outdoor unit	
	2HP	2HP	2HP	2HP	2HP	10HP
<u>Ti</u> (indoor suction temperature)	26	27	23	23	25	_
To (outdoor temperature) (°C)						7
Total of oE (a)	<u>f oE</u> (a)			42		
Total of frequency (b)	100					
Judgement	OK: (a) / (b) ≈± 20% of target value					



7. Troubleshooting

Contents

7. Tro	ubleshooting	59
7.1. Ir	nitial troubleshooting	60
7.1.1	. Emergency operation	6
7.1.2	. Failure of the power supply to the indoor unit and the remote control switch	62
7.1.3	. Abnormal transmission between the remote control switch and the indoor unit	63
7.1.4	. Abnormal operation of the devices	64
	roubleshooting procedure	72
7.2.1	. Alarm code indication of remote control switch	72
7.2.2	. Troubleshooting by alarm code	74
7.2.3	. Troubleshooting in check mode	115
7.2.4	. Troubleshooting by means of the 7 segment display	12′
7.2.5	. Running current of the compressor	127
7.2.6	. Protection control code on the 7-segment display	129
7.2.7	. Activating condition of the protection control code	130

7.1. Initial troubleshooting

Checking by means of the 7-segment display

■ Simple checking procedure by means of the 7-segment display

- 1. Turn on all the indoor units which are connected to the outdoor unit.
- 2. Turn on the outdoor unit
- 3. Auto-addressing starts. (Outdoor unit printed circuit board PCB 1)

During the auto-addressing, you can check the following items by means of the 7-segment display of the outdoor unit.

- Disconnection of the power supply to the Indoor Unit.
- Duplication of the Indoor Unit number.

Normal case:

The 7-segment display of the outdoor unit is not indicated.

Abnormal case:

If there is something wrong, the 7-segment display of the outdoor unit displays the following indications:

Cause	Indication	Remarks
The indoor units are not supplied with power.	Π∃	continues to flash after 30 seconds.
b. Disconnection of the operating line between the outdoor units and the indoor units.	E	continues to flash after 30 seconds.
c. Duplicated settings of the indoor unit number on the rotary switch RSW (Refer to the section "Troubleshooting by means of the Alarm Code" for the description of the alarm code "35").		



7.1.1. Emergency operation

Method of collecting refrigerant (In case that compressor does not operate)

Perform only when collecting refrigerant of outdoor unit is required.

(Perform the replacing compressor and oil return circuit if necessary.)

by the collector. Description of the collector of the pressure sides check joint, so that the low and high pressure sides check joint, so that the low pressure side of the refrigerant cycle will be the atmosphere pressure. Disconnect the charge hose at charge port of return oil circuit. Perform replacing comp., return oil circuit and electrical parts.	Process No.	Procedure	Remarks
Description of the component of the co	1	Turn OFF the main switch of O.U.	
Collecting refrigerant in O.U.) Collect the refrigerant from check joint at high and low pressure sides using the collector. Remove charge hose at the low and high pressure sides check joint, so that the low pressure side of the refrigerant cycle will be the atmosphere pressure. Disconnect the charge hose at charge port of return oil circuit. Remove mental parts. Perform replacing comp., return oil circuit and electrical parts. With the electrical box mounted, check the wrings by contacting (except the power line for comp.) For the power line for comp., insulate the wiring terminal with vinyl tape. This process is before removing and mounting electrical box. Turn ON the main switch of O.U. Set DSW4.#4 to ON side (O.U. PCB1). Turn OFF the main switch of O.U. Set DSW1.#4, back to the original setting. Check that the power line for comp, and wiring are connected correctly. Open the liquid and gas stop valve completely and set DSW4.#1 to ON side (O.U. PCB1). Then recharge it from the liquid stop valve check joint during cooling operation.	2	,	* Not the check joint of liquid/gas stop valves.
- Collect the refrigerant from check joint at high and low pressure sides using the collector. Remove charge hose at the low and high pressure sides check joint, so that the low pressure side of the refrigerant cycle will be the atmosphere pressure. Disconnect the charge hose at charge port of return oil circuit. Perform replacing comp., return oil circuit and electrical parts. With the electrical box mounted, check the wrings by contacting (except the power line for comp.) For the power line for comp., insulate the wiring terminal with vinyl tape. Turn ON the main switch of O.U. Set DSW4-#4 to ON side (O.U. PCB1). Turn OFF the main switch of O.U. Set DSW1-#4, back to the original setting. Check that the power line for comp. and wiring are connected correctly. Refer to Process No. 9. Set DSW4-#1 to ON side (O.U. PCB1). Refer to Process No. 9. The remained quantity: Open the liquid and gas stop valve completely and set DSW4-#1 to ON side (O.U. PCB1). The recharge it from the liquid stop valve check joint during cooling operation.	3	Close the liquid and gas stop valve completely.	To improve the performance of vacuuming.
check joint, so that the low pressure side of the refrigerant cycle will be the atmosphere pressure. Disconnect the charge hose at charge port of return oil circuit. Perform replacing comp., return oil circuit and electrical parts. With the electrical box mounted, check the wrings by contacting (except the power line for comp.) For the power line for comp., insulate the wiring terminal with vinyl tape. Turn ON the main switch of O.U. Set DSW4-#4 to ON side (O.U. PCB1). Turn OFF the main switch of O.U. Set DSW1-#4, back to the original setting. Check that the power line for comp. and wiring are connected correctly. Refer to Process No. 9.	4	Collect the refrigerant from check joint at high and low	strictly forbidden. Make sure that the refrigerant is collected by the collector.
parts. With the electrical box mounted, check the wrings by contacting (except the power line for comp.) For the power line for comp., insulate the wiring terminal with vinyl tape. Turn ON the main switch of O.U. Set DSW4-#4 to ON side (O.U. PCB1). Perform the vacuuming from the check joint at low and high pressure side. Turn OFF the main switch of O.U. Set DSW1-#4, back to the original setting. Check that the power line for comp. and wiring are connected correctly. Recharge the collected refrigerant (Process No.4) from the check joint at high pressure side. For the remained quantity: Open the liquid and gas stop valve completely and set DSW4-#1 to ON side (O.U. PCB1). Then recharge it from the liquid stop valve check joint during cooling operation.	5	check joint, so that the low pressure side of the refrigerant cycle will be the atmosphere pressure. Disconnect the	pressure side after collecting the refrigerant. – Make sure that the refrigerant cycle is the atmosphere pressure. Otherwise, problems such as the blowing of gas and the suction of the cutting material may occur when
contacting (except the power line for comp.) For the power line for comp., insulate the wiring terminal with vinyl tape. 8 Turn ON the main switch of O.U. 9 Set DSW4-#4 to ON side (O.U. PCB1). 10 Perform the vacuuming from the check joint at low and high pressure side. 11 Turn OFF the main switch of O.U. 12 Set DSW1-#4, back to the original setting. 13 Check that the power line for comp. and wiring are connected correctly. 14 Recharge the collected refrigerant (Process No.4) from the check joint at high pressure side. For the remained quantity: Open the liquid and gas stop valve completely and set DSW4-#1 to ON side (O.U. PCB1). Then recharge it from the liquid stop valve check joint during cooling operation.	6		Removing electrical box may be required.
9 Set DSW4-#4 to ON side (O.U. PCB1). 10 Perform the vacuuming from the check joint at low and high pressure side. 11 Turn OFF the main switch of O.U. 12 Set DSW1-#4, back to the original setting. Refer to Process No. 9. 13 Check that the power line for comp. and wiring are connected correctly. 14 Recharge the collected refrigerant (Process No.4) from the check joint at high pressure side. For the remained quantity: Open the liquid and gas stop valve completely and set DSW4-#1 to ON side (O.U. PCB1). Then recharge it from the liquid stop valve check joint during cooling operation.	7	contacting (except the power line for comp.) For the power line for comp., insulate the wiring terminal	
10 Perform the vacuuming from the check joint at low and high pressure side. 11 Turn OFF the main switch of O.U. 12 Set DSW1-#4, back to the original setting. Refer to Process No. 9. 13 Check that the power line for comp. and wiring are connected correctly. 14 Recharge the collected refrigerant (Process No.4) from the check joint at high pressure side. For the remained quantity: Open the liquid and gas stop valve completely and set DSW4-#1 to ON side (O.U. PCB1). Then recharge it from the liquid stop valve check joint during cooling operation.	8	Turn ON the main switch of O.U.	This process is before removing and mounting electrical box.
pressure side. 11 Turn OFF the main switch of O.U. 12 Set DSW1-#4, back to the original setting. Refer to Process No. 9. 13 Check that the power line for comp. and wiring are connected correctly. 14 Recharge the collected refrigerant (Process No.4) from the check joint at high pressure side. For the remained quantity: Open the liquid and gas stop valve completely and set DSW4-#1 to ON side (O.U. PCB1). Then recharge it from the liquid stop valve check joint during cooling operation.	9	Set DSW4-#4 to ON side (O.U. PCB1).	
12 Set DSW1-#4, back to the original setting. Refer to Process No. 9. 13 Check that the power line for comp. and wiring are connected correctly. 14 Recharge the collected refrigerant (Process No.4) from the check joint at high pressure side. For the remained quantity: Open the liquid and gas stop valve completely and set DSW4-#1 to ON side (O.U. PCB1). Then recharge it from the liquid stop valve check joint during cooling operation.	10		
Check that the power line for comp. and wiring are connected correctly. Recharge the collected refrigerant (Process No.4) from the check joint at high pressure side. For the remained quantity: Open the liquid and gas stop valve completely and set DSW4-#1 to ON side (O.U. PCB1). Then recharge it from the liquid stop valve check joint during cooling operation.	11	Turn OFF the main switch of O.U.	
connected correctly. 14 Recharge the collected refrigerant (Process No.4) from the check joint at high pressure side. For the remained quantity: Open the liquid and gas stop valve completely and set DSW4-#1 to ON side (O.U. PCB1). Then recharge it from the liquid stop valve check joint during cooling operation.	12	Set DSW1-#4, back to the original setting.	Refer to Process No. 9.
check joint at high pressure side. For the remained quantity: Open the liquid and gas stop valve completely and set DSW4-#1 to ON side (O.U. PCB1). Then recharge it from the liquid stop valve check joint during cooling operation.	13	, , ,	
15 Check the liquid and gas stop valves are open completely.	14	check joint at high pressure side. For the remained quantity: Open the liquid and gas stop valve completely and set DSW4-#1 to ON side (O.U. PCB1). Then recharge it from the liquid stop valve check joint	
	15	Check the liquid and gas stop valves are open completely.	

Outdoor Unit Indoor Unit 7-Segment O.U.: I.U.: 7-Seg.: Comp.: Compressor

7.1.2. Failure of the power supply to the indoor unit and the remote control switch

■ The LED and the LCD are not indicated.

■ Not operated

If the fuses are blown out or a breaker is activated, investigate the cause of the overcurrent and take the necessary action.

Phenomenon	Cause	Check item	Action (Turn OFF the main switch)
Power failure or	Power failure or power is not ON		Supply the power
	Short circuit supplied between the wires	Check for any uncovered part of the wires	Remove the cause of the short circuit and replace the fuse
Division and fine are all indicates of	Short circuit of the wires to earth	Measure the insulation resistance	Remove the cause of the short circuit and replace the fuse
Blown out fuse or activation of the breaker at the power source	Failure of indoor unit fan motor	Measure resistance between wires and insulation resistance	Replace AC chopper for indoor unit fan, fan motor and fuse
	Failure of AC chopper for indoor fan		Replace AC chopper for indoor unit fan and fuse
	Short circuit supplied between the wires	Check for any uncovered part of the wires	Remove the cause of the short circuit and replace the fuse
Blown out fuse at the control	Short circuit of the control circuit to earth	Measure the insulation resistance	Remove the cause of the short circuit and replace the fuse
circuit	Failure of indoor unit fan motor	Measure resistance between wires and insulation resistance	Replace AC chopper for indoor unit fan, fan motor and fuse
	Failure of AC chopper for indoor fan		Replace AC chopper for indoor unit fan and fuse
Failure of the transform	er at the indoor unit side	Measure the voltage at the secondary side	Replace the transformer
Disconnected cable of t	he remote control switch	Connect the cable	Replace the cable or repair the cable
Insufficient contacting at the	Insufficient connection or incorrect connection of the indoor unit PCB		
connectors of the remote control switch	Insufficient connection or incorrect connection of the indoor unit PCB in the remote control switch	Check the connectors	Correctly connect the connector
Failure of the rem	note control switch	Check the remote control switch by means of the self-check mode *1)	Replace the remote control switch if it failed
	Unconnected wires to PCB	Check the connectors	Correctly connect the wires
Failure of PCB	Failure of PCB	Check PCB by means of the self- check mode *2)	Replace PCB if it failed
	ng connection	Take action according to the p	

^{*1):} Refer to section "Self-checking of remote control switch".

^{*2):} Refer to section "Self-checking of PCB using remote control switch".



7.1.3. Abnormal transmission between the remote control switch and the indoor unit

■ RUN LED on the remote control switch:

Flickering every 2 seconds.

Phenomenon Cause		Check item	Action (Turn OFF the main switch)
Disconnection or in of the remote	sufficient contacting control cable	Check the cable and the connections	Repair the cable or connect the cable
Incorrect wiring connect	ction (incorrect polarity)	Check the wiring and the connections	Repairing
Failure of the rem	ote control switch	Check the remote control switch by means of the self-check mode *1)	Replace the remote control switch if the remote control switch is faulty
Failure of PCB (in the indoor unit	Disconnected wire to PCB	Check the connectors	Correctly connect the wires
and the remote control switch)	Failure of PCB	Check PCB by means of the self- check mode *2)	Replace PCB if it failed

^{*1):} Refer to section "Self-checking of remote control switch".

^{*2):} Refer to section "Self-checking of PCB using remote control switch".

7.1.4. Abnormal operation of the devices

In the case that no abnormality (Alarm Code) is indicated on the remote control switch, and normal operation is not available, take necessary action according to the procedures mentioned below.

Phenomenon	Сац	use	Check item	Action (Turn OFF the main switch)
	Failure of the indoor unit	Disconnected coil	Measure the coil resistance by means of the tester	Replace the Indoor unit
	fan motor	Burnt-out coil	Measure the insulation resistance	fan motor
	Failure of the outdoor unit	Disconnected coil	Measure the coil resistance by means of the tester	Replace the outdoor unit
	fan motor	Burnt-out coil	Measure the insulation resistance	fan motor
RUN LED is ON and the LCD is indicated However, the system does not operate	Failure of the magnetic switch for the outdoor unit fan motor	Insufficient contacting	Measure the voltage between the contacting parts	Replace PCB for the outdoor unit
(For example, the indoor fan, the outdoor fan or the compressor does not operate)	Failure of the comp. motor		Measure the resistance between two wires	Dealess the services of
550.4.0)	Failure of	the comp.	Check for an abnormal sound from the Comp.	Replace the compressor
	Failure of the magnetic switch for comp.	Insufficient contacting	Check that the magnetic switch activates correctly or not	Replace the magnetic switch
	Fallows of any of DODs	Disconnected wiring to PCB	Check the connections	Correctly connect the wiring
	Failure of one of PCBs	Failure of PCB	Check PCB by means of the self-check mode *1)	Replace PCB if it failed
	Failure of air inlet	Failure of thermistor		Donlars or server
The Comp. does not stop or start even if the setting temperature	thermistor	Disconnection of thermistor	Check it by self-checking *2)	Replace or correctly connect the wires if Abnormal Operation exists
on the LCD changes to *3)	Abnormal operation of the	remote control switch cord		
	Failure of the ir	ndoor unit PCB	Check PCB by means of the self-check mode *1)	Replace PCB if it failed



Phenomenon	Cause	Check item	Action (Turn OFF the main switch)
The Comp. does not stop or start even if the setting temperature on LCD changes to *3)	Incorrect optional setting	Check the setting condition of "thermistor of remote control switch." by means of the optional setting Setting and control: "00": Control by means of the indoor thermistor for the suction air "01": Control by means of the thermostat of the remote control switch "02": Control by means of the average value of the indoor thermistor for the suction air and the thermostat of the remote control switch	If the thermostat of the remote control switch is not used, set at "00"

- *1): Refer to section "Self-checking of PCB using remote control switch".
- *2): Refer to section "Troubleshooting in check mode by remote control switch".
- *3): Even if the remote control switches are normal, the compressor does not operate under the following conditions:
 - Indoor temp. is lower than 21°C or outdoor temp. Is lower than -5°C during the cooling process (DB).
 - Indoor temp. is higher than 27°C (DB) or outdoor temp. is higher than 15°C (WB) during the heating process.
 - When a cooling (or heating) process signal is given to the outdoor unit and a different mode as heating (or cooling) process signal is given to the indoor units.
 - -. When an emergency stop signal is given to outdoor unit.



Phenomenon	Cause		Check item	Action (Turn OFF the main switch)
	Failure of the Discharge	Failure of the Thermistor	Check the Thermistor by means of the	Replace or Correctly connect the wiring when
	Air Temp. Thermistor	Disconnected Wire of the Thermistor	self-check mode *2)	it is abnormal
Indoor fan speed does not change	Failure of the Rem	ote Control Switch	Check it by means of the	Replace if it failed
	Failure of PCB fo	or the indoor unit	self-check mode *1)	Replace if PCB fails
	Failure of AC chp	per for indoor unit	Check the indoor unit stoppage when the remote control switch is swicthed OFF	Replace if AC chpper is failed
	Failure of thermistor for	Failure of thermistor		
	outdoor evaporating temp. during heating	Disconnected wire of thermistor	Replace of correctly con	Replace if PCB fails Replace if AC chpper is failed nnect when it is abnormal Replace the 4-way valve Correctly connect the wiring Correctly connect the wiring Replace PCB when the check mode is not available
	Failure of	Disconnected 4-way valve coil	Measure the resistance of coil	Poplace the 4 way valve
No defrost operation	4-way valve	Incorrect activation of 4-way valve	Enforced power supply	Replace the 4-way valve
mode is available during the heating process or the defrost operation	Disconnected control wires between indoor unit, CH unit and outdoor unit		Check the connectors	i
continues	Failure of the outdoor	Disconnected wiring to PCB	Check the connectors	-
	units of PCB	Failure of PCB	Check PCB by means of the self-check mode *1)	the check mode is not
	Failure of the Indoor Unit	Disconnected wiring to PCB	Check the connectors	Correctly connect the wiring
	of PCB	Failure of PCB	Charle DCD his magazine	
The LED and the LCD on the remote control switch remain ON	Failure of PCB in the indoor unit or the remote control switch		Check PCB by means of the self-check mode *1)	Replace if PCB fails

^{*1):} Refer to section "Self checking of PCB using remote control switch".

^{*2):} Refer to section "Troubleshooting in check mode by remote control switch".



Phenomenon	Са	use	Check item	Action (Turn OFF the main switch)
	Indoor heat load is greate	r than the cooling capacity	Calculate the heat load	Use a bigger unit
		Gas leakage or shortage of refrigerant	Measure superheat	Correctly charge the refrigerant after repairing the gas leakage
		Excessively small diameter tube or long piping	Measure and check the field-supplied pipes	Use the correct pipes
		Incorrect activation of the check valve of the outdoor unit	Check whether or not the temp. difference exists before/after the check valve	Replace the check valve for the outdoor unit
			Check for clogging	Remove the clogging
		Failure or malfunction of the expansion valve	Check the connection cord and the connector	Replace the connector
	Excessively low suction pressure		Is there an operation sound from the coil?	Replace the coil
Insufficient cooling process			Is the thermistor on the compressor normal?	Replace the thermistor
			Is the thermistor installed correctly on compressor?	Correctly install the thermistor
		Clogged strainer in the indoor unit; clogging at the low pressure piping	Check the temp. difference at the inlet and the outlet of the strainer	Replace the strainer in the indoor unit
		Clogging at the low pressure piping	Check the temp.	Remove the clogging
		Insufficient air flow to	Check for clogged air filter	Clean the air filter
		the indoor unit heat exchanger	Check for an obstacle at the inlet or the outlet	Remove the obstacles
		Excessively low air temp. to the indoor unit heat exchanger	Insufficient speed of the indoor unit fan motor?	Replace the fan motor
			Short-circuited indoor unit air?	Remove the cause of the short-circuited air

7



Phenomenon	Ca	use	Check item	Action (Turn OFF the main switch)
			Check clogging of the outdoor unit heat exchanger?	Remove the clogging
		Insufficient air flow to the outdoor unit heat exchanger	Obstacles at inlet or the outlet of outdoor unit heat exchanger?	Remove the obstacles
		excitatiget	Is the service area for the outdoor unit sufficient?	Secure the service area
			Correct fan speed?	Replace the fan motor
		Excessively high air temp. to the outdoor unit heat	Short-circuited air to the outdoor unit?	Remove the cause of the short-circuited air
		exchanger	Any other heat load near the outdoor unit?	Remove the heat source
	Excessively high discharge pressure	Excessively charged refrigerant	Check Expansion valve opening	Correctly charge the refrigerant
	Non-condensate gas in cycle Clogging of the discharge piping Checkers Checkers Checkers Checkers Checkers	Check each temp. and each pressure	Charge the refrigerant after the vacuum pumping	
			Check for clogging	Remove the clogging
Insufficient cooling process			Check for clogging	Remove the clogging
·			Check the connection cord and the connector	Replace the connector
		Failure or malfunction of the expansion valve	Is there an operation sound from the coil?	Replace the coil
			Is the thermistor on the compressor normal?	Replace the thermistor
			Is the thermistor installed correctly on the compressor?	Correctly install the thermistor
	Malfunction or internal le	akage of the 4-way valve	Check the temp. difference at the inlet and the outlet of the 4-way valve	Replace the 4-way valve
	Excessively low suction	Failure of bypass solenoide valve	Checking for leakage of solenoid valve	Replace solenoid valve
	pressure	Malfunction or internal leakage of the 4-way valve	Check the Temp. Difference between the Inlet and the Outlet of 4-Way Valve	Replace the 4-way valve
	Discharge temp. of the	indoor unit is unstable	Check the expansion valve of the indoor unit in the same system	Replace the failed expansion valve of the indoor unit



Phenomenon	Ca	use	Check item	Action (Turn OFF the main switch)
	Indoor heat load is greate	r than the heating capacity	Calculate the heat load	Replace the unit with a bigger unit
		Gas leakage or insufficient refrigerant charge	Measure superheat	Correctly charge the refrigerant after the gas leakage check and repairing
		Excessively small diameter or long piping	Measure the field- supplied piping	Use the specified pipes
			Check for clogging	Remove the clogging
			Check the connection cord and the connector	Replace the connector
		Failure or malfunction of the expansion valve	Is there an operation sound from the coil?	Replace the coil
		Is the thermistor on the compressor normal? Is the thermistor installed correctly on compressor?	Replace the thermistor	
	Excessively low suction pressure			Correctly install the thermistor
Insufficient heating process		Clogging of I.U./O.U./CH- Unit strainer	Check the temp. difference between the inlet and the outlet of strainer	Replace the strainer for the outdoor unit or the indoor unit
		Clogging of suction piping	Check the temp. difference of each part	Remove the clogging
		Insufficient air flow through the outdoor unit	Is the outdoor unit heat exchanger clogged?	Remove the clogging
			Are there any obstacles at the inlet or the outlet of outdoor unit?	Remove the obstacles
		heat exchanger	Is the service area for the outdoor unit sufficient?	Secure a sufficient service area
			Check the speed of the outdoor unit fan	Replace the fan motor
		Excessively low air temp. through the outdoor unit heat exchanger	Check for any short- circuited air to the outdoor unit	Remove the cause of the short-circuited air
		Defrosting is insufficiently completed	Check the thermistor for the defrost operation	Replace the thermistor for the defrost operation

7



Phenomenon	Ca	use	Check item	Action (Turn OFF the main switch)
			Check the filter for a clogging	Remove the clogging
		Insufficient air flow to the indoor unit heat exchanger	Check for any obstacles at the inlet or the outlet of the indoor unit	Remove the obstacles
			Check the indoor fan speed	Replace the fan motor
	Excessively high discharge pressure	Excessively high air temp. to the indoor unit heat exchanger	Check whether or not the short-circuited air exists	Remove the cause of the short-circuited air
	discharge pressure	Excessively charged refrigerant	Check expansion valve opening	Correctly charge the refrigerant
		Non-condensate gas in ref. cycle	Check each temp. and pressure.	Recharge the refrigerant after the vacuum pumping
Insufficient heating process		Clogging of the discharge pr. piping	Check for clogging	Remove the clogging
	Malfunction or internal leakage of the 4-way valve		Check the temp. difference at the inlet and the outlet of the 4-way valve	Replace the 4-way valve
	Malfunction of the check	valve of the outdoor unit	Check the temp. difference at the inlet and the outlet of the check valve	Replace the check valve
	Excessively high	Failure of the bypass solenoid valve	Check for leakage of the solenoid valve	Replace the solenoid valve
	suction pressure	Malfunction or internal leakage of 4-way valve	Check the temp. difference at the inlet and the outlet of the 4-way valve	Replace the 4-way valve
	Discharge temp. of the	e indoor unit is unstable	Check the expansion valve of the indoor unit in the same system	Replace the failed expansion valve of the indoor unit

^{*1):} Refer to chapter 7 of TC.



Abnormal operation of the devices (Cont.)

Phenomenon	Cause		Check item	Action (Turn OFF the main switch)
	Foreign particles inside of the fan casing		Visually inspect it	Remove the foreign particles
	Indoor unit fan runne	er is hitting the casing	Visually inspect it	Adjust the position of the fan runner
	Outdoor unit propeller	fan is hitting the shroud	Visually inspect it	Adjust the position of the propeller fan
		Faulty Installation	Check that each part is tightly fixed	Tightly fix each part
Cooling or heating process with an abnormal sound	Abnormal sound from the	Liquid ref. compression	Check expansion valve opening	Ensure superheat
Count	compressor	Wear or breakage of the internal comp. parts	Abnormal Sound from the Inside of the Compressor	Replace the compressor
		No heating by the oil heater	Check the Resistance (Oil Heater, Fuse)	Replace the oil heater or the fuse
	Humming sound from the magnetic conductor		Check the surface of the contacts	Replace the magnetic switch
	Abnormal vibration of the cabinets		Check each fixing screw	Tightly fix each screw
Outdoor fan does not	Obstacle at th	Obstacle at the outdoor fan		Remove the obstacles
operate when the compressor operates	Watching condition for the heating process		Wait for the switching of the 4-Way Valve (1 ~ 3 minutes)	If the 4-Way Valve does not switch, check for insufficient refrigerant
Indoor fan does not operate when the compressor operates	Discharge pressure does not increase higher than 1.5 MPa due to the insufficient refrigerant		Check the operation pressure *1)	Add the refrigerant
	Disconnected Wiring for the Indoor Fan		Check the wiring	Connect the wiring correctly
	Failure of AC chopper		Check AC chopper	Replace AC chopper

^{*1):} Refer to chapter 10 of TC.

KPI

L

7.2. Troubleshooting procedure

7.2.1. Alarm code indication of remote control switch


If the RUN LED flickers for 2 seconds, there is a failure in the transmission between the Indoor Unit and the Remote Control Switch.

Possible causes are:

- Broken remote cable
- Contact failure in the remote control cable
- Defective IC or defective microcomputer

In any case, ask your retailer for service

If the RUN LED flickers 5 times (5 seconds) with the unit number and the alarm code displayed, make a note of the alarm code (refer to the table below) and ask your retailer for service.

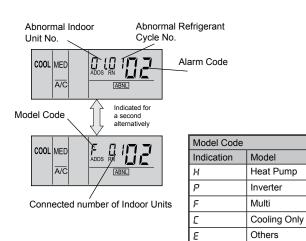

■ Alarm code table

Code No.	Category	Content of Abnormality	Leading Cause	
01	Indoor Unit	Activation of Protection Device	Failure of Fan Motor, Drain Discharge, Clogging, PCB, Relay.	
02	Outdoor Unit	Activation of Protection Device	Activation of PSH, pipe clogging, excessive refrigeran inert gas mixing.	
03		Abnormality between Indoor (or Outdoor) and Outdoor (or Indoor)	Incorrect Wiring. Failure of PCB. Tripping of Fuse. Power Supply OFF	
04	Transmission	Abnormality between Inverter PCB and Outdoor PCB. Abnormality between Fan Controller and Outdoor PCB	Transmission Failure (Loose Connector), If only fan controller is failed, indications are as follows: Number 1 Fan Controller Failure - F1 04 Number 2 Fan Controller Failure - F2 04	
05	Supply phase	Abnormality of Power Source Wiring	Reverse Phase Incorrect Wiring.	
06	Voltage	Abnormal Inverter Voltage	Outdoor Voltage Drop, Insufficient Power Capacity, If voltage drop cause by fan controller is detected, indications are as follows: No. 1 Fan Controller Failure - F1 06 No. 2 Fan Controller Failure - F2 06	
07	Cycle	Decrease in Discharge Gas Superheat	Excessive Refrigerant Charge. Expansion Valve Open Lock.	
08	Cycle	Increase in Discharge Gas Temperature	Insufficient Refrigerant. Ref. Leakage, Clogging or Expansion Valve Close Lock	
09	n/a		_	
11		Inlet Air Thermistor		
12	Sensor on	Outlet Air Thermistor	Incorrect Wiring, Disconnecting Wiring.	
13	Indoor Unit	Freeze Protection Thermistor	Theoret willing, Disconnecting willing.	
14		Gas Piping Thermistor		
16	Thermistor	Remote thermistor		
17	THEITHISTO	Built-in thermistor at remote control switch		
19	Fan motor	Tripping of Protection Device for Fan Motor	Failure of Fan Motor	
21		High Pressure Sensor		
22	Sensor on	Outdoor Air Thermistor		
23	Outdoor Unit	Discharge Gas Thermistor on Comp.	Incorrect Wiring, Disconnecting Wiring	
24		Evaporating Thermistor		
29		Low Pressure Sensor		

HITACHI Inspire the Next

Service Manual


Code No.	Category	Content of Abnormality	Leading Cause	
31		Incorrect Setting of Outdoor and Indoor Unit	Incorrect Setting of Capacity Code.	
35	System	Incorrect Setting in Indoor Unit No.	Existence of the same Indoor Unit No. in the same Refrigerant Cycle	
38		Abnormality of Protective Circuit in Outdoor Unit	Failure of Indoor Unit PCB. Incorrect wiring. Connection to PCB in Indoor Unit.	
39	n/a			
43		Pressure Ratio Decrease Protection Activating	Failure of Compressor, Inverter	
44		Low Pressure Increase Protection Activating	Overload to Indoor in Cooling. High Temperature of Outdoor Air In Heating Expansion Valve Open Lock	
45	Protection device	High Pressure Increase Protection Activating	Overload Operation. Excessive Refrigerant. Clogging of Heat Exchanger	
47		Low Pressure Decrease Protection Activating	Insufficient refrigerant .	
48	Activation of inverter overcurrent protection device		Overload operation, compressor failure	
51	Sensor	Abnormal Current Sensor	Current sensor failure	
53		Inverter Error Signal Detection	Driver IC Error Signal Detection (Protection for Overcurrent, Low Voltage, Short-Circuit)	
54	Inverter	Increase in Inverter Fin Temperature	Abnormal Inverter Fin Thermistor. Abnormal Outdoor Fan	
57	Outdoor fan motor	Abnormality of fan motor	Disconnecting Wiring or Incorrect Wiring between Control PCB (PCB1) and Fan Relay PCB (PCB3, PCB5), Failure of Fan Motor	
EE	Compressor	Compressor protection alarm	Failure of compressor	
b1	Outdor unit number setting	Incorrect outdoor unit number setting	Over 64 No. is set for address of refriogerant cycle	
b5	Indoor unit number setting	Incorrect indoor unit number setting	More than 17 non-corresponding to H-LINKII units are connected to one system	



7.2.2. Troubleshooting by alarm code

Alarm code	Description		
	Activation of the safety device in the indoor unit		

- The RUN LED flickers and "ALARM" is displayed on the remote control switch.
- The unit number, the alarm code and the unit code are alternately displayed on the set temperature section. The unit number and the alarm code are displayed on the display of the outdoor unit PCB1.
 - This alarm code is displayed when the contact between #1 and #2 of CN14 is not closed over 120 seconds during the cooling process, the heating process or the fan operation.

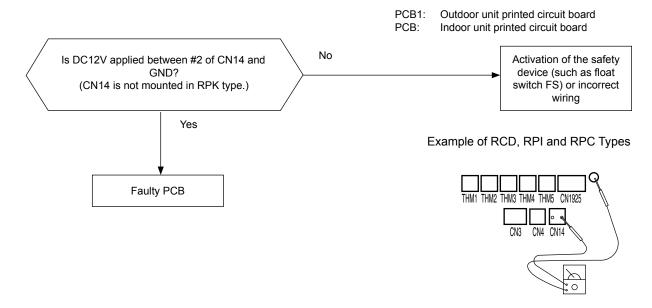

Phenomenon	Cause		Check item	Action (Turn OFF the main switch)
	High Drain Level	Clogging of the drainage	Check the drain pan	Remove the clogged foreign particles
Activation of the float switch	Faulty float switch	Fault	Check the continuity when the drain level is low	Replace the float switch if faulty
		Faulty contacting	Measure the resistance by means of the tester	Fix the looseness and Replace the connector
		Faulty connection	Check the connections	Repair the connection
Faulty indoor unit PCB			Check PCB by self checking	Replace PCB if faulty

Outdoor unit PCB display indication:






Indor unit number for failure Alarm code

Alarm code	Description	
	Activation of the safety device in the outdoor unit	

- The RUN LED flickers and "ALARM" is displayed on the remote control switch.
- The unit number, the alarm code and the unit code are alternately displayed on the set temperature section. The unit number and the alarm code are indicated on the display of the outdoor unit PCB1.
 - This alarm is indicated when one of safety devices is activated during compressor running..

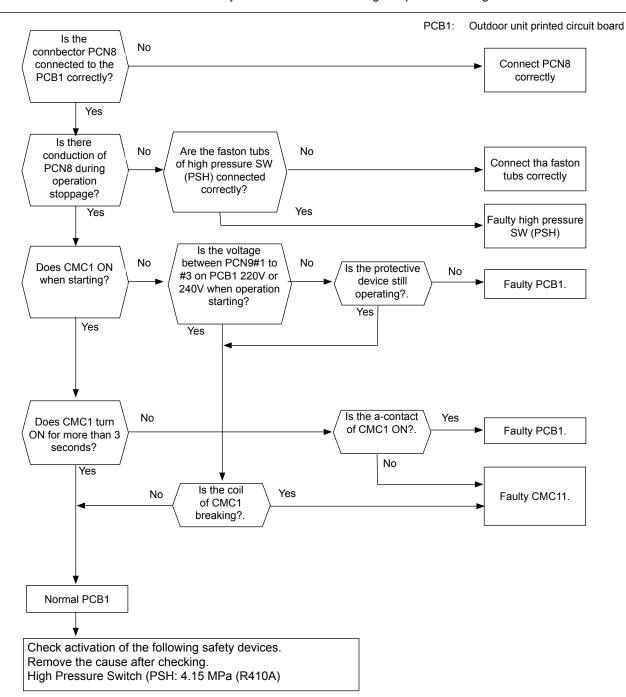

Phenomenon	Caus	e	Check item	Action (Turn OFF the main switch)
			Check the heat exchanger for dust or for clogging	Remove the dust or the clogging
	Insufficient air flow to the heat exchanger (Outdoor heat exchanger during the cooling process or indoor heat exchanger during the heating process)		Check the air filter for dust	Remove the dust
			Check for any obstacles at the inlet or the outlet of the heat exchanger	Remove the obstacles
			Check the service area	Secure service area
			Check the speed (Outdoor Fan: Cooling / Indoor Fan: Heating)	Replace the fan motor if faulty
	Malfunction of the expansion valve		Disconnected of the Connector	Fix the looseness or reconnect the connector
Activation of the high-			Fully closed and locked	Replace the expansion valve
pressure switch due to the excessively high discharge pressure	Excessively high temp. air to the Indoor Unit Heat Exchanger		Calculate the heat load	Reduce the heat load or use a bigger unit
			Check for hot air near the ceiling (Heating)	Provide good circulation
			Check for short-circuited air (Heating)	Remove the short-circuited air
			Check for other heat source	Remove the heat source
	Faulty high-pressure switch	Faulty pressure switch	Measure the discharge pressure. Check the continuity after the decrease of the pressure	Replace the pressure switch if faulty
		Insufficient contacting	Measure the resistance by means of the tester	Fix the looseness. Replace the connector
		Incorrect connection	Check the connections	Repair the connections




Phenomenon	Cause	Check item	Action (Turn OFF the main switch)
		Check for clogging	Remove the clogging
		Check the connect wiring and the connectors	Replace the connector
	Faulty or malfunction of the expansion valve	Check the operation sound from the coil	Replace the coil
		Check the discharge gas thermistor	Replace the thermistor
		Check the attaching state of the discharge gas thermistor	Reattach the thermistor
Activation of the high-pressure switch due to the excessively high discharge pressure	Faulty gas bypass solenoid valve	Check for clogging	Replace the gas bypass solenoid valve
	Overcharged refrigerant	Check the cycle operation temp.	Charge the refrigerant correctly
	Mixture of the non-condensate gas in the refrigerant cycle	Check the air temp. and the pressure	Recharge the refrigerant after the vacuum pumping
	Clogging of the discharge piping	Check for clogging	Remove the clogging
	Liquid line stop valve or gas line stop valve is not in operation	Check the stop valves	Fully Open the stop valves
	Clogging of the check valve	Check for clogging	Replace the check valve



Alarm code	Description
	Abnormal transmission between the indoor units and the outdoor unit

- The RUN LED flickers and "ALARM" is displayed on the remote control switch.
- The unit number, the alarm code and the unit code are alternately displayed on the set temperature section. The unit number and the alarm code are displayed on the display of the outdoor unit PCB1.
 - This alarm is displayed when an abnormal operation is maintained for three minutes after the normal transmission between the indoor units and the outdoor unit. Also, an abnormal operation is maintained for 30 seconds after the micro-computer is automatically reset.
 - The alarm is displayed when the abnormal transmission is maintained for 30 seconds from the starting of the outdoor unit.
 - Investigate the cause of the overcurrent and take the necessary action when the fuses are blown out or the breaker for the outdoor unit is activated.

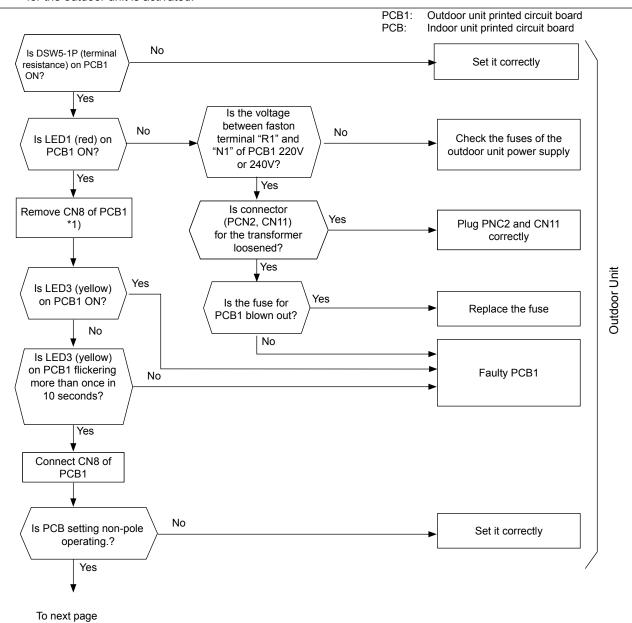

Indoor Unit

Set the terminal resistance to ON when CN2 is removed.

Set the terminal resistance to OFF when CN2 is reconnected.


^{*1):} In case that terminal resistance (DSW5-1P) is OFF when H-Link Connection is performed.

Phenomenon	Cause	Check item	Action (Turn OFF the main switch)
Power failure or no power supply		Measure the voltage by means of the tester	Supply the power
	Short circuit between wires	Check the insulation material for breaks	Remove the short circuit and replace the fuse
Blown out fuse for the power	Short-circuited wire to ground	Measure the insulation resistance	Remove the short circuit to ground and replace the fuse
source or activation of the outdoor unit breaker	Faulty comp. motor	Measure the resistance between the wires and the insulation resistance	Replace the comp. and the fuse
	Faulty outdoor unit fan motor	Measure the resistance between the wires and the insulation resistance	Replace the outdoor unit fan motor and the fuse
	Short circuit between wires	Check the insulation material for breaks	Remove the short circuit and replace the fuse
Blown out fuse for control circuit	Short circuit of the control circuit (to ground)	Measure the insulation resistance	Remove the short circuit and replace the fuse
or activation of outdoor unit breaker	Faulty solenoid coil for the magnetic switch for the comp. motor	Measure the resistance of coil	Replace the magnetic switch and the fuse
	Failure of the outdoor unit fan motor	Measure the resistance between the wires and the insulation resistance	Replace the outdoor unit fan motor and fuse
PCB1 power	circuit failure	Measure PCB1 output voltage *2)	Replace PCB1
Disconnected wires insufficient contacting or incorrect	Between outdoor unit and indoor unit	Check the continuity of the wires. Check for looseness of the	Replacing wires repairing and tightening the
connection	Power source wiring for the outdoor unit	connection screws. Check the terminal Nos.	screws and the correct wiring
Faulty PCB (outdoor unit, indoor unit)	Disconnected wires to PCB	Check the connections	Correctly connect the wires
	Faulty PCB	_	Replace PCB if faulty
h	Disconnected wire; insufficient contacting	Check the continuity and the looseness of connection screws	Replacing wires, repairing and tightening the screws
Incorrect wiring	Incorrect wiring	Check the terminal Nos.	Correctly connect the wires

*2): VCC12~GND2: 12VDC VCC05~GND1: 5VDC VCC12~GND1: 12VDC VCC15~GND1: 15VDC VCC24~GND1: 24VDC VCC12T~GND1: 12VDC


Alarm code	Description
	Abnormal transmission between Inverter and the Outdoor Unit PCB1, 2

- The RUN LED flickers and "ALARM" is displayed on the remote control switch.
- The unit number, the alarm code and the unit code are alternately displayed on the set temperature section. The unit number and the alarm code are displayed on the display of the outdoor unit PCB1.
 - This alarm is displayed when the abnormal operation is maintained for 30 seconds after the normal transmission between the outdoor unit PCB1 and PCB2 and also abnormality is maintained for 30 seconds after the microcomputer is automatically reset. The alarm is displayed when the abnormal transmission is maintained for 30 seconds from the starting of the outdoor unit.
 - Alarm code "04." is indicated when transmission between inverter and fan controller is abnormal.

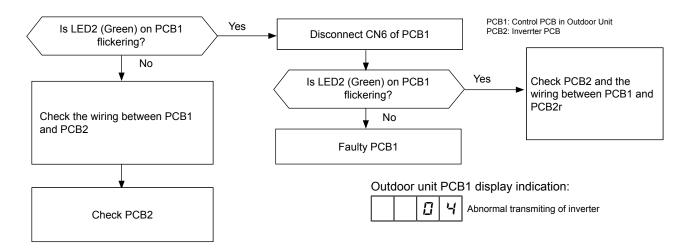

Phenomenon	Cause	Check item	Action (Turn OFF the main switch)
Disconnected wires, insufficient contacting or incorrect	Between control PCB1, PCB2 and fan controller	Check the continuity of wires. Check for looseness of the	Replacing wires, repairing, tightening screws and incorrect wiring
connection	Power source wiring for the outdoor unit	connection screws. Check the connection No.	
Faulty PCB (PCB1 and PCB2)	Disconnected wires to PCB	Check the connections	Repair the wiring connections
radity rob (rob rand rob2)	Faulty PCB	_	Replace PCB if faulty
Incorrect wiring	Disconnected wires; insufficient contacting	Check the continuity. Check for looseness of connection screws	Replacing wires, repairing, tightening screws
	Incorrect wiring	Check the connection Nos.	Correctly connect the wires

Position of Surge Absorber (SA)

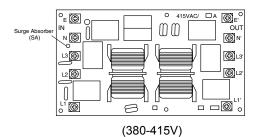


When the unit is applied the excessive surge current due to lighting or other causes, it is indicated this alarm code "04" or the inverter stoppage code (ITC) "11" and the unit can not be operated. In this case, check to ensure the surge absorber (SA) on the noise filter (NF1). If the inside of the surge absorber is normal, turn OFF the power once and wait for PCB2's LED OFF and turn ON again.



Alarm code	Description
25	Abnormality of picking up phase signal


- The RUN LED flickers and "ALARM" is displayed on the remote control switch.
- The unit number, the alarm code and the unit code are alternately displayed on the set temperature section. The unit number and the alarm code are displayed on the display of the outdoor unit PCB1.
 - This alarm is displayed when the main power source phase is reversely connected or one phase is not connected.

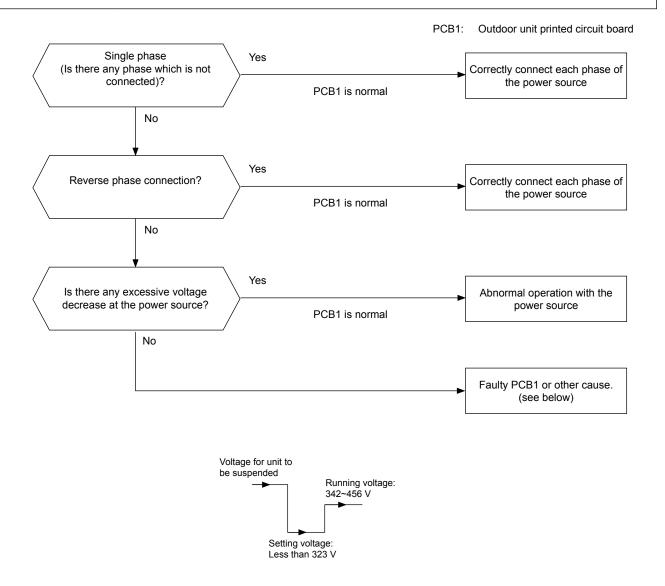

Phenomenon	Phenomenon Cause		Action (Turn OFF the main switch)
Activation of reverse phase sensor in the outdoor unit	Reverse or single phase	Check it according to the electrical wiring	Replacing wires, repair, tightening screws or correct wiring
sensor in the outdoor unit	Faulty outdoor unit PCB1	-	Replace PCB1 if faulty

Alarm code	Description
<i>115</i>	Excessively low or high voltage for the inverter


- The RUN LED flickers and "ALARM" is displayed on the remote control switch.
- The unit number, the alarm code and the unit code are alternately displayed on the set temperature section. The alarm code is displayed on the display of the outdoor unit PCB1.
 - This alarm code is displayed when the voltage between terminal "P" and "N" of transistor module (IPM) is insufficient and the alarm has three occurrences in 30 minutes. In the case that the occurrence is smaller than two times, retry is performed. "06." indicates faulty fan controller.

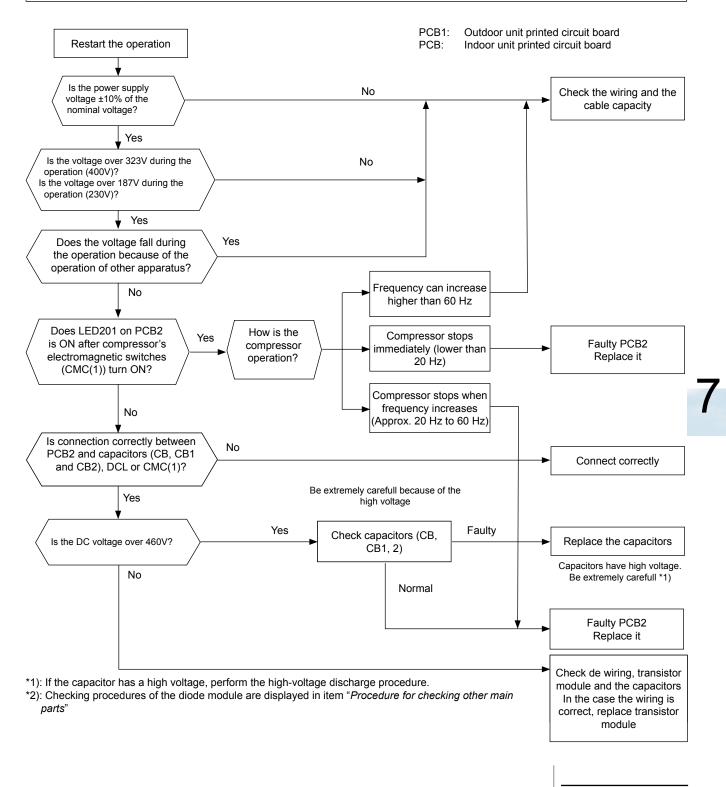



Alarm code	Description
	Decrease of discharge gas superheat

- The RUN LED flickers and "ALARM" is displayed on the remote control switch.
- The unit number, the alarm code and the unit code are alternately displayed on the set temperature section. The unit number and the alarm code are displayed on the display of the outdoor unit PCB.
 - If the discharge gas superheat is below 10 °C at the top of the compressor for 30 minutes, the retry operation is performed. However, if the alarm occurs twice in addition to the first occurrence within two hours, this alarm code is displayed.

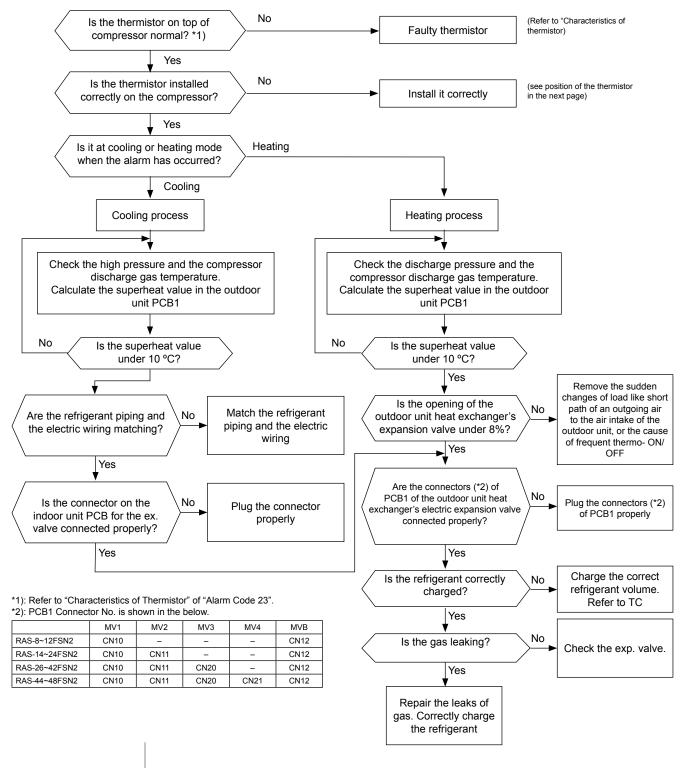


Thermistor ref.	Display	Drive	Number of	Unit HP	Thermistor position (a)
			compressors		n a
THM8	rd!	Inverter	1	8~12HP	
THM9	rd2		2	14~16HP	
THM12	ГаЗ	Constant	3	18~28HP	
THM13	Гач	speed	4	30~36HP	
THM18	5.45]	5	38~48HP	•

Phenomenon	Cause		Check item	Action (Turn OFF the main switch)
	Ref. cycle is different from the electrical system		Check the ref. cycle and the electrical system	Repair the wiring
	Overcharged refrigerant		Measure the pressure. (Refer to "Test Run of SM".)	Correctly charge the refrigerant
	Faulty Ex. valve		Check expansion valve (refer to procedure of checking other main parts)	Replace the ex. valve if faulty
Decrease of the dispharms gas	Faulty PCB	Fault	Replace PCB1 and check the operation	Replace PCB if faulty
Decrease of the discharge gas superheat		Disconnected wires for the Ex. valve control	Check the connections	Repair the wiring connection
	Faulty discharge gas thermistor	Fault	Check thermistor	Replace the thermistor if faulty
		Incorrect mounting	Check the mounting state (Refer to Alarm code 07)	Correctly mount the thermistor
		Incorrect connection	Check the connections	Remove looseness. Replace the connector or repair the connections




Alarm code	Description
	Excessively high discharge gas temperature at the top of the compressor chamber

- The RUN LED flickers and "ALARM" is displayed on the remote control switch.
- The unit number, the alarm code and the unit code are alternately displayed on the set temperature section. The unit number and the alarm code are displayed on the display of the outdoor unit PCB1.
 - This alarm is displayed when the following conditions occur three times within one hour:
 - 1) The temperature of the thermistor on the top of the compressor is maintained higher than 132 °C for 10 minutes.
 - 2) The temperature of the thermistor on the top of the compressor is maintained higher than 140 °C for 5 seconds.

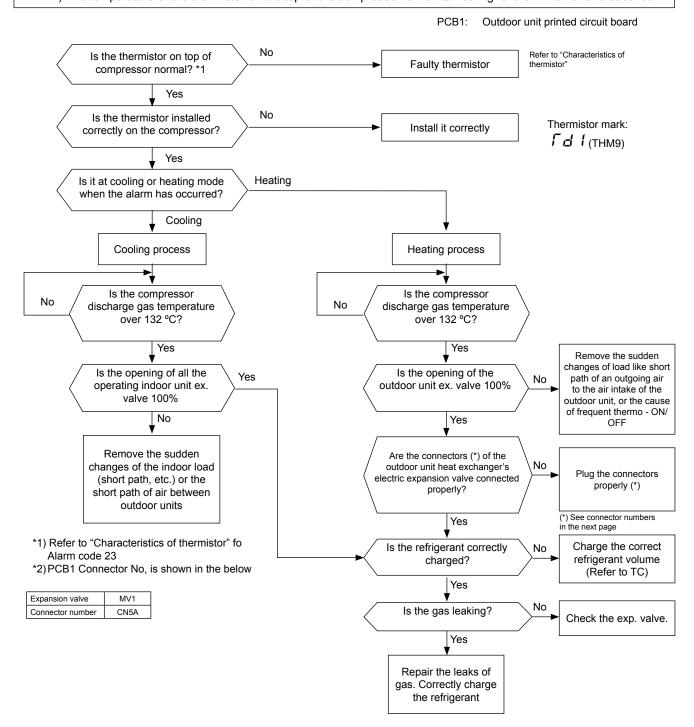

■ Characteristics of thermistor

Thermistor characteristics

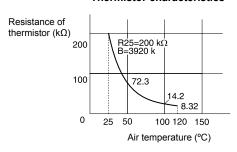

Phenomenon	Cause		Check item	Action (Turn OFF the main switch)
	Ref. cycle is different from the electrical system		Check the ref. cycle and the electrical system	Repair the wiring
	Undercharge	ed refrigerant	Check pressures	Correctly charge the refrigerant
	Faulty E	Ex. valve	Check expansion valve (refer to procedure of checking other main parts)	Replace the ex. valve if faulty
Excessively high discharge	Faulty PCB	Fault	Replace PCB1 and check the operation	Replace PCB1 if faulty
gas temperature (at top of compressor)		Disconnected wires for the Ex. valve control	Check the connections	Repair the wiring connection
	Faulty discharge gas thermistor	Fault	Measure the resistance of thermistor	Replace the thermistor if faulty
		Incorrect mounting	Check the mounting state	Correctly mount the thermistor
		Incorrect connection	Check the connections	Remove looseness. Replace the connector or repair the connections


7




Alarm code	Description
11	Abnormal operation of thermistor for the indoor unit air inlet temperature (air inlet thermistor)

- The RUN LED flickers and "ALARM" is displayed on the remote control switch.
- The unit number, the alarm code and the unit code are alternately displayed on the set temperature section. The unit number and the alarm code are displayed on the display of the outdoor unit PCB1.
 - This alarm code is displayed when the thermistor is short-circuited (less than 0.24 kΩ) or cut (greater than 840 kΩ) during the cooling process or the heating process. The system is automatically restarted when the fault is removed.


PCB1: Control PCB in Outdoor Unit PCB: Indoor unit PCB

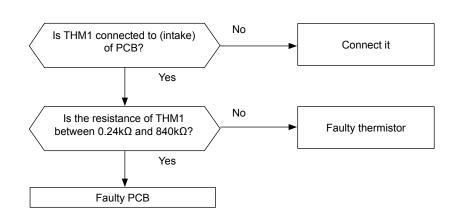

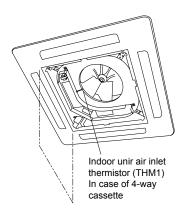

Phenomenon	Cause	Check item	Action (Turn OFF the main switch)
Coulty oir inlet thermister	Fault	Check the resistance	Replace the thermistor if faulty
Faulty air inlet thermistor	Incorrect connection	Check the connection	Repair the wiring and the connections
Faulty	/ PCB	Replace PCB and check the operation	Replace PCB if faulty

Thermistor resistance $(K\Omega)$

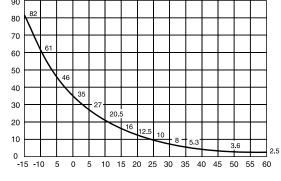

Air temperature (°C)

Thermistor characteristics




This data is applicable to the following thermistors:


- 1. Indoor unit discharge air temperature,
- 2. Indoor unit liquid refrigerant temperature
- 3. Indoor unit air inlet temperature
- 4. Outdoor temperature
- 5. Outdoor unit evaporating temperature
- 6. Indoor unit gas piping

Alarm code	Description
12	Abnormal operation of the thermistor for the indoor discharge air temperature (air outlet thermistor)

- The RUN LED flickers and "ALARM" is displayed on the remote control switch.
- The unit number, the alarm code and the unit code are alternately displayed on the set temperature section. The unit number and the alarm code are displayed on the display of the outdoor unit PCB1.
 - This alarm code is displayed when the thermistor is short-circuited (less than 0.24 kΩ) or cut (greater than 840 kΩ) during the cooling process or the heating process. The system is automatically restarted when the fault is removed.

PCB1: Control PCB in Outdoor Unit PCB: Indoor unit PCB

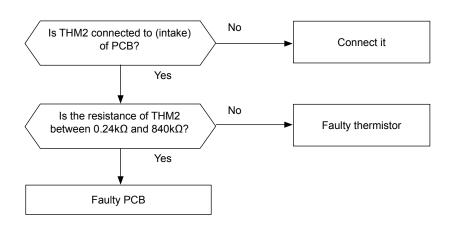

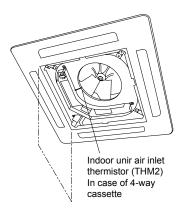

Refer to alarm code 11 for thermistor resistance


Phenomenon Cause		Check item	Action (Turn OFF the main switch)
Foulty air outlet the register	Fault		Replace the thermistor if faulty
Faulty air outlet thermistor	Incorrect connection	Check the connection	Repair the wiring and connections
Faulty	/ PCB	Replace PCB and check the operation	Replace PCB if faulty



Alarm code	Description		
13	Abnormal operation of the thermistor for the indoor unit heat exchanger liquid refrigerant pipe temperature (freeze protection thermistor)		

- The RUN LED flickers and "ALARM" is displayed on the remote control switch.
- The unit number, the alarm code and the unit code are alternately displayed on the set temperature section. The unit number and the alarm code are displayed on the display of the outdoor unit PCB1.
 - This alarm code is displayed when the thermistor is short-circuited (less than $0.24 \text{ k}\Omega$) or cut (greater than $840 \text{ k}\Omega$) during the cooling process or the heating process. The system is automatically restarted when the fault is removed.

PCB1: Control PCB in Outdoor Unit PCB: Indoor unit PCB

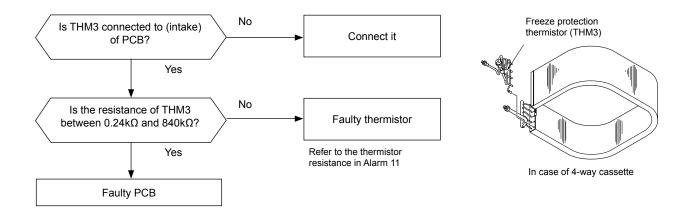



Phenomenon	Cause	Check item	Action (Turn OFF the main switch)
Faulty freeze protection	Fault	Check the resistance	Replace the thermistor if faulty
thermistor	Incorrect connection	Check the wiring to PCB	Connect wiring correctly
Faulty	/ PCB	Replace PCB and check the operation	Replace PCB if faulty



Alarm code	Description
{ }-{	Abnormal operation of the thermistor for the indoor unit heat exchanger gas refrigerant pipe temperature (gas piping thermistor)

- The RUN LED flickers and "ALARM" is displayed on the remote control switch.
- The unit number, the alarm code and the unit code are alternately displayed on the set temperature section. The unit number and the alarm code are displayed on the display of the outdoor unit PCB1.
 - This alarm code is displayed when the thermistor is short-circuited (less than 0.24 kΩ) or cut (greater than 840 kΩ) during the cooling process or the heating process. The system is automatically restarted when the fault is removed.

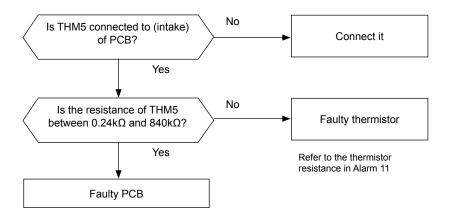

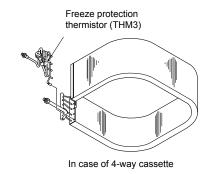


Phenomenon	Cause	Check item	Action (Turn OFF the main switch)
Equity gas pining thermister	Fault	Check the resistance	Replace the thermistor if faulty
Faulty gas piping thermistor	Incorrect connection	Check the wiring to PCB	Connect wiring correctly
Faulty	/ PCB	Replace PCB and check the operation	Replace PCB if faulty



Alarm code	Description		
! =	Activation of the protection device for the indoor fan motor (RCI)		

- The RUN LED flickers and "ALARM" is displayed on the remote control switch.
- The unit number, the alarm code and the unit code are alternately displayed on the set temperature section, and the alarm code is indicated on the display of the outdoor unit PCB1.
 - This alarm code is indicated when the following condition occurs thre times in 30 minutes:
 Indoor fan rotates less than 70 rpm for 5 seconds during operation.


When the cause is checked by means of this flow chart, confirm that fan speed setting is Hi

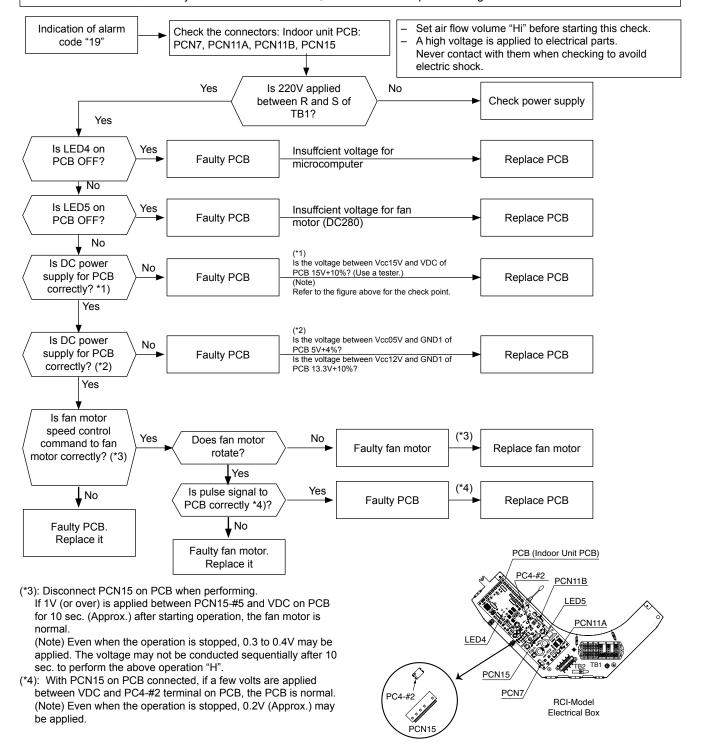

Alarm code	Description		
	Activation of the protection device for the indoor fan motor (RPK)		

- The RUN LED flickers and "ALARM" is displayed on the remote control switch.
- The unit number, the alarm code and the unit code are alternately displayed on the set temperature section. The unit number and the alarm code are displayed on the display of the outdoor unit PCB.
 - This alarm code is indicated when the following conditions occurs three times in 30 minutes.
 - * Indoor fan rotates less than 70rpm for 5 seconds during operation


Set air flow volume "Hi" before starting this check

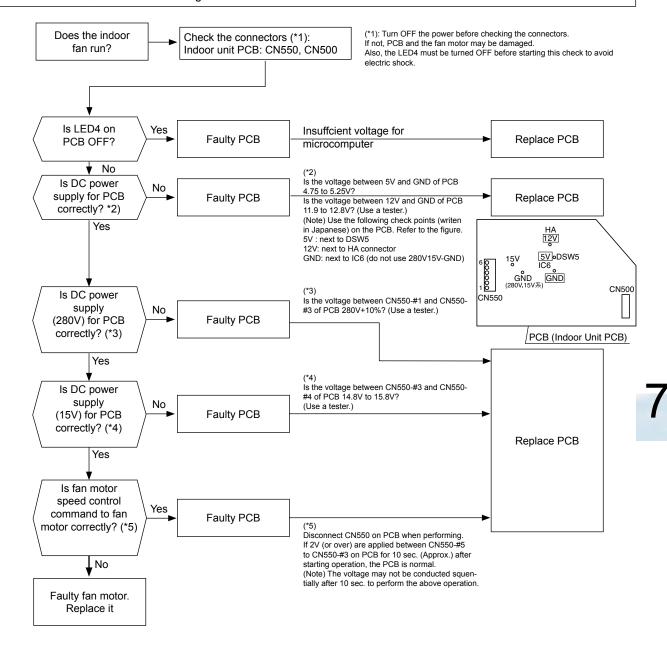



Alarm code	Description		
19	Activation of the protection device for the indoor fan motor (except RCI and RPK)		


- The RUN LED flickers and "ALARM" is displayed on the remote control switch.
- The unit number, the alarm code and the unit code are alternately displayed on the set temperature section. The unit number and the alarm code are displayed on the display of the outdoor unit PCB.
 - This alarm code is displayed when the temperature of the internal thermostat for the indoor fan motor is higher than 130 °C.

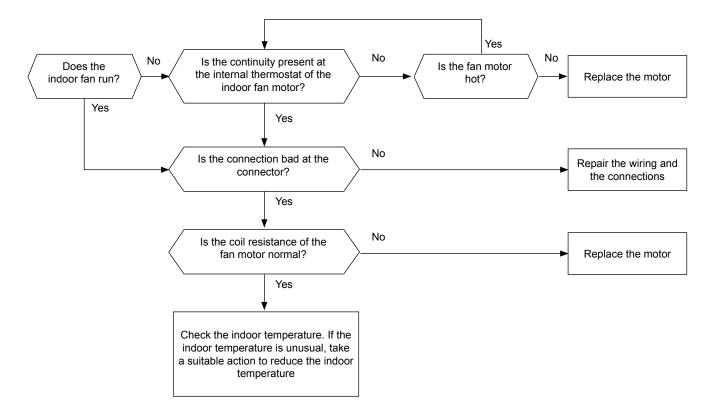

Phenomenon	Cause		Check item	Action (Turn OFF the main switch)
Activation of the internal thermostat for the indoor unit fan motor	Faulty indoor unit fan motor		Measure the coil resistance and the insulation resistance	Replace the motor if faulty
	Faulty internal thermostat	Fault	Check the continuity after the fan motor temperature decreases to room temp	Replace the fan motor if there is no continuity
		Insufficient contacting	Measure the resistance by means of the tester	Correct looseness. Replace the connectors
		Incorrect connection	Check the connections	Repair the connections

Alarm code	Description
3	Abnormal operation of the high-pressure sensor for the outdoor unit

- The RUN LED flickers and "ALARM" is displayed on the remote control switch.
- The unit number, the alarm code and the unit code are alternately displayed on the set temperature section. The unit number and the alarm code are displayed on the display of the outdoor unit PCB1.
 - This alarm code is displayed when the high-pressure sensor voltage decreases lower than 0.1 V or increases higher than 4.9V during the operation

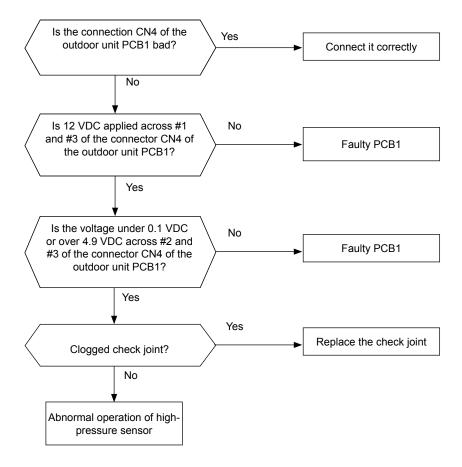


Phenomenon	Cause	Check item	Action (Turn OFF Main Switch)
Faulty high-pressure sensor	Fault	Check that the output voltage is correct	Replace the pressure sensor if faulty
	Incorrect connection	Check the connections	Repair the wiring and the connections
Faulty PCB1		Replace PCB1 and check the operation	Replace PCB1 if faulty
Indicated pressure value is excessively high or low	Malfunction of the pressure sensor due to a faulty check joint	Check the check joint for clogging	Replace the check joint



Alarm code	Description
	Abnormal operation of the thermistor for the outdoor temperature
	(outdoor unit ambient thermistor)

- The RUN LED flickers and "ALARM" is displayed on the remote control switch.
- The unit number, the alarm code and the unit code are alternately displayed on the set temperature section. The unit number and the alarm code are displayed on the display of the outdoor unit PCB1.
 - This alarm code is displayed when the thermistor is short-circuited (less than 0.2 kΩ) or cut (greater than 500 kΩ) during the operation. However, this alarm occurs during the test run mode only. In the case that the thermistor is abnormal during the operation, the operation continues based on the assumption that the outdoor temperature is 35 °C (Cooling) / 6 °C (Heating).

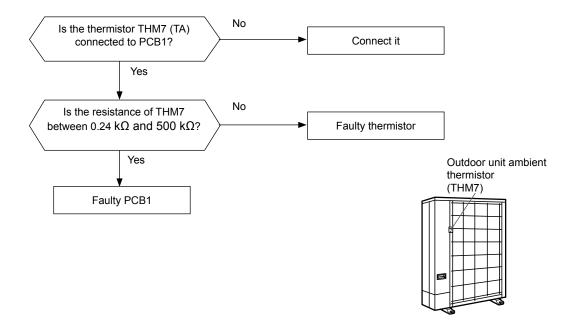

Phenomenon	Cause	Check item	Action (Turn OFF Main Switch)
Faulty thermistor for the outdoor	Fault	Check resistance	Replace thermistor if faulty
unit ambien	Incorrect connection	Check wiring to PCB1	Repair wiring and connections
Faulty PCB1		Replace PCB1 and check operation	Replace PCB1 if faulty




Alarm code	Description
23	Abnormal operation of thermistor for discharge gas temperature on the top of compressor chamber

■ The RUN LED flickers and "ALARM" is displayed on the remote control switch.

Air temperature (°C)

- The unit number, the alarm code and the unit code are alternately displayed on the set temperature section. The unit number and the alarm code are displayed on the display of the outdoor unit PCB1.
 - This alarm code is displayed when the thermistor is short-circuited (less than 0.9 kΩ) for one second or cut (greater than 5946 $k\Omega$) during the operation. If you find an abnormal operation of the thermistor, check all the thermistors as shown below.

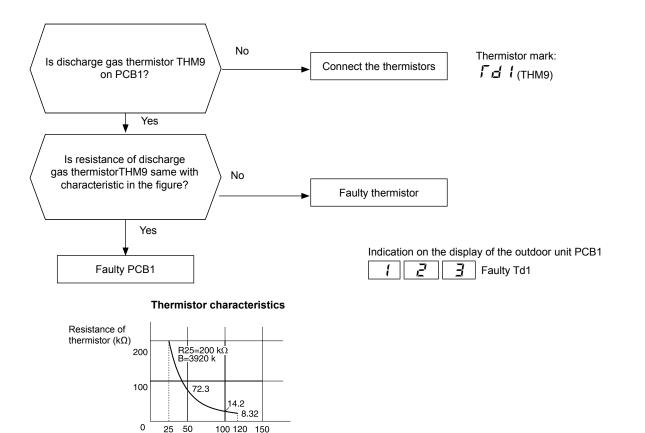


Phenomenon	Cause	Check item	Action (Turn OFF Main Switch)
Faulty thermistor for the discharge gas	Fault	Check resistance	Replace thermistor if faulty
	Incorrect connection	Check wiring to PCB1	Repair wiring and connections
Faulty PCB1		Replace PCB1 and check operation	Replace PCB1 if faulty
Incorrect setting of DSW2 on PCB1		Check the setting of DSW2 on PCB1	Correctly set DSW2 on PCB1



Alarm code	Description
24	Abnormal operation of the thermistor for the evaporating temperature during the heating process (outdoor unit)

- The RUN LED flickers and "ALARM" is displayed on the remote control switch.
- The unit number, the alarm code and the unit code are alternately displayed on the set temperature section. The unit number and the alarm code are displayed on the display of the outdoor unit PCB.


 If you find an abnormal operation of the thermistor, check all the thermistors as shown below.
 - This alarm is indicated when the thermistor is shortcircuited (less than $0.9k\Omega$) or cut (greater than $5.946k\Omega$) during running.

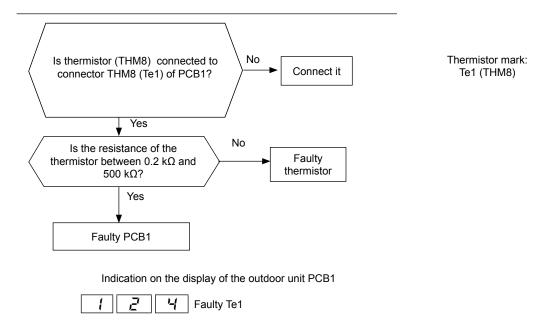

Phenomenon	Cause	Check item	Action (Turn OFF the main switch)
Faulty thermistor for the evaporating temperature during	Fault	Check the resistance	Replace the thermistor if faulty
heating	Incorrect Connection	Check the wiring to PCB1	Repair the wiring and the connections
Faulty PCB1		Replace PCB1 and check the operation	Replace PCB1 if faulty

Alarm code	Description	
	Abnormal operation of the low-pressure sensor for the outdoor unit	

- The RUN LED flickers and "ALARM" is displayed on the remote control switch.
- The unit number, the alarm code and the unit code are alternately displayed on the set temperature section. The unit number and the alarm code are displayed on the display of the outdoor unit PCB.
 - This alarm code is displayed when the low-pressure sensor voltage decreases lower than 0.1 V or increases higher than 4.9V during the operation

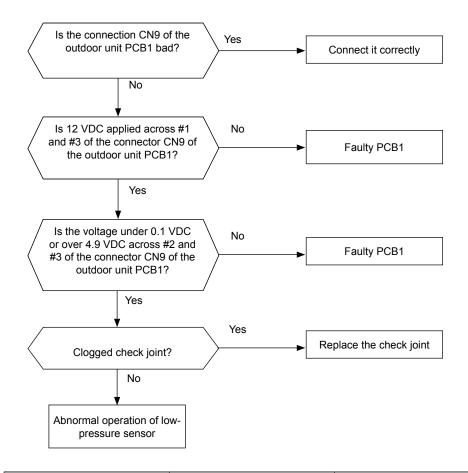


Phenomenon	Cause	Check item	Action (Turn OFF Main Switch)
Faulty low pressure sensor	Fault	Check that the output voltage is correct	Replace the pressure sensor if faulty
Faulty low-pressure sensor	Incorrect connection	Check the connections	Repair the wiring and the connections
Faulty PCB1		Replace PCB1 and check the operation	Replace PCB1 if faulty
Indicated pressure value is excessively high or low	Malfunction of the pressure sensor due to a faulty check joint	Check the check joint for clogging	Replace the check joint




Alarm code	Description
I E	Incorrect capacity setting or combined capacity between Indoor Units and Outdoor Unit

- The RUN LED flickers and "ALARM" is displayed on the remote control switch.
- The unit number, the alarm code and the unit code are alternately displayed on the set temperature section. The unit number and the alarm code are displayed on the display of the outdoor unit PCB1.
 - This alarm code is indicated when the capacity setting dip switch, DSW3 on the outdoor unit PCB1, is not set (all the settings from #1 to #4 are OFF) or mis-setting.
 - This alarm code is indicated when the total indoor unit capacity is smaller than 50% or greater than 130% of the combined outdoor unit capacity.

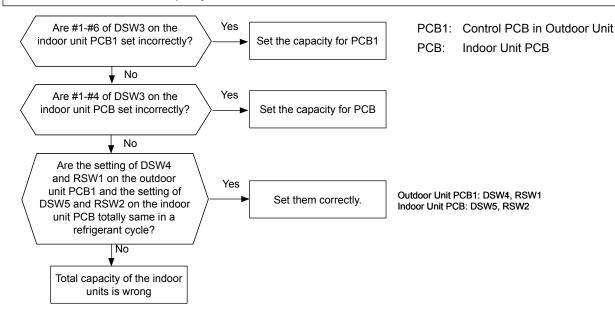

Phenomenon	Cause	Check item	Action (Turn OFF Main Switch)
Incorrect capacity setting of Indoor Unit		Check combination of indoor units and capacity setting on PCB.	Correctly set dip switch, DSW3.
Incorrect capacity setting of Outdoor Unit		Check capacity setting on outdoor unit PCB1.	Correctly set dip switch, DSW2.
Total Indoor Unit capacity connected to the Outdoor Unit is beyond the permissible range		Check outdoor unit model by calculating total indoor units capacity.	Ensure that total indoor unit capacity is from 50% to 130%.
Refrigerant cycle setting of the outdoor unit and the indoor unit is different		Check the refrigerant cycle setting on outdoor unit PCB1 and indoor unit PCB	Set them correctly.

Refrigerant Cycle No. Setting



Ex.: In Case of Setting Refrigerant Cycle No. 25



Turn ON No. 2 pin. Set Dial No.5.

DSW and RSW setting before shipment is 0. Maximum in setting refrigerant cycle No. is 63.



Alarm code	Description
35	Incorrect indoor number setting

- The RUN LED flickers and "ALARM" is displayed on the remote control switch.
- The unit number, the alarm code and the unit code are alternately displayed on the set temperature section. The unit number and the alarm code are displayed on the display of the outdoor unit PCB1.
 - This alarm code is indicated 5 minutes after power is supplied to the outdoor unit when the indoor unit No. connected to the outdoor unit is duplicated by setting of DSW and RSW



In the case of H-LINK System, this alarm code is indicated when DSW4 and RSW1 of the outdoor unit PCB1 and DSW5 and RSW2 of the indoor unit PCB are incorrectly set.


In this case, set them correctly after turning OFF the main switch, and again turn ON the main switch. When the refrigerant number setting of outdoor unit (H-LINK II) and the one of outdoor unit (H-LINK) are duplicated, the alarm "35" may go ON and OFF repeatedly.

PCB1: Control PCB in Outdoor Unit



Alarm code	Description
38	Abnormality of picking up circuit for protection
	(Outdoor Unit)


- The RUN LED flickers and "ALARM" is displayed on the remote control switch.
- The unit number, the alarm code and the unit code are alternately displayed on the set temperature section. The unit number and the alarm code are displayed on the display of the outdoor unit PCB1.
 - This alarm code is indicated when AC 220V or 240V is not detected in A* or B* during inverter compressor stoppage.

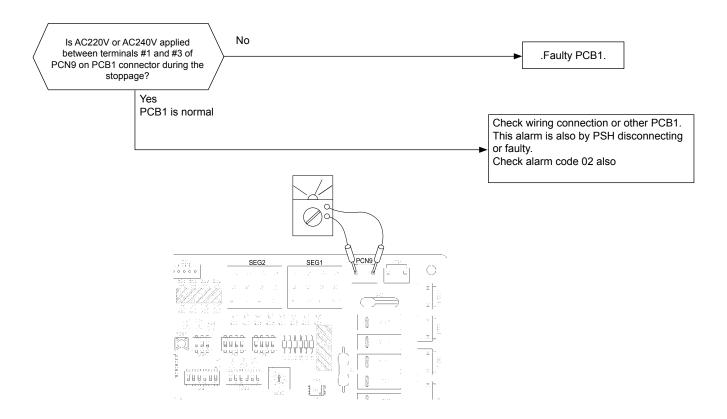

Phenomenon	Cause	Check item	Action (Turn OFF Main Switch)
Activation of picking up circuit	Starting outdoor unit at activation of pickig up circuit for protection	Alarm Code Hist: "02" and "09" before "38".	Refer to Alarm Code "02" and "09"
for protection	Incorrect connection	Check the voltage that is supplied to the connectors	Repair the wiring connections
Faulty	PCB1		Replace PCB1

Alarm code	Description
九	Activation for protecting the system from the low compression ratio

- The RUN LED flickers and "ALARM" is displayed on the remote control switch.
- The unit number, the alarm code and the unit code are alternately displayed on the set temperature section. The unit number and the alarm code are displayed on the display of the outdoor unit PCB1.
 - This alarm code is displayed when a compression ratio, $\varepsilon = \{(Pd + 0.1)/(Ps + 0.06)\}\$ is calculated from a discharge pressure (Pd MPa) and a suction pressure (Ps MPa), and the condition which is lower than $\varepsilon = 1.8$ occurs three or more than three times in one hour.

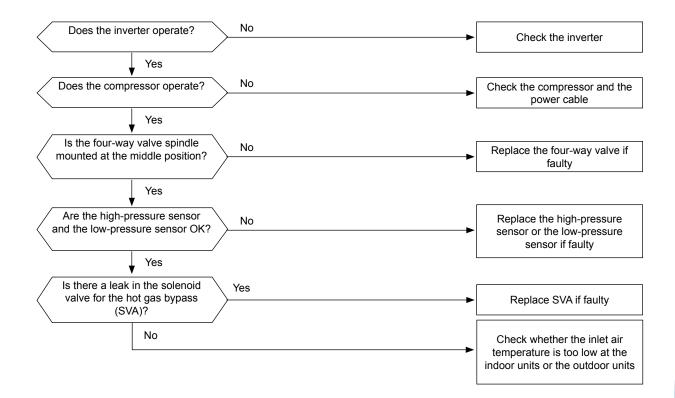

Phenomenon	Cause	Check item	Action (Turn OFF Main Switch)
	Inverter is not functioning	Check the inverter	Repair the faulty part
	Compressor is not operating	Check the compressor	Replace the comp. if faulty
	Valve stoppage at medium position of 4-way valve	Measure the suction pipe temp. of the 4-way valve	Replace the 4-way valve if faulty
Excessively low compression ratio	Abnormal operation of the high-pressure sensor or the low-pressure sensor	Check the connector for PCB1, the power source and the pressure indication	Replace the sensor if faulty
	Excessively low air inlet temperature of the indoor unit	Check the indoor unit and the outdoor unit air temp. thermistor	Replace the thermistor if faulty
	Leakage of the solenoid valve (outdoor unit)	Check the solenoid valve	Replace SVA if leaking




Alarm code	Description
1.	Activation for protecting the system from excessively low suction pressure

- The RUN LED flickers and "ALARM" is displayed on the remote control switch.
- The unit number, the alarm code and the unit code are alternately displayed on the set temperature section. The unit number and the alarm code are displayed on the display of the outdoor unit PCB1.
 - In case that compressor is operated under the condition that is higher than 1.5MPa of suction pressure (Ps) for 1 minute, all compressors are stopped and retry operation is started after 3 minutes. However the alarm code is indicated when same phenomenon is occurred at two times within the next 30 minutes.

PCB1: Control PCB in Outdoor Unit


PCB: Indoor Unit PCB

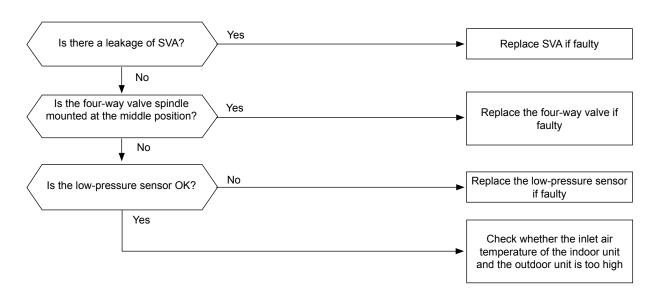

Phenomenon	Cause	Check item	Action (Turn OFF Main Switch)
	Leakage of solenoid valve (SVA)	Check the outlet pipe temp of (SVA)	Check the connect wires. Replace (SVA) if faulty
Evenseively law quetion	Valve stoppage at the medium position of the 4-way valve	Measure the suction gas temp. of 4-way valve	Replace the 4-way valve if faulty
Excessively low suction pressure	Abnormal suction pressure sensor	Check the connectors of PCB1 and the power source	Replace the sensor if faulty
	Excessively high indoor unit and outdoor unit suction air temperature	Check the indoor unit and the outdoor unit suction air temp. thermistor	Replace the thermistor if faulty

Alarm code	Description
45	Activation for protecting the system from excessively high discharge pressure

- The RUN LED flickers and "ALARM" is displayed on the remote control switch.
- The unit number, the alarm code and the unit code are alternately displayed on the set temperature section. The unit number and the alarm code are displayed on the display of the outdoor unit PCB1.
 - In case that compressor is operated under the condition that is higher than 3.8MPa of suction pressure (Pd) for 1 minute, all compressors are stopped and retry operation is started after 3 minutes. However the alarm code is indicated when same phenomenon is occurred at two times within the next 30 minutes...

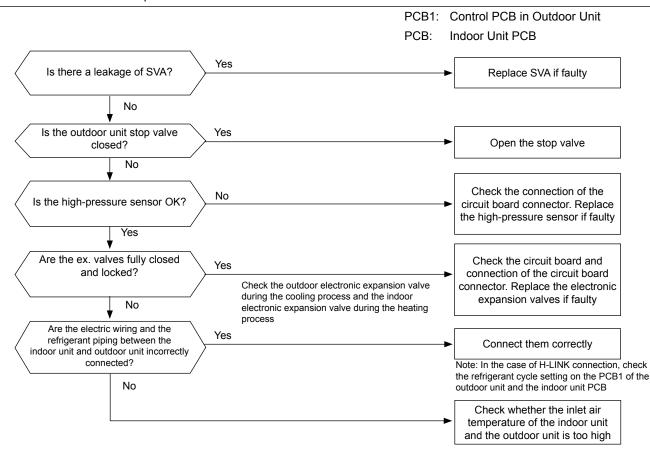


Phenomenon	Cause	Check item	Action (Turn OFF Main Switch)
	Leakage of SVA (outdoor unit)	Check the outlet temp. of SVA	Check the connection. Replace SVA if faulty
	Closed stop valve	Check the stop valve	Open the stop valve
	Abnormal high-pressure sensor	Check the connectors for PCB	Replace the pressure sensor if faulty
Excessively high discharge pressure	Excessively high air inlet temp. of the indoor unit and the outdoor unit	Check the thermistor for inlet air temp. of the indoor unit and the outdoor unit	Replace the thermistor if faulty
	Incorrect connection between indoor unit and outdoor unit	Check electrical system and ref. cycle	Correctly connect
	Locked Ex. valve with fully closed opening	Check the connector for PCB	Repair connector for PCB or ex. valve. Replace it if faulty
Stoppage of the indeer fan (wall	Blown out fuses	Check the continuity of fuses	Replace the fuses
Stoppage of the indoor fan (wall type 1.0 to 3.0 only)	Faulty PCB	Replace PCB and check the operation	Replace PCB if faulty



Alarm code	Description
1-11-1	Activation for protecting the system from excessively low suction pressure (protection from the vacuum operation)

- The RUN LED flickers and "ALARM" is displayed on the remote control switch.
- The unit number, the alarm code and the unit code are alternately displayed on the set temperature section. The unit number and the alarm code are displayed on the display of the outdoor unit PCB1.
 - This alarm code is displayed when a suction pressure is lower than 0.09 MPa for over 12 minutes and the alarm occurs two or more times in one hour.

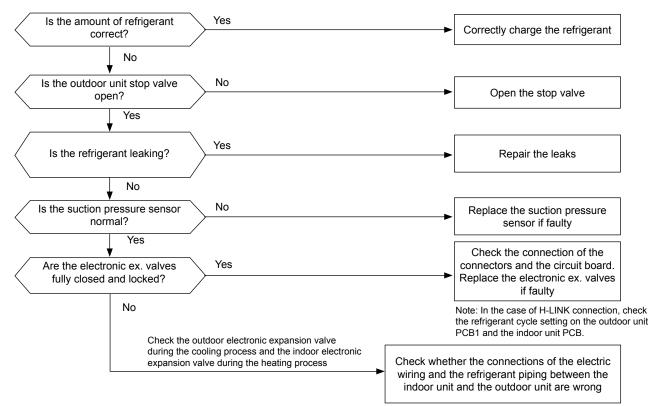

Phenomenon	Cause		Check item	Action (Turn OFF Main Switch)
	Shortage of refrigerant.		Check the volume of charged refrigerant or check for leakage	Repair the leakage and correctly charge
	Closed s	top valve	Check the stop valve	Open the stop valve
Excessively low suction pressure (in vacuum)	Abnormal low or high-pressure sensor		Check the connector for PCB1	Replace the pressure sensor if faulty
(iii vacuuiii)	Incorrect connection between the indoor unit and the outdoor unit		Check the electrical system and the ref. cycle	Correctly connect between the indoor unit and the outdoor unit
	Locked Ex. valve		Check the connector for PCB	Repair or replace the connector of PCB or the ex. valve
	Closed Ex. valve by disconnecting Td thermistor		Check Td thermistors for compressors and measure Td thermistor resistance.	Repair or replace Td thermistor
	Faulty outdoor fan motor		Measure the coil resistance and the insulation resistance	Replace the outdoor fan motor if faulty
Internal Thermostat for Outdoor Fan is Activated in Heating	Faulty internal thermostat Incorre contain	Fault	Check for the conduction after the temperature of the outdoor fan motor is decreased	Replace the outdoor fan motor
process		Incorrect contact	Measure the resistance by means of the tester	Remove looseness and replace the connector
		Incorrect connection	Check the connection	Connect correctly

Service Manual	


Alarm code	Description					
48	Activation of inverter overcurrent protection device (1)					

- The RUN LED flickers and "ALARM" is displayed on the remote control switch.
- The unit number, the alarm code and the unit code are alternately displayed on the set temperature section. The unit number and the alarm code are displayed on the display of the outdoor unit PCB1.
 - The alarm code is indicated when inverter electronic thermal protection is activated at six times within 30 minutes.
 (Retry operation is performed up to five times.)

Conditions of Activation:

Inverter current with 105% of the rated current runs for 30 seconds continuously, or Inverter current runs intermittently and the accumulated time reaches up to 3 minutes, in 10 minutes.

PCB1: Control PCB in Outdoor Unit PCB2: Inverter PCB

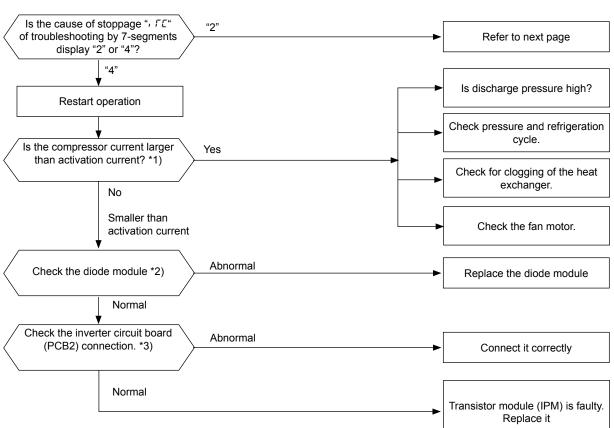


- *1): Regarding the setting value of activation current, refer to the item "Specifications of inverter"
- *2): Regarding replacing or the checking diode module, refer to the item "Procedure of checking other main parts".
- *3): Regarding replacing or the checking method for inverter parts, refer to the item "Procedure of checking other main parts".



Alarm code	Description				
48	Activation of inverter overcurrent protection device (2)				

- The RUN LED flickers and "ALARM" is displayed on the remote control switch.
- The unit number, the alarm code and the unit code are alternately displayed on the set temperature section. The unit number and the alarm code are displayed on the display of the outdoor unit PCB1.
 - The alarm code is indicated when instantaneous overcurrent trip occurs at six times within 30 minutes.
 (Retry operation is performed up to five times.)

Conditions of Activation: Inverter current with 150% of the rated current.

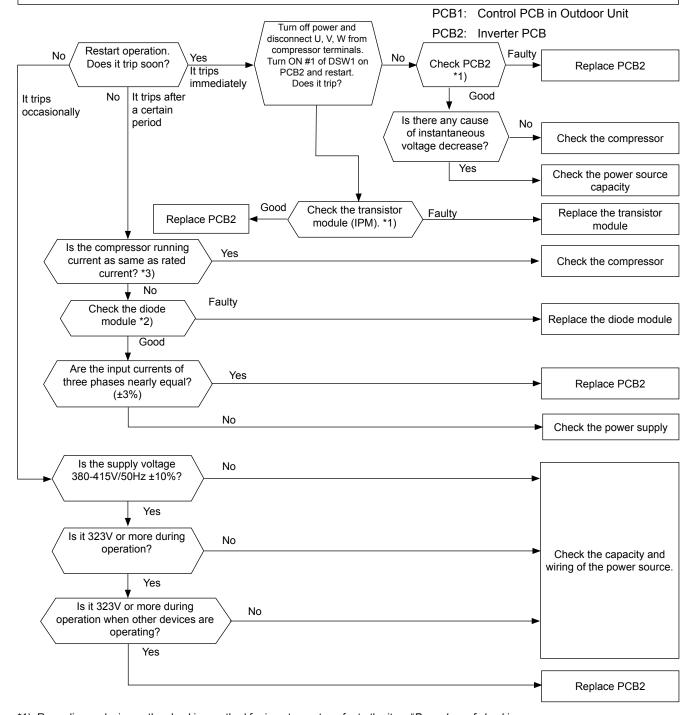

^{*1):} Regarding replacing or the checking method for inverter parts, refer to the item "Procedure of checking other main parts".

^{*2):} Before checking of diode module, refer to the item "Procedure of checking other main parts".


^{*3):} Regarding the setting value of activation current, refer to the item "Specifications of inverter"

Alarm code	Description			
5 (Abnormality of current transformer			

- The RUN LED flickers and "ALARM" is displayed on the remote control switch.
- The unit number, the alarm code and the unit code are alternately displayed on the set temperature section. The unit number and the alarm code are displayed on the display of the outdoor unit PCB.
 - In case that the abnormality of alarm code 51 or 54 occurs three times within 30 secons, the alarm code of abnormality occurred for the thirs time is indicated. Retry operation is performed up to second time of abnormality occurrence.

Condition of Activation:

When the frequency of the compressor is maintained at 15~18Hz after the compressor is started, one of the absolute values of the running current at each phase U+, U-, V+ and V- is less than 1.5A (including 1.5A).

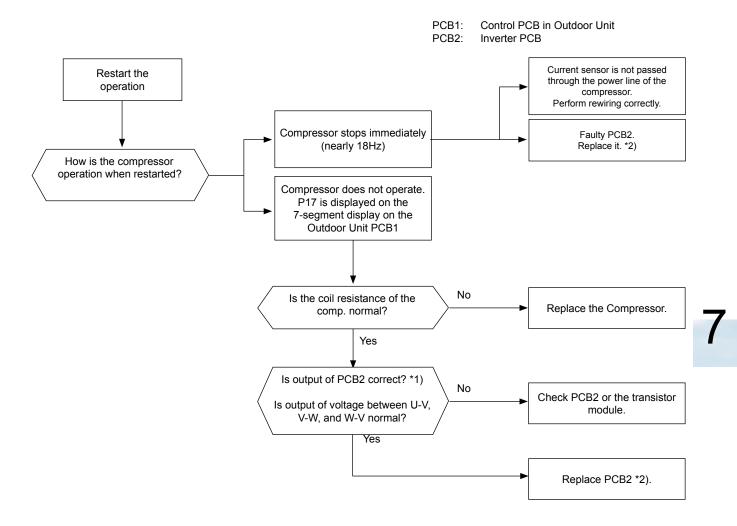

^{*1:} Perform the high voltage discharge work by referring to the item "Procedure of checking other main parts" before checking and replacing the inverter parts.

Alarm code	Description			
53	Inverter error signal detection			

- The RUN LED flickers and "ALARM" is displayed on the remote control switch.
- The unit number, the alarm code and the unit code are alternately displayed on the set temperature section. The unit number and the alarm code are displayed on the display of the outdoor unit PCB.
 - IPM (Transistor Module) have detecting function of abnormality.
 - This alarm is indicated when the transistor module detect the abnormality 7 times in 30 minutes including 7. Retry operation is performed up to the occurrence of 6 times.
 Conditions:

Abnormal current to the transistor module such as short circuited or grounded

or

Abnormal temperature of the transistor module PCB1: Control PCB in Outdoor Unit

PCB2: Inverter PCB


or

Control voltage decrease

Turn off power, disconnect Check the compressor. No U, V, W from compressor (If there is a short-circuit terminals and restart. petween phase lines, replace Does the protecting function the compressor.) activate? *3) Yes Normal Faulty Replace the transistor Check the PCB2 Check the transistor module module. *1) *2) Good Abnormal Replace PCB2 and the transistor module Is the silicon grease coated all over between Nο Coat the silicon grease to all the transistor module and the radiated fin? Is the fixed screw on the transistor module loose? the touched face between the transistor module and the radiated fin fully. Fix the Yes screw correctly.*4) Is the heat exchanger Yes of outdoor unit clogged? Remove clogging. No Replace the PCB2

- *1): Regarding replacing or checking method for the inverter components, refer to item "Procedure of checking other main parts".
- *2): Before the checking of inverter components, refer to item "Procedure of checking other main parts" regarding electrical discharge.
- *3): Turn ON the No.1 switch of the dip switch DSW1 on PCB2 when restarting with disconnecting the terminals of the compressor. After troubleshooting, turn OFF the No.1 switch of the dip switch DSW1 on PCB2.
- *4): Use the silicon grease provided as accessory (Service Parts No.: P22760).

Position of Surge Absorber (SA) (380~415V)

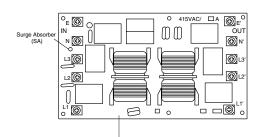


When the unit is applied the excessive surge current due to lighting or other causes, it is indicated this alarm code "04" or the inverter stoppage code (ITC) "11" and the unit can not be operated. In this case, check to ensure the surge absorber (SA) on the noise filter (NF1). If the inside of the surge absorber is normal, turn OFF the power once and wait for PCB2's LED OFF and turn ON again.



Alarm code	Description
54	Increase in the inverter fin temperature

- The RUN LED flickers and "ALARM" is displayed on the remote control switch.
- The unit number, the alarm code and the unit code are alternately displayed on the set temperature section. The unit number and the alarm code are displayed on the display of the outdoor unit PCB.
 - In case that the abnormality of alarm code 51 or 54 occurs three times within 30 seconds, the alarm code of abnormality occurred for the third time is indicated. Retry operation is performed up to second time of abnormality occurrence.

Conditions: This alarm is indicated when the temperature of the internal thermostat for transistor module is higher than 100 °C.

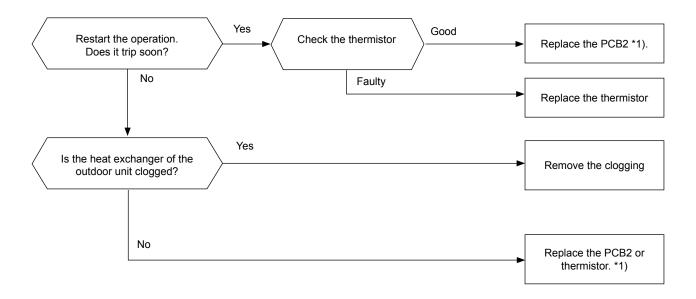


1*): Refer to section "Procedure of checking other main parts" for the replacing procedure and the checking procedure for the PCB2.

Alarm code	Description			
55	Inverter failure			

- The RUN LED flickers and "ALARM" is displayed on the remote control switch.
- The unit number, the alarm code and the unit code are alternately displayed on the set temperature section. The unit number and the alarm code are displayed on the display of the outdoor unit PCB1.
 - This alarm is indicated when the following phenomenon occurs 3 times in 30 minutes including 3: (Retry operation is performed up to the occurrence of 2 times.)
 Actual frequency from PCB2 is less than 10Hz (after inverter frequency output from PCB1).
 Conditions: This alarm is indicated when PCB2 is not performed normally.


PCB1: Control PCB in Outdoor Unit

PCB2: Inverter PCB

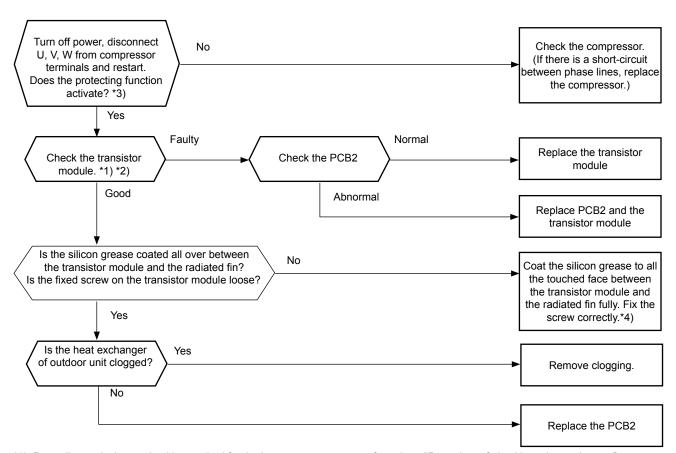

- *1): Regarding replacing or checking method for the inverter components, refer to item "Procedure of checking other main parts".
- *2): Before the checking of inverter components, refer to item "Procedure of checking other main parts". regarding electrical discharge.
- *3): Turn ON the No.1 switch of the dip switch DSW1 on PCB2 when restarting with disconnecting the terminals of the compressor. After troubleshooting, turn OFF the No.1 switch of the dip switch DSW1 on PCB2.
- *4): Use the silicon grease provided as accessory (Service Parts No.: P22760).

Position of Surge Absorber (SA) (380~415V)

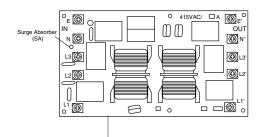


When the unit is applied the excessive surge current due to lighting or other causes, it is indicated this alarm code "04" or the inverter stoppage code (ITC) "11" and the unit can not be operated. In this case, check to ensure the surge absorber (SA) on the noise filter (NF1). If the inside of the surge absorber is normal, turn OFF the power once and wait for PCB2's LED OFF and turn ON again.

Alarm code	Description				
	Abnormal operation of DC fan motor protection				

- The RUN LED flickers and "ALARM" is displayed on the remote control switch.
- The unit number, the alarm code and the unit code are alternately displayed on the set temperature section. The unit number and the alarm code are displayed on the display of the outdoor unit PCB1.
 - The fan motor is stopped when the revolution pulse out put from the DC fan motor is 10 min-1 or less after 10 seconds from the fan operation starting.

After that, if it occurs more than 9 times in 5 minutes, this alarm is indicated.

The abnormality occurs when the DC fan motor is stopped.

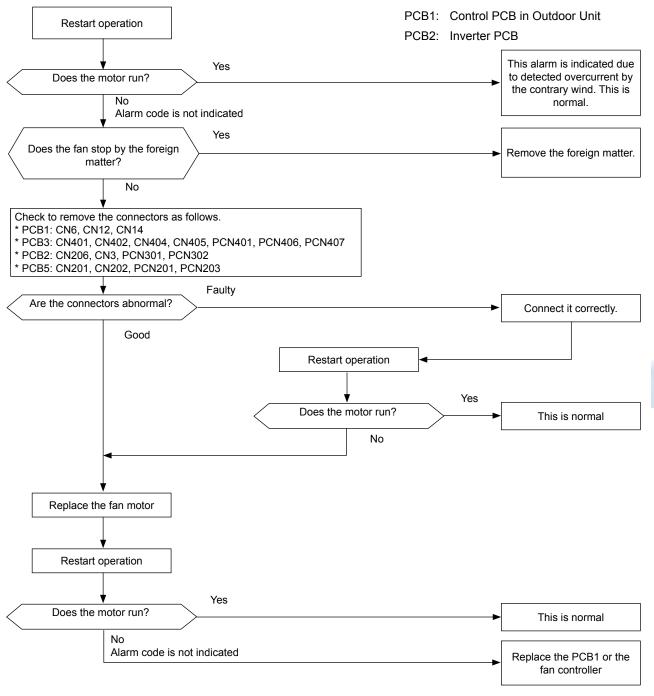

In the case that the fan motor does not run even the PCB1 is replaced, replace the PCB2

Alarm code	code Description			
EE	Compressor protection			

■ This alarm code is displayed when one of the following alarms occurs three times within six hours. If the outdoor unit operates continuously without removing the cause of the alarm, the compressor may be seriously damaged.

Alarm Code:	Content of Abnormality			
02	Tripping of the protection device in the outdoor unit			
רם	Decrease in the discharge gas superheat			
08	Increase in the discharge gas temperature			
Pressure ratio decrease protection activating				
44	Low pressure increase protection activating			
45	High pressure increase protection activating			
47	Low pressure decrease protection activating			



A CAUTION:

You can check these alarms by means of the check mode 1. Follow the action that is indicated in each alarm chart. You can clear these alarms only by turning OFF the main switch to the system. However, you must pay careful attention before starting, because there is a possibility of causing serious damages to the compressors.

Alarm code	Description			
45	Incorrect indoor unit setting			

- The RUN LED flickers and "ALARM" is displayed on the remote control switch.
- The unit number, the alarm code and the unit code are alternately displayed on the set temperature section. The unit number and the alarm code are displayed on the display of the outdoor unit PCB1. ("35" is indicated in the disply of the remote control switch)
 - This alarm is indicated under the following conditions.
 - Turn OFF the power supply and check the setting of DSW and RSW.

More than 17 non-FSN2 Series Indoor Unit (H-LINK) are connected to one system. Conditions:

Non-FSN2 Series Indoor Unit (H-LINK) should be 16 or less Measurement:

FAN HIGH SW COOL MED

HEAT LOW

7.2.3. Troubleshooting in check mode

Use the 'OK' switch of the remote control in the following cases:

- 1. When the RUN LED is flickering.
- 2. To trace back the cause of the malfunction after restarting from the stoppage while the RUN LED is flickering.
- 3. To check during the normal operation or during the stoppage.

COOL

COOL

A/C

HIGH

A/C VENTI

Check mode 2 (Refer to "Check

mode 1" for details)

Check mode disabled

Pres "OK" for


more than 3

seconds

230

CHECK

4. To monitor the inlet air temperature and the discharge air temperature.

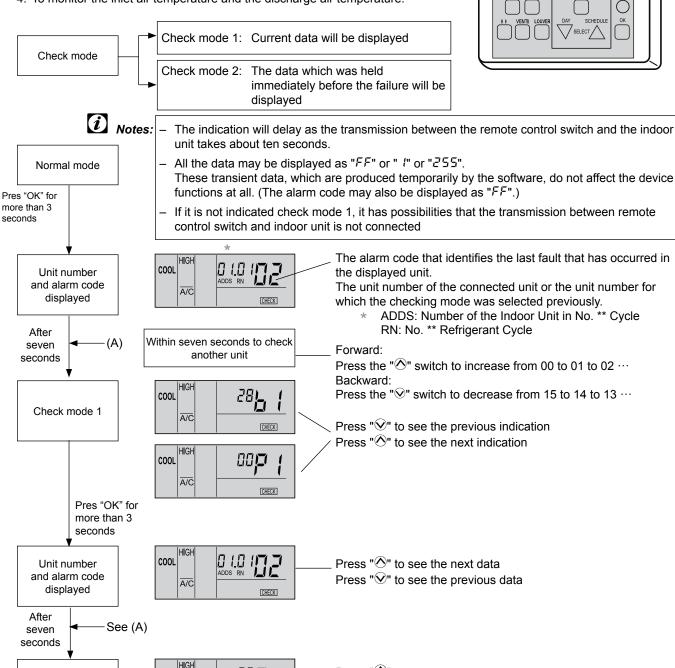

Press "O"

switch.


7

In the Check mode 2, the data of the first three units that are connected serially to a remote control switch are available.

You can press the "OK" switch to disable the Check mode 2.

Check mode 1 cannot be disabled even if you press the "OK"

Although the wireless controller is used for the wall type indoor unit with the built-in receiver part, you can check the alarm code by connecting the PC-ART.

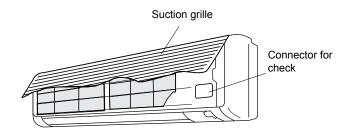

(i)


NOTES:

- The unit does not operate by pressing the operation switch.
- The above function is available only when the alarm occurs.
- 3. The PCB check by means of the remote control switch is not available.
- The indication is the data when you are connecting PC-ART. The indication is not the data before the alarm occurs.


■ Contents of the Check mode 1

The next indication is shown if you press the part "\angle" of the TEMP switch.

If you press the part "▽" of the TEMP switch, the previous indication is shown.

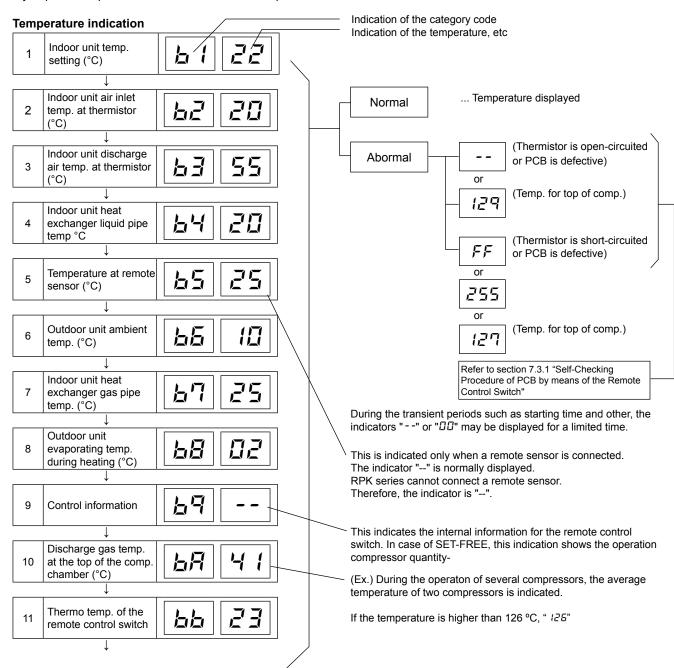

Indication of micro-computer input/output

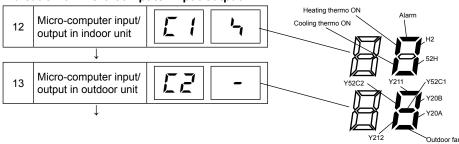

PCB Relay	Part name
H2	Relay for drain pump (MD) and/or dew heater (EHW).
52H	Relay for electric heater (CEH)
Y211	Relay for 4-way valve
Y52C1	Relay for compressor
Y20A	Relay for Selonoid Valve (SVA2)
Y20B	Relay for Selonoid Valve (SVA1)
Y20F	Relay for Selonoid Valve (SVF)
Outdoor Fan	Relay for Outdoor Fan.
YCH	Relay for Cranckcase heater

Indication of unit stoppage cause

14	Cause of stoppage	占	1	1	
	↓				

00	Operation OFF, Power OFF
01	Thermo - OFF (Note 1)
02	Alarm (Note 2)
03	Freeze protection, overheating protection
05	Instantaneous power failure at outdoor unit, reset (Note 3)
06	Instantaneous power failure at indoor unit, reset (Note 4)
רם	Stoppage of cooling process due to low outdoor temperature, stoppage of heating process due to high outdoor temperature
08	Compressor quantity changeover, stoppage (HP³8)
09	Demand of 4-way valve changeover stoppage (FX only)
10	Demand, enforced stoppage
1.1	Retry due to pressure ratio decrease
12	Retry due to low pressure increase
13	Retry due to high pressure increase
14	Retry due to abnormal current of constant speed compressor (HP>12)
15	Retry due to abnormal high temperature of discharge gas, excessive low suction pressure
15	Retry due to decrease of discharge gas superheat
17	Retry due to inverter tripping
18	Retry due to voltage decrease
19	Expansion valve opening change protection
20	Operation mode changeover of indoor unit (Note 5)
	2 Enforced Thermo-OFF

Opera	ition	n mode changeover of indoor unit (Note 5)	
21		Enforced Thermo-OFF	
22		Enforced Thermo-OFF, hot start control at crankcase heater preheating	
25		Retry due to high pressure decrease	
28		Cooling air discharge temperature control	

1. Explanation of Terms

Thermo-ON: A condition where an indoor unit is requesting the compressor to operate.

Thermo-OFF: A condition where an indoor unit is not requesting the compressor to operate.

- 2. Even if stoppage is caused by "Alarm", "02" is not always displayed.
- 3. If the transmission between the inverter printed circuit board and the control printed circuit board is not performed during 30 seconds, the stoppage cause is d1-05 and the alarm code "04" may be displayed.
- 4. If the transmission between the indoor unit and the outdoor unit is not performed during three minutes, the Indoor Units are stopped. In this case, the stoppage cause is d1-06 and the alarm code "03" may be displayed.
- 5. In the system "20" will be indicated at the diference between indoor units.


Countable up to 99.

Over 99 times, "99" is always displayed.

NOTE:

- 1. If a transmission error continues for three minutes, one is added to the occurrence counter.
- 2. The memorized data can be cancelled by the method which is explained in section 7.3.1 "Self-checking Procedure of PCB by means of the Remote Control Switch".

Abnormal operation occurrence counter

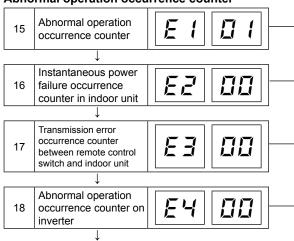


Indication of automatic louver condition


19	Louver sensor	FIDD



Compressor pressure/frequency indication

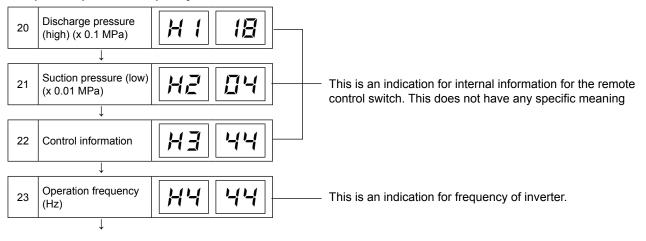

Indoor unit capacity indication

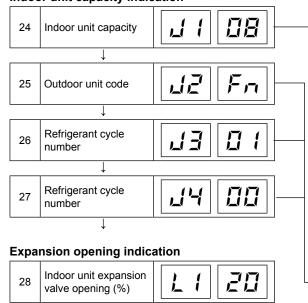

The capacity of the indoor unit is indicated as shown in the table below.


Capacity code of indoor unit

Indication code	Equivalent conscity (UD)
Indication code	Equivalent capacity (HP)
06	0.8
08	1.0
10	1.3
13	1.5
14	1.8
16	2.0
18	2.3
20	2.5
22	2.8
26	3.0/3.5
32	4.0
40	5.0
48	6.0
64	8.0
80	10.0

"n" indicates the total number of Indoor Units:

1~9 E Ľ d Ш Ь 12 16 1~9 10 11 13 14 15

J3: 01 ~ 16 (01: when shipment (DSW5), Decimal indication



In case of models without the expansion valve (MV2), the same figure

Estimated electric current indication



Returns to Temperature indication


The total current is displayed when several compressors are running. In case of the inverter compressor, the running current of the primary side of the inverter is displayed.



■ Contents of the Check mode 2


When more than three indoor units are connected to one remote control switch, the latest data of only the first three indoor units that are connected serially are displayed.


If you press the part " \bigcirc " of the TEMP switch, the next display appears. If you press the part " \bigcirc " of the TEMP switch, the previous display appears.

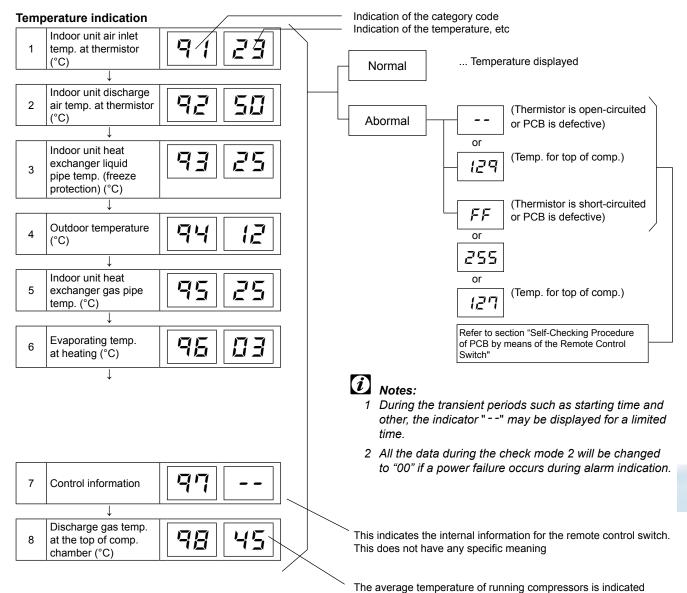

7

Compressor pressure/frequency indication

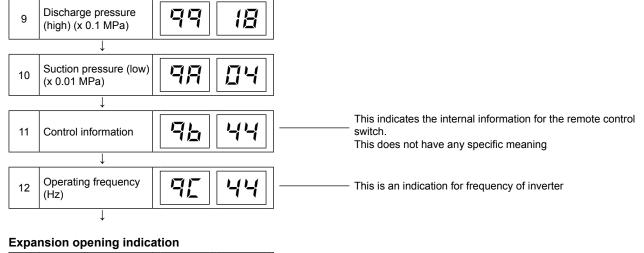



Estimated electric current indication



Returns to temperature indication



7.2.4. Troubleshooting by means of the 7 segment display

■ Simple checking by 7-segment display

1	Turn ON all Indoor Inits connected to the Outdoor Unit
2	Turn ON the Outdoor Unit
3	Auto-addressing starts

Outdoor Unit, Circuit Board, PCB1


During auto-addressing, the following items can be checked using the outdoor unit's on-board 7-segment LED display:

- 1 Disconnection of power supply to the indoor unit.
- 2 Reverse connection of the operating line between the outdoor and indoor units.
- 3 Duplication of indoor unit number.

■ Checking method by 7-segment display

Operating conditions and each part of refrigeration cycle can be checked by 7-segment disply and push switches (PSW) on the PCB1 in the Outdoor Unit. During checking data, do not touch the electric parts except for the indicated switches because 220-240V is applied to them. Pay attention not to contact the tools with electrical parts. If contacted, electrical parts will be damaged

PSW switches



7-segments display



Checking 'procedure:


- To start checking, press PSW2 switch for more than three seconds.
- To proceed checking (forward), press the PSW2 switch for less than two seconds.
- To go back to the previous item (backward), press the PSW3 switch for less than two seconds.
- To cancel this checking, press the PSW2 switch for more than 3 seconds. The
 dfisplay will change to the indication one step before. Then press the PSW2
 switch once again for more than three seconds.




CAUTION

Make sure that the checking mode is cancelled after the checking. Otherwise you may cause a malfunction.

No.	Item	Indication			Data	Values	Units
01	Output state of micro-computer		5		(see figure below)	(see table below)	

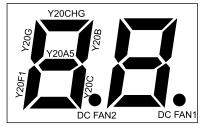



PCB Relay	Part name
Y20A1~A5	Relay for solenoid valve (SVA1~5)
Y20B Y20C Y20G Y20CHG Y20F1	Relay for solenoid valve (SVB/C/G/CHG/F1)
Y52C1~5	Relay for compressor
Y211 Y212	Relay for 4-way valve
YCH1	Relay for crankcase heater
DC FAN1, 2	Relay for 1st and 3rd fan at inverter speed
YMFC3, 4	Relay for 2nd and 4th fan at constant speed



\boldsymbol{i}	Note: Shadowed items are applicable o	nly to F	SN2 se	eries					
No.	Item	Indicat	Indication					Values	Units
02	Total of Thermo-ON indoor unit capacity		₽	F	3	Ē		0 ~ 9999	x1/8 HP
03	Running frequency of inverter compressor MC1		H	1		7	4	0 ~ 115	Hz
04	Number of running compressors						5	0~5	
05	Air flow rate		F	ኴ		1	5	0 ~ 16	(Fan step)
06	Outdoor expansion valve MV1 opening	ኴ	E	1		4	2	0 ~ 100	%
07	Outdoor expansion valve MV2 opening (for 14 to 48HP)	۵	E	E		4	2	0 ~ 100	%
08	Outdoor expansion valve MV3 opening (for 26 to 48HP)	۵	E	3		4	2	0 ~ 100	%
09	Outdoor expansion valve MV4 opening (for 44 to 48HP)	۵	E	4		4	2	0 ~ 100	%
10	Outdoor expansion valve MVB opening	ኴ	E	5		1	3	0 ~ 100	%
11	Discharge pressure (high)		F	占	Z .	8		-0.55 ~ 5.52	MPa
12	Suction pressure (low)		F	5	□.	5		-0.22 ~ 2.21	MPa
13	Discharge gas temp. on the top of compressor MC1 (TD1)	;	4	1		8	Z	1 ~ 142	°C
14	Discharge gas temp. on the top of compressor MC2 (TD2) (for 14 to 48HP)	;-	4	Z		8	5	1 ~ 142	°C
15	Discharge gas temp. on the top of compressor MC3 (TD3) (for 18 to 48HP)	;	占	3		8		1 ~ 142	°C
16	Discharge gas temp. on the top of compressor MC4 (TD4) (for 30 to 48HP)	;-	d	4		8	Z	1 ~ 142	°C

No.	Item	Indicat	ion		Data			Values	Units
17	Discharge gas temp. on the top of compressor MC5 (TD5) (for 38 to 48HP)	;	d	5		8	4	1 ~ 142	°C
18	Evaporating temperature TE1 at heating	;	E	1			Z	-46 ~ 80 (-127 = Open circuited) (127 = Short circuited)	°C
19	Evaporating temperature TE2 at heating (for 14 to 48HP)	,	E	2			Z	-46 ~ 80 (-127 = Open circuited) (127 = Short circuited)	°C
20	Evaporating temperature TE3 at heating (for 26 to 48HP)	,	E	3			Ē	-46 ~ 80 (-127 = Open circuited) (127 = Short circuited)	°C
21	Evaporating temperature TE4 at heating (for 44 to 48HP)	,	E	4			2	-46 ~ 80 (-127 = Open circuited) (127 = Short circuited)	°C
22	Ambient temperature (Ta)		;	ኴ			7	-46 ~ 80 (-127 = Open circuited) (127 = Short circuited)	°C
23	Auto-Charge temperature	;		H		3		-46 ~ 80 (-127 = Open circuited) (127 = Short circuited)	°C
24	Supercooling temperature	,	5			1	5	-46 ~ 80 (-127 = Open circuited) (127 = Short circuited)	°C
25	Estimated running current of compressor MC1		A	1		Z		000 ~ 255	А
26	Estimated running current of compressor MC2 (for 14 to 48HP)		Ħ	E		3	1	000 ~ 255	А
27	Estimated running current of compressor MC3 (for 18 to 48HP)		A	3		3	1	000 ~ 255	А
28	Estimated running current of compressor MC4 (for 30 to 48HP)		A	4		3	1	000 ~ 255	А
29	Estimated running current of compressor MC5 (for 38 to 48HP)		R	5		3	1	000 ~ 255	А
	Indoor unit expansion valve	•	E			4	5		
30	opening (from 0 to 63)		~			~		0 ~ 100	%
		,	E	53			<u> </u>		



No.	Item	Indicat	ion		Data	Data		Values	Units
31	Indoor unit heat exchanger liquid pipe temperature (freeze	,	L				5	-62 ~ 127	°C
31	protection) (from 0 to 63)	,	<u></u>	53		Ę	5	-02 ~ 121	
32	Indoor unit heat exchanger gas	,	<u> </u>			5		-62 ~ 127	°C
32	pipe temperature. (from 0 to 63)	,	L	53		4	B	-02 ~ 121	C
33	Indoor unit air inlet	,	,		₽ ₽ ₽ -62 ~ 127	°C			
33	temperature. (from 0 to 63)	,	,	53		<u> </u>	3	-02 ~ 12 <i>1</i>	
24	Indoor unit discharge air temperature. (from 0 to63)	;	۵			4		62 427	°C
34		;	۵	53				-62 ~ 127 	30
0.5	Indoor unit capacity setting.	[R			H	2	(No.0 Unit) 6 ~ 160	4/01/15
35	(from 0 to 63)	Ľ	Ā	53		-	5	(No. 63 Unit) 6 ~ 160	x1/8HP
	Indoor unit cause of stoppage.	4	1					(No.0 Unit) 0 ~ 99	
36	(from 0 to 63)	d	1	53		~	1	(No. 63 Unit) 0 ~ 99	
37	Pressure ratio fall protection degeneration control	Ľ	1	1				0: not in operation 1: in operation	
38	High pressure rise protection degeneration control	Ľ	1	3			1	0: not in operation 1: in operation	
39	Inverter fin temperature increase protection degeneration control	Ľ	1	4				0: not in operation 1: in operation	

No.	Item	Indicat	ion		Data			Values	Units
40	Discharge gas temp. decrease protection degeneration control	Ľ	1	5				0: not in operation 1: in operation	
41	Discharge gas temp. increase protection degeneration control	Ľ	1	5				0: not in operation 1: in operation	
42	Current protection degeneration control	Ľ	1	7				0: not in operation 1: in operation	
43	Total accumulated hours of compressor MC1	L	1	1	Ę	1	7	0 ~ 9999	x10 times hours
44	Total accumulated hours of compressor MC2 (for 14 to 48HP)	L	1	Ę	Ę	1	4	0 ~ 9999	x10 times hours
45	Total accumulated hours of compressor MC3 (for 18 to 48HP)	11	1	3	2	1	9	0 ~ 9999	x10 times hours
46	Total accumulated hours of compressor MC4 (for 26 to 48HP)	11	1	4	Ę	1	4	0 ~ 9999	x10 times hours
47	Total accumulated hours of compressor MC5 (for 44 to 48HP)	LI	1	5	Γu	1	7	0 ~ 9999	x10 times hours
48	Total accumulated hours of compressor MC1		Ţ		Ĭ	1	4	0 ~ 9999	x10 times hours
49	Total accumulated hours of compressor MC2 (for 14 to 48HP)		1	ř.	ij	1	7	0 ~ 9999	x10 times hours
50	Total accumulated hours of compressor MC3 (for 18 to 48HP)	<u>_</u>	1	3	7	1	9	0 ~ 9999	x10 times hours
51	Total accumulated hours of compressor MC4 (for 26 to 48HP)	<u>-LI</u>	1	4	7	1	9	0 ~ 9999	x10 times hours
52	Total accumulated hours of compressor MC5 (for 44 to 48HP)	<u>-</u> L	1	5	2	1	9	0 ~ 9999	x10 times hours
53	The latest alarm code cause of stoppage at outdoor unit		A				1	0 ~ 99	
54	Cause code of stoppage at inverter	,	;				Z	0 ~ 16	
55	Cause code of stoppage at fan motor controller 1	F	;	[1				0 ~ 16	
56	Cause code of stoppage at fan motor controller 2	F	;			1	1	0 ~ 16	




No.	o. Item			Indication					Values	Units	
		(Hystory No. 1) The latest failure	, - ,	Q			7	7	Integrated hours at alarm in indicated	•	tched in
57	Failure	(Hystory No. 2)	'n	Q		R	1	48	Cause of stoppage		Indication is automatically switched in every 1 second
57	history			~		•	,	Z	ITC indication		on is automa every 1
		(Hystory No. 15) The oldest failure	, ,	۵	15	F	1		FTC indication		Indicatio
58	Total cap unit	acity setting of indoor		11	F	3	B		0 ~ 9999	x1/8	ВНР
59	Total quantity of combined indoor unit			Ħ	A			B	0 ~ 64	un	iits
60	Address	of refrigerant system			R				0 ~ 63		
						Returr "SC"	to Sta	art			

■ Reset for accumulated operation time of compressor 1-5 after maintenance (cUJ1-cUJ5)

Procedure


Press PSW1 for 5 seconds while the accumulated operation time of compressor data is displayed.

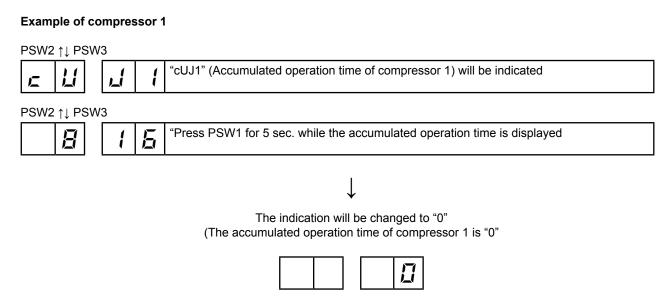

7.2.5. Running current of the compressor

■ Inverter primary current

The inverter primary current is estimated from the running current of the compressor MC1 displayed on the 7 segment display, as chart.

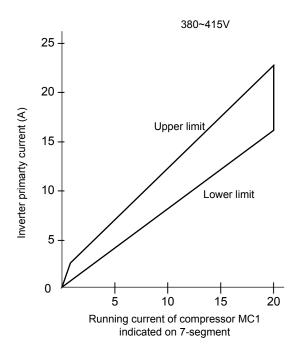

■ Displayed running current of the compressor MC2, MC3, MC4, MC5

The running current of the compressor MC2, MC3, MC4, MC5 is detected by the current sensor. (CT2 ~ CT5)

Cause code of stoppage for the inverter (content of check item " ずじ")

Code	Cause	Cause of stoppage	Remark	
		for correspondign unit	Indication during retry	Alarm code
1	Automatic stoppage of the transistor module (IPM Error) (overcurrent, decrease voltage, increase temperature)	17	P 17	53
Ę	Instantaneous overcurrent	17	P 17	48
3	Abnormal inverter fin thermistor	17	P 17	54
4	Electronic thermal activation	17	P 17	48
5	Inverter voltage decrease (Insufficient Voltage)	18	P 18	O6
5	Voltage increase	18	P 18	Ø5
7	Abnormal transmission	18	-	ДЧ
8	Abnormal current sensor	17	P 17	5 (
9	Instantaneous power failure detection	18	-	-
11	Reset of micro-computer for inverter	18	-	53
12	Earth fault detection for compressor (only starting)	17	P 17	04,53
13	Abnormal power source phase	18	-	-
15	Inverter retry	18	P 18	55

Cause code of stoppage for Fan Controller (content of check item " $\mathcal{F}\Gamma \mathcal{L}$ ")

Code	Cause
1	Automatic stoppage of the transistor module (IPM Error) (overcurrent, decrease voltage, increase temperature)
2	Instantaneous overcurrent
3	Abnormal inverter fin thermistor
4	Electronic thermal activation
5	Inverter voltage decrease (Insufficient Voltage)
5	Voltage increase
7	Abnormal Inverter transmission
1.1	Reset of micro-computer for inverter
Εl	Abnormal power source phase
14	Abnormality of detection for fan motor position
15	Fan controller retry



7.2.6. Protection control code on the 7-segment display

- 1. Protection control code is displayed on 7-segment when a protection control is activated.
- 2. Protection control code is displayed while function is working, and goes out when released.
- 3. When several protection control are activated, code number with higher priority will be indicated (see below for the priority order).
 - Higher priority is given to protection control related to frequency control than the other.

Priority	Protection control	
1	Pressure ratio control	
2	High-pressure rise protection	
3	Current protection	
4	Inverter fan temperature rise protection	
5	Discharge gas temperature rise protection	
6	Low-pressure fall protection	
7	4-way valve switching control	
8	Low-pressure rise protection	

Priority	Protection control		
9	Demand current control (running current limit control)		
10	High-pressure fall protection		
11	Oil return control		
12	TdSH fall protection FSN2: Discharge gas superheat decrease protection		

 In relation to retry control, the latest retrial will be indicated unless a protection control related to frequency control is indicated.

Code	Protection control	
PD (Pressure ratio control (*)	
PDZ	High pressure rise protection (*)	
PD3	Inverter current protection (*)	
PDY	Inverter fin temp rise protection	
P05	Discharge gas temperature increase protection (*)	
P05	Low pressure decrease protection	
PD9	High pressure decrease protection	

Code	Protection control	
P 13	High pressure increase retry	
P 15	Vacuum/discharge gas temperature increase retry	
P 15	Discharge gas SUPERHEAT decrease retry	
P 17	Inverter trip retry	
P 18	Insuffcient voltage/excessive voltage retry	
P25	Hifh pressure decrease retry	

In the case that degeneration control is activated, $\boldsymbol{\mathcal{L}}$ is indicated instead of \square (* mark)

- The retry indication continues for 30 minutes unless a protection control is displayed.
- The retry indication disappears if the stop signal comes from all the rooms.



The protection control code that is displayed on the 7 segment display changes to an alarm code when the abnormal operation occurs. Also, the same alarm code is displayed on the remote control switch.

7.2.7. Activating condition of the protection control code

To monitor the conditions such as the temperature change and others, the control of the frequency and other controls are performed by the protection control in order to prevent the abnormal operations. The activating conditions of the protection control are shown in the table below:

Note:

Shadowed items are applicable only to FSN2 series

Code	Protection control	Activating condition	Remarks	
PD I	Pressure ratio control	Compression ratio $\geq 9 \rightarrow$ Frequency decrease (Pd+0.1(Ps+0.06)) $\leq 2.2 \rightarrow$ Frequency increase	Ps: Suction pressure of compressor [Mpa] Pd: Discharge pressure of compressor [Mpa]	
PDZ	High-pressure increase protection	Pd ≥ 3.6 Mpa (36kgf/cm² G)→ Frequency decrease		
PDB	Inverter current protection	Inverter output current ≥ 23.5A (380-415V) → Frequency decrease	-	
PDY	Inverter fin temp. increase protection	Inverter fin temp. ≥ 89°C → Frequency decrease	-	
P04.	Fan motor controller fin temperature increase protection	Fan motor controller fin temperature ≥ 100 °C		
P05	Discharge gas temperature increase protection	Temperature at the top of compressor is high → Frequency decrease (Maximum temperature is different depending on the frequency)	-	
P05	Low-pressure decrease protection	Low-pressure is excessively low→ Frequency decrease (Minimum pressure is different depending on the ambient temperature)	-	
PD7	Reversing valve switching control	When switching ΔP <1.0MPa \rightarrow Frequency increase ΔP >1.3MPa \rightarrow Frequency decrease	ΔP = Pd - Ps	
P08	Oil return control	Frequency less than (a) is maintained for more than1 hour → Frequency ≥ (a)		(a)
			Cooling operation	75
			Heating operation	84
P09	High-pressure decrease protection	Discharge pressure of compressor decrease → Frequency increase		
POR	Demand current control (Running current imit control)	Compressor run current ≥ Demand setting value → Frequency decrease	Demand current setting value: Upper limit of total running current is set to 80%, 70%, 60% at normal operation using input on PCB1	
POE	Discharge gas SUPERHEAT decrease protection	Temperature of discharge gas is low (Td1 < Pd saturation temperature + 15 °C) → Frequency increase (Frequency is different depending on temperature of discharge gas)		
POd	Low-pressure increase protection	Low pressure ≥ 1.3MPa → Frequency increase		
PII	Pressure ratio decrease retry	Compression ratio (Pd+0.1/(Ps+0.06)≤1.8)	When it activates three times in 30 minutes, the alarm code "43" is displayed	
P 12	Low-pressure increase retry	Ps>1.5MPa	When it activates three times in 30 minutes, the alarm code "44" is displayed	
P 13	High-pressure increase retry	Pd>3.8MPa	When it activates three times in 30 minutes, the alarm code "45" is displayed	
P 14	Overcurrent retry of constant speed compressor	Current ≥ Maximum value (*1), or Current<1.0A	When it activates three times in 30 minutes, the alarm code "39" is displayed	



Service Manual

Code	Protection control	Activating condition	Remarks
P 15	Vacuum/discharge gas temperature increase retry	In Case of Ps<0.09MPa for over 12 minutes, or discharge gas temperature ≥ 132°C for over ten minutes or discharge gas temperature ≥ 140 °C for over five seconds	When it activates three times in one hour, the alarm codes "47" (Ps) or "08" (Discharge gas) are displayed
P 15	Discharge gas SUPERHEAT decrease retry	Discharge gas SUPERHEAT less than ten (10) degrees is maintained for 30 minutes	When it activates three times in two hours, the alarm code "07" is displayed
P 17	Inverter trip retry	Automatic stoppage of transistor module, activation of electronic thermal or abnormal current sensor	When activating three times in 30 minutes, "48", "51" and "53" alarm is indicated
P 17.	Fan motor controller trip retry	Automatic stoppage of fan controller (Electronic thermal activation or Micro-computer reset)	
P 18	Insufficient voltage/ excessive voltage retry	Insufficient/excessive voltage at the inverter circuit or CB connector part	When it activates three times in 30 minutes, the alarm code "06" is displayed
P25	High pressure decrease retry	Pd < 1.00MPa for 1 hour	No alarm
PZT	AC fan motor protection device retry	Activation of internal thermostat of outdoor AC fan motor	When it activates three times in 30 minutes, the alarm code "09" is displayed

Ps: Suction pressure of compressor Pd: Discharge pressure of compressor




8. Spare parts

Contents

8.	Spar	e parts	132
	8.1.	RAS-8~12FSNM(E) Structural and cycle parts	133
	8.2.	RAS-8~12FSNM(E) Electrical parts	135

8.1. RAS-8~12FSNM(E) Structural and cycle parts

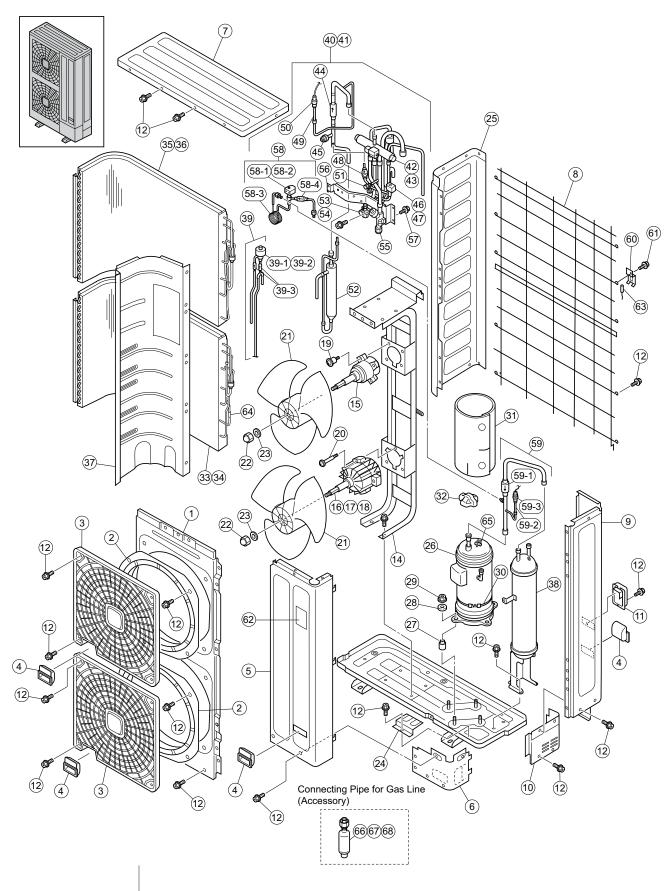

41

Piping Assy




No. **Part Name** Remarks 1 Cabinet Panel Shroud Bell Mouse 3 Air Grille Air Outlet 4 Handle 5 Cabinet Panel Service Cover 6 Cabinet Panel Lower Service Cover 7 Cabinet Panel **Upper Cover** 8 Protection Net 9 Cabinet Panel Rear Cover 10 Piping Cover Rear Piping Cover 11 H-Cover 12 Screw SUS, M5 13 14 Motor Clamp 15 Fan Motor DC Fan Motor, MOF1 / DC170W, 16 Fan Motor AC Fan Motor, MOF2 / AC101W, 6P 17 Fan Motor AC Fan Motor, MOF2 / AC115W, 18 Fan Motor AC Fan Motor, MOF2 / AC183W, 19 Screw SUS, M6 20 SUS, M8 Screw 21 Propeller Fan f544 22 Closing Nut 23 Washer 24 Piping Cover **Bottom Piping Cover** 25 Cabinet Panel Side Cover 26 Compressor E656DHD-65D2 27 Vibration Absorber 28 Vibration Absorber 29 Nut 30 Oil Heater 40.8W 31 Soundproof Cover 32 Rubber Cap 33 Heat Exchanger Lower Side 34 Heat Exchanger Lower Side 35 Heat Exchanger Upper Side 36 Heat Exchanger Upper Side 37 Partition Plate Assy 38 Accumulator 39 **EVO Assy** 39-1 Expansion Valve MV: Saginimiya, UKV-32D28 39-2 Coil for MV: Saginimiya, UKV-U029E 39-3 Strainer 40 Piping Assy

No.	Part Name	Remarks
42	Reversing Valve	Saginomiya, STF-0712G
43	Coil	RVR: Saginomiya, STF- 01AJ502D1
44	Check Valve	Nichiden Kougyou, ZGY-S55B-A
45	Pressure Switch	PSH (High): Saginomiya. ACB-1UB34
46	Solenoid Valve	SVA: Nichiden Kougyou, SR10D
47	Coil	for SVA: Nichiden Kougyou, SR10PA
48	Strainer	
49	PGC Joint	
50	Pressure Sensor	Saginomiya, NSK-BD050F-102 (for Discharge Side)
51	Check Joint	
52	Oil Separator	
53	Stop Valve	for Liquid Line
54	Stop Valve	for Liquid Line
55	Stop Valve	for Gas Line
56	Valve Stay	
57	Screw	M5
58	Solenoid Valve Assy	SVF Assy
58-1	Solenoid Valve	SVF: Nichden Kougyou, SR10D
58-2	Coil	for SVF: Nichiden Kougyou, SR10PA
58-3	Capillary Tube Assy	
58-4	Strainer	
59	Piping Assy	S-Pipe Assy
59-1	Strainer	
59-2	PGC Joint	
59-3	Pressure Sensor	Saginomiya, NSK-BD020F-102 (for Suction Side)
60	Thermo Attaching Plate	
61	Screw	SUS, M5
62	HITACHI Label	
63	Thermistor	TA
64	Thermistor	TE
65	Thermistor	TD
66	Accessory Pipe	
67	Accessory Pipe	
68	Accessory Pipe	

8

8.2. RAS-8~12FSNM(E) Electrical parts

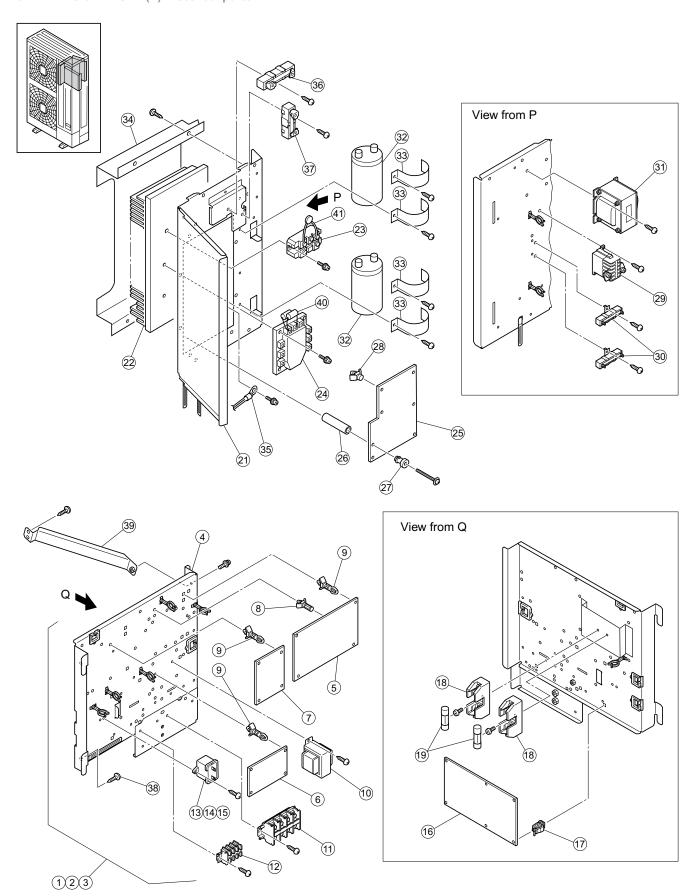



No	Dort Name	Domonico
No.	Part Name	Remarks
1	Attaching P-Plate Assy	
2	Attaching P-Plate Assy	
3	Attaching P-Plate Assy	
4	Attaching P-Plate	
5	Printed Circuit Board	PO081-S
6	Printed Circuit Board	PO084
7	Printed Circuit Board	PO083-S
8	Plastic Material	Spacer
9	Plastic Material	Spacer
10	Transformer	
11	Terminal Board	4P, M5, 600VAC 50A for Power Source
12	Terminal Board	4P, M4, 250VAC 20A for Transmitting
13	Capacitor	440VAC, 7μF
14	Capacitor	440VAC, 8μF
15	Capacitor	440VAC, 10μF
16	Noise Filter	
17	Plastic Material	Holder
18	Fuse Holder	
19	Fuse	40A

No.	Part Name	Remarks
20	Power Plate Assy	
21	Power Plate	
22	Radiation Fin	
23	Diode Module	
24	Transistor Module	
25	Printed Circuit Board	PV041-S for Inverter
26	Plastic Material	Collar
27	Plastic Material	Bush
28	Plastic Material	Spacer
29	Mag. Contactor	CMC1: Fuji Electric Co. Ltd, FC-0/SP
30	Resistor	RS1, RS2
31	Reactor	DCL
32	Capacitor	400VAC□4700μF
33	Saddle	
34	Fin Cover	
35	Thermistor	Fin Thermistor
36	Resistor	R1
37	Resistor	R2
38	Screw	
39	Stay	
40	Capacitor Assy	Herness PC301 (CS1, CS2)
41	Noise Suppressor	ZNR Assy



9. Servicing

Contents

9. Servicing	
9.1. Outdoor Unit FSNM(E)	138
9.1.1. Removing service cover	138
9.1.2. Removing air outlet grille	138
9.1.3. Removing upper cover	138
9.1.4. Removing the lower part of service cover and rear cover	139
9.1.5. Removing outdoor fan motor	139
9.1.6. Removing Electrical Box	140
9.1.7. Removing compressor	
9.1.8. Removing high pressure switch	145
9.1.9. Removing high pressure sensor and low pressure sensor	146
0.1.10 Opening electrical box (Dower plate)	146
9.1.11. Removing reversing valve coil and solenoid valve coil (SVA	A, SVF)147
9.1.12. Removing electronic expansion valve coil	148
0.1.12 Domoving roversing valve	149
9.1.14. Removing electronic expansion valve	150
9.1.15. Removing solenoid valve	
9.1.16. Remove the control PCB (PCB1)	
9.1.17. Removing Relay PCB (PCB3, PCB5)	152
9.1.18. Removing inverter components	153
9 1 19 Removing other inverter components	155

Service Manual

9.1. Outdoor Unit FSNM(E)

Remove the main parts according to the following procedures.

To reassemble, perform the procedures in reverse.


To prevent contamination of the refrigerant with water or foreign particles, do not expose to the atmosphere for long periods. If necessary, seal pipe ends using caps or tape.

9.1.1. Removing service cover

Remove the five (5) fixing screws, slide the service cover downward and remove.


Pay attention not to fall off the service cover.

Pay attention not to be injured by the edge of the cover.

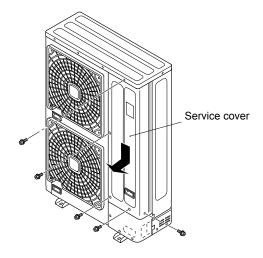


9.1.2. Removing air outlet grille

Remove the eight (8) fixing screws of the shroud.

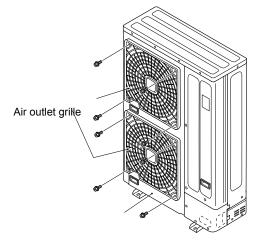


9.1.3. Removing upper cover

Remove eleven (11) screws fixing the upper cover and remove the upper cover upward.

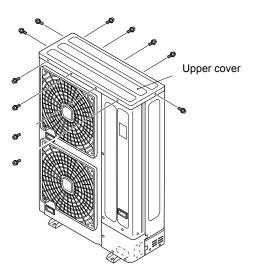


9.1.4. Removing the lower part of service cover and rear cover

- 1 Remove the service cover according to the item "Removing service cover".
- 2 Remove five (5) screws fixing the lower part of service cover and remove the lower part of service cover by pulling towards front side.
- 3 Remove the upper cover according to the item "Removing upper cover".
- 4 Remove fourteen (14) screws fixing the rear cover and remove the rear cover by pulling towards rear side. (Air inlet grille, electrical box, valve stay)

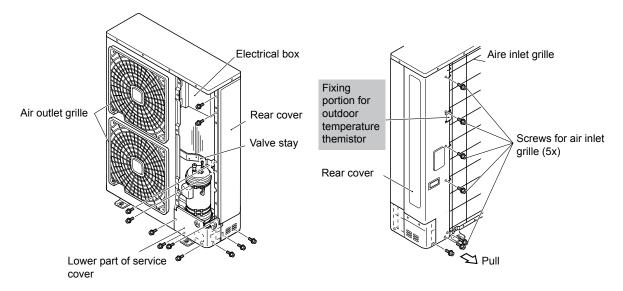

9.1.5. Removing outdoor fan motor


- 1 Remove the service cover according to the item "Removing service cover".
- 2 Remove the air outlet grille according to the item "Removing air outlet grille".
- 3 Remove the upper cover according to the item "Removing upper cover".
- 4 Remove the propeller fan by removing the cap nuts and washers fixing the propeller fan onto the motor shaft. (If it is difficult to remove the fan, use puller.)
- 5 Remove the DC fan motor connector from the PCB5: PCN203 (white) and CN201 (white) and AC fan motor connector from the PCB3: PCN404 (white) at the electrical box.
 - Cut off the plastic tie for fan motor lead wire fixing at the motor clamp with a nipper.
 - Remove four (4) M8 screws with spacer fixing the motor.

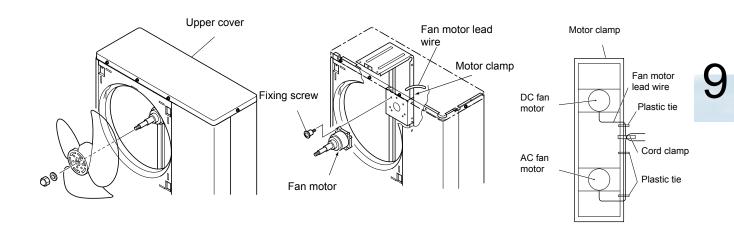

i

NOTES:

- 1 Fix the motor wire with the plastic tie or the cord clamp. If not, it may cause the disconnection to the fan.
- 2 Mount the rubber bush at the partition plate when inserting the motor wire through the partition plate. If not, it may cause the disconnection to the fan motor lead wire.
- 3 When mounting the motor, ensure the cables point directly downward. Fix the protection tube edge downward to ensure the water may not keep in it.
 - (Adjust the clearance between shroud and propeller fan so that they do not contact.)
- 4 Fix the motor wires onto the motor clamp with a plastic tie to prevent them obstructing the propeller fans.
- 5 Mounting Propeller Fan
 - Insert the skidding protection part of fan boss in accordance with the cutting part of the motor shaft, and fix the screw after exserting screw part of the shaft. (Tightening Torque of 20 N•m)
- 6 When connecting the motor wire, check to ensure that the colors of the connectors on the PCB3 and PCB5 are matched with wires.
- 7 Firmly fix the air outlet grille to the shroud.

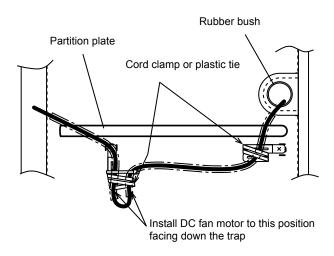

9.1.6. Removing Electrical Box

- 1 Remove the service cover according to the item 2.1 "Removing Service Cover".
- 2 Remove the upper cover according to the item 2.3 "Removing Upper Cover"
- 3 Remove six (6) fixing screws for electrical box.
- 4 Lift the electrical box and remove it.


(i)


NOTES

The wiring disconnecting works are required as follows when removing the electrical box.

- 1 Remove reversing valve coil according to the item "Removing Reversing Valve Coil and Solenoid Valve Coil".
- 2 Remove electronic expansion valve coil according to the item "Removing Electronic Expansion Valve Coil".
- 3 Remove solenoid valve coil according to the item "Removing Reversing Valve Coil and Solenoid Valve Coil".
- 4 Disconnect the faston terminal of the high pressure switch.
- 5 Disconnect the connectors on the PCB1 as follows.
 - THM7 (Thermistor for Ambient Temperature)
 - THM8 (Thermistor for Heating Evaporation Temperature)
 - THM9 (Discharge Gas Thermistor)
 - PCN5 (Oil Heater)
 - CN4 (High Pressure Switch)
 - CN9 (Low Pressure Sensor)
- 6 Disconnect the connectors on the PCB3 and PCB5 as follows

- PCB5: PCN203, CN201 (for DC Fan Motor)
- PCB3: PCN404 (for AC Fan Motor)
- 7 Disconnect the compressor wires from the compressor terminal box.
- 8 Reassemble the electrical box in the reverse order of removing procedures.

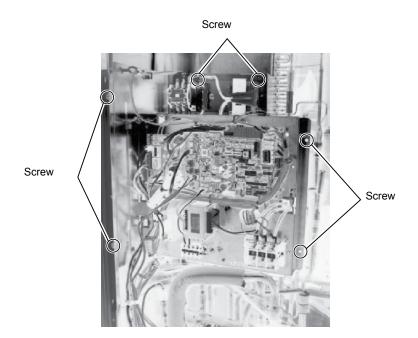

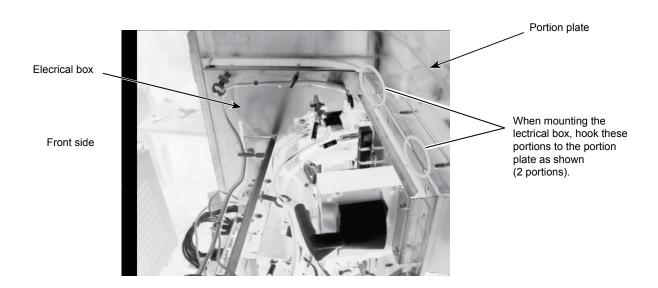

9

Service Manual


9.1.7. Removing compressor


- 1 Remove the service cover and the lower part of the service cover according to the item "Removing service cover" and the item "Removing the lower part of service cover and rear cover". In case that the outdoor unit is installed to the wall closely, remove the outdoor unit from the wall.
- 2 Collect the refrigerant from the check joint. Collect the refrigerant from the liquid stop valve, gas stop valve and check joint at piping.
- 3 Open the soundproof cover wrapping around the compressor and remove the terminal box cover at the compressor. Disconnect the compressor wires in the terminal box and remove the soundproof cover.





Check to ensure each terminal Nos. and indications. If wires are connected in incorrect order at reassembling, it will lead to compressor failure.

- 4 Remove the holder for Td thermistor and the thermistor on the top of the compressor according to the figure on the next page.
- 5 Remove the oil heater.

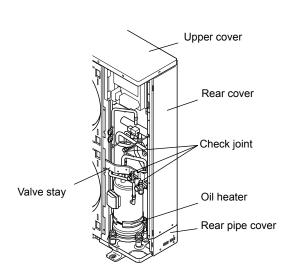


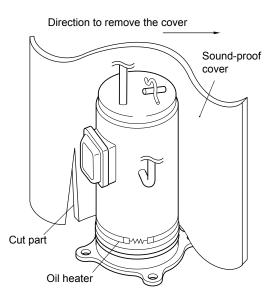

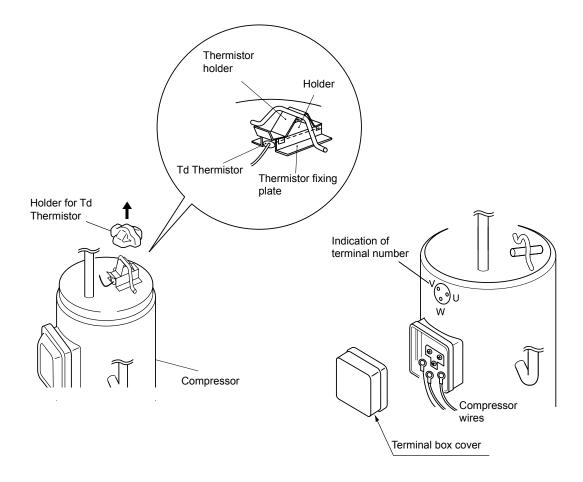

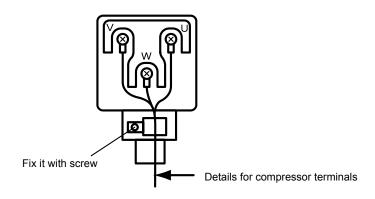

- 6 Remove the suction pipe and discharge pipe from the compressor. Isolate the wires and electrical components to protect from the burner flame at brazing.
- 7 Remove two (2) nuts fixing the compressor and remove the compressor from the unit by lifting in the condition of slightly inclining forward.
- 8 When brazing the replaced compressor, quickly perform the brazing while the compressor side piping is cooled with wet cloth in order to avoid the brazing material from entering the compressor.
 - If the brazing material enters the compressor, it will lead to compressor failure.
- 9 Reassemble the parts in the reverse order of removing procedures.
 - Tighten the screws (U, V and W) for compressor wires with 2.5N·m.
 - Fix the lead wire firmly.
 - Attach the oil heater firmly to the compressor and fix it with spring as shown in the figure.

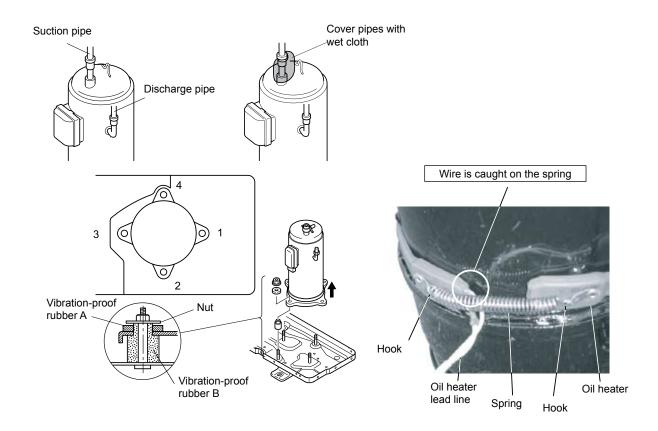

Compressor position	1	2	3	4
Vibration-proof rubber A	0	0	0	0
Vibration-proof rubber B	0	0	_	_
Nut	0	0	-	_

i NOTES:

- 1. The compressor is connected by brazing. Check to ensure whether there are flammable things around or not when using a burner for pipe connections. If not, oil existing pipe inside may ignite.
- 2. Do not expose the refrigerant cycle to the atmosphere for a long period in order to avoid mixing the water and foreign particles into the refrigerant cycle. After removing compressor, replace it quickly. If exposed for a long period, seal the suction pipe and discharge pipe.
- 3. Remove the cap for the compressor just before replacing the compressor. Before mounting the compressor, seal the suction pipe and discharge pipe with a tape to protect the compressor from foreign particles. Remove the tape at pipe connection.
- 4. Match the terminal No. with the mark band No. when reassembling. If the wiring is connected incorrectly, the compressor may be damaged due to reverse rotation.
- 5. Fix the lead wire for the compressor firmly not to contact with metal sheet edge and high temperature piping.
- 6. If there is a clearance between the oil heater and the compressor due to wire overlapping, excessive heat is generated there. Then oil heater is failed due to overheating. When mounting the reassembled oil heater, this point should be taken into account.
- 7. If the oil heater lead wire is caught on the spring, the lead wire may be cut due to vibration. When reassembling, attention should be paid to the lead wire.


9.1.8. Removing high pressure switch


- 1 Remove the service cover according to the item "Removing Service Cover".
- 2 Collect the refrigerant from the check joint according to the item "Removing Compressor".
- 3 Pull out the fasten terminals.
 Remove the high pressure switch from the brazing part of the discharge pipe.




CAUTION:

Check to ensure whether there are flammable things around or not when using a burner. And remove the insulations before brazing work. If not, fire may occur.

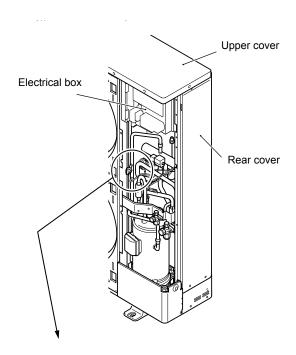

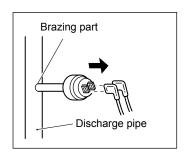

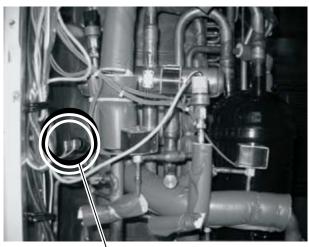

High pressure switch




- 9.1.9. Removing high pressure sensor and low pressure sensor
- 1 Remove the connector for the pressure sensor wiring from PCB1



Remove the connector firstly. If not, the wiring may be damaged.

2 Remove the refrigerant piping for the high pressure sensor or low pressure sensor by use of two spanners.

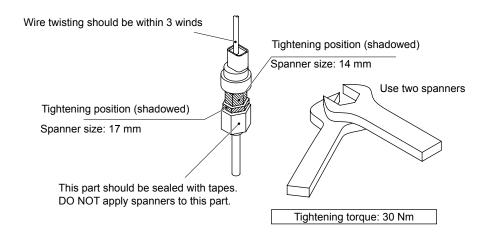


9.1.10 Opening electrical box (Power plate)

- 1 Remove the service cover according to the item "Removing service cover".
- 2 Remove five (5) screws fixing the electrical box. Open the power plate by rotating 90 degrees to the left. Check to ensure the LED201 (Red) of the inverter PCB (PCB2) is OFF when opening the power plate.



Do NOT touch the electrical components when the LED201 (Red) is ON to avoid electrical shock.

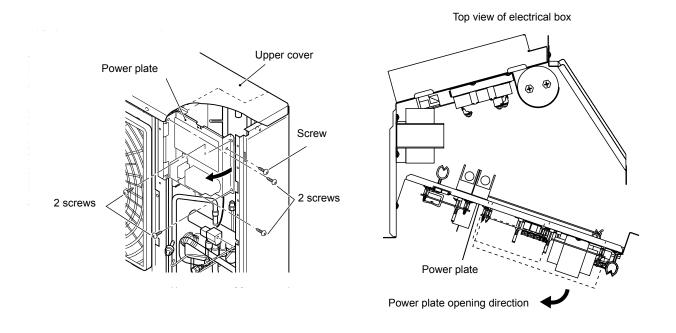


9.1.11. Removing reversing valve coil and solenoid valve coil (SVA, SVF)


- 1 Remove the service cover according to the item "Removing service cover".
- 2 Open the power plate according to the item "Opening electrical box (Power plate)". Check to ensure the LED201 (Red) of the inverter PCB (PCB2) is OFF.

i NOTE:

Do NOT touch the electrical components when the LED201 (Red) is ON to avoid electrical shock.

- 3 Remove the connectors (PCN12, PCN7, PCN6) on the control PCB (PCB1) of the electrical box.
- 4 Remove the reversing valve coil and solenoid valve coils by removing one (1) screw fixing each coil.

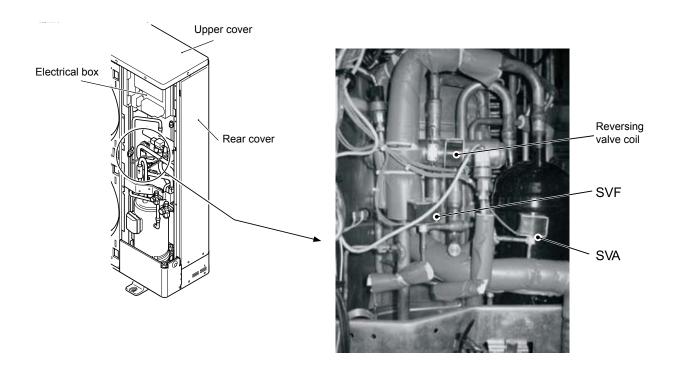

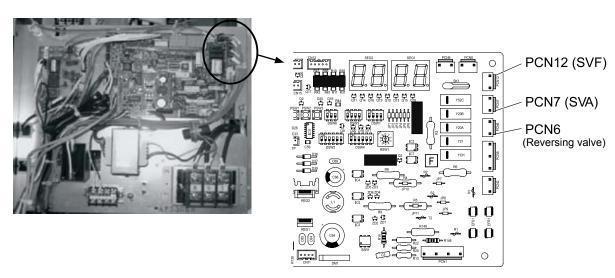

Enlarged view fo PCB1

Service Manual

9.1.12. Removing electronic expansion valve coil

- 1 Remove the service cover according to the item "Removing service cover".
- 2 Open the power plate according to the item "Opening electrical box (Power plate)". Check to ensure the LED201 (Red) on the inverter PCB (PCB2) is OFF.



Do NOT touch the electrical components when the LED201 (Red) on the inverter PCB (PCB2) is ON to avoid electrical shock.


- 3 Remove the CN5A connector on the control PCB (PCB1) of the electrical box.
- 4 Hold the electronic expansion valve coil, slightly rotate, and then pull it up. Refer to the figure below and replace the electronic expansion valve coil. The lock mechanism is equipped with the electronic expansion valve coil. Check to ensure that the electronic expansion valve coil is locked.



Electronic expansion valve coil

9.1.13. Removing reversing valve


- 1 Remove the service cover and rear service cover according to the item "Removing service cover" and the item "Removing lower part of service cover and rear cover".
- 2 Collect the refrigerant from the check joint according to the item "Removing compressor".
- 3 Remove the reversing valve coil according to the item "Removing reversing valve coil and solenoid valve coil".
- 4 Remove the electrical box according to the item "Removing electrical box".
- 5 Remove two (2) fixing screw for valve stay.
- 6 Remove the stop valves from the valve stay by removing four (4) screws.
- 7 Remove the reversing valve assemblies from the designated positions. (4 brazing parts)
 Remove the brazing of the reversing valve and the stop valve at gas side by cooling with wet cloth.
 Protect the connecting wires and pipe insulation from brazing work.
- 8 Remove the reversing valves from the assemblies (4 portions with (*) mark in the figure below). Perform the brazing to remove and reassemble the reversing valve by cooling with wet cloth.
- 9 Reassemble the parts in the reverse order of removing procedures. When SVF (solenoid valve) is removed, fix it according to the item "Removing solenoid valve".

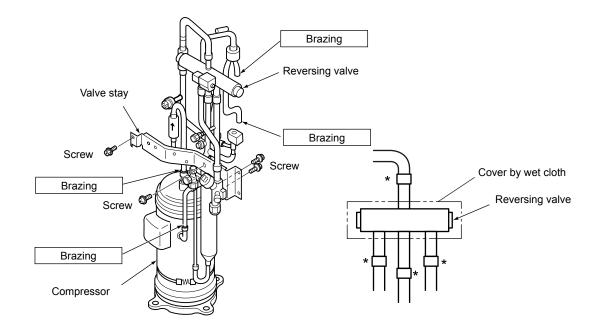

Service Manual

9.1.14. Removing electronic expansion valve

- 1 Remove the service cover and rear cover according to the item "Removing service cover" and the item "Removing the lower part of service cover and rear cover".
- 2 Collect the refrigerant from the check joint according to the item "Removing compressor".
- 3 Remove the coil according to the item "Removing electronic expansion valve coil".
- 4 Remove the brazing as shown in the figure below.
 - Electronic Expansion Valve (EV0): 2 brazing parts.
 - Perform the brazing to remove and reassemble the electronic expansion valve by cooling with wet cloth.
 - Protect the connecting wires and pipe insulation from brazing work.
- 5 Reassemble the parts in the reverse order of removing procedures.

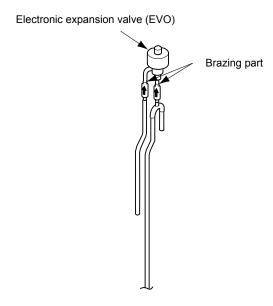


9.1.15. Removing solenoid valve

- 1 Remove the service cover and rear cover according to the item "Removing service cover" and the item "Removing the lower part of service cover and rear cover".
- 2 Collect the refrigerant from the check joint according to the item "Removing compressor".
- 3 Remove the solenoid valve coil according to the item "Removing reversing valve coil and solenoid valve coil".
- 4 Remove the brazing and flare nuts as shown in the figure below.

Solenoid Valve (SVA): 2 brazing parts

Solenoid Valve (SVF): 2 flare nuts

- Perform the brazing to remove and reassemble the solenoid valve by cooling with wet cloth.
- Protect the connecting wires and pipe insulation from brazing flame.
- Remove the flare nuts with two spanners to avoid twisting.
- 5 Reassemble the parts in the reverse order of removing order.

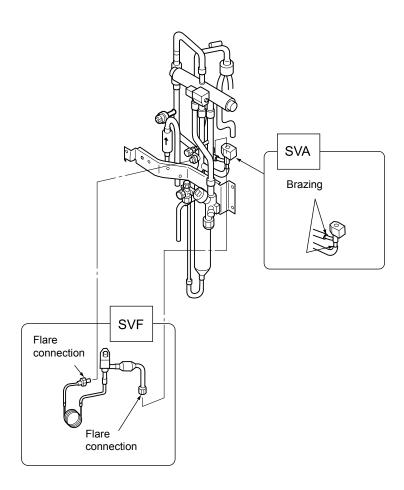



9.1.16.Remove the control PCB (PCB1)


- 1 Remove the service cover according to the item "Removing service cover".
- 2 Disconnect all the wires connected with the control PCB (PCB1).
- 3 Clamp the hook of the four (4) holders by long-nose pliers and remove by sliding toward front side.

i NOTES:

- 1. Use the long-nose pliers when disconnecting faston terminal (R1, N1, R2, T2, S2).
- 2. In case of replacing the control PCB (PCB1), set all the dip switches and jumper cables as the same position before replacing. If not, malfunction pay occur.

9.1.17. Removing Relay PCB (PCB3, PCB5)

- 1 Remove the service cover according to the item "Removing service cover".
- 2 Disconnect all the wires connected with the relay PCB (PCB3, PCB5).
- 3 Clamp the hook of the four (4) holders by long-nose pliers and remove by sliding toward front side.

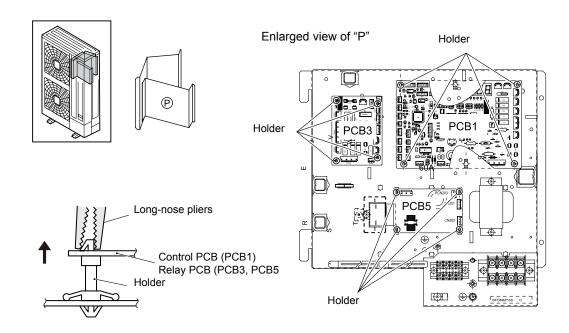



9.1.18. Removing inverter components



Danger

Do not touch the electrical parts when LED201 (Red) on the PCB2 is ON to avoid an electrical shock.



Notes

- 1. When replacing the transistor module (IPM) and diode module (DM) on heat radiation fin, slightly apply the heat conducting silicon grease (Manufacturer: Shin-Etsu Chemical Co., Ltd, Product No.: G-746) over the fin contact surface. Use the silicon grease provided as accessory (Service Parts No.: P22760).
- 2. Identify the terminal Nos. with the mark band Nos. when reassembling. If connected incorrectly, malfunction or electrical component damage will occur.
- 3. Correctly insert two wires of U and V phases for the power cable of inverter compressor into the current sensor, CTU and CTV on PCB2. Connect Phase U power cable with the current sensor Phase U (CTU) and Phase V power line with current sensor Phase V (CTV). If connected incorrectly, malfunction or electrical component damage will occur.
- 4. When mounting PCB and the sheet metal part for PCB, pay attention not to clamp the electrical wiring together.
- 5. Screws, bushes and collars are used for fixing inverter PCB. Check to ensure that the bushes and collars are used for PCB remounting. If not used, it may cause malfunction.
- 6. In case of replacing control PCB, set all the dip switches as the same position before replacing. If not, malfunction may occur.
- 7. Do not apply strong force to the electric components and PCBs to avoid damage.
- 1 Remove the service cover according to the item "Removing service cover".
- 2 Open the power plate by rotating 90 degrees to the left according to the item "Opening electrical box (Power plate)". Check to ensure that LED201 (Red) of the PCB2 is OFF.

■ Removing PCB2

- Disconnect the wirings of connectors C, CN2, CN206 and PCN301 on the PCB2
- Disconnect the wirings of U and V on the transistor module.
- After removing three (3) M3 screws, remove the bushes and the collars from the PCB2.
 When remounting, attach those bushes and collars.

■ Removing Diode Module

Disconnect all the wirings connected to the diode module as shown below.

- Disconnect the wirings of terminal +, -, U, V, W on the diode module.
- Remove two (2) M5 fixing screws on the diode module.
- Remove the diode module from the electrical box.

Removing Transistor Module


Disconnect all the wirings connected to the transistor module as shown below.

- Disconnect the wirings of connectors C, CN2, CN206 and PCN301 on the PCB2
- Disconnect the wirings of P, N, U, V, W on the transistor module.
- Remove the four (4) M3 screws for the PCB2 and then remove the PCB2 from the transistor module.
- Remove four (4) M4 fixing screws on the transistor module.
- Remove the transistor module from the electrical box.


0

NOTES:

- Identify the terminal Nos. with the mark band numbers when reassembling. If incorrectly connected, malfunction or damage will occur.
- Check to ensure that the electrical wires will not be caught between the mounting electrical components and the mounting plates when the PCB2 is remounted.
- Apply silicon grease evenly on the whole rear side of the diode module and the transistor module when mounting.
 Silicon grease is available as a field-supplied accessory.

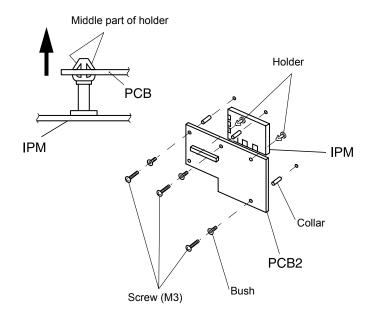

PCB2 and IPM (Transistor module)

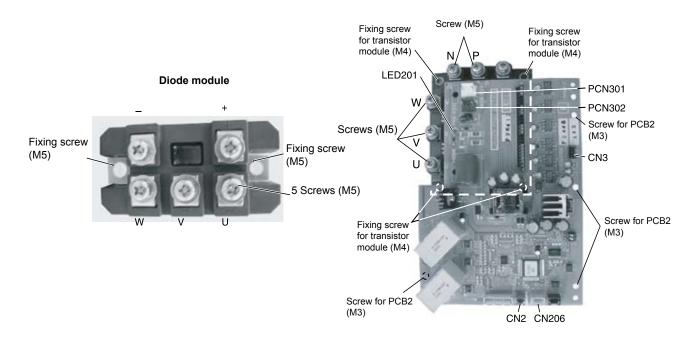



9.1.19. Removing other inverter components



Danger

Do not touch the electrical parts when LED201 (Red) on the PCB2 is ON to avoid an electrical shock.


- 1 Remove the service cover according to the item "Removing service cover".
- 2 Open the power plate according to the item "Opening electrical box (Power plate).

Check to ensure the LED201 (Red) of the inverter PCB (PCB2) is OFF when opening power plate.


- Disconnect all the wires connected with the capacitor (CB, CB1, CB2).
 - The wire has the polar characters. Identify the wire mark band and the indication on the capacitor when wire connecting.
 - Remove two (2) screws fixing the capacitor and remove the capacitor.
- Disconnect all the wires connecting with the magnetic contactor (CMC1).
 - Remove two (2) screws fixing the magnetic contactor and remove the magnetic contactor.
- Remove four (4) screws fixing the reactor and remove the reactor (DCL).
- Disconnect all the wires connected with the noise filter (NF1).
 - Remove the noise filter by clamping the top of the holder (6 portions) with a pincher (In case of 220V) as shown in the figure.




- Identify terminal numbers with the mark band numbers when reassembling to avoid incorrect wiring.
- For the DSW setting after replacing PCB, refer to "Rotary switch and dip switch setting".



Current sensor




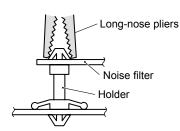

Enlarged view of "P"

Capacitor Diode module CB1 CB2 PCB2 Capacitor Transistor module PCB2 (Inverter PCB)

Enlarged view of "Q"

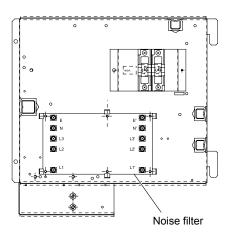



Servicing

Service Manual



10. Main parts

Contents


10. Main parts	
10.1. Inverter	158
10.1.1. Specifications of inverter	158
10.1. Inverter	158
10.1.1. Specifications of inverter 10.1.2. Inverter time chart 10.1.3. Protective Function 10.1.4. Overload Control	160 161
10.2. Thermistor	 163
10.2.1. Position of thermistor	163 163
10.3. Electronic expansion valve	
10.3.1. Electronic expansion valve for the outdoor unit	
10.4. Pressure sensor	167
10.5. Scroll compressor	168
10.5.1. Reliable mechanism for low vibrating and low sound	168




10.1. Inverter

10.1.1.Specifications of inverter

Aplicable model	RAS-8~12FSNM(E)
Aplicable power source	3 Phase. 380V, 415V 50 Hz
Output voltage	380-415V
Output current	25A
Control Method	Vector Control
Range Output Frequency	10~100HZ
Accuracy of Frequency	0,01
Controlled Frequency	0,01 Hz at Applicable frequency range

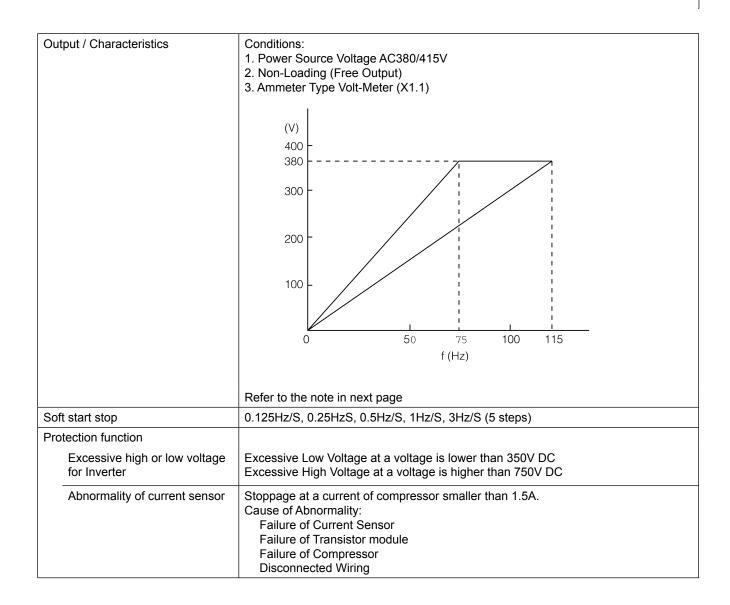


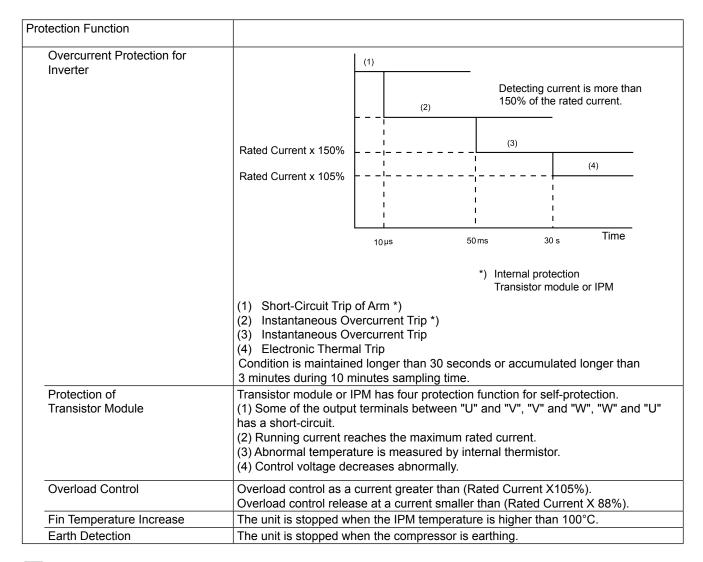



Characteristics are fluctuated by the current minimize control.

10.1.2.Inverter time chart

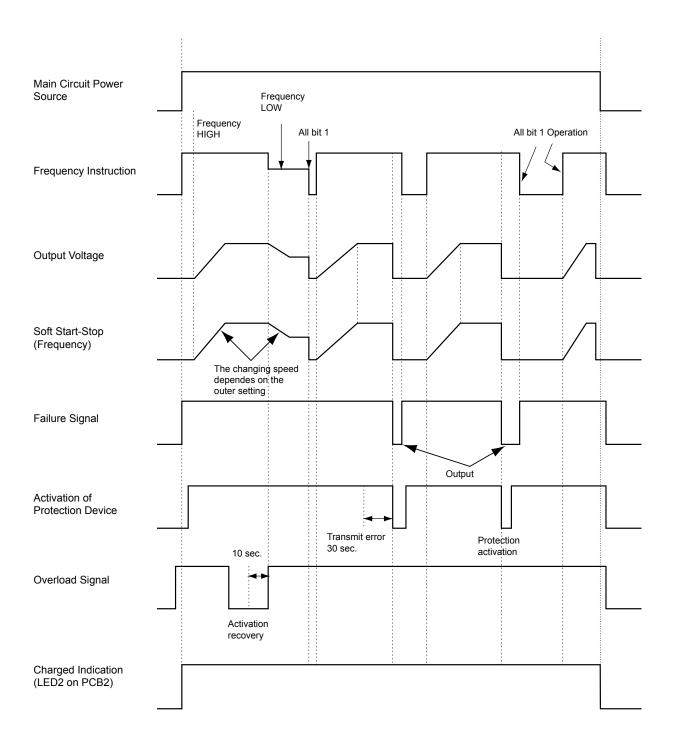

10.1.3. Protective Function

1. Excessive High or Low Voltage for Inverter

a) Level of Detection

- When the voltage of direct current is greater than 750 V, abnormalities are detected.
- When the voltage of direct current is smaller than 350 V, abnormalities are detected.

b) Function

When abnormalities are detected, the inverter compressor is stopped and transmit the signal code of stoppage cause to PCB1.

c) Cancellation of Protection Function

Transmission for signal code of stoppage cause is cancelled when a stopping order is given or main power source is cut off.

2. Abnormality of Current Sensor

a) Level of Detection

When current of the inverter compressor decreases lower than 1.5A during the inverter compressor frequency between 15Hz and 18Hz, an abnormality is detected.

b) Function

When abnormalities are detected, the inverter compressor is stopped, and transmit the signal code of stoppage cause to PCB1.

c) Cancellation of Protection Function

Transmission for signal code of stoppage cause is cancelled when a stopping order is issued or main power source is cut off.

3. Overcurrent Protection for Inverter

a) Level of Detection

When the current detected by current sensor reaches 150% of the rated current, overcurrent is detected. (Instantaneous Overcurrent)

When the current detected by current sensor exceeds 105% of the rated current continuously for 30 seconds or for 3.5 minutes in total during a 10 minutes period, overcurrent is detected. (Electric Thermal Relay)

b) Function

When abnormalities are detected, the inverter compressor is stopped and transmit the signal code of stoppage cause to PCB1.

c) Cancellation of Protection Function

Transmission for signal code of stoppage cause is canceled by stopping order is issued or main power source is cut off.

4. Protection of transistor module and IPM

a) Level of Detection

When some of the output terminals between "U" and "V", "V" and "W", "W" and "U" of transistor module or IPM are short-circuited, an abnormality is detected.

When the running current of transistor module or IPM reaches (Maximum Rated Current x 105%), an abnormality is detected.

When an internal temperature is measured by internal thermistor of transistor module or IPM, an abnormality is detected.

When the control voltage of transistor module or IPM decreases, an abnormality is detected.

b) Function

When abnormalities are detected, the inverter compressor is stopped and the signal code of stoppage cause is transmitted to PCB1.

c) Cancellation of Protection Function

Transmission for signal code of stoppage cause is canceled when a stopping order is issued or main power source is cut off.

5. Fin Temperature Increase

a) Level of Detection

Service Manual

When the temperature of internal thermistor exceeds more than 100 °C, an abnormality is detected.

b) Function

When abnormalities are detected, the inverter compressor is stopped and the signal code of stoppage cause is transmitted to PCB1.

c) Cancellation of Protection Function

Transmission for signal code of stoppage cause is canceled when a stopping order is issued or main power source is cut off.

6. Earth Detection

a) Level of Detection

When the starting current of the compressor reaches 80% of the overcurrent protection value, an abnormality is detected.

b) Function

When abnormalities are detected, the inverter compressor is stopped and the signal code of stoppage cause is transmitted to PCB1.

c) Cancellation of Protection Function

Transmission for signal code of stoppage cause is canceled when a stopping order is issued or main power source is cut off.

10.1.4. Overload Control

a) Level of Detection

When the output current exceeds 105% of the maximum output current, an abnormality is detected.

b) Function

An overload signal is issued when output current exceeds 105% of the maximum output current, and the frequency decreases.

For 10 seconds after the output current decreases lower than 88% of the rated current, the operation is performed with the compressor frequency limited to the upper level frequency when the output current decreases lower than 88% of the rated one.


However, if the frequency order is smaller than the maximum value, the operation is performed according to the order.

c) Cancellation of Protection Function

After the operation described in the above item (b) is performed for 10 seconds, this control is canceled

10.2. Thermistor


10.2.1.Position of thermistor

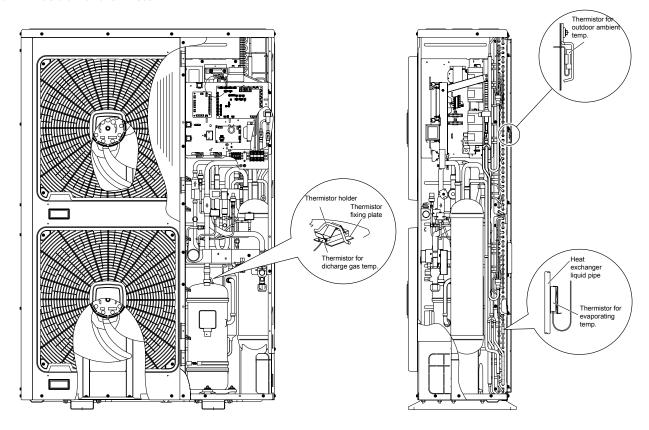

10.2.2. Resistance value of the thermistor

■ Thermistor for upper part temperature of compressor (for prevention of discharge gas overheating)

- a. There is a thermistor that checks the temperature of the upper part of the compressor in order to prevent the discharge gas from overheating. If the discharge gas temperature increases excessively, the deterioration of the lubrication oil and its lubrication properties will occur. This will cause a shorter compressor life.
- b. If the discharge gas temperature increases excessively, the compressor temperature increases. In the worst case, the winding of the compressor motor will burn out.
- c When the temperature of the upper part of the compressor increases during the heating process, the unit is controlled according to the following method:
 - An electronic expansion valve of the liquid bypass opens and the high-pressure refrigerant returns to the compressor through the accumulator. This decreases the compressor temperature.
 - If the temperature of the upper part of the compressor

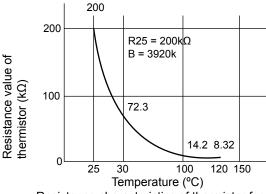

Resistance characteristics of thermistor for discharge gas overheating protection

10

exceeds 132°C for 10 minutes, the compressor will stop. Even if an electronic expansion valve opens in that situation, the compressor will also stop. This way, the compressor is protected. Resistance values of the thermistor are shown in the figure.


d. If the temperature of the upper part of the compressor exceeds 132 °C for 10 minutes during the cooling process, the compressor will stop according to the following method.

Operation	Upper part temperature of compressor	Defecting period
Cooling	Over 132°C	10 minutes (continuously)
	Over 140°C	5 seconds (continuously)
Heating	Over 132°C	10 minutes (continuously)
	Over 140°C	5 seconds (continuously)
Defrosting	Over 132°C	5 seonds (continuously)

■ Thermistor for the outdoor temperature (THM7)

When the outdoor ambient temperature decreases to -8°C or a lower temperature during the cooling process, the compressor will stop. Resistance values of the thermistor are shown below.



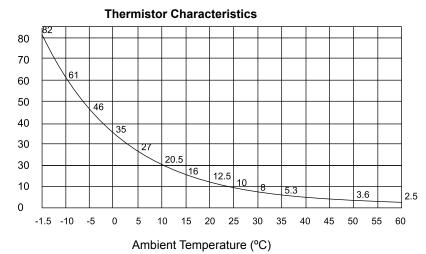

■ Thermistor for the defrost operation (THM10, THM11 and THM15)


The resistance values of this thermistor are the same as the resistance values of the thermistor for the outdoor ambient temperature.

■ Thermistor for the room temperature control (thermistor for the inlet air temperature of the indoor unit, THM1)

The thermistor for the inlet air temperature (THM1) controls the room temperature. The remote control switch displays the selected temperatures by means of figures. Set the room temperature so that the room temperature does not become too cool or too hot. It is recommended to set the room temperature in the following ranges:

 Economical cooling mode: 27°C to 29°C Economical heating mode: 18°C to 20°C

The resistance values of the thermistor are shown below

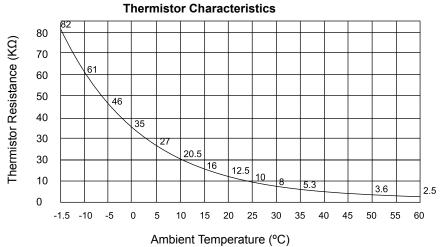

CAUTION:

The thermo-off valve of the thermistor for the inlet air temperature of the indoor unit is set at a higher temperature than the temperature displayed on the remote control switch by 4°C (the maximum inlet air temperature is 34°C). The suction air temperature during the heating process has a tendency to become higher than the temperature of the occupied zone in order to provide a more efficient heating operation.

■ Thermistor for the control of the discharge air temperature (Thermistor for the discharge air temperature of the indoor unit, THM2)

The thermistor for the discharge air temperature (THM2) prevents the cold blow during the heating process. The resistance values of the thermistor are shown in Fig. 10.4.

■ Thermistor for the liquid pipe temperature of the indoor heat exchanger

When the temperature of the indoor heat exchanger decreases to 0°C or a lower temperature for 3 minutes, the thermostat automatically turns off. When the temperature of the indoor heat exchanger increases to 16°C or a higher temperature, the thermostat turns on.

The purpose of this function is to prevent frosting on the indoor heat exchanger during the cooling process and the dry operation.

The resistance values of the thermistor are shown in the figure above


Thermistor for the gas pipe temperature of the indoor heat exchanger


The thermistor for the gas pipe temperature senses the evaporating temperature during the heating process. The resistance values of the thermistor are shown in the figure above.



10.3. Electronic expansion valve

10.3.1. Electronic expansion valve for the outdoor unit

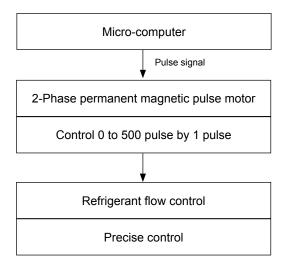

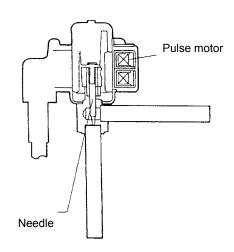

Items	Specifications	
Applicable to the models	For the main cycle of: RAS-8~10FSNM(E)	
Туре	UKV Series	
Refrigerant	R410A	
Working temperature range	-30°C ~ 65°C (Operation time of the coil: less than 50%)	
Mounting direction	Drive shaft in vertical direction within an angle of 45° as maximum	
Flow direction	Reversible	
Drive method	4-Phase canned motor method	
Rated voltage	DC12V±1.8V	
Drive condition	80±5PPS (Pulse width at ON: 36mm sec, OFF: 60mm sec) 1,2 Phase excitation	
Coil resistance (each phase)	$46\Omega\pm3\Omega$ (at 20° C)	
Wiring diagram, Drive circuit and activation mode	Drive circuit B A ON OFF B A A B A ON OFF B A A B A ON OFF B A A A A ON OFF B A A A A A A A A A A A A A A A A A A	

10.4. Pressure sensor


High-pressure control


A high-pressure sensor detects the high pressure during the heating process. The PID control with the operation capacity of the indoor units controls the compressor frequencies. This way the high pressure is controlled within an appropriate range. The output of the high-pressure sensor during the heating process performs the protective control and the control of the gas bypass valve.


Low-pressure control

A low-pressure sensor detects the suction pressure during the cooling process. The PID control with the operation capacity of the indoor units controls the compressor frequencies. This way the suction pressure is controlled within an appropriate range.


If the suction pressure becomes excessively low, the cooling action may be insufficient and the parts in the refrigerant cycle may be damaged. Therefore, if the output of the low-pressure sensor indicates vacuum and the valve remains in the same position for 12 minutes or longer, the compressor will stop in order to avoid damage.

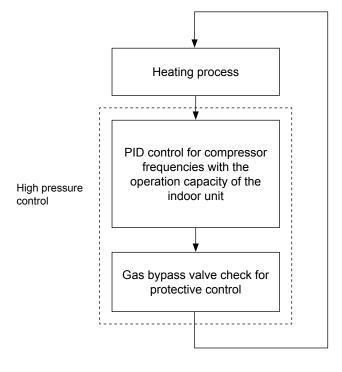

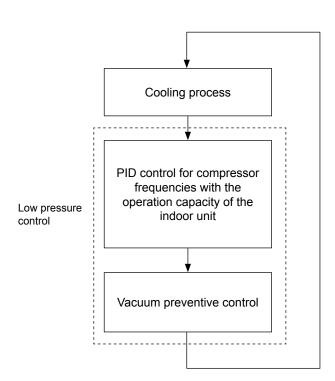

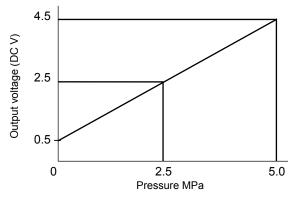

Output characteristics of high pressure sensor

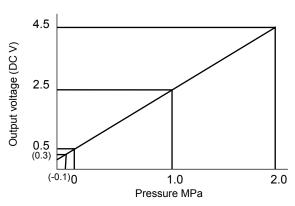


Output characteristics of low pressure sensor


10.5. Scroll compressor

10.5.1. Reliable mechanism for low vibrating and low sound

- 1. The rotating direction is definite.
- 2. The pressure inside of the chamber is high pressure, and the surface temperature of the chamber is 60 $^{\circ}$ C to 110 $^{\circ}$ C.

10.5.2. Principle of compression

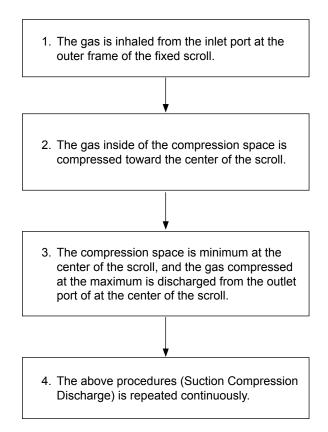

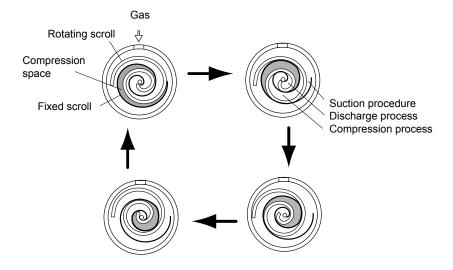



11. Field work instruction

Contents

11. Field work instruction	169
11.1. Checking the power source and the wiring connection	170
11.2. Burnt-out compressor due to an insufficient refrigerant charge	170
11.3. Insufficient cooling performance when a long piping is applied	171
11.4. Abnormally high operation sound (in-the-ceiling type indoor unit)	171
11.5. Alarm Code "31"	172
11.6. Not cooling well due to insufficient installation space for the outdoor unit	172
11.7. Guideline for selecting the drain pipe for the indoor unit	173
11.8. Caution with the refrigerant leakage	174
11.8.1. Maximum permissible concentration of the HCFC Gas	174
11.9. Maintenance work	175
11.10. Service and maintenance record	176
11.11. Service and maintenance record by means of the 7-segment display	177
11.11.1.Data Sheet for Checking by 7-Segment Display	177
11.11.2 Pump-down method for replacing the compressor	179



11.1. Checking the power source and the wiring connection

Check the following items in the case of abnormal operation:

No.	Check item	Procedure		
1	Is the breaker of the fuse cut out?	Check the secondary voltage of the breaker and the fuse by means of a tester.		
2	Is the secondary power source on the transformer correct?	Disconnect the secondary side of the transformer and check the voltage by means of a tester.		
		Primary side 220 V or 240 V Secondary 12 V 12 V 12 V 12 V		
3	Is the wiring loosened or incorrectly connected?	Check the wiring connection on the PCB. Thermistor connectors Connector of the remote control cable Connector of the transformer Each connector in a high-voltage circuit Check the connectors according to the Electrical Wiring diagram.		

11.2. Burnt-out compressor due to an insufficient refrigerant charge


■ Question and answer for the field work

Example 1: Burnt-out compressor due to an insufficient refrigerant charge		
Phenomenon	After commissioning, the alarm code "08" sometimes occurred and the compressors were burnt out after operating for two months.	
Cause	The refrigerant piping work was performed during the summer season. The additional refrigerant was not sufficiently charged from the discharge gas side. This insufficient refrigerant charge resulted in the overheating of the discharge gas and the oil deterioration, which was finally due to the separated operation despite the alarm code "08".	
Countermeasure	The compressor was replaced with a new compressor.	
	2. The correct refrigerant amount was charged according to the refrigerant piping length and the connected indoor units.	
Remarks	Additional refrigerant charge: Open the liquid stop valves slightly when you charge the additional refrigerant from the check joint of the liquid stop valves (the discharge gas side) during the cooling process. If the liquid stop valve is fully open, it is difficult to charge the additional refrigerant. Do not charge the refrigerant from the gas stop valve.	



11.3. Insufficient cooling performance when a long piping is applied

Question and answer for the field work

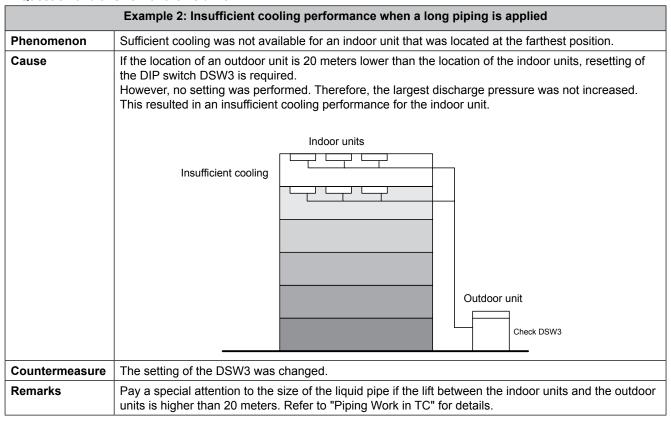

11.4. Abnormally high operation sound (in-the-ceiling type indoor unit)

■ Question and answer for the field work

Question and ar	nswer for the field work		
	Example 3: Abnormally high operation sound (in-the-ceiling type indoor unit)		
Phenomenon	The operation sound at the "HIGH" speed was abnormally high.		
Cause	The indoor units were installed without the ducts. Since there scarcely was any external static pressure, an abnormally big air volume was supplied. This resulted in a higher air speed through the heat exchanger		
	Damper Indoor unit		
	A. Filter		
Countermeasure	In order to reduce the airflow rate, a plate that is used as a damper at the discharge gas side was added.		
Remarks	Note that the running current is increased when no external pressure is given to the indoor unit. This results in an overheating.		



11.5. Alarm Code "31"

■ Question and answer for the field work

	Example 4: Alarm code "31"	
Phenomenon	Alarm code "31" sometimes occurred and the system stopped.	
Cause	The combination of the indoor units and the outdoor unit was the following.	
	Power source ON OFF ON ON	
	This system was used in a tenant building. One of tenant's customers turned off the main switch for the indoor unit while other indoor units are running. This results in a different setting of the total indoor unit capacity in the same refrigerant cycle.	
Countermeasure	All the main switches for the indoor units were always ON.	

11.6. Not cooling well due to insufficient installation space for the outdoor unit

■ Question and answer for the field work

Examp	le 5: Not Cooling Well due to Insufficient Installation Space for Outdoor Unit	
Phenomenon	Cooling operation was well performed through the intermediate season. However, the cooling operation was not well available when the outdoor temperature was higher than 35°C.	
Cause	As the outdoor units were installed without a sufficient installation space, the hot discharge air from other outdoor units was circulated. In this case, though the outdoor temperature was 35°C, the actual suction air temperature was nearly 50°C and Protection System from Excessively High Suction Pressure was activated, the frequency of the compressor was decreased and the cooling capacity was also decreased accordingly. As the outdoor units in-line were installed back to back with a distance of 600 mm between each outdoor unit's back, the hot discharged air from other outdoor units was circulated. Min. 300 mm Fence Min. 300 mm Min. 300 mm	
Countermeasure	To protect the unit from a short circuit, fences were mounted at the discharge air side as shown below	

11.7. Guideline for selecting the drain pipe for the indoor unit

■ Method for selecting the drain pipe diameter

1. Calculation of the Drain Flow Volume Calculate that the drain flow volume is approximately 3 (I/hr) per 1HP of the nominal capacity of the indoor unit.

For Example:

Common drain pipe for four 2.5HP indoor units.		
Total horsepower of the indoor unit	4 × 2,5 =10HP	
Total drain flow volume	$10HP \times 3 (I/hr \times HP) = 30 (I/hr)$	

2. Select the drain pipe from the Table A and the Table B

Horizontal common pipe with the slope 1/50	VP 20 for the above example
Horizontal common pipe with	
the slope 1/100	
Vertical common pipe	VP 25 for the above example

Table A. Permissible drain flow volume of the horizontal vinyl pipe

IIC aymhal	Inner diameter (mm)	Permissible flow volume (I/hr]	
JIS symbol		Slope=1/50	Slope=1/100
VP20	20	39	27
VP25	25	70	50
VP30	31	125	88
VP40	40	247	175
VP50	51	472	334

i NOTE:


VP20 and VP25: Not Applicable to the Common Pipe VP30, VP40 and VP50: Applicable to the Common Pipe

Table B. Permissible drain flow volume of the vertical vinyl pipe

JIS symbol	Inner diameter (mm)	Permissible flow volume (I/hr]
VP20	20	220
VP25	25	410
VP30	31	730
VP40	40	1400
VP50	51	2760
VP65	67	5710
VP75	77	8280

i NOTE:

VP20, VP25 and VP30: Not applicable to the common pipe VP40, VP50, VP65 and VP75: Applicable to the common pipe

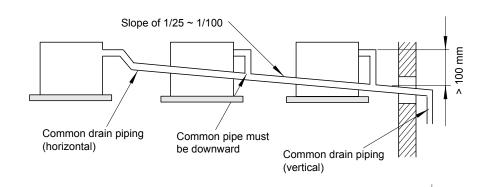

11.8. Caution with the refrigerant leakage

The designers and the installers have the responsibility to follow the local codes and the local regulations that specify the safety requirements against the refrigerant leakage.

11.8.1. Maximum permissible concentration of the HCFC Gas

The refrigerant R410A, which is charged in the SET-FREE FSN system, is an incombustible non-toxic gas. However, if the leakage occurs and the gas fills a room, the gas may cause suffocation.

The maximum permissible concentration of the HCFC gas and the R410A in the air is 0.44 kg/m³, according to the refrigeration and air conditioning system standard (KHK S 0010) by the KHK (High-Pressure Gas Protection Association) Japan. Therefore, you must take some effective measures in order to lower the R410A concentration in the air below 0.44 kg/m³, if there is a leakage.

11.8.2. Calculation of the refrigerant concentration

- 1. Calculate the total quantity of refrigerant R (kg) that is charged in the system that connects all the indoor units of the rooms that need air conditioning systems.
- 2. Calculate the room volume V (m3) of each room.
- 3. Calculate the refrigerant concentration C (kg/m³) of the room according to the following equation:

R — = C V	R: Total quantity of charged refrigerant (kg) V: Room volume (m³) C: Refrigerant concentration (≤0.44* kg/m³ for the R410A)
* Use this value only for reference because this value is not fixed yet.	

11.8.3. Countermeasure for the refrigerant leakage according to the KHK standard

According to the KHK standards, you should arrange the facility as follows so that the refrigerant concentration will be bellow 0.3 kg/m³.

- 1. Provide a shutterless opening that will allow the fresh air to circulate into the room.
- 2. Provide a doorless opening with a size of 0.15% or more to the floor area.
- 3. Provide a ventilator, which must be linked with a gas leak detector, with a ventilating capacity of 0.5m³/min or more per Japanese Refrigeration Ton (=compressor displacement m³/h/8.5 of the air conditioning system which uses the refrigerant).
- 4. Pay a special attention to the place, such as a basement and others, where the refrigerant may stay, because the refrigerant is heavier than the air.


O.U. model	Ton
RAS-5FSN	2.27
RAS-8~12FSN1E	4.11
RAS-14/16FSN1	6.57
RAS-18/20FSN1	7.11
RAS-24FSN1	10.83
RAS-28FSN1	12.97

O.U. model	Ton
RAS-32FSN1	14.12
RAS-36FSN	13.83
RAS-42FSN	16.26
RAS-8FXNE	3.76
RAS-10FXNE	4.04
RAS-12FXNE	4.12

O.U. model	Ton
RAS-16FXNE	5.81
RAS-20FXNE	7.58
RAS-24FXNE	10.15
RAS-30FXNE	10.12
RAS-8~12FSN2	4.11
RAS-14/16FSN2	6.16

O.U. model	Ton
RAS-18/20FSN2	8.21
RAS-22/24FSN2	9.32
RAS-26/28FSN2	10.43
RAS-30~36FSN2	12.48
RAS38~42FSN2	15.64
RAS-44~48FSN2	16.75

Room	R (kg)	V (m³)	C (kg/m³)	Countermeasure
Α	30	150	0.2	=
В	65	500	0.13	-
С	35	100	0.35	-
D	35	100	0.35	=
C+D	35	200	0.175	=
E	35	50	0.7	2m³/min

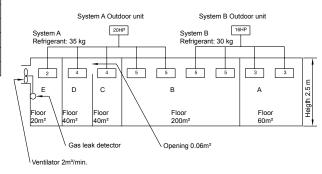

11.9. Maintenance work

For the indoor unit and the outdoor unit

- 1. Fan and fan motor
 - Lubrication: All the fan motors are prelubricated and sealed at the factory. Therefore, no lubrication maintenance is required.
 - Sound and vibration: Check for abnormal sounds and vibrations.
 - Rotation: Check the clockwise rotation and the rotating speed.
 - Insulation: Check the electrical insulation resistance.

2. Heat exchanger

 Clog: Inspect the heat exchanger at regular intervals and remove any accumulated dirt and any accumulated dust from the heat exchanger. You should also remove from the outdoor units other obstacles, such as the growing grass and the pieces of paper, which might restrict the airflow.

3. Piping connection

Leakage: Check for the refrigerant leakage at the piping connection.

4 Cabinet

- Stain and Lubrication: Check for any stain and any lubrication. Remove the stain and the lubrication.
- Fixing Screw: Check for any loosened screw or any lost screw. Fix the loosened screws and the lost screws.
 Insulation Material: Check for any peeled thermal insulator on the cabinet. Repair the thermal insulator.

5. Electrical equipment

- Activation: Check for an abnormal activation of the magnetic contactor, the auxiliary relay, the PCB and others.
- Line condition: Pay attention to the working voltage, the working amperage and the working phase balance. Check
 for any faulty contact that is caused by the loosened terminal connections, the oxidized contacts, the foreign matter,
 and other items. Check the electrical insulation resistance.
- 6. Control device and protection device
- Setting: Do not readjust the setting in the field unless the setting is maintained at a point that is different from the point that is listed in the section "5.5. Protection and Safety Control" of this Service Manual.

For the indoor unit

- 1. Air filter
 - Cleaning: Check for any accumulated dirt and any accumulated dust. Remove the dirt and the dust.
- 2. Drain pan, drain-up mechanism and drain pipe
 - Drain line: Check and clean the condensate drain pipe at least twice a year.
 - Drain-up mechanism: Check the activation of the drain-up mechanism.
- 3. Float switch
 - Activation: Check the activation of the float switch.

■ For the outdoor unit

- 1. Compressor
 - Sound and vibration: Check for abnormal sounds and vibrations.
 - Activation: Check that the voltage drop of the power supply line is within 15% at the start and within 2% during the operation.
- 2. Reverse valve
 - Activation: Check for any abnormal activation sound.
- 3. Strainer
 - Clog: Check that there is no temperature difference between both ends.
- 4. Ground wire
 - Ground line: Check for the continuity to earth.
- 5. Oil heater
 - Activation: You should activate the oil heater at least twelve hours before the start-up by turning ON the main switch.

11.10. Service and maintenance record

No.	Check item	Action	Judgement	
1	Is the service area sufficient?		Yes	No
2	Is there a short circuit of the discharged air?		Yes	No
3	Any heat influence?		Yes	No
4	Is the ground wire connected?		Yes	No
5	Refrigerant piping		Good	Not good
6	Fixing the units		Good	Not good
7	Is there any damage on the outer surface or the internal surface?		Yes	No
8	Checking the screw and the bolts	Tighten if loosened.	Tightened	Not tightened
9	Tightening the Terminal Screws	Tighten all the terminal screws with a Phillips screwdriver.	Tightened	Not tightened
10	Are the compressor terminals tightly fixed?	Push all the terminals.	Pushed	Not pushed
11	Insulation resistance	$\begin{tabular}{lll} Measure the insulation resistance with an insulation resistance meter. \\ Comp. & and fan \\ motor: & greater \\ & than $3M\Omega$ \\ Others: & greater \\ & than $3M\Omega$ \\ \hline \end{tabular}$	Good	Not good
12	Does the drain water flow smoothly?	Check the smooth flow by pouring some water.	Good	Not good
13	Check for a leakage in the compressor.	Check for any leakage.	Good	Not good
14	Check for a leakage in the outdoor heat exchanger.	ditto	Good	Not good
15	Check for a leakage in the indoor heat exchanger.	ditto	Good	Not good
16	Check for a leakage in the 4-way valve.	ditto	Good	Not good
17	Check for a leakage in the check valve.	ditto	Good	Not good
18	Check for a leakage in the accumulator.	ditto	Good	Not good
19	Check for a leakage in the strainer.	ditto	Good	Not good
20	Check for a leakage in the electronic expansion valve.	ditto	Good	Not good
21	Check for a leakage in the piping.	ditto	Good	Not good
22	Check the direction of the fans.	By viewing the airflow volume	Good	Not good
23	Voltage among each phase	Higher than AC220V	Good	Not good
24	Vibration and sound	Check the fan, the compressor, the piping, and others.	Good	Not good
25	Activation of each operation mode	Check the activation of the COOL switch, the HEAT switch, the STOP switch and the TEMP switch.	Good	Not good
26	High-pressure cut-out switch	Check the actual activation value.	Good	Not good
27	Check the activation of the drain-up mechanism.	Check the activation during the cooling process.	Good	Not good
28	Air inlet temperature of the indoor unit DB/WB		(°C)DB	(°C)WB
29	Air outlet temperature of the indoor unit DB/WB		(°C)DB	(°C)WB
30	Air inlet temperature of the outdoor unit DB/WB		(°C)DB	(°C)WB
31	Air outlet temperature of the outdoor unit DB/WB		(°C)DB	(°C)WB
32	High-pressure switch		kg/d	cm²G
33	Low-pressure switch		kg/d	cm²G
34	Operating voltage			V
35	Operating current			A
36	Instructions to the client for cleaning the air filter		Done	Not yet
37	Instructions to the client about the cleaning method		Done	Not yet
38	Instructions to the client about the operation		Done	Not yet



11.11. Service and maintenance record by means of the 7-segment display

11.11.1. Data Sheet for Checking by 7-Segment Display

Customer's Name:	Date:

$\overline{}$	oor Unit Model (Serial No.)		RAS	-	(Seria	al No.)	RAS)-		(Seria	al INO			
	Operation mode																	
T	Start time of the test run																	
Ì	Start time of the data collection																	
Ť	Read out data from 7-Segment display																	_
_	Protection control code																	_
-			52C,	52C,	52C ₃	52C,	52C ₅	MEC3	MFC4	DC	52C,	52C,	52C ₃	52C ₄	52C ₅	MFC3	MECA	1
			320,	3202	320 ₃	3204	320 ₅	IVII CO	WII C4	Fan,	320,	3202	320 ₃	3204	320 ₅	IVII CS	IVII C4	_
																		4
	Outdoor micro-computer input/output	SC	DC Fan ₂	20A,	20A ₂	20A ₃	20A ₄	20A ₅	20B	20C	DC Fan,	20A ₁	20A ₂	20A ₃	20A ₄	20A ₅	20B	ı
			- 2								- 2							1
			20F.	20G	20CGH	21,	21,	CH,			20F,	20G	20CGH	21,	21,	CH,		1
			<u> </u>					<u> </u>						Ė		i i		1
-	Total of running indoor unit capacity	οP							I									٢
-	Inverter frequency at the compressor No. 1	H1														-		-
-	Number of running compressors	CC																-
-	Airflow rate of the outdoor fan	Fo																-
-		oE1																-
		oE2																-
	Expansion valve opening 1-6 of the outdoor unit	oE3																-
		oE4																-
		oEb																-
-	Discharge presure [MPa]	Pd																
-	Suction pressure [MPa]	Ps																
-		Td1																
		Td2																-
	Discharge gas temperature	Td3																
		Td4																-
		Td5																_
-		TE1																-
		TE2																_
	Heat exchanger liquid pipe temperature	TE3																-
		TE4																-
-	Outdoor temperature	То																_
-	Auto charge temperature	Tch																_
-	Supercooling temperature	Tsc																
-		A1																-
		A2																-
	Compressor running current	A3																-
	3	A4																-
	ł	A5	\vdash															-
-	Indoor Unit (Unit number:)	. 10	1															-
-	Expansion valve opening	iE	1															٦
	Heat exchanger liquid temp.	TL																1
	Heat exchanger gas temp.	TG																1
	Intake air temp.	Ti																1
	Outlet air temp.	To																+
	Capacity (x 1/8HP)	CA					 											+
	Indoor Unit stoppage caude code	d1					<u> </u>											+
	Restricted control for prevention of compresion ratio		<u> </u>										1	1		1		L
	decrease	c11	L															
	Restricted control for prevention of high pressure	c13																
	increase	UIJ																_
	Restricted control for prevention of the temperature increase of the inverter fan	c14																_
	Restricted control for prevention of discharge gas temperature increase	c15																
	Restricted control for prevention of TdSH decrease	c16																
	Restricted control for prevention of overcurent	c17																

outdoor Unit Model (Serial No.)		RAS- (Serial No.)	RAS-	(Serial No.)
Accumulated operation time of comp. 1	(c)UJ1						
Accumulated operation time of comp. 2	(c)UJ2						
Accumulated operation time of comp. 3	(c)UJ3						
Accumulated operation time of comp. 4	(c)UJ4						
Accumulated operation time of comp. 5	(c)UJ5						
Outdoor alarm code	AC						
Inverter stoppage cause code	iTC						
Fan motor controller stoppage cause code	FTC1						
Fan motor controller stoppage cause code	FTC2						
Failure history	01~15	AC(Alarm code)	ITC (Inv. stoppage)	FTC (Fan stop- page)	AC(Alarm code)	ITC (Inv. stoppage)	FTC (Fan stop- page)
•							
Total Indoor unit capacity(x 1/8HP)	CP						
Total Indoor unit quantity	AA						
Refrigerant system address	GA						

RVR_{1,2}: 4-way valve SVA₁/F₁: Solenoid valve CH₁: Cranckcase heater DCFan: Direct control fan Fan1: Constant speed fan



11.11.2. Pump-down method for replacing the compressor

No.	Procedure	Remarks
1	Turn off the main switch of the outdoor unit.	
2	Remove the covers, the thermistor, the crankcase heater, the power wirings, and other items according to the chapter "Removing the Parts of the Oudoor Unit".	Make sure that the terminal part of the detached power supply wires is not exposed by the winding insulation tape and other items.
3	Attach the manifold to the check joint of the high- pressure side and the low-pressure side of the outdoor unit.	
4	Turn on the main switch of the outdoor unit.	
5	Set the exclusion of the compressor by setting the DSW so that a broken compressor will not work. You can set the exclusion of the compressor by setting the DSW5-1~DSW5-6 of the PCB1.	DSW5-1 ON: Compressor No.1 (52C1: Inverter compressor), DSW5-2 ON: Compressor No.2 (52C2), DSW5-3 ON: Compressor No.3 (52C3), and the others.
6	Pre-Pump-Down by means of the Cooling Process: Start the test run of the cooling process. (DSW4-1 ON).	 After closing the gas stop valve, the decrease of Ps is fast. To guarantee the reliability of the compressor, make sure that the decrease does not reach PS< 0.1Mpa when you perform the enforced stoppage.
	 The test run should run for approximately 20 minutes (until the test run reaches PS>0.3Mpa, Td>75 °C, as a rough target). 	when you perform the emorced stoppage.
	 Display of Ps in seven seconds of the outdoor PCB. 	
	 Close the gas stop valve quickly. Then, perform the enforced stoppage (DSW4-4 ON) when Ps < 0.2Mpa. 	
	 Set the DSW4-1 to OFF in order to cancel the test run of the cooling. Set the DSW4-4 to OFF in order to cancel the enforced stoppage. 	
7	The compressor replacing mode is performed: — The DSW4-6 on the outdoor unit PCB→ ON (The	This operation is performed for up to a maximum of ten minutes.
	cooling is run).	 If the inverter compressor is excluded, the operation starts after three minutes.
8	The operation finishes when one of the following conditions occurs: 1) Ten minutes have passed and STP is displayed in seven segments.	 The operation may finished when any of the conditions 1) to 3) occurs.
	2) "08" is displayed in seven segments.	
	3) When Ps< 0.1MPa is continued for one minute, in ten minutes STP is displayed in seven seconds and the operation finishes.	
9	Close the liquid stop valve completely.	To avoid the spillage of all the refrigerant if the check valve is broken.



No.	Procedure	Remarks
10	Check for a leakage of the check valve on the discharge gas side: — DSW4-4 (Enforced stoppage of the compressor) — ON, so that the compressor will not run although the running command is sent from the remote control switch. — Check that variation of Ps on the outdoor unit PCB is 17 seconds. Make sure that the Ps increase is within 0.03 Mpa in two minutes after the Ps increase at the stoppage (during approximately five minutes). Also make sure that Pd>Ps. Ps — 0.03 MPa or smaller Time	 When you stop the compressor for replacing: You can check the leakage of the check valve by means of the Ps variation because the SVA opens so that the discharge gas side of the inverter compressor can connect to the low-pressure side. 0.03 Mpa / 2 minutes is within the permissible limits for the check valve on the discharge gas side. The leakage of the check valve may cause an incorrect brazing, due to the gas pressure at the brazing of the discharge piping. If the compressor-replacing mode is performed again, set the DSW4-4 to OFF and keep the DSW4-4 at the OFF side during ten minutes. Then, start according to the procedure No. 6.
11	Collect the refrigerant by means of the refrigerant collection: — Perform either A or B, depending on the process 10. A: The leak rate at the process 10 is within the specification → Collect the refrigerant only at the low-pressure side. B: The leak rate at the process 10 is greater than the specification → Collect all the refrigerant of the outdoor unit side by means of the machine. After collecting the refrigerant, remove the change hose (collector side) of the low-pressure side, so that	 The discharge of the refrigerant in the atmosphere is strictly forbidden. Make sure that the refrigerant is collected by the collector. Keep a note of the quantity of the collected refrigerant. Make sure that there is no pressure increase of the low-pressure sides after collecting the refrigerant.
	the low-pressure side of the refrigerant cycle will be the atmosphere pressure.	Make sure that the refrigerant cycle is the atmosphere pressure. Otherwise, problems such as the blowing of gas and the suction of the cutting material) may occur when you are removing the compressors.
13	Turn OFF the main switch of the outdoor unit.	
14	Perform the replacement of the compressor and the change of the refrigerant oil according to the section "Replacing the Compressor".	Make sure that you follow the instructions.
15	Perform the vacuum from the check joint of the low-pressure side.	If you collect the refrigerant only on the low-pressure side (A in 11). You cannot perform the vacuum of the refrigerant from the check joint of the high-pressure side.
16	Open the liquid stop valve and the gas stop valve completely when you finish the vacuum.	
17	Make sure that the power is turned OFF and attach the following items: the power supply wire, the thermistor, the crankcase heater, the 63H wiring, the panel and the nut).	
18	Set the DSW back to the original setting. Make sure that all the wirings to the compressor are connected correctly.	
19	Recharge the refrigerant that is collected in the process by the stop valve of the liquid side during the cooling at the TEST RUN mode.	If the replacement of the compressor takes more than two hours, an additional change of the refrigerant is necessary. Additional Change = (Replacing Time – 2 hours) x 0.5kg.





Hitachi Air Conditioning Products Europe, S.A. Ronda Shimizu, 1 - Políg. Ind. Can Torrella 08233 Vacarisses (Barcelona) España ISO 9001 Certified by AENOR, Spain ISO 14001 Certified by AENOR, Spain





Hitachi Appliances, Inc. Shimizu-shi, Shizuoka-ken, Japan ISO 9001 Certified by JQA, Japan ISO 14001 Certified by JQA, Japan



Hitachi Air Conditioning Products (M) Sdn. Bnd. Lot No. 10, Jalan Kemajan Bangi Industrial Estate 43650 Bandar Baru Bangi, Selangor Darul Ehsan, Malaysia Certification ISO 9001, Malaysia Certification ISO 14001, Malaysia

