
HITACHI Inspire the Next

SERVICE MANUAL TECHNICAL INFORMATION

FOR SERVICE PERSONNEL ONLY



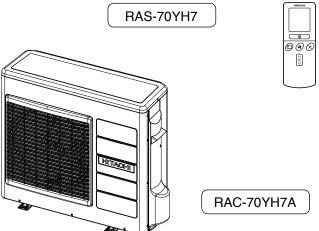

SPECIFICATIONS

PM NO. 0509E

RAS-70YH7/RAC-70YH7A

REFER TO THE FOUNDATION MANUAL

CONTENTS

CAUTION	4
SPECIFICATIONS	5
INSTALLATION	6
HOW TO USE	7
CONSTRUCTION AND DIMENSIONAL DIAGRAM	29
MAIN PARTS COMPONENT	31
WIRING DIAGRAM	33
CIRCUIT DIAGRAM	35
PRINTED WIRING BOARD LOCATION DIAGRAM	41
BLOCK DIAGRAM	44
BASIC MODE	45
REFRIGERATING CYCLE DIAGRAM	59
DESCRIPTION OF MAIN CIRCUIT OPERATION	61
SERVICE CALL Q & A	74
TROUBLE SHOOTING	78
PARTS LIST AND DIAGRAM	98

※ After installation

(WALL TYPE) TYPE INDOOR UNIT OUTDOOR UNIT MODEL RAS-70YH7 RAC-70YH7A POWER SOURCE 1 Ø, 50/60 Hz, 220-240V TOTAL INPUT (W) 2,170 (200 - 2,820) TOTAL AMPERES (A) 9.95 - 9.10 COOLING (kW) 7.00 (1.50 - 8.00) CAPACITY (B.T.U./h) 23,900 (5,120 - 27,315) (W) TOTAL INPUT 2,200(200 - 2,970)TOTAL AMPERES (A) 10.10 - 9.30 HEATING (kW) 8.00 (1.50 - 9.20) CAPACITY (B.T.U./h) 27,300 (5.119 - 31,396) w 1150 850 DIMENSIONS Н 333 800 (mm) 245 298 D NET WEIGHT (kg) 15 55

SPECIFICATIONS AND PARTS ARE SUBJECT TO CHANGE FOR IMPROVEMENT


ROOM AIR CONDITIONER

INDOOR UNIT + OUTDOOR UNIT

FEBRUARY 2012 Refrigeration & Air-Conditioning Division

SAFETY DURING REPAIR WORK


1. In order to disassemble and repair the unit in question, be sure to disconnect the power cord plug from the power outlet before starting the work.

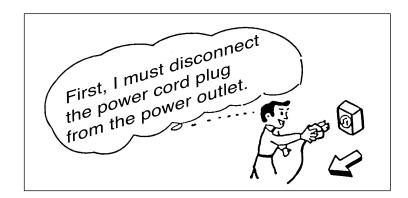

2. If it is necessary to replace any parts, they should be replaced with respective genuine parts for the unit, and the replacement must be effected in correct manner according to the instructions in the Service Manual of the unit.

If the contacts of electrical parts are defective, replace the electrical parts without trying to repair them.

- 3. After completion of repairs, the initial state should be restored.
- 4. Lead wires should be connected and laid as in the initial state.
- 5. Modification of the unit by user himself should absolutely be prohibited.

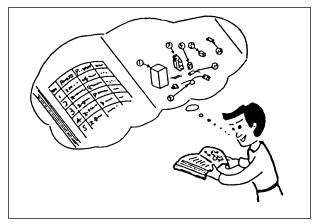

- 6. Tools and measuring instruments for use in repairs or inspection should be accurately calibrated in advance.
- 7. In installing the unit having been repaired, be careful to prevent the occurence of any accident such as electrical shock, leak of current, or bodily injury due to the drop of any part.
- 8. To check the insulation of the unit, measure the insulation resistance between the power cord plug and grounding terminal of the unit. The insulation resistance should be $1M\Omega$ or more as measured by a 500V DC megger.
- The initial location of installation such as window, floor or the other should be checked for being and safe enough to support the repaired unit again.
 If it is found not so strong and safe, the unit should be installed at the initial location reinforced or at a new location.
- 10. Any inflammable thing should never be placed about the location of installation.
- 11. Check the grounding to see whether it is proper or not, and if it is found improper, connect the grounding terminal to the earth.



WORKING STANDARDS FOR PREVENTING BREAKAGE OF SEMICONDUCTORS

1. Scope

The standards provide for items to be generally observed in carrying and handling semiconductors in relative manufacturers during maintenance and handling thereof. (They apply the same to handling of abnormal goods such as rejected goods being returned).

- 2. Object parts
 - (1) Micro computer
 - (2) Integrated circuits (IC)
 - (3) Field-effect transistors (FET)
 - (4) P.C. boards or the like on which the parts mentioned in (1) and (2) of this paragraph are equipped.
- 3. Items to be observed in handling
 - (1) Use a conductive container for carrying and storing of parts. (Even rejected goods should be handled in the same way).

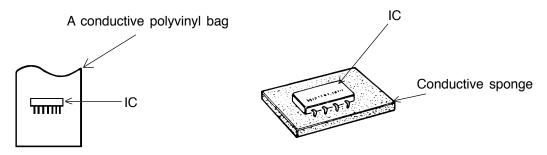


Fig. 1. Conductive Container

- (2) When any part is handled uncovered (in counting, packing and the like), the handling person must always use himself as a body earth. (Make yourself a body earth by passing $1M\Omega$ earth resistance through a ring or bracelet).
- (3) Be careful not to touch the parts with your clothing when you hold a part even if a body earth is being taken.
- (4) Be sure to place a part on a metal plate with grounding.
- (5) Be careful not to fail to turn off power when you repair the printed circuit board. At the same time, try to repair the printed circuit board on a grounded metal plate.

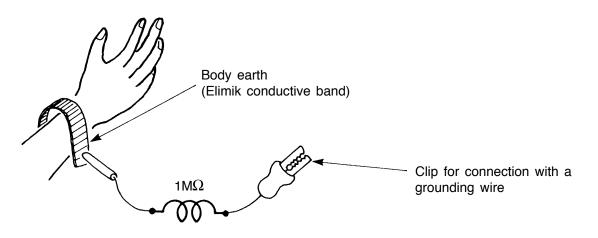


Fig. 2. Body Earth

(6) Use a three wire type soldering iron including a grounding wire.

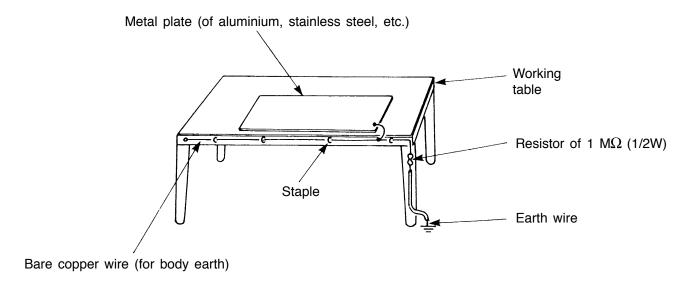


Fig. 3. Grounding of the working table

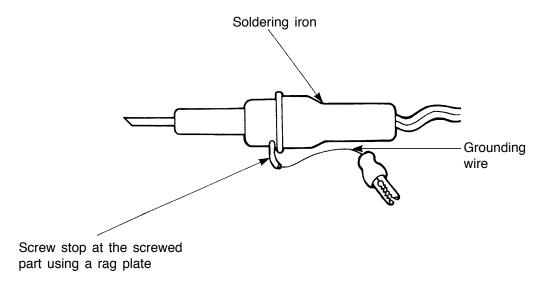


Fig. 4. Grounding a soldering iron


Use a high insulation mode (100V, 10M Ω or higher) when ordinary iron is to be used.

(7) In checking circuits for maintenance, inspection or some others, be careful not to have the test probes of the measuring instrument shortcircuit a load circuit or the like.

- 1. In quiet or stop operation, slight flowing noise of refrigerant in the refrigerating cycle is heard occasionally, but this noise is not abnormal for the operation.
- 2. When it thunders near by, it is recommend to stop the operation and to disconnect the power cord plug from the power outlet for safety.
- 3. In the event of power failure, the air conditioner will restart automatically in the previously selected mode once the power is restored. In the event of power failure during TIMER operation, the air conditioner will not start automatically. Re-press ON/OFF button after 3 minutes from when the unit off or power recovery.
- 4. If the room air conditioner is stopped by adjusting thermostat, or missoperation, and re-start in a moment, there is occasion that the cooling and heating operation does not start for 3 minutes, it is not abnormal and this is the result of the operation of IC delay circuit. This IC delay circuit ensures that there is no danger of blowing fuse or damaging parts even if operation is restarted accidentally.
- 5. This room air conditioner should not be used at the cooling operation when the outside temperature is below -10°C (14°F).
- This room air conditioner (the reverse cycle) should not be used when the outside temperature is below -15°C (5°F).
 If the reverse cycle is used under this condition, the outside heat exchanger is frosted and efficiency falls.
- 7. When the outside heat exchanger is frosted, the frost is melted by operating the hot gas system, it is not trouble that at this time fan stops and the vapour may rise from the outside heat exchanger.

SPECIFICATIONS

MODEL		RAS-70YH7	RAC-70YH7A
FAN MOTOR		30 W	47 W
FAN MOTOR CAPACITOR		NO	NO
FAN MOTOR PROTECTOR		NO	NO
COMPRESSOR	MPRESSOR		JU1015D9
COMPRESSOR MOTOR CAP	ACITOR	NO	NO
OVERLOAD PROTECTOR		NO	YES (INTERNAL)
OVERHEAT PROTECTOR		NO	YES
FUSE (MICRO COMPUTER C	CIRCUIT)	3.15A	3.15A
POWER RELAY		G4A	G4A
POWER SWITCH		NO	NO
TEMPORARY SWITCH		YES	NO
TEST/SERVICE SWITCH		NO	YES
TRANSFORMER		NO	NO
VARISTOR	VARISTOR		450NR
NOISE SUPPRESSOR		NO	NO
THERMOSTAT		YES(IC)	YES(IC)
REMOTE CONTROL SWITCH (LIQUID CRYSTAL)		YES	NO
FUSE CAPACITY		30 A TIME DELAY FUSE	
REFRIGERANT CHARGING	UNIT		∦ 1850g
VOLUME (Refrigerant R410A)	PIPES (MAX. 30m) (MIN. 3m)	CHAR	GELESS

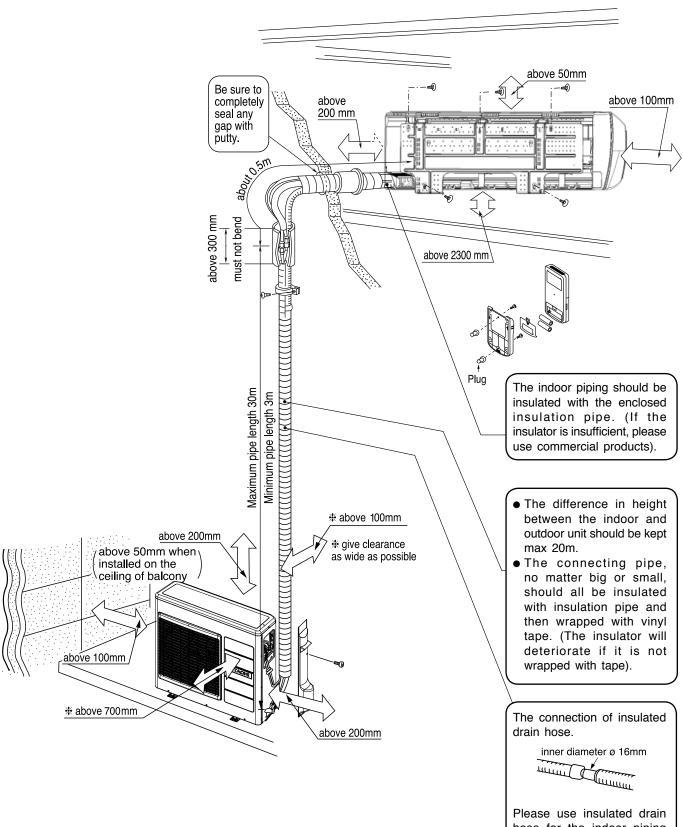


hose for the indoor piping (commercial product).

INDOOR UNIT PRE-FILTER To prevent dust from coming into the indoor unit. (Refer page 25) FRONT PANEL (AIR INLET). INDOOR UNIT INDICATORS Light indicator showing the operating condition. (Refer page 8) **HORIZONTAL DEFLECTOR • VERTICAL DEFLECTOR (AIR OUTLET) REMOTE CONTROLLER** Send out operation signal to the indoor unit. So 000 as to operate the whole unit. (°ĉ (Refer page 12)

NOTE

- Air cleansing filters are not washable and can be use in 1 year time. Type number for this air cleansing filter is <SPX-CFH12>. Please use this number for ordering when you want to renew it.
- Air cleansing filter should be cleaned every month or sooner if noticeable loading occurs. When used overtime, it may loose its deodorizing function. For maximum performance, it is recommended to replace it every 1 year depending on application requirements.

OUTDOOR UNIT

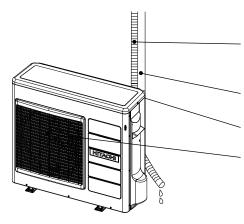

DRAIN PIPE Condensed water drain to outside.

CONNECTING CORD


AIR INLET (BACK, LEFT SIDE)

AIR OUTLET

MODEL NAME AND DIMENSIONS

MODEL	WIDTH (mm)	HEIGHT (mm)	DEPTH (mm)
RAS-70YH7	1150	333	245
RAC-70YH7A	850	800	298

INDOOR UNIT INDICATORS

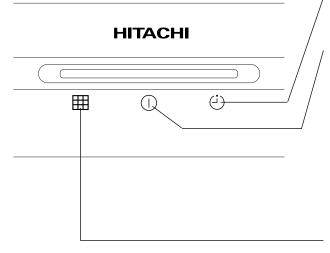

TIMER LAMP

This lamp lights when the timer is working.

OPERATION LAMP

This lamp lights during operation. The OPERATION LAMP flashes in the following cases during heating.

(1) During preheating


For about 2–3 minutes after starting up.

(2) During defrosting

Defrosting will be performed about once an hour when frost forms on the heat exchanger of the outdoor unit, for 5–10 minutes each time.

FILTER LAMP

When the device is operated for a total of about 200 hours, the FILTER lamp lights to indicate that it is time to clean the filter. The lamp goes out when the " \swarrow (AUTO SWING)" button is pressed while the device is on "STANDBY MODE".

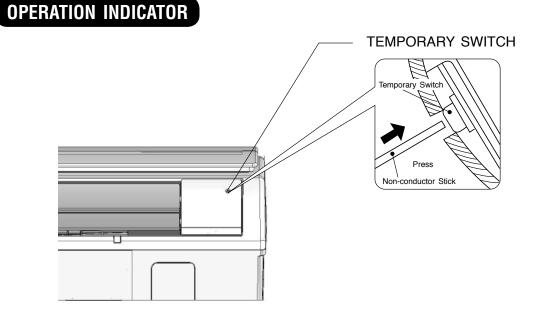

TEMPORARY SWITCH

Use this switch to start and stop when the remote controller does not work. [Use non-conductor stick (example: toothpick)]

- By pressing the temporary switch, the operation is done in previously set operation mode.
- When the operation is done using the temporary switch after the power source is turned off and turn on again, the operation is done in automatic mode.

Note

 Avoid to use the room air conditioner for cooling operation when the outside temperature is below -10°C (14°F).

The recommended maximum and minimum operating temperatures of the hot and cold sides should be as below:

		Cooling		Heating	
		Minimum	Maximum	Minimum	Maximum
Indoor	Dry bulb °C	21	32	20	27
Indoor	Wet bulb °C	15	23	12	19
Quitdoor	Dry bulb °C	21	43	2	21
Outdoor	Wet bulb °C	15	26	1	15

MEMO



SAFETY PRECAUTION

- Please read the "Safety Precaution" carefully before operating the unit to ensure correct usage of the unit.
- Pay special attention to signs of "A Warning" and "A Caution". The "Warning" section contains matters which, if not observed strictly, may cause death or serious injury. The "Caution" section contains matters which may result in serious consequences if not observed properly. Please observe all instructions strictly to ensure safety.
- The sign indicate the following meanings.

Make sure to connect earth line.	\odot	The sign in the figure indicates prohibition.
Indicates the instructions that must be followed		

Indicates the instructions that must be followed.

- Please keep this manual after reading. PRECAUTIONS DURING INSTALLATION Do not reconstruct the unit. Water leakage, fault, short circuit or fire may occur if you reconstruct the unit by yourself. Please ask your sales agent or qualified technician for the installation of your unit. Water leakage, short circuit or fire may occur if you install the unit by yourself. Please use earth line. WARNING Do not place the earth line near water or gas pipes, lightning-conductor, or the earth line of telephone. Improper installation of earth line may cause electric shock. Be sure to use the specified piping set for R410A. Otherwise, this may result in broken copper pipes or faults. A circuit breaker should be installed depending on the mounting site of the unit. Without . a circuit breaker, the danger of electric shock exists. Do not install near location where there is flammable gas. The outdoor unit may catch fire if flammable gas leaks around it. Please ensure smooth flow of water when installing the drain hose. CAUTION Do not install the indoor unit in a machine shop or kitchen where vapor from oil or its mist flows to the indoor unit. The oil will deposit on the heat exchanger, thereby reducing the indoor unit performance and may deform and in the worst case, break the plastic parts of the indoor unit. PRECAUTIONS DURING SHIFTING OR MAINTENANCE Should abnormal situation arises (like burning smell), please stop operating the unit and turn A off the circuit breaker. Contact your agent. Fault, short circuit or fire may occur if you continue to operate the unit under abnormal situation. W Please contact your agent for maintenance. Improper self maintenance may cause electric Α shock and fire.
 - Please contact your agent if you need to remove and reinstall the unit. Electric shock or fire may occur if you remove and reinstall the unit yourself improperly.
 - If the supply cord is damaged, it must be replaced by the special cord obtainable at • authorized service/parts centers.

PRECAUTIONS DURING OPERATION

- Avoid an extended period of direct air flow for your health.

R

Ν

I Ν

G

A

W

Α R

Ν L

Ν G

- Do not insert a finger, a rod or other objects into the air outlet or inlet. As the fan is rotating at a high speed, it will cause injury. Before cleaning, be sure to stop the operation and turn the breaker OFF.
- Do not use any conductor as fuse wire, this could cause fatal accident.



- During thunder storm, disconnect and turn off the circuit breaker.
- Spray cans and other combustibles should not be located within a meter of the air outlets

of both indoor and outdoor units. As a spray can's internal pressure can be increased by hot air, a rupture may result.

PRECAUTIONS DURING OPERATION

• The product shall be operated under the manufacturer specification and not for any other intended use.





- Do not attempt to operate the unit with wet hands, this could cause fatal accident.
- When operating the unit with burning equipments, regularly ventilate the room to avoid oxygen insufficiency.





 Do not direct the cool air coming out from the air-conditioner panel to face household heating apparatus as this may affect the working of apparatus such as the electric kettle, oven etc.

• Please ensure that outdoor mounting frame is always stable, firm and without defect. If not, the outdoor unit may collapse and cause danger.





- Do not splash or direct water to the body of the unit when cleaning it as this may cause short circuit.
- Do not use any aerosol or hair sprays near the indoor unit. This chemical can adhere on heat exchanger fin and blocked the evaporation water flow to drain pan. The water will drop on tangential fan and cause water splashing out from indoor unit.





C A

U

T I O

Ν

• Please switch off the unit and turn off the circuit breaker during cleaning, the high-speed fan inside the unit may cause danger.

• Turn off the circuit breaker if the unit is not to be operated for a long period.





• Do not climb on the outdoor unit or put objects on it.

• Do not put water container (like vase) on the indoor unit to avoid water dripping into the unit. Dripping water will damage the insulator inside the unit and causes short-circuit.



Do not place plants directly under the air flow as it is bad for the plants.


- When operating the unit with the door and windows opened, (the room humidity is always above 80%) and with the air deflector facing down or moving automatically for a long period of time, water will condense on the air deflector and drips down occasionally. This will wet your furniture. Therefore, do not operate under such condition for a long time.
- If the amount of heat in the room is above the cooling or heating capability of the unit (for example: more people entering the room, using heating equipments and etc.), the preset room temperature cannot be achieved.

This appliance is not intended for use by young children or infirm persons unless they have been adequately supervised by a responsible person to ensure that they can use the appliance safely.
Young children should be supervised to ensure that they do not play with the appliance.

- 11 -

REMOTE CONTROLLER

- This controls the operation of the indoor unit. The range of control is about 7 meters. If indoor lighting is controlled electronically, the range of control may be shorter.
- This unit can be fixed on a wall using the fixture provided. Before fixing it, make sure the indoor unit can be • controlled from the remote controller.
- Handle the remote controller with care. Dropping it or getting it wet may compromise its signal transmission capability.
- After new batteries are inserted into the remote controller, the unit will initially require approximately 10 seconds to respond to commands and operate.

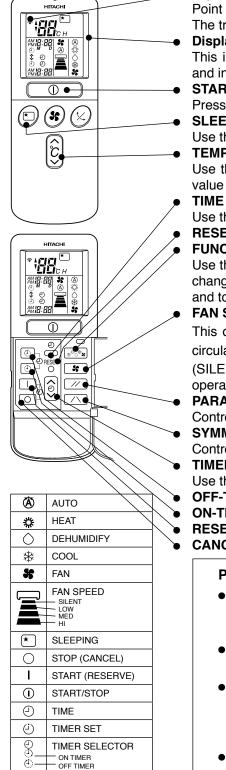

PARALLEL SWING

SYMMETRY SWING

11 \land

Signal emitting window/transmission sign

Point this window toward the indoor unit when controlling it.

The transmission sign blinks when a signal is sent.

Display

This indicates the room temperature selected, current time, timer status, function and intensity of circulation selected.

START/STOP button

- Press this button to start operation. Press it again to stop operation.
- **SLEEP** button

Use this button to set the sleep timer.

TEMPERATURE buttons

Use this button to raise or lower the temperature setting. (Keep pressed, and the value will change more quickly.)

TIME button

Use this button to set and check the time and date.

RESET buttons

FUNCTION selector

Use this button to select the operating mode. Every time you press it, the mode will change from (A) (AUTO) to 3 (HEAT) to \bigcirc (DEHUMIDIFY) to % (COOL) and to \$ (FAN) cyclically.

FAN SPEED selector

This determines the fan speed. Every time you press this button, the intensity of circulation will change from (為 (AUTO) to 冨 (HI) to 冨 (MED) to 冨 (LOW) to 冨 (SILENT) (This button allows selecting the optimal or preferred fan speed for each operation mode).

PARALLEL SWING button

Controls the angle of the vertical air deflectors to parallel.

SYMMETRY SWING button

Controls the angle of the vertical air deflectors to symmetry.

TIMER control

Use this button to set the timer.

OFF-TIMER button Select the turn OFF time.

- **ON-TIMER button** Select the turn ON time.
 - **RESERVE button** Time setting reservation.
 - CANCEL button Cancel time reservation.

Precautions for Use

- Do not put the remote controller in the following places.
- Under direct sunlight.
- In the vicinity of a heater.
- Handle the remote controller carefully. Do not drop it on the floor, and protect it from water.
- Once the outdoor unit stops, it will not restart for about 3 minutes (unless you turn the power switch off and on or unplug the power cord and plug it in again).

This is to protect the device and does not indicate a failure.

If you press the FUNCTION selector button during operation, the device may stop for about 3 minutes for protection.


VARIOUS FUNCTIONS

Auto Restart Control


- If there is a power failure, operation will be automatically restarted when the power is resumed with previous operation mode and airflow direction.
- (As the operation is not stopped by remote controller.)
- If you intend not to continue the operation when the power is resumed, switch off the power supply. When you switch on the circuit breaker, the operation will be automatically restarted with previous operation
 - mode and airflow direction.
 - Note: 1. If you do not require Auto Restart Control, please consult your sales agent or OFF by remote control.
 - 2. Auto Restart Control is not available when Timer or Sleep Timer mode is set.

AUTOMATIC OPERATION

The device will automatically determine the mode of operation, HEAT, COOL or DEHUMIDIFY depending on the current room temperature. The selected mode of operation will change when the room temperature varies. However the mode of operation will not change when indoor unit connected to multi type outdoor unit.

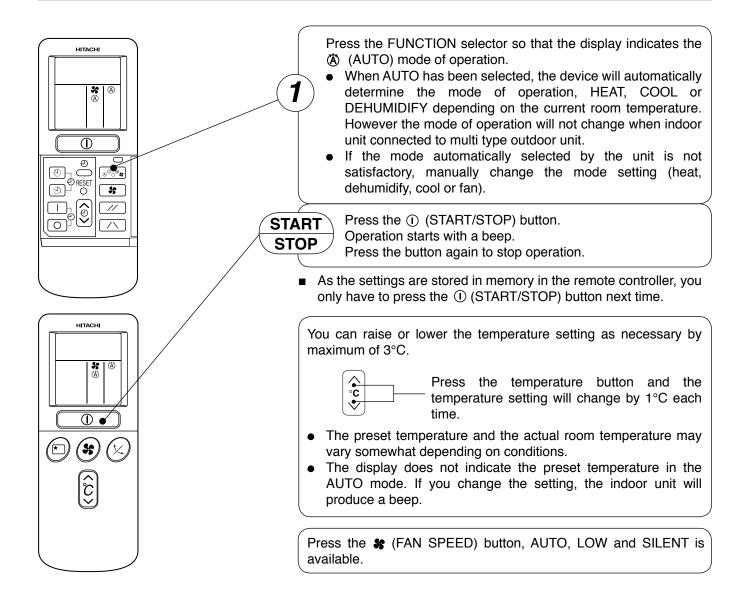

- Use the device for heating when the outdoor temperature is under 21°C.
- When it is too warm (over 21°C), the heating function may not work in order to protect the device.
- In order to keep reliability of the device, please use this device above -15°C of the outdoor temperature.

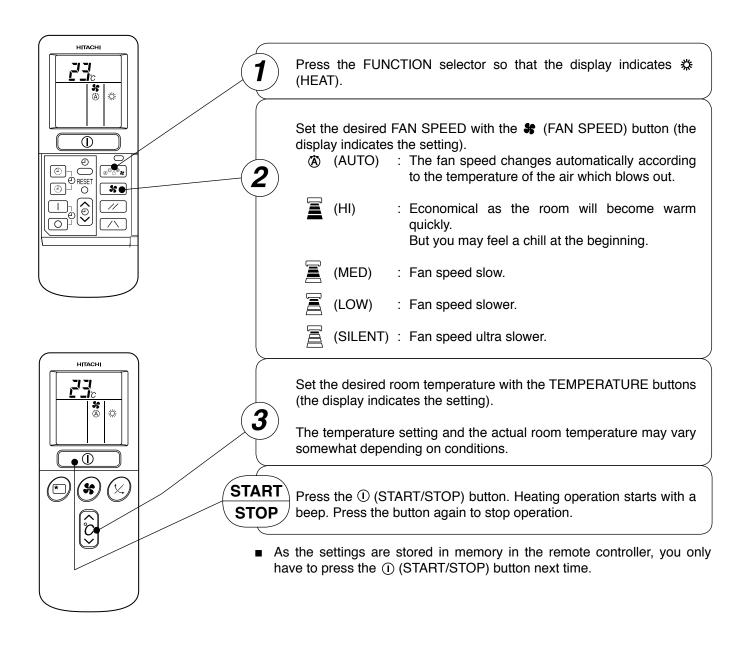

Defrosting


Defrosting will be performed about once an hour when frost forms on the heat exchange of the outdoor unit, for 5~10 minutes each time.

During defrosting operation, the operation lamp blinks in cycle of 3 seconds on and 0.5 second off. The maximum time for defrosting is 20 minutes.

However, if it is connected to multi type outdoor unit, the maximum time for defrosting is 15 minutes. (If the piping length used is longer than usual, frost will likely to form.)

DEHUMIDIFYING OPERATION

Use the device for dehumidifying when the room temperature is over 16°C. When it is under 15°C, the dehumidifying function will not work.

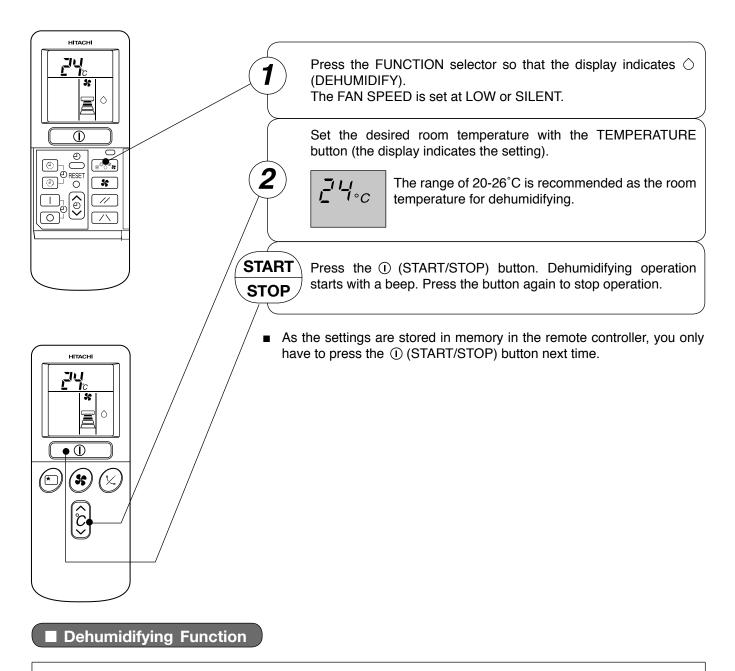

- When the room temperature is higher than the temperature setting: The device will dehumidify the room, reducing the room temperature to the preset level. When the room temperature is lower than the temperature setting: Dehumidifying will be performed at the temperature setting slightly lower than the current room temperature, regardless of the temperature setting. The function will stop (the indoor unit will stop emitting air) as soon as the room temperature becomes lower than the setting temperature.
- The preset room temperature may not be reached depending on the number of people present in the room or other room conditions.


COOLING OPERATION

Use the device for cooling when the outdoor temperature is -10~43°C.

If in doors humidity is very high (80%), some dew may form on the air outlet grille of the indoor unit.


	Press the FUNCTION selector so that the display indicates * (COOL).
	Set the desired FAN SPEED with the \$ (FAN SPEED) button (the display indicates the setting).
	(AUTO) : The FAN SPEED is HI at first and varies to MED or LOW automatically when the preset temperature has been reached.
	(HI) : Economical as the room will become cool quickly.
	(MED) : Fan speed slow.
	(LOW) : Fan speed slower.
	SILENT) : Fan speed ultra slower.
	Set the desired room temperature with the TEMPERATURE button (the display indicates the setting). The temperature setting and the actual room temperature may
	vary some how depending on conditions.
START STOP	Press the ① (START/STOP) button. Cooling operation starts with a beep. Press the button again to stop operation. The cooling function does not start if the temperature setting is higher than the current room temperature (even though the ① (OPERATION) lamp lights). The cooling function will start as soon as you set the temperature below the current room temperature.
	the settings are stored in memory in the remote controller, you only ve to press the ① (START/STOP) button next time.


You can use the device simply as an air circulator. Use this function to dry the interior of the indoor unit at the end of summer.

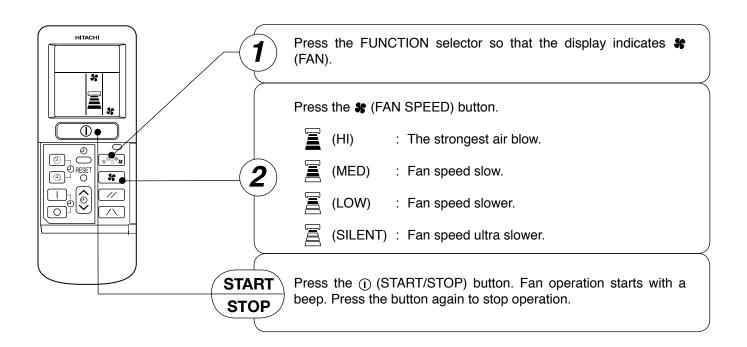

FAN SPEED (AUTO)	When the AUTO fan speed mode is set in the cooling/heating operation:
For the heating operation	 When the difference of room temperature and setting temperature is large, fan starts to run at HI speed. After room temperature reaches the preset temperature, the heating operation, which changes the fan speed and room temperature to obtain optimum conditions for natural healthful heating will be performed.
For the cooling operation	 When the difference of room temperature and setting temperature is large, fan starts to run at HI speed. After room temperature reaches the preset temperature, the cooling operation, which changes the fan speed and room temperature to obtain optimum conditions for natural healthful cooling will be performed.

HOW TO SET THE TIMER

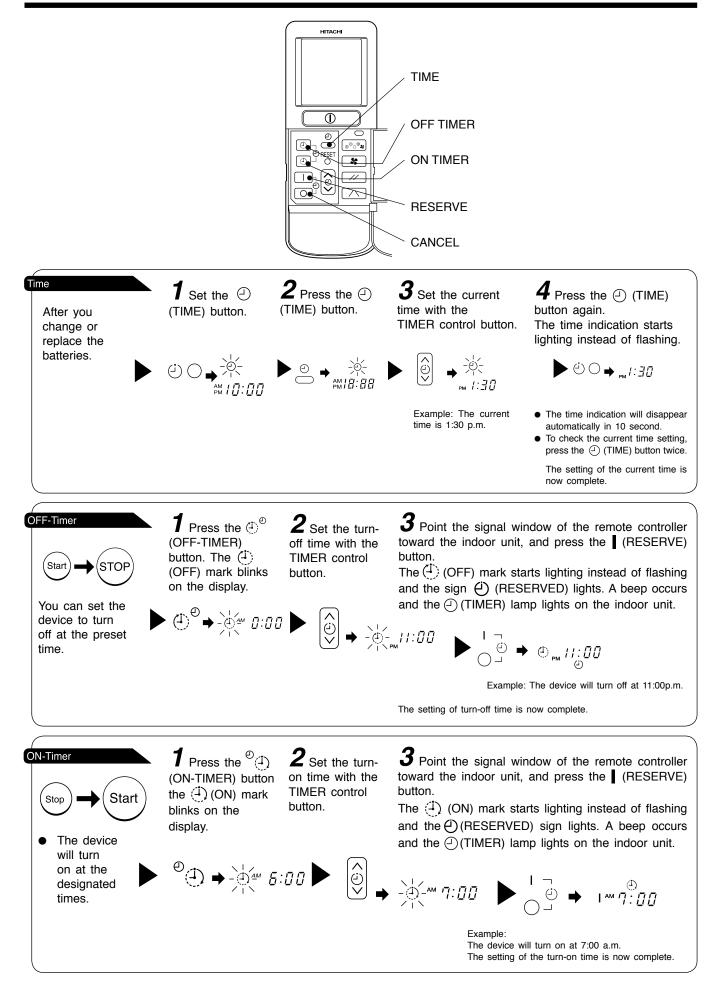

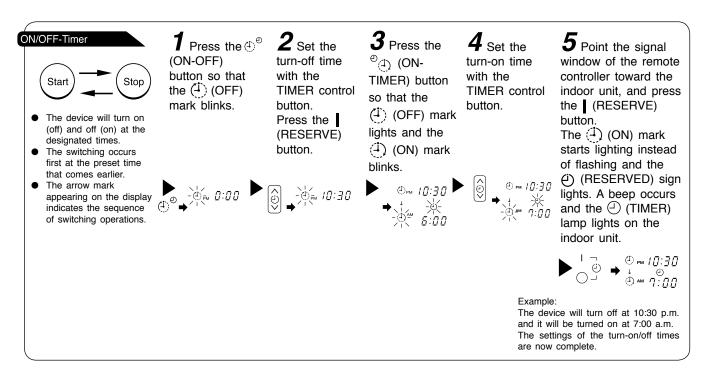

- The timer may be used in three ways: off-timer, on-timer, and ON/OFF (OFF/ON)-timer. Set the current time at first because it serves as a reference.
- As the time settings are stored in memory in the remote controller, you only have to press the
 (RESERVE) button in order to use the same settings next time.

How to Cancel Reservation

Point the signal window of the remote controller toward the indoor unit, and press the \bigcirc (CANCEL) button.


The (IRESERVED) sign goes out with a beep and the (IRER) lamp turns off on the indoor unit.

NOTE

You can set only one of the OFF-timer, ON-timer and ON/OFF-timer.

HOW TO SET THE SLEEP TIMER

Set the current time at first if it is not set before (see the pages for setting the current time). Press the \star (SLEEP) button, and the display changes as shown below.

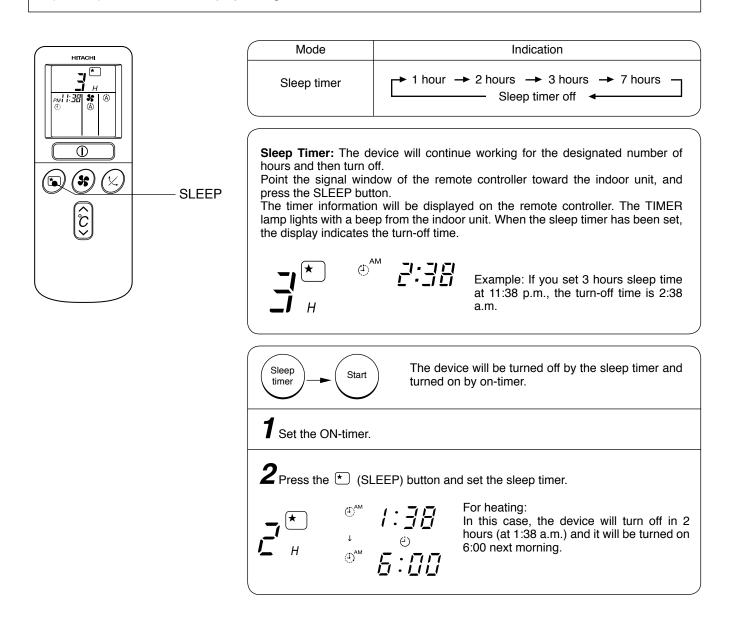

How to Cancel Reservation

Point the signal window of the remote controller toward the indoor unit, and press the \bigcirc (CANCEL) button. The O (RESERVED) sign goes out with a beep and the O (TIMER) lamp turns off on the indoor unit.

HOW TO EXCHANGE THE BATTERIES IN THE REMOTE CONTROLLER




Remove the cover as shown in the figure and take out the old batteries.

Push and pull to the direction of arrow

2

Install the new batteries.

⁷ The direction of the batteries should match the marks in the case.

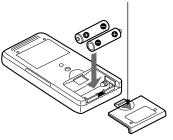

A CAUTION

- 1. Do not use new and old batteries, or different kinds of batteries together.
- 2. Take out the batteries when you do not use the remote controller for 2 or 3 months.


TEMPORARY SWITCH

If the remote controller does not work due to battery failure, press this switch to start and stop operation.

This temporary operation will be at the setting made most recently. (The unit will immediately go into automatic
operation once power is switched on.)

CIRCUIT BREAKER

When you do not use the room air conditioner, set the circuit breaker to "OFF".

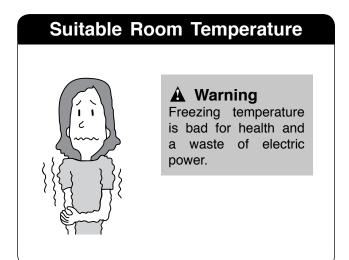

Install curtain or blinds

Ventilation

entrance of fresh air.



Effective Usage Of Timer

At night, please use the "OFF or ON timer operation mode", together with your wake up time in the morning. This will enable you to enjoy a comfortable room temperature. Please use the timer effectively.



Do Not Forget To Clean The Pre-Filter

Dusty pre-filter will reduce the air volume and the cooling efficiency. To prevent from wasting electric energy, please clean the filter every 2 weeks.



Please Adjust Suitable Temperature For Baby And Children

Please pay attention to the room temperature and air flow direction when operating the unit for baby, children and old folks who have difficulty in movement.




FOR USER'S INFORMATION

The Air Conditioner And The Heat Source In The Room


A Caution

If the amount of heat in the room is above the cooling capability of the air conditioner (for example: more people entering the room, using heating equipments and etc.), the preset room temperature cannot be achieved.

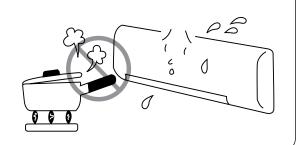

Not Operating For A Long Time


When the indoor unit is not to be used for a long period of time, please switch off the power from the mains. If the power from mains remains "ON", the indoor unit still consumes about 8W in the operation control circuit even if it is in "OFF" mode.

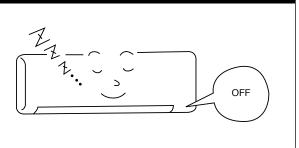

When Lightning Occurs

A Warning


To protect the whole unit during lightning, please stop operating the unit and remove the plug from the socket.

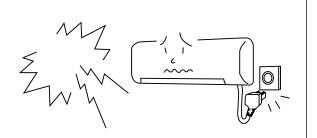


Interference From Electrical Products

A Caution

To avoid noise interference, please place the indoor unit and its remote controller at least 1m away from electrical products.

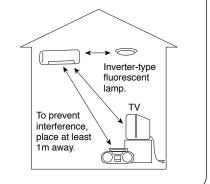

ATTACHING THE AIR PURIFYING FILTERS

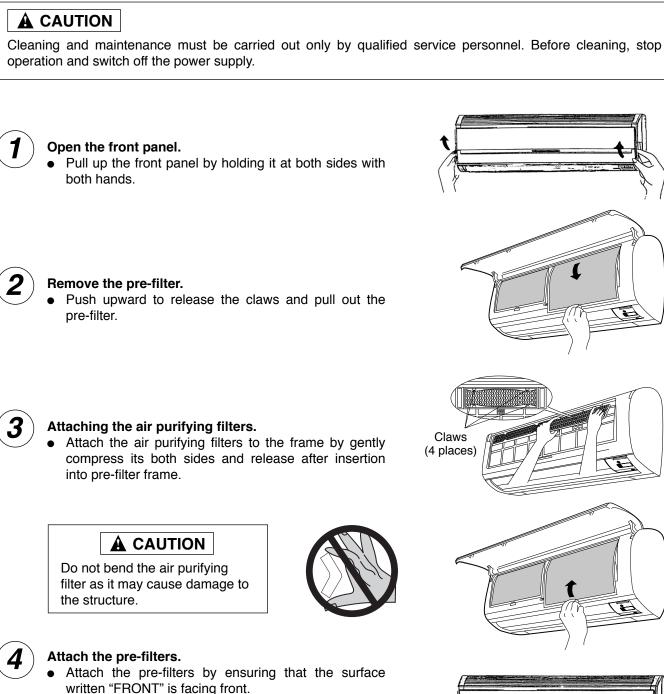

• After attaching the pre-filters, push the front panel at three arrow portion as shown in figure and close it.



NOTE

- In case of removing the air purifying filters, please follow the above procedures.
- The cooling capacity is slightly weakened and the cooling speed becomes slower when the air purifying filters are used. So, set the fan speed to "HIGH" when using it in this condition.
- Do not operate the air conditioner without pre-filter. Dust may enter the air conditioner and fault may occur.



MAINTENANCE

Cleaning and maintenance must be carried out only by qualified service personnel. Before cleaning, stop operation and switch off the power supply.

1. PRE-FILTER I

Clean the pre-filter, as it removes dust inside the room. In case the pre-filter is full of dust, the air flow will decrease and the cooling capacity will be reduced. Further, noise may occur. Be sure to clean the filter following the procedure below.


PROCEDURE

Open the front panel and remove the pre-filter
 Gently lift and remove the air purifying filter from the pre-filter frame.

Vacuum dust from the pre-filter and air purifying filter using vacuum cleaner. If there is too much dust, pre-filter only rinse under running tap water and gently brush it with soft bristle brush. Allow pre-filters to dry in shade.



- Re-insert the air purifying filter to the pre-filter frame. Set the pre-filter with "FRONT" mark facing front, and slot them into the original state.
- After attaching the pre-filters, push the front panel at three arrow portions as shown in figure and close it.

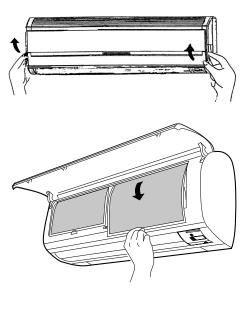



NOTE:

• Air purifying filter should be cleaned every month or sooner if noticeable loading occurs. When used overtime, it may loose its deodorizing function. For maximum performance, it is recommended to replace it every 1 year depending on application requirements.


- Do not wash with hot water at more than 40°C. The pre-filter may shrink.
- When washing it, shake off moisture completely and dry it in the shade; do not expose it directly to the sun. The pre-filter may shrink.
- Do not use detergent on the air purifying filter as some detergent may deteriorate the filter electrostatic performance.

2. Washable Front Panel

- Remove the front panel and wash with clean water.
 Wash it with a soft sponge.
 After using neutral detergent, wash thoroughly with clean water.
- When front panel is not removed, wipe it with a soft dry cloth. Wipe the remote controller thoroughly with a soft dry cloth.
- Wipe the water thoroughly. If water remains at indicators or signal receiver of indoor unit, it causes trouble.

Method of removing the front panel. Be sure to hold the front panel with both hands to detach and attach it.


Removing the Front Panel

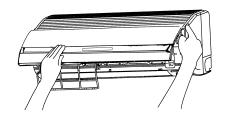

• When the front panel is fully opened with both hands, push the right arm to the inside to release it, and while closing the front panel slightly, put it out forward.

Attaching the Front Panel

口

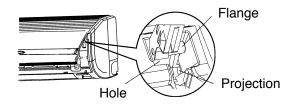

• Move the projections of the left and right arms into the **Flanges** in the unit and securely insert them into the holes.

- Do not splash or direct water to the body of the unit when cleaning it as this may cause short circuit.
- Never use hot water (above 40°C), benzine, gasoline, acid, thinner or a brush, because they will damage the plastic surface and the coating.




A CAUTION

Cleaning and maintenance must be carried out only by qualified service personnel. Before cleaning, stop operation and switch off the power supply.

3. MAINTENANCE BEFORE LONG OFF PERIOD• Run the unit by setting the operation mode to * (COOL), the temperature to 32°C and the fan speed to HI for about half a day on a fine day, and dry the whole of the unit. • Switch off the power plug.

REGULAR INSPECTION

PLEASE CHECK THE FOLLOWING POINTS BY QUALIFIED SERVICE PERSONNEL EITHER EVERY HALF YEARLY OR YEARLY. CONTACT YOUR SALES AGENT OR SERVICE SHOP.

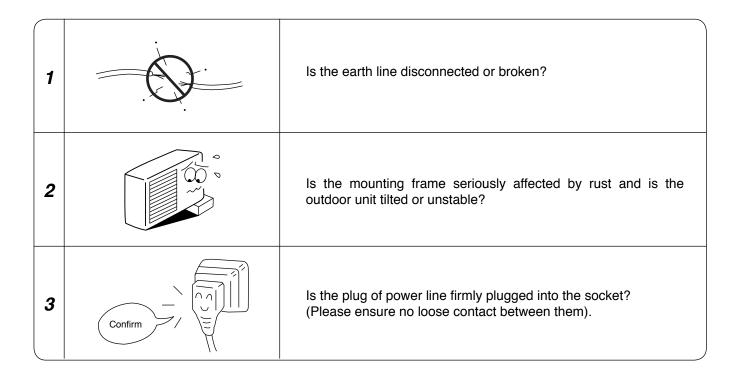

AFTER SALE SERVICE AND WARRANTY

WHEN ASKING FOR SERVICE, CHECK THE FOLLOWING POINTS

CONDITION	CHECK THE FOLLOWING POINTS
If the remote controller is not transmitting a signal. Remote controller display is dim or blank.	 Do the batteries need replacement? Is the polarity of the inserted batteries correct?
When it does not operate	 Is the fuse all right? Is the voltage extremely high or low? Is the circuit breaker "ON"? Is the setting of operation mode different from other indoor units?
When it does not cool well When it does not hot well	 Is the pre-filter blocked with dust? Does sunlight fall directly on the outdoor unit? Is the air flow of the outdoor unit obstructed? Are the doors or windows opened, or is there any source of heat in the room? Is the set temperature suitable? Are the air inlets or air outlets of indoor and outdoor units blocked? Is the fan speed "LOW" or "SILENT"?


Notes

- In quiet operation or stopping the operation, the following phenomena may occassionally occur, but they are not abnormal for the operation.
 - (1) Slight flowing noise of refrigerant in the refrigerating cycle.
 - (2) Slight rubbing noise from the fan casing which is cooled and then gradually warmed as operation stops.
- The odor will possibly be emitted from the room air conditioner because the various odor, emitted by smoke, foodstuffs, cosmetics and so on, sticks to it. So the pre-filter and the evaporator regularly must be cleaned to reduce the odor.
- Please contact your sales agent immediately if the air conditioner still fails to operate normally after the above inspections. Inform your agent of the model of your unit, production number, date of installation. Please also inform him regarding the fault.
- Power supply shall be connected at the rated voltage, otherwise the unit will be broken or could not reach the specified capacity.

NOTE:


- If the supply cord is damaged, it must be replaced by the special cord obtainable at authorized service parts centers.
- On switching on the equipment, particularly when the room light is dimmed, a slight brightness fluctuation may occur. This is of no consequence.
 - The conditions of the local Power Supply Companies are to be observed.


CONSTRUCTION AND DIMENSIONAL DIAGRAM

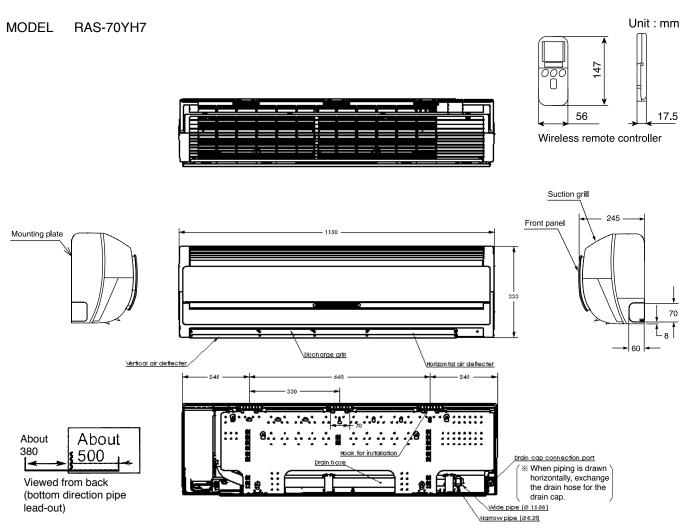

Note:

- 1. Service space (free space needed for servicing) is 200mm on the right, 100mm on the left and 50mm on top.
- 2. The wide and narrow pipes must be thermally insulated.
- 3. Piping length is within 30m
- 4. Height different of the piping between the indoor unit and the outdoor unit should be within 20m.
- 5. Power supply cord length is about 2m
- 6. Connecting cable 2.5mm dia. x 3 (AB Line), 1.6mm dia. x 2 (CD Line) is used for the connection.

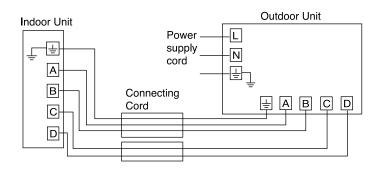

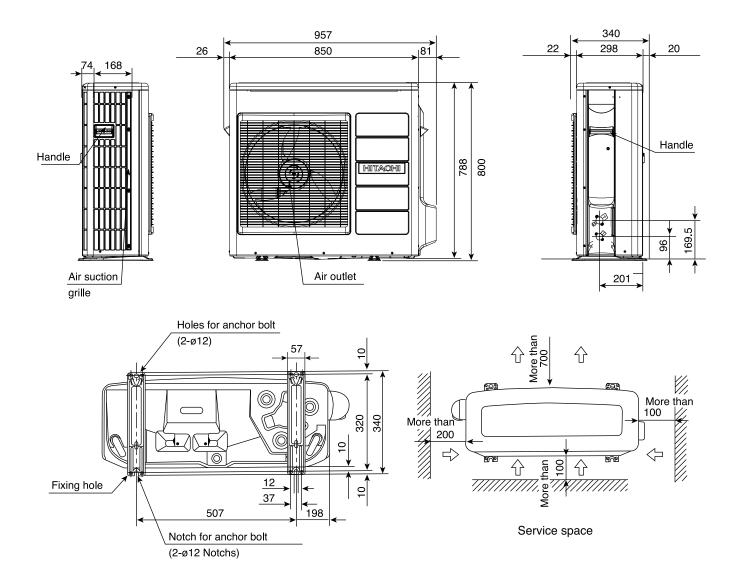

MAIN PARTS COMPONENT

THERMOSTAT (Room Temperature Thermistor)

Thermostat Specifications

MODEL			RAS-70YH7	
THERMOSTAT MODEL			IC	
OPERATION MODE			COOL	HEAT
	INDICATION	ON	15.6 (60.1)	20.0 (68.0)
	16	OFF	15.3 (59.5)	20.7 (69.3)
TEMPERATURE °C (°F)	INDICATION	ON	23.6 (74.5)	28.0 (82.4)
	24	OFF	23.3 (73.9)	28.7 (83.7)
	INDICATION	ON	31.6 (88.9)	36.0 (96.8)
	32		31.3 (88.3)	36.7 (98.1)

INDOOR FAN MOTOR

Fan Motor Specifications

MODEL	RAS-70YH7
POWER SOURCE	DC: 100 ~ 322V
OUTPUT	30W
CONNECTION	$100 \sim 322V \circ \frac{\text{RED}}{\text{BLK}}$ $0V \circ \frac{\text{WHT}}{15V \circ \frac{\text{WHT}}{\text{YEL}}}$ $0 \sim 6.5V \circ \frac{\text{BLU}}{\text{FG o}}$ (Control circuit built in)


OUTDOOR FAN MOTOR


Fan Motor Specifications

ITEM	MODEL	RAC-70YH7A
POWER SOURCE		DC: 120 ~ 380V
OUTPUT	(W) MAX	47
COIL		BLACK (W)
RESISTANCE VALUE (Ω)	20°C 2M	U-V 35 ± 2.5 V-W 35 ± 2.5 W-U 35 ± 2.5
BLU : BLUE GRY : GRAY BLK : BLACK	yel : yello orn : orano pnk : pink	


COMPRESSOR MOTOR

Compressor Motor Specifications

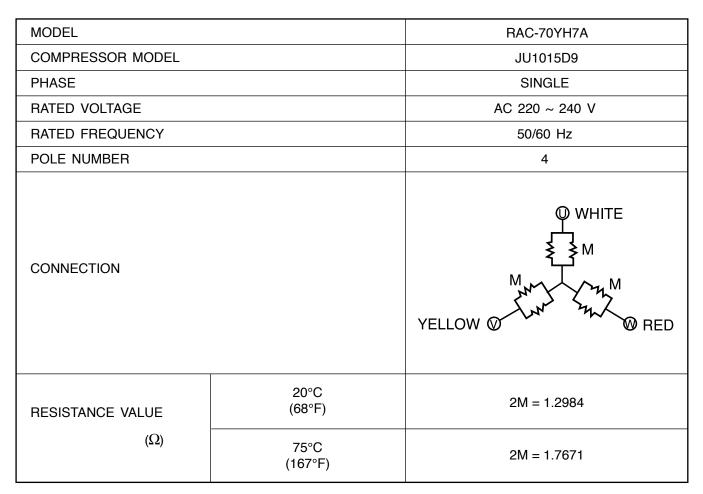

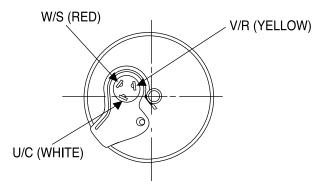



When the Air Conditioner has been operated for a long time with the capillary tubes clogged or crushed or with too little refrigerant, check the color of the refrigerant oil inside the compressor. If the color has been changed conspicuously, replace the compressor.

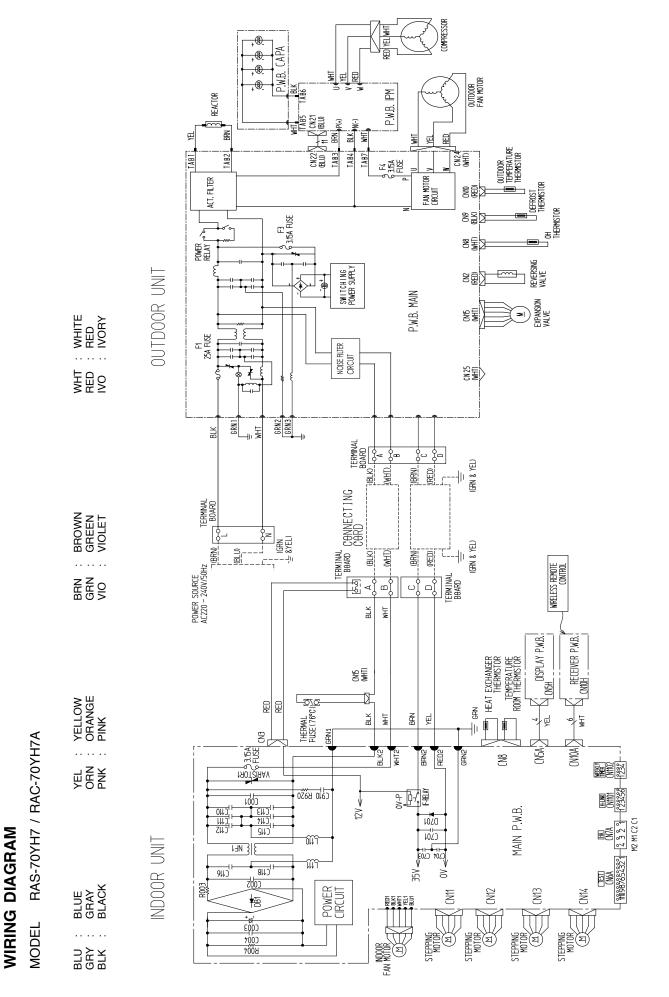

- 33 -

Remote Control

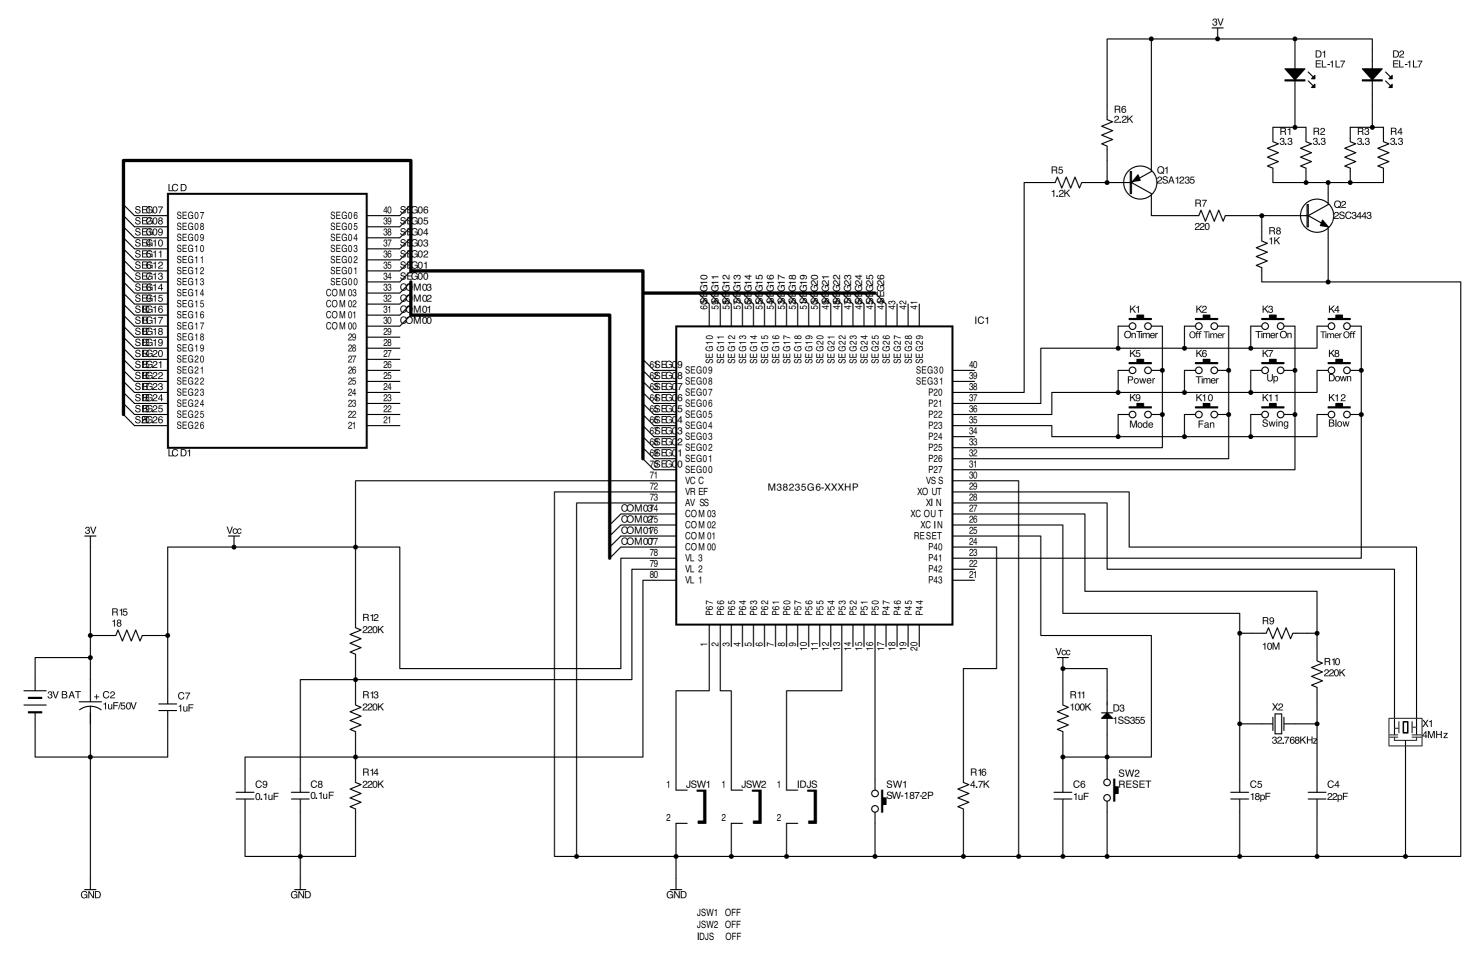

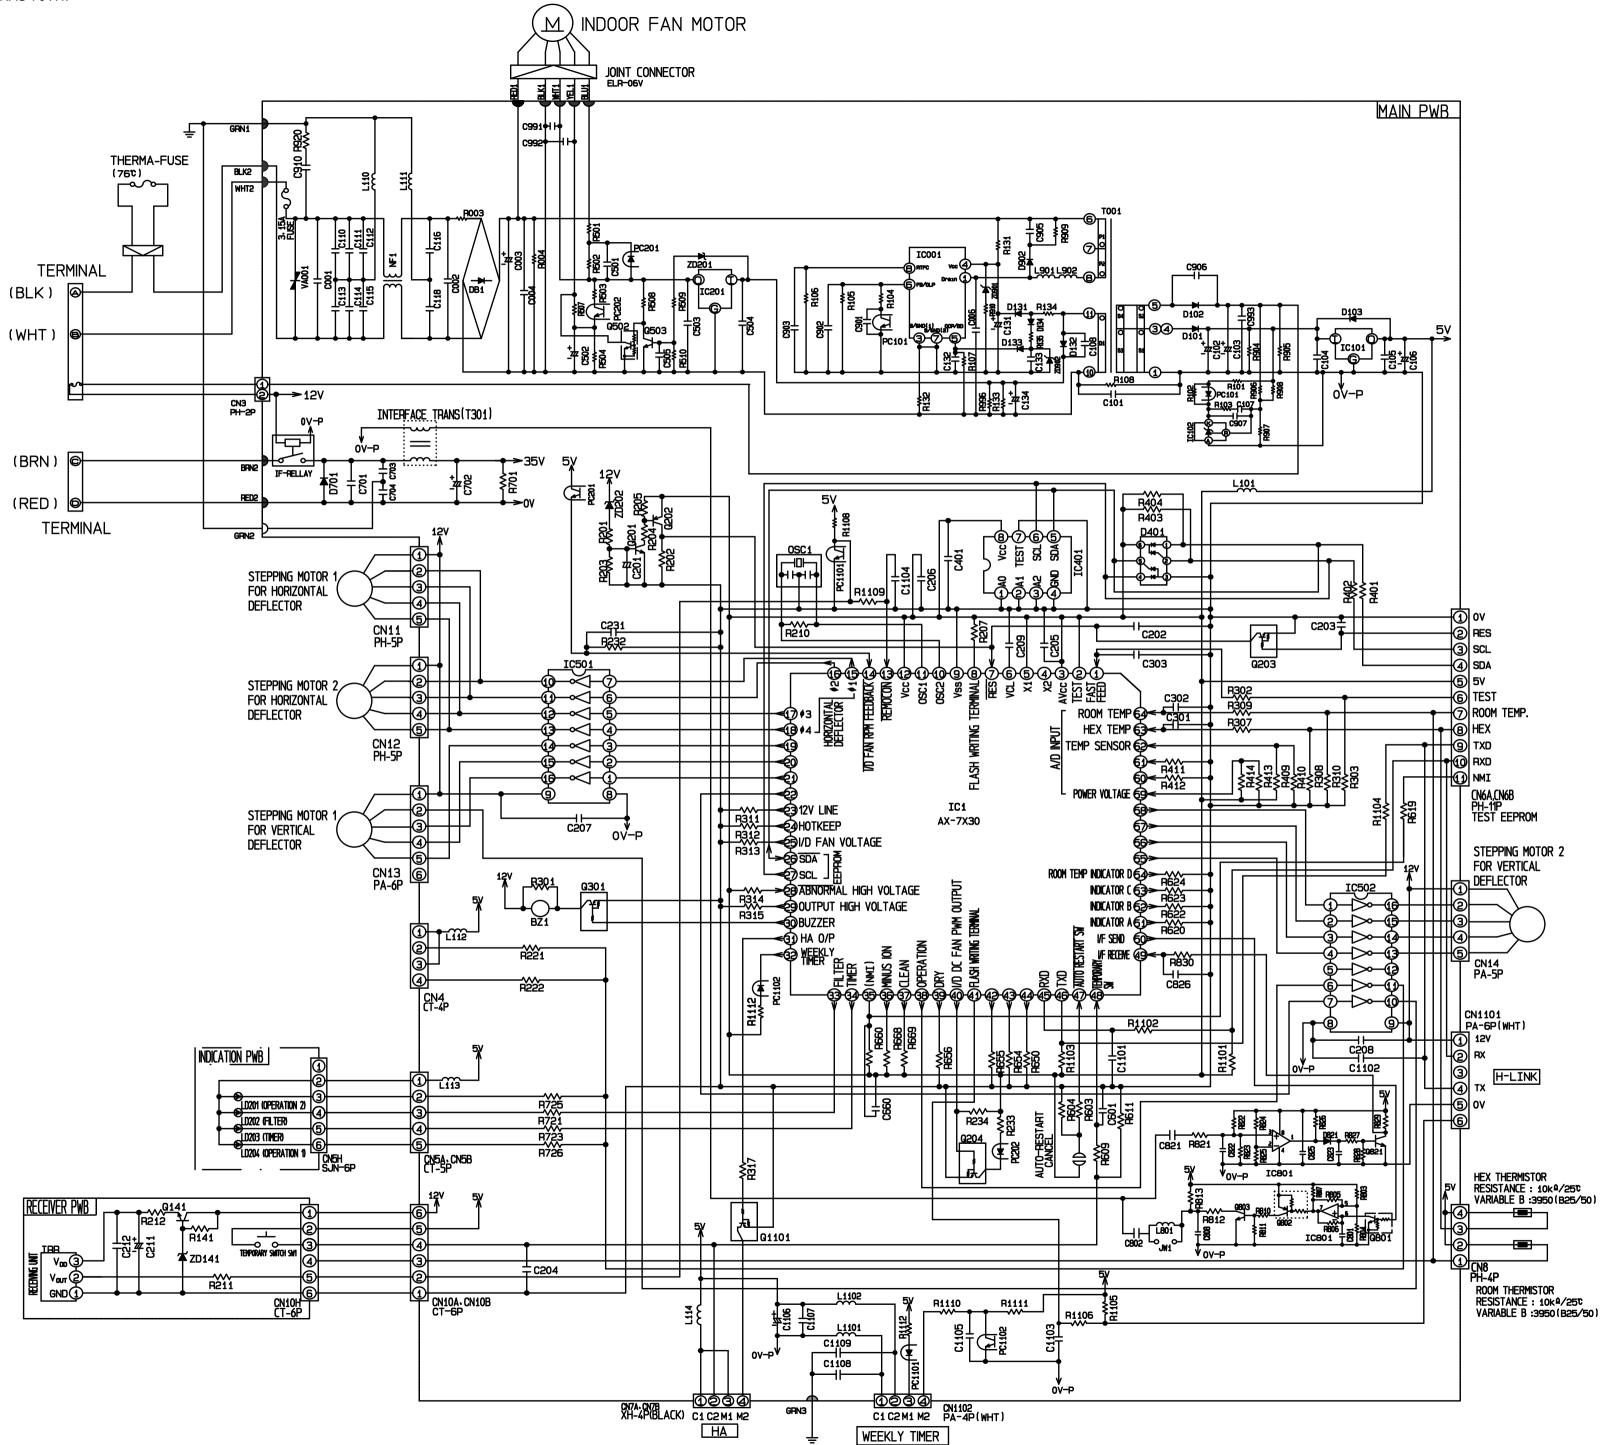

10unting face A: component side 3: solder side		MOUNTING TYPE A : AXIAL R : RADIAL P : RADIAL (7.5mm PITCH) H : HAND INSERT							
			H : C :	HAN) insi ' Sui	ert Rfa(E	MOUNTIN	١G
RES	IST	OF							<u> </u>
SYMBOL R003	(Q) 2.2	TOL 5%	5	TYPE H	A	REMARK		SYMBOL COO1	0
R004 R101 R102	1M 620 1K	5% 5%	1/4 1/10 1/10		A B B	RCR		C002 C003 C004	0
R103 R104	15 2:2K	ыų	1/10 1/10	C C	BB			C006 C101	22
R105 R106 R107	33K 150K 330		1/10 1/10 1/4	C	A B			C102 C103 C104	1
R106 R131	1.2M	ă\	-	∕≖	A	ACR		C105 C106	
R132 R133 R134	0.62 1M 22	9999	2 1/2 1/2	P C A	A B A			C107 C108 C110	- C
R135	750	5%	1/2	С	A			C111 C112	0.
R141 R201	1K 5.1K		1/6 1/16	A C	A			C113 C114 C115	0. 0.
R202 R203	5. 1K 10K	666	1/16 1/16 1/16	C C C	A A 4			C116 C118	10
R204 R205	2.7K	5%	1/16	С	A			C131 C132 C133	4
R207	10K 1M	5% 5%	1/16 1/16		AB			C134 C201	
R211	1K	5%	1/6	A				C202	
R212 R221 R222	47 390 390	ស់សំ	1/6 1/4 1/4	A C C	A A			C203	
R232 R233	1K 390	ыų	1/10 1/8	C C	B			C205	
R234 R301	1K 3.3K	5% 5%	1/16 1/10		в			C206 C207 C208	H
R302 R303	1K 10K	5% 5%	1/16 1/16	C C	A			C209	Ē
R307 R308 R309	1K 12.7K 1K	1% 5%	1/16 1/16 1/16	C C	A A A			C211 C212	
R310 R311 R312	12.7K 10K 10K	1% 5%	1/16 1/16 1/16	C C	A A A			C231 C301	10
R313 R314	10K 10K 10K	ň	1/16 1/16	C C	Â			C302 C303	Ë
R315 R317	10K 1K	5%	1/16 1/16	С	A A			C401 C501	10
R401	390		1/16 1/16		A			C502 C503	
R402 R403 R404	390 5.1K 5.1K	5%	1/16 1/16 1/16	I C	A A A			C504 C505	10
R409 R410	5. 1K	5%	1/16	С	Â			C601 C660	E
R411 R412 R413	10K 10K 5.1K	ñ ñ ň	1/16 1/16 1/16 1/16	C C C	A A A			C701 C702	0. 6
R414	5. 1K	5%	1/16	С	•			C702 C703 C704	0. 0.
R501 R502 R503	4.3K 4.3K 4.	666	1/4 1/10 1/8		BBB			C801 C802	15 0.
R504 R507	3.3K 7.5K	6	1/10 1/2	C C	BB			C806 C821	0. 0.
R508 R509 R510	10K 100 15K	5656	1/10 1/10 1/10	C C C	A B				10 0. 0 0.
R603	1K	5%	1/16	С	A			C826 C901	٩V
R604 R609 R611	20K 1K 10K	5 5 5 5 5	1/16 1/16 1/16	C C C	A A A			C902 C903 C905	0. 0
								C906 C907	22
R619 R620	100 10K	5% 5%	1/10 1/16	C C	A A			C910 C991 C992	400
R622 R623 R624	10K 10K 10K	666	1/16 1/16 1/16	С	A A A			C993	0
								C1101 C1102 C1103	10 10 0.
R650 R654 R655	10K 10K 10K	ìð	1/16 1/16 1/16	С	A A A			C1104 C1105 C1106	
R656 R660	10K 1K	5% 5%	1/16 1/16	С	Â			C1108 C1107 C1108	
									0
R668 R669	10K 10K		1/16 1/16		A			SYMBOL	
R701 R721	20K 240	5% 5%	1/6 1/10		A A				EX(
R723 R725 R726	180 240 240		1/10 1/10 1/10	C C	A A A			L111	JU
R803	120K	5%	1/16	С	*			L112 L113 L114	EX0 EX0
R804 R805 R806	120K 120K 120K	5% 5%	1/16 1/16 1/16	C C	A A A				LBi
R807 R810	4.3K 680	5	<u>1/16</u> 1/10	C C	A A			L902	HF; HF;
R811 R812 R813	2K 39 39	5% 5% 5%	1/16 1/4 1/4	C C	A A A			NF1 T001	1200 1200
R821 R822 R823	470 10K 10K	5% 1%	1/16 1/16 1/16	С	A A A			L1101	EXO
	8.25K 10K	1% 1%	<u>1/16</u> 1/16	C C	A				
R826 R827 R828	1K 3K 10K	5% 5%	1/16 1/16 1/16	C C C	A A A			Symbol	
R829 R830	5. 1K 1K	5% 5%	1/16 1/16	С	Â			G141 G201	F
R904 R905	1M	5	1/2 1/2	C	B			<u>Q202</u>	E
R906 R907 R908	12K 2K 12K	1X 1X 1X	1/10 1/10 1/10	<u> </u>	B B B			G203 G204 G301	F
R909 R910	220K 270K	5% 5%	2 1/2	P C	A			Q502	E
R920 R996	10	ă\	1/2	^	AB	CFS		G503 G801	F
R1101		5%	1/10		A			G802 G803	E
R1102 R1103 R1104	10K	ìð	1/10 1/10 1/10	C	B A B			G821 G1101	F
R1105 R1106	10K 1K	5% 5%	1/16 1/6	C C	AB				
R1107 R1108 R1109	150 2K 1K	56	1/4 1/10 1/10	C	A B B			ZEN	١E
R1110 R1111	150 2K	5%	1/4 1/10	C C	AB			SYMBOL ZD141	
R1112	560	5%	1/10	C	В	E		ZD202 ZD201	E
				Ē		E		ZD901 ZD902	
		<u> </u>				L	I		


Mounting face A: component side B: solder side

SYMBOL COO1		_		100	.	
	(µF)			IYFE	FACE	æw
C002	0.68	AC250 AC250	ч	Ξū	A	***
	100 0.01	450 1000V	DC	H	Â	KM
C006	220p	2000	c	Ρ	A	
C101 C102	2200p 470	AC250 25	D	R	A	LXZ
C103 C104		25 25	DC	НC	AB	LXZ
C105	0.1	25	C	С	В	v
	220 0.1	10 25	DC	R C	A B	YXA
C110	0.01		۷	P	A	STD PM
C111	0.01	AC250	0	P	A	STD PJ
C113		AC250	č	P	Â	NDN
	0.01	AC250	С	P	A	SIDP
C116	1000p 1000p	AC250	CC	e e	A	500 M 500 M
C131	10 470p	50 50	D C	R	Â	PF
C133	22p	50	С	С	A	
	68	50	D	R	A	LXZ
C201	10	16	D	R	A	
	0.1	25	c	c	в	F
		25	C	C	A	
C204	0.1	25	C	C	A	_
	0.1	25	C	C	B	
C207	0.1	25 25	C C	C C	B	
C208 C209		8 B	сu	сu	AB	F
	47	16	D	R	Ĕ.	
C212		10	Ľ	Ê		F
						E
C231 C301	1000p 0-1	50 25	C C	C C	B	F
C302	0.1	25	c	c	В	F
C303 C401	0.1	25 25	C C	C C	B	F
C501	1000p	50	С	C	в	F
C202	10 10 0.1	16 25	DC	R	AB	КL
C504	0.1	50	С	С	в	F
	1000p	50	С	С	В	E
C601 C660	0.1 0.1	25 25	C C	C C	B	F
						F
C702	0.15u 68#	50 50	FD	R	A	w
C703	0.01 0.01	AC250 AC250	сc	P P	A	180 M 180 M
C801	150P	50	C	c	Â	СН
C802	0.22u	50	F	R	A	
C806	0. 1u 0. 01u	25	C۴	CR	A	F
C822 C823	1000p 0- 047u	50	C	Ċ	Â	B B
C825	0. 1u	25	C C	С	A	F
C826 C901	0.01	50	C C	C C	B	F
	0.47u 0.01	50	C C	C	B	F
C905	0.01	1000	C	₽	Â	
C907		\sim	C	PC	B	F
C910 C991	470p 0-1	AC250 50	υu	e c	A	\vdash
C992 C993	0.1	50 50	C C	C C	AB	F
						F
C1102	1000p 1000p	50 50	C C	C C	B	B B
	0. 1u	25 50	C	C	A	
C1103	40000		C .	C	B	F
C1104 C1105	10000	50	C C C	Č	BB	B B
C1104 C1105 C1106 C1107	47 0. 1u	88	000	000	B A A	B B F
C1104 C1105 C1106	47 0. 1u 0. 01	25	C C	C C	B B A	B B F VDN
C1104 C1105 C1106 C1107 C1108 C1109	47 0. 1u 0. 01	2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2	0000	000	B A A	B B F VDN
C1104 C1105 C1106 C1107 C1108 C1109 C1109	47 0.1u 0.01 0.01	25 25 23 23 23 23	C C C C C C		B A A A	B B F VDM
C1104 C1105 C1106 C1107 C1108 C1109 C1109 C01L	47 0.1u 0.01 0.01	25 25 42250 42250	C C C C C C		B A A A	B B F VDM
C1104 C1105 C1106 C1107 C1108 C1109 C0IL SYMBOL L101	47 0.1u 0.01 0.01 MODE	25 25 A250 A250 A250 A35	C C C C C C	C C C P P P	B A A A A FACE A	B B F VDM
C1104 C1105 C1106 C1107 C1108 C1109 C1109 C1109 C1109 C1109 C1109 C1109 C1109 C1109 C1101 C1101 C1101 C1104 C1105 C1104 C1105 C105 C	47 0.1u 0.01 0.01	25 25 A250 A250 A250 A35 A35	C C C C C C	C C C P P	B A A A FACE	B B F VDM
C1104 C1105 C1105 C1106 C1107 C1108 C1109 C1109 COIL L101 L101 L110 L111 L112	47 0.1u 0.01 0.01 EXCELS EXCELS JUMPER EXCELS	25 25 A2280 A2280 A2280 A35 A35 A35	C C C C C C		B A A A FACE A A A A	B B F VDM
C1104 C1105 C1105 C1106 C1107 C1108 C1109 COIL L109 L101 L101 L110 L111 L111 L112 L113	47 0.10 0.01 0.01 EXCELS EXCELS JUMPER	25 25 A2250 A2250 A2250 A35 A35 A35 A35	C C C C C C		B A A A FACE A A A	B B F VDN
C1104 C1105 C1105 C1107 C1108 C1109 C1109 C0IL SYMBOL L101 L101 L110 L111 L112 L113 L114	47 0.1u 0.01 0.01 EXCELS EXCELS EXCELS EXCELS	25 25 A250 A250 A35 A35 A35 A35 A35	E		B A A A A FACE A A A A A A	B B F F M M N M
C1104 C1105 C1106 C1107 C1108 C1109 COIL L101 L101 L110 L110 L111 L1112 L113 L114 L801	47 0.1u 0.01 0.01 EXCELS EXCELS EXCELS EXCELS EXCELS EXCELS EXCELS	25 A250 A250 A250 A35 A35 A35 A35 A35 A35 A35 A35			B B A A A A A A A A A A A	B B F VDN
C1104 C1105 C1106 C1107 C1108 C1109 C01L L101 L101 L101 L110 L111 L112 L113 L114 L901 L901 L902	47 0.1u 0.01 0.01 EXCELS EXCELS EXCELS EXCELS EXCELS EXCELS LB2518 HF70BT	25 25 425 425 425 425 425 435 435 435 435 435 435 435 435 435 43	C C C C C C			B B F VDN
C1104 C1105 C1105 C1107 C1108 C1109 C1109 C1109 C1109 C1109 L101 L101 L101 L110 L111 L112 L114 L114 L114 L114 L114 L114	47 0.01 0.01 0.01 EXCELS EXCELS EXCELS EXCELS EXCELS EXCELS EXCELS EXCELS EXCELS EXCELS EXCELS EXCELS EXCELS	25 25 225 225 225 225 225 235 235 235 23	C C C C C C			B B F F M M N M
C1104 C1105 C1105 C1107 C1107 C1109 C1109 C1109 C1109 C1109 L101 L101 L101 L111 L111 L1112 L1113 L114 L112 L114 L114 L114 L114 L114 L114	47 0.1u 0.01 0.01 EXCELS EXCELS EXCELS EXCELS EXCELS EXCELS LB2518 HF70BT	25 25 225 225 225 225 225 235 235 235 23	C C C C C C		B B A A A A A A A A A A A A A A A A A A	B B F VDN
C1104 C1105 C1106 C1107 C1108 C1109 C0IL SYMBOL L101 L101 L110 L111 L111 L111 L111 L1	47 0.10 0.01 0.01 0.01 EXCELS EXCELS EXCELS EXCELS EXCELS H=70BT H=	25 25 4250 4250 4250 435 435 435 435 435 435 435 435 435 435	C C C C C C		B A A A A A A A A A A A A A A A A A A A	B B F F M M N M
C1104 C1105 C1105 C1107 C1109 C1109 C1109 C1109 C1109 C1109 L101 L101 L111 L111 L111 L111 L111	47 0.10 0.01 0.01 0.01 EXCELS EXCELS EXCELS EXCELS HF70BT HF70BT HF70BT HF70BT HF70BT HF70BT HF70BT HF70BT HF70BT	25 26 26 26 26 26 26 26 26 26 26 26 26 26	C C C C C C C C C		B A A A A A A A A A A A A A A A A A A A	B B F F M M N M
C1104 C1105 C1105 C1107 C1108 C1109 C1109 C1109 C1109 C1109 C1109 C1109 C1109 C1101 L111 L112 L114 L112 L114 L902 NF1 T001 T301 L102 TRAN	47 0.10 0.01 0.01 0.01 EXCELS EXCELS EXCELS EXCELS EXCELS EXCELS HF70BT HF70BT HF70BT HF70BT HF70BT HF70BT NSIS	25 265 A229 A229 A229 A229 A229 A229 A35 A35 A35 A35 A35 A35 A35 A35 A35 A35			B A A A A A A A A A A A A A A A A A A A	
C1104 C1105 C1105 C1107 C1108 C1109 C1109 C1109 C1109 C1109 C1109 C1109 C1109 C1101 L111 L112 L113 L114 L901 L902 NF1 T301 L1102 TRAN SYMBOL	47 0.10 0.01 0.01 0.01 EXCELS EX	25 263 4229 4229 4229 4325 435 435 435 1011 1011 1011 1015 1015 1015 1015 10			B A A A A A A A A A A A A A A A A A A A	
C1104 C1105 C1105 C1107 C1108 C1107 C1107 C1108 C1107 C1107 C1108 C1109 C1107 C1108 C1109 C1101 L111 L112 L113 L114 L112 L114 L901 L902 NF1 T001 T301 L1102 TRAM	47 0.10 0.01 0.01 0.01 EXCELS EX	25 265 A229 A229 A229 A229 A229 A229 A35 A35 A35 A35 A35 A35 A35 A35 A35 A35				
C1104 C1105 C1106 C1107 C1108 C1109 C1109 C1109 C1109 C1109 C1109 L101 L101 L110 L110 L111 L112 L113 L114 L901 L902 NF1 T001 T301 L1101 L100 L101 L101 L902 NF1 T301 SYHBOL G141 G201	47 0.10 0.01 0.01 0.01 EXCELS EX	25 25 4230 4230 4230 4230 4230 435 435 435 435 435 435 435 435 435 435				
C1104 C1105 C1105 C1107 C1108 C1109 C011 C1109 C011 C1109 C011 C1109 C011 L101 L111 L112 L113 L114 L901 L901 L1101 L1102 NF1 T001 L1102 TRAN SYMBOL Q141 Q201 Q201 Q201	47 0.10 0.01 0.01 0.01 EXCELS EX	25 25 4250 4220 4220 4220 4250 4250 4250				
C1104 C1105 C1105 C1107 C1108 C1107 C1101 L111 L111 L111 L901 L901 L901 L901 L1102 TRAN SYMB0L Q141 Q201 Q203	47 0.10 0.01 0.01 0.01 EXCELS EX	25 25 A229 A229 A229 A229 A229 A25 A35 A35 A35 A35 A35 A35 A35 A35 A35 A3				
C1104 C1105 C1105 C1107 C1108 C1109 C011 C1109 C011 C1109 C011 C1109 C011 L101 L111 L112 L113 L114 L901 L901 L1101 L1102 NF1 T001 L1102 TRAN SYMBOL Q141 Q201 Q201 Q201	47 0.10 0.01 0.01 0.01 EXCELS EX	25 25 4250 4220 4220 4220 4250 4250 4250				
C1104 C1105 C1105 C1105 C1106 C1107 C1108 C1109 C011 L101 L101 L111 L111 L111 L111 L111 L111 L901 L901 T301 T102 NF1 T01 L102 NF1 G201 G203 G204 G301 G502	47 0.10 0.01 0.01 0.01 EXCELS EX	25 25 25 25 25 25 25 25 25 25 25 25 25 2				
C1104 C1105 C1105 C1107 C1108 C1109 C011 C1109 C011 L101 L101 L111 L111 L112 L113 L114 L901 L901 T301 T102 TRAN SYMBOL Q141 Q201 Q204 Q203 Q204 Q301 Q502 Q503	47 0.10 0.01 0.01 0.01 EXCELS EX	25 25 25 425 425 425 425 435 435 435 435 435 435 1014 435 435 435 1014 8 435 8 435 8 435 1014 8 435 1014 8 435 1014 1014 1014 1014 1014 1014 1014 101				
C1104 C1105 C1105 C1105 C1107 C1108 C1109 C011 L101 L101 L101 L111 L111 L111 L111 L111 L111 L111 L111 L111 L901 L901 L902 NF1 T001 T301 T301 L1102 TRAN SYMB0L G201 G202 G203 G204 G203	47 0.10 0.01 0.01 0.01 EXCELS EX	25 25 25 25 25 25 25 25 25 25 25 25 25 2				
C1104 C1105 C1106 C1107 C1108 C1109 C1109 C0IL L101 L101 L110 L111 L112 L113 L114 L901 L901 L901 L901 L901 L901 L901 L901	47 0.10 0.01 0.01 0.01 0.01 EXCELS EXCE	25 25 25 25 25 25 25 25 25 25 25 25 25 2				
C1104 C1105 C1105 C1106 C1107 C1108 C1109 C011 L101 L101 L101 L111 L111 L111 L111 L112 L113 L114 L901 L901 T301 T102 NF01 G101 G203 G204 G203 G204 G203 G204 G203 G204 G203 G204 G203 G203 G204 G203 G203 G204 G203 G203 G203	47 0.10 0.01 0.01 0.01 0.01 EXCELS EXCE	25 25 25 25 2620 25 A220 4250 A230 435 A35 435 10114 435 A35 1014 L3.55 5 A35 435 I1014 5 A35 435 I1014 5 A35 435 I1014 5 I1142 1142 4022 24124 4022 24124 402 102 102 102				B B F

G821	2SC4738GRY	С	A	
Q1101	DTC114EKA	C	A	
7FNN	VER DIODE	=		
		-	mr	
symbol	MODEL TYPE	 W	W.,	REMARK
		TYPE	FALE	
ZD141	HZS68ILTA	A		
ZD202	RLZ7+5B	C	A	
ZD201	RD15UJN3	C	A	
	RD15UJN3	C	A	
	RD15UJN3	C C	A A	

DIOD	<u> </u>			
SYMBOL	MODEL TYPE	WE	I FA LE	EWARK
	RK16 FMB-616L	A	Â	\square
D103	155355	C	A	
D132	U1GU44 U1GU44	C C	B	
	1SS355 U1GU44	C C	AB	
	HN1D03FU	C	^	
	DSM3	C	A	
D821	1SS355	С	A	
	EG01C	A	A	
DB1	D3SBA60	н	A	
IC				
SYMBOL	MODEL TYPE		i Face	EMARK
IC1		C	A	
IC001	STR-V852	н	A	
IC101	KIA7805API KIA431A	H	A	
IC201	KIA7815API	Ĥ	Â	
	BR24L04F-W	с	A	
IC501	KID65003AF	C	A	
10502	KID65003AF	C		
	NJM2903M	C	A	
				DEMARY
SYMBOL	MODEL TYPE	TYPE	FACE	REMARK
PC101 PC201	PS2701-1 PS2701-1	C C	B	
PC202	PS2701-1	C	в	H-1
PC1101	TLP421BL	c	B	
PC1102	TLP4218L	C	B	
FUSE	=		-	
			M6	howay
SYMBOL	MODEL TYPE	TYPE	FACE	REMARK
HF	250V/3.15A(BET3.15) TP00351-51	H	Â	
	TP00351-51	R	A	
JUMF	PER			
	MODEL TYPE		1116	DEMADY
SYMBOL JW1	NUCL ITPE		FÂCE	REMARK
0#1		<u> </u>		
SWIT	CH			
SYMBOL	MODEL TYPE		i.	E MARK
SW1	EVGPACOSR	H	FACE	
			-	
SUR	<u>SE ARRES</u>		R	
Symbol	MODEL TYPE		R.	REMARK
SYMBOL			NIK	REMARK
SYMBOL	MODEL TYPE	TYPE	FACE	REMARK
SYMBOL VAOO 1	MODEL TYPE 416NR-12D	TYPE	FACE	REMARK
	MODEL TYPE			
SYMBOL VA001 OCCII SYMBOL	MODEL TYPE 416NR-12D ATOR MODEL TYPE	TYPE P		
SYMBOL VA001 OCCII SYMBOL	MODEL TYPE	TYPE P		
SYMBOL VA001 OCCII SYMBOL OSC1	NODEL TYPE 416NP-12D ATOR NODEL TYPE IEFONC1005	TYPE P		
SYMBOL VA001 OCCII SYMBOL OSC1	NODEL TYPE 416NP-12D ATOR NODEL TYPE IEFONC1005			
SYMBOL VA001 OCCII SYMBOL 05C1 CONI SYMBOL CN3	MODEL TYPE 416NP-12D		FACE A FACE	REMARK
SYMBOL VA001 OCCII SYMBOL OSC1 CONI SYMBOL CN3 CN4	MODEL TYPE 416NP-12D ATOR MODEL TYPE EFOMC1005 NECTOR MODEL TYPE B2B-PH-K-3 CT-4P-V		FACE	REMARK
SYMBOL VA001 OCCII SYMBOL OSC1 CONI SYMBOL CN5A CN5A	MODEL TYPE 416NP-12D			REMARK
SYMBOL VA001 OCCII SYMBOL OSC1 CONI CNS CNS CNS CNS CNS CNS CNS CNS	MODEL TYPE 416NF-12D 416NF-12D ATOR MODEL TYPE EFOMC1005 NECTOR MODEL TYPE B2B-PH-K-3 CT-SP-V B11B-PH-K-3		FALE A FALE A FALE FALE A A A	REMARK
SYMBOL VA001 OCCII SYMBOL 05C1 CONI CN5A CN5A CN5A CN5A CN5A CN5A CN5A	MODEL TYPE 416NR-12D ATOR MODEL TYPE EFEOMC1005 NECTOR MODEL TYPE B2B-PH-K-S CT-4P-V CT-5P-V		FALE A FALE A FALE A A A A A A	REMARK
SYMBOL VA001 OCCII SYMBOL OSC1 CONI CN5A CN6A CN6A CN6A CN6A CN6A CN6A	MODEL TYPE 416NP-12D ATOR MODEL TYPE EFONC1005 NODEL TYPE B10P-V B110P-PV-K-S B140-XH-K-S		FALE A FALE A FALE A A A A A	REMARK
SYMBOL VA001 OCCII SYMBOL OSC1 CONI CN5A CN6A CN6A CN6A CN6A CN6A CN6A	MODEL TYPE 416NP-12D 416NP-12D 416NP-12D ATOR MODEL TYPE EFOMC1005 NECTOR NODEL TYPE B2B-PH-K-S CT-SP-V B11B-PH-K-S B4B-PH-K-S B4B-PH-K-S		FALE A FALE A FALE A FALE A A A A A A	REMARK
SYMBOL VA001 OCCII SYMBOL OSC1 CONI CN54 CN54 CN54 CN54 CN54 CN54 CN54 CN54	NODEL TYPE 416NP-12D ATOR MODEL TYPE EFFORC1005 NECTOR NODEL TYPE B2B-PH-K-S B11B-PH-K-S B12B-PH-K-S B12B-PH-K-S B12B-PH-K-S B12B-PH-K-S B12B-PH-K-S B12B-PH-K-S B12B-PH-K-S B12B-PH-K-S		FALE A FALE A FALE A A A A A A A A	REMARK
SYMBOL VA001 OCCII SYMBOL OSC1 CONI CN1 CN1 CN1 CN1 CN1 CN1 CN1 CN1 CN1 CN1	MODEL TYPE 416NF-12D 416NF-12D 416NF-12D ATOR MODEL TYPE EFOMC1005 VECTOR MODEL TYPE B2B-FH-K-S CT-SP-V B4B-FH-K-S CT-GP-V B4B-FH-K-S CT-GP-V B5B-FH-K-S CT-GP-V		FALE A FALE A FALE A A A A A A A A A	REMARK
SYMBOL VA001 OCCII SYMBOL OSC1 CONI SYMBOL CNSA CNSA CNSA CNSA CNSA CNSA CNSA CNSA	MODEL TYPE 416NF-12D 416NF-12D 416NF-12D ATOR MODEL TYPE BFOMC1005 NODEL TYPE B2B-PH-K-S B118-PH-K-S B4B-PH-K-S B4B-PH-K-S B5B-PA-K-S B5B-PA-K-S B5B-PA-K-S		FALE A FALE A FALE A A A A A A A A A A A A A A A	REMARK
SYMBOL VA001 OCCII SYMBOL OSC1 CONI SYMBOL CN3 CN4 CN5 CN5 CN5 CN5 CN5 CN5 CN5 CN5 CN5 CN5	MODEL TYPE 416NP-12D ATOR MODEL TYPE EFOMC1005 NODEL TYPE B18P-PH-K-3 CT-6P-V B18P-PH-K-3 CT-6P-V B48-PH-K-3 CT-6P-V B58P-PA-K-5 B68P-PA-K-5		FALE A FALE A FALE A A A A A A A A A A A A A	REMARK
SYMBOL VA001 OCCII SYMBOL OSC1 CONI SYMBOL OSC1 CNSA CNSA CNSA CNSA CNSA CNSA CNSA CNSA	MODEL TYPE 416NF-12D 416NF-12D 416NF-12D ATOR MODEL TYPE BFOMC1005 NODEL TYPE B2B-PH-K-S B118-PH-K-S B4B-PH-K-S B4B-PH-K-S B5B-PA-K-S B5B-PA-K-S B5B-PA-K-S		FALE A FALE A FALE A A A A A A A A A A A A A A A	REMARK
SYMBOL VA001 OCCII SYMBOL OSC1 CONI CNS CNS CNS CNS CNS CNS CNS CNS CNS CNS	MODEL TYPE 416NF-12D 416NF-12D 416NF-12D ATOR MODEL TYPE BFOMC1005 VECTOR MODEL TYPE B2B-PH-K-S B118-PH-K-S B48-PH-K-S B48-PH-K-S B58-PA-K-S B58-PA-K-S B58-PA-K-S B58-PA-K-S B58-PA-K-S B14-OFV(IFFH81281) SJN-6P CT-6P-V			REMARK
SYMBOL VA001 OCCII SYMBOL OSC1 CONI SYMBOL OSC1 CNSA CNSA CNSA CNSA CNSA CNSA CNSA CNSA	MODEL TYPE 416NF-12D 416NF-12D 416NF-12D ATOR MODEL TYPE BFOMC1005 VECTOR MODEL TYPE B2B-PH-K-S B118-PH-K-S B48-PH-K-S B48-PH-K-S B58-PA-K-S B58-PA-K-S B58-PA-K-S B58-PA-K-S B58-PA-K-S B14-OFV(IFFH81281) SJN-6P CT-6P-V		FALE A FALE A FALE A A A A A A A A A A A A A A A	REMARK
SYMBOL VA001 OCCII SYMBOL OSC1 CONI CNS CNS CNS CNS CNS CNS CNS CNS CNS CNS	MODEL TYPE 416NF-12D 416NF-12D 416NF-12D ATOR MODEL TYPE BFOMC1005 VECTOR MODEL TYPE B2B-PH-K-S B118-PH-K-S B48-PH-K-S B48-PH-K-S B58-PA-K-S B58-PA-K-S B58-PA-K-S B58-PA-K-S B58-PA-K-S B14-OFV(IFFH81281) SJN-6P CT-6P-V		FALE A FALE A A A A A A A A A A A A A A A A A A	REMARK
SYMBOL VA001 OCCII SYMBOL OSC1 CONI SYMBOL CN3 CN4 CN5 CN5 CN5 CN5 CN5 CN5 CN5 CN5 CN5 CN5	MODEL TYPE 416NP-12D 416NP-12D ATOR MODEL TYPE EFOMC1005 NODEL TYPE B2B-PH-K-3 CT-6P-V B1B-PH-K-3 CT-6P-V B3B-PH-K-3 CT-6P-V B3B-PH-K-3 CT-6P-V B3B-PH-K-3 CT-6P-V B3B-PH-K-3 CT-6P-V B3B-PA-K-3 CT-6P-V B3B-PA-K-5 B3B-PA-K-5 <t< td=""><td></td><td>IFACE A IFACE A A A A A A A A A A A A A A A A A A</td><td>REMARK</td></t<>		IFACE A IFACE A A A A A A A A A A A A A A A A A A	REMARK
SYMBOL VA001 OCCII SYMBOL OSC1 CONI CNS1 CNS1 CNS3 CNS3 CNS3 CNS3 CNS3 CNS3 CNS3 CNS3	NODEL TYPE 416NP-12D 416NP-12D ATOR NODEL TYPE EFOMC1005 VECTOR NODEL TYPE B10-PH-K-S B11B-PH-K-S B4B-PH-K-S B3B-PA-K-S B3B-PA-K-S B3B-PA-K-S B3B-PA-K-S B3B-PA-K-S B3B-PA-K-S B3B-PA-K-S BA-SP-V		FALE A FALE A A A A A A A A A A A A A A A A A A	REMARK
SYMBOL VA001 OCCIII SYMBOL OSC1 CONI SYMBOL CN53 CN54 CN55 CN55 CN55 CN55 CN55 CN55 CN55	MODEL TYPE 416NF-12D 416NF-12D 416NF-12D MODEL TYPE EFOMC1005 NODEL TYPE B10F-11 MODEL TYPE B20F-20H-K-3 CT-6P-V B118-2H-K-3 B48-2H-K-3 B58-2H-K-3 B04R-D-N TYPE B0ARD-N TYPE B0ARD-N TYPE B0ARD-N TYPE B0ARD-N TYPE		IFACE A FACE A A A A A A A A A A A A A A A A A A	REMARK
SYMBOL VA001 OCCIII SYMBOL OSC1 CONI CN1 CN1 CN1 CN1 CN1 CN1 CN1 CN1 CN1 CN1	MODEL TYPE 416NR-12D 416NR-12D 416NR-12D ATOR MODEL TYPE EFONC1005 NECTOR MODEL TYPE B2B-PH-K-S CT-SP-V B11B-PH-K-S B4B-PH-K-S B4B-PH-K-S B5B-PA-K-S B1P-OK(IFNB1281) SJN-SP CT-SP-V B3B-PA-K-S B4P-OK(IFNB1281) SJN-SP CT-SP-Y B3B-PA-K-S B4P-OK(IFNB1281) SJN-SP CT-SP-Y B0ARD-N TYPE			REMARK
SYMBOL VA001 VA001 SYMBOL OSC1 CONI SYMBOL CN3 CN4 CN5 CN5 CN5 CN5 CN5 CN5 CN5 CN5	MODEL TYPE 416NP-12D 416NP-12D 416NP-12D ATOR MODEL TYPE EFONC1005 NODEL TYPE B2B-PH-K-S CT-SP-V B118-PH-K-S B4B-PH-K-S B4B-PH-K-S B5B-PA-K-S B0ARD-N TYPE		IFALE A A A A A A A A A A A A A A A A A A	REMARK
SYMBOL VA001 OCCII SYMBOL OSC1 CONI SYMBOL OSC1 CNS CNS CNS CNS CNS CNS CNS CNS CNS CNS	MODEL TYPE 416NP-12D 416NP-12D ATOR MODEL TYPE EFONC1005 NODEL TYPE B2B-PH-K-S CT-SP-V B11B-PH-K-S B4B-PH-K-S B4B-PH-K-S B5B-PA-K-S B0ARD-N TYPE		IFALE A A A A A A A A A A A A A A A A A A	REMARK
SYMBOL VA001 VA001 SYMBOL OSC1 CONI SYMBOL OSC1 CONI CN3 CN3 CN3 CN3 CN3 CN3 CN3 CN3	MODEL TYPE 416NP-12D 416NP-12D 416NP-12D MODEL TYPE EFOMC1005 JECTOR MODEL TYPE B2B-PH-K-S B118-PH-K-S B4B-PH-K-S B4B-PH-K-S B5B-PA-K-S B5B-PA-K-S B5B-PA-K-S B5B-PA-K-S B5B-PA-K-S B5B-PA-K-S B5B-PA-K-S B0ARD-N TYPE B0ARD-N TY		FALE A FALE A A A A A A A A A A A A A A A A A A	REMARK
SYMBOL VACOL SYMBOL OCCIII SYMBOL OSCI CONI CNI CNI CNI CNI CNI CNI CNI CNI CNI C	MODEL TYPE 416NP-12D 416NP-12D ATOR MODEL TYPE EFOMC1005 NODEL TYPE B100EL TYPE B20-PH-K-3 CT-4P-V B118-PH-K-3 B48-PH-K-3 B48-PH-K-3 B58-PA-K-3 B58-PA-K-3 B58-PA-K-3 B58-PA-K-3 B58-PA-K-3 B58-PA-K-3 B08-PA-K-3 B08-PA-K-3 B08-PA-K-3 B08-PA-K-3 B08-PA-K-3 B08-PA-K-3 B0ARD-N TYPE B0ARD-N TYPE <td></td> <td>IFACE A A A A A A A A A A A A A A A A A A</td> <td>REMARK</td>		IFACE A A A A A A A A A A A A A A A A A A	REMARK
SYMBOL VA001 VA001 SYMBOL OSC1 CONI SYMBOL OSC1 CONI CN3 CN3 CN3 CN3 CN3 CN3 CN3 CN3	MODEL TYPE 416NP-12D 416NP-12D 416NP-12D MODEL TYPE EFOMC1005 JECTOR MODEL TYPE B2B-PH-K-S B118-PH-K-S B4B-PH-K-S B4B-PH-K-S B5B-PA-K-S B5B-PA-K-S B5B-PA-K-S B5B-PA-K-S B5B-PA-K-S B5B-PA-K-S B5B-PA-K-S B0ARD-N TYPE B0ARD-N TY		FALE A FALE A A A A A A A A A A A A A A A A A A	REMARK
SYMBOL VA001 VA001 SYMBOL OSC1 CONI SYMBOL OSC1 CONI CN3 CN3 CN3 CN3 CN3 CN3 CN3 CN3 CN3 CN3	MODEL TYPE 416NP-12D 416NP-12D 416NP-12D MODEL TYPE EFOMC1005 NODEL TYPE B2B-PH-K-S CT-SP-V B11B-PH-K-S B4B-PH-K-S CT-GP-V B3B-PA-K-S B4B-PH-K-S CT-GP-V B3B-PA-K-S B4B-PH-K-S CT-GP-V B3B-PA-K-S B4B-PA-K-S B0-RD-N TYPE B0ARD-N TYPE		IFACE A A A A A A A A A A A A A A A A A A	REMARK
SYMBOL VA001 OCCII SYMBOL OSC1 CONI SYMBOL OSC1 CN1 CN1 CN1 CN1 CN1 CN1 CN1 CN1 CN1 C	MODEL TYPE 416NP-12D 416NP-12D 416NP-12D MODEL TYPE EFOMC1005 NODEL TYPE B2B-PH-K-S CT-SP-V B11B-PH-K-S B4B-PH-K-S CT-GP-V B3B-PA-K-S B4B-PH-K-S CT-GP-V B3B-PA-K-S B4B-PH-K-S CT-GP-V B3B-PA-K-S B4B-PA-K-S B0-RD-N TYPE B0ARD-N TYPE		IFALE A FALE A A A A A A A A A A A A A A A A A A	
SYMBOL VACOL SYMBOL OCCIII SYMBOL OSCI CONI CNI CNI CNI CNI CNI CNI CNI CNI CNI C	MODEL TYPE 416NP-12D 416NP-12D 416NP-12D MODEL TYPE EFOMC1005 NODEL TYPE B2B-PH-K-S CT-SP-V B11B-PH-K-S B4B-PH-K-S CT-GP-V B3B-PA-K-S B4B-PH-K-S CT-GP-V B3B-PA-K-S B4B-PH-K-S CT-GP-V B3B-PA-K-S B4B-PA-K-S B0-RD-N TYPE B0ARD-N TYPE		IFACE A A A A A A A A A A A A A A A A A A	
SYMBOL VA001 VA001 SYMBOL OSC1 CONI SYMBOL CN3 CN4 CN5 CN5 CN5 CN5 CN5 CN5 CN5 CN5 CN5 CN5	MODEL TYPE 416MP-12D 416MP-12D ATOR MODEL TYPE EFOMC1005 NODEL TYPE B2B-PH-K-S CT-SP-V B11B-PH-K-S B4B-PH-K-S B4B-PH-K-S B5B-PA-K-S B5B-PA-K-S B5B-PA-K-S B5B-PA-K-S B4-SP-H-K-S B5B-PA-K-S B4-SP-H-K-S B5B-PA-K-S B4-SP-H-K-S B5B-PA-K-S B4-SP-H-K-S B5B-PA-K-S B0ARD-N TYPE			
SYMBOL VA001 VA001 SYMBOL OSC1 CONI SYMBOL CN3 CN4 CN5 CN5 CN5 CN5 CN5 CN5 CN5 CN5 CN5 CN5	MODEL TYPE 416NP-12D 416NP-12D ATOR MODEL TYPE EFONC1005 NODEL TYPE B2B-PH-K-S CT-SP-V B11B-PH-K-S B4B-PH-K-S B4B-PH-K-S B5B-PA-K-S B0ARD-N TYPE B0ARD-N TYPE <		IFALE A A A A A A A A A A A A A A A A A A	
SYMBOL VA001 VA001 SYMBOL OSC1 CONI SYMBOL CN3 CN4 CN5 CN5 CN5 CN5 CN5 CN5 CN5 CN5 CN5 CN5	MODEL TYPE 416NP-12D 416NP-12D ATOR MODEL TYPE EFONC1005 NODEL TYPE B2B-PH-K-S CT-SP-V B11B-PH-K-S B4B-PH-K-S B4B-PH-K-S B5B-PA-K-S B5B-PA-K-S B5B-PA-K-S B5B-PA-K-S B5B-PA-K-S B5B-PA-K-S B5B-PA-K-S B40-XH-K-S B5B-PA-K-S B5B-PA-K-S B5B-PA-K-S B0ARD-N TYPE			

MODEL TYPE	TYPE	FACE	REMARK
PKM13EPY	н	A	
MODEL TYPE		FACE	REWARK
Sel2713K - Yellow	н		
Sel6914A - Orange	Η		
Sel6414e - Green	H		
	Ħ		
E1S19-OPOA7 VIOLET	н		
E1S19-OPOA7 VIOLET	Ħ		
	PKH13EPY MODEL TYPE EL27/BK - YELLOW EL69/KA - ORANGE EL64/KE - GREEN	PR013EPY H NODEL TYPE TYPE BL27/BK - YELLOW H EL27/BK - YELLOW H EL26/KA - GREEN H EL36/KA - GREEN H EL359-OP0A7 VOLET H	PROHISEPY H A MODEL TYPE TYPE IFACE E12713K - YELLOW H EL691KA - ORANGE H EL641KE - GRAEEN H E1319-0P00A7 VOLET H

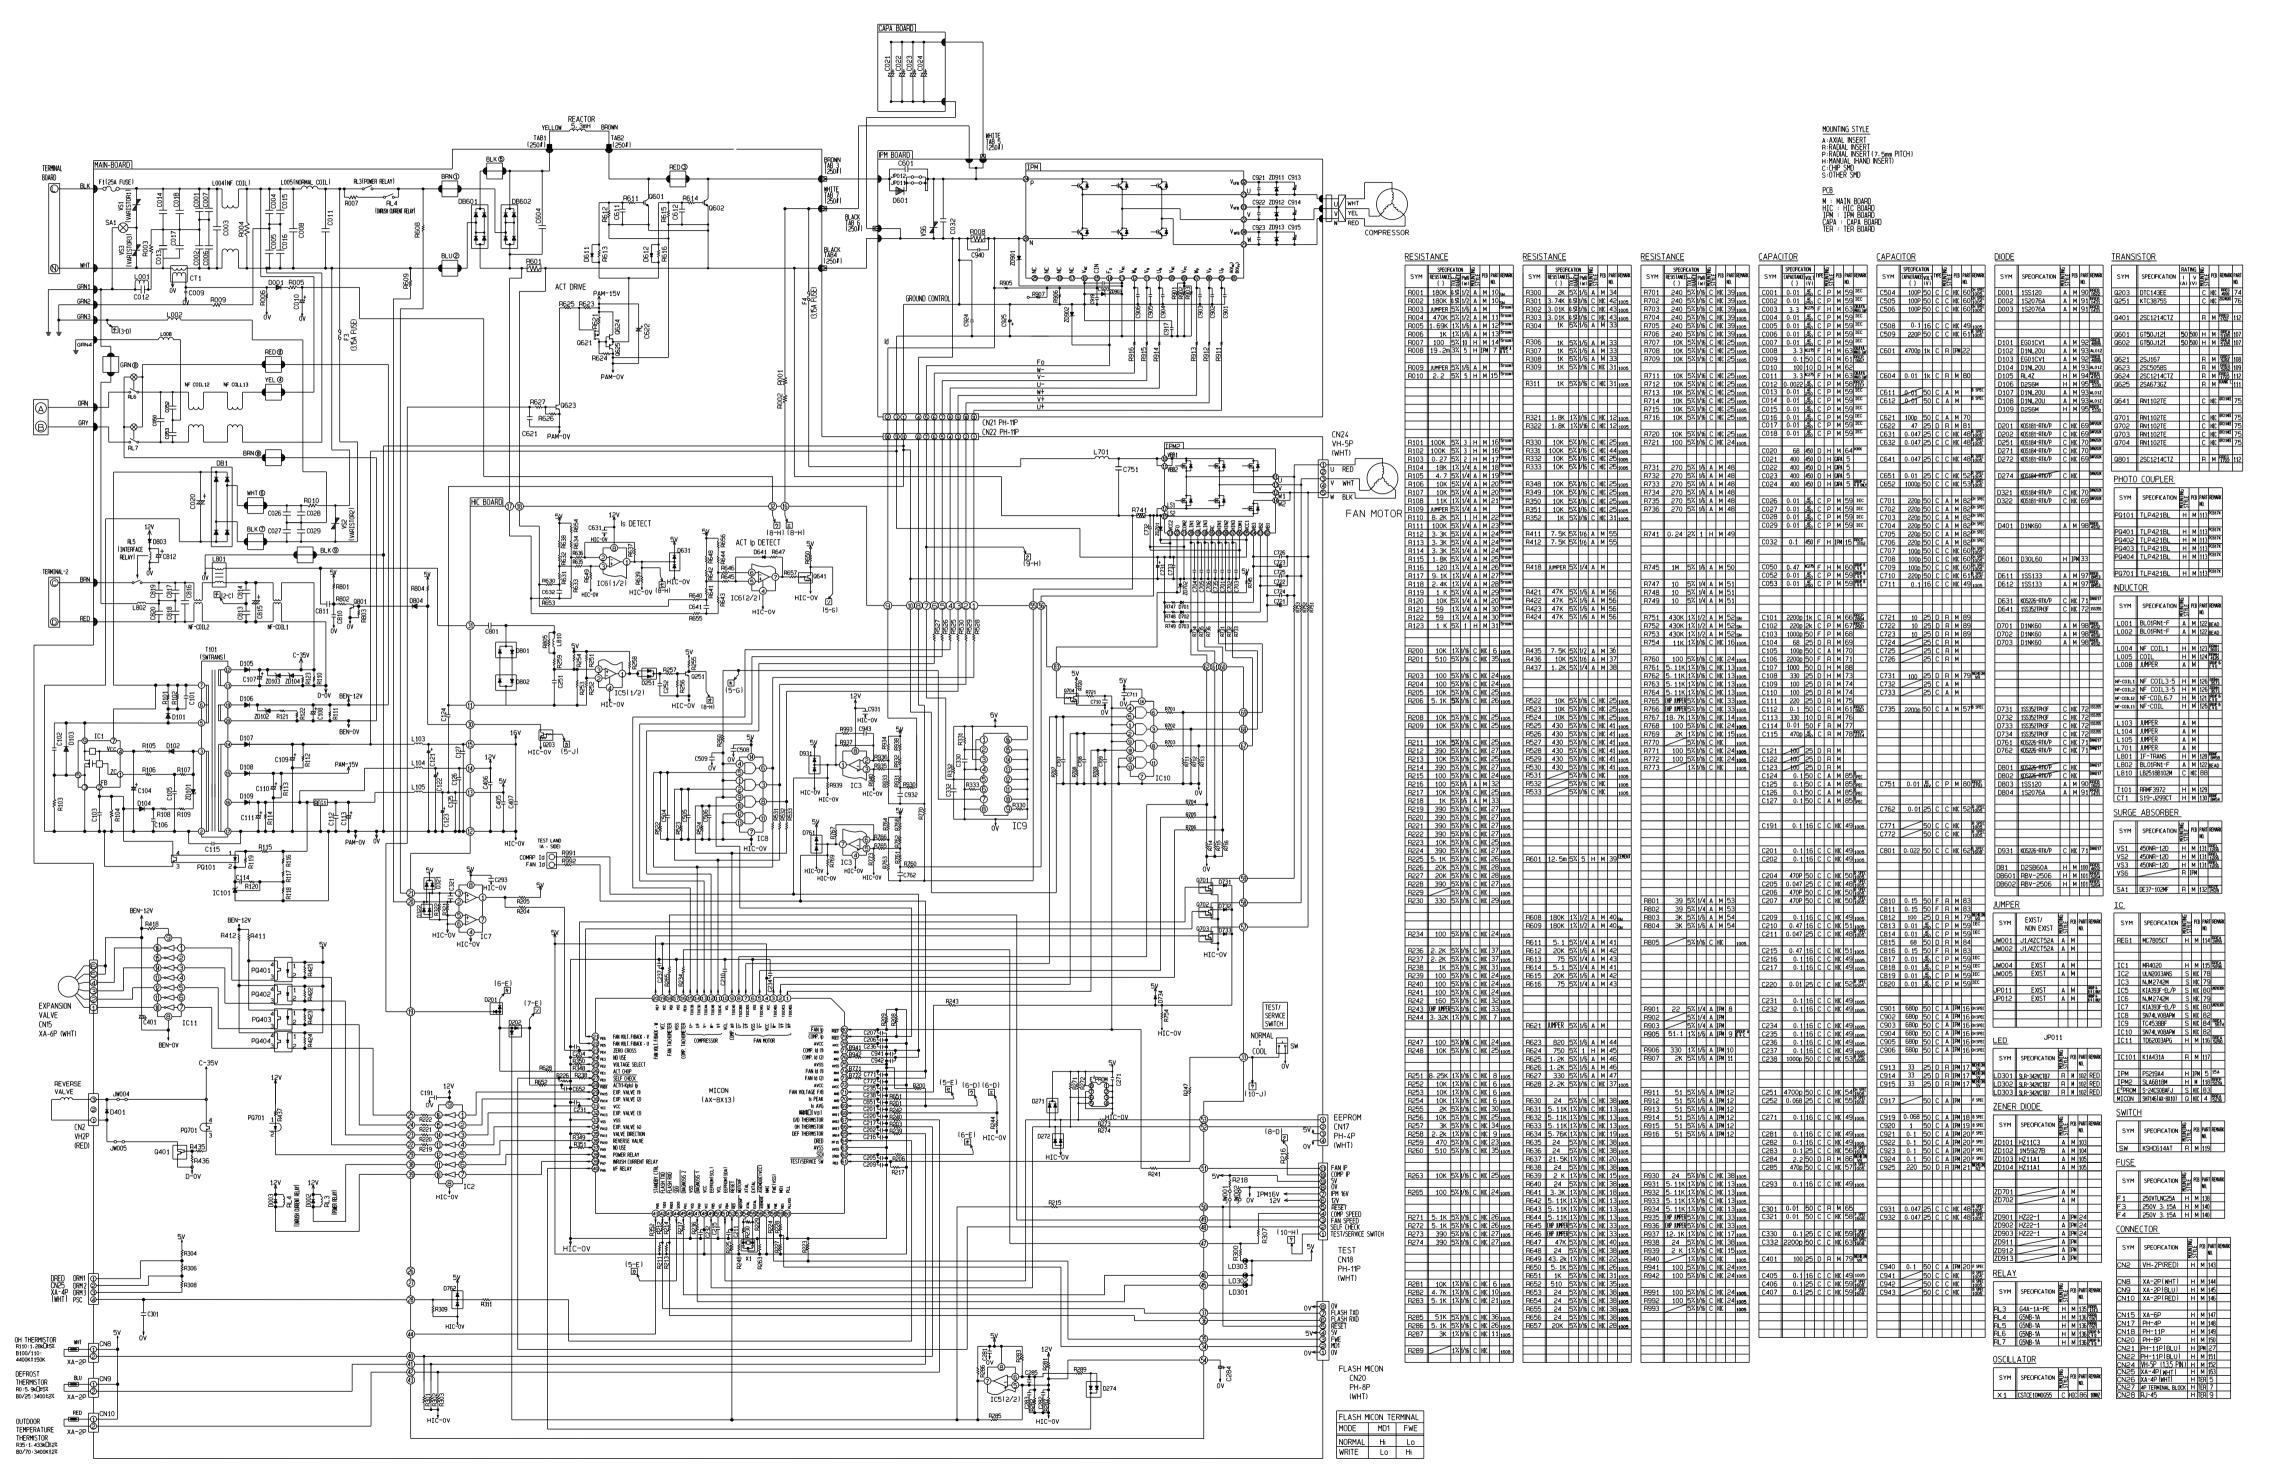


- 39 -

PRINTED WIRING BOARD LOCATION DIAGRAM


MODEL RAS-70YH7

MAIN P.W.B.

Marking on P.W.B

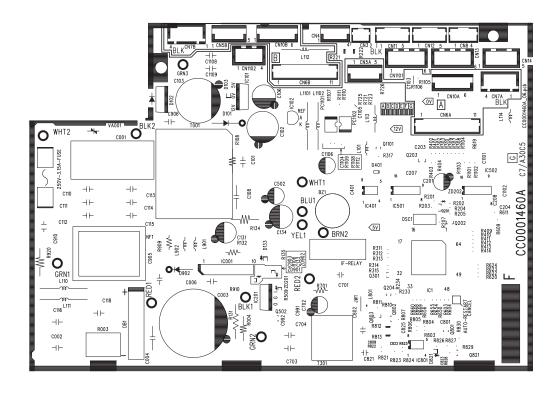


COMPONENT SIDE

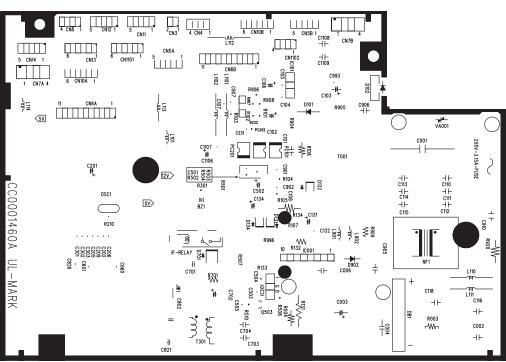


SOLDERING SIDE

RECEIVING P.W.B.


Marking on P.W.B

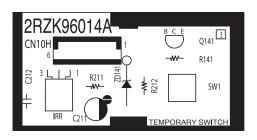


P.W.B. MAIN

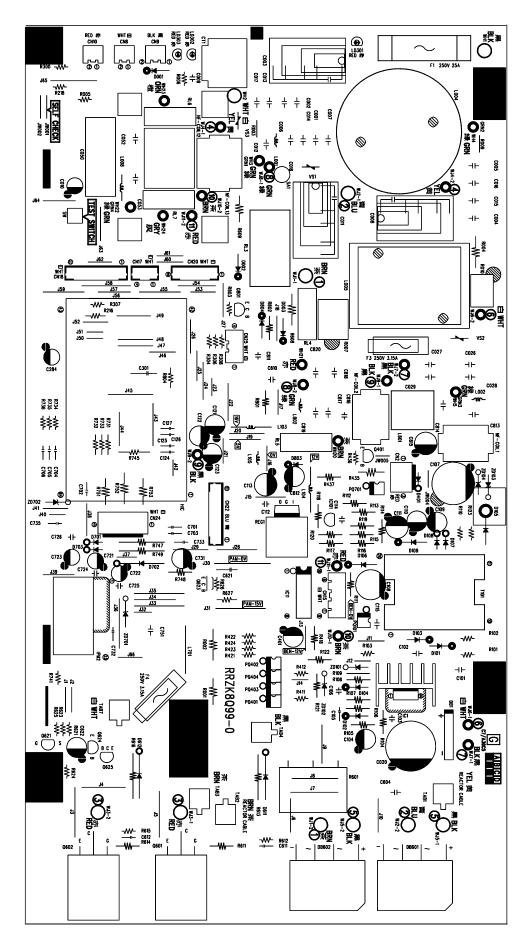


P.W.B. IPM-BOARD

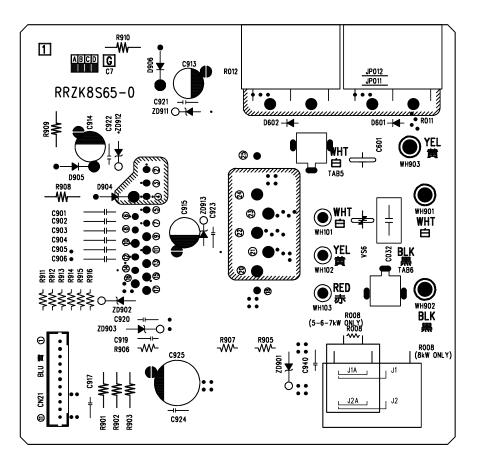


P.W.B. CAPA-BOARD

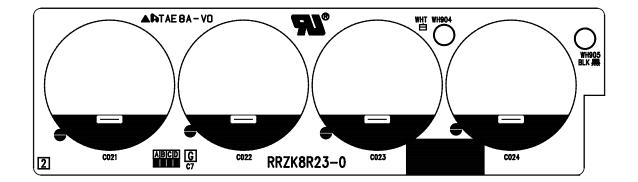

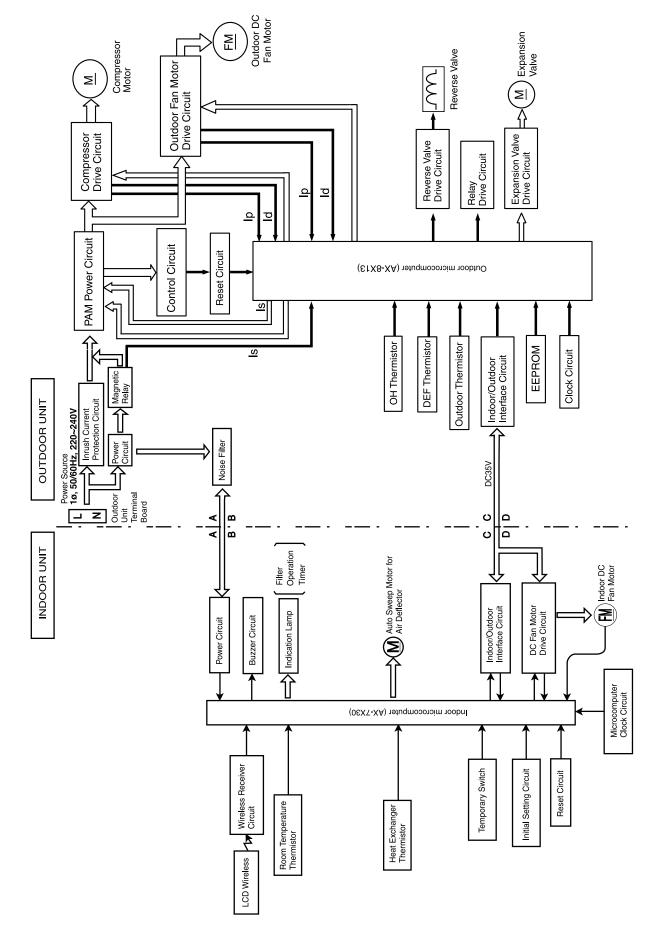


BLOCK DIAGRAM MODEL RAS-70YH7/RAC-70YH7A

BASIC MODE

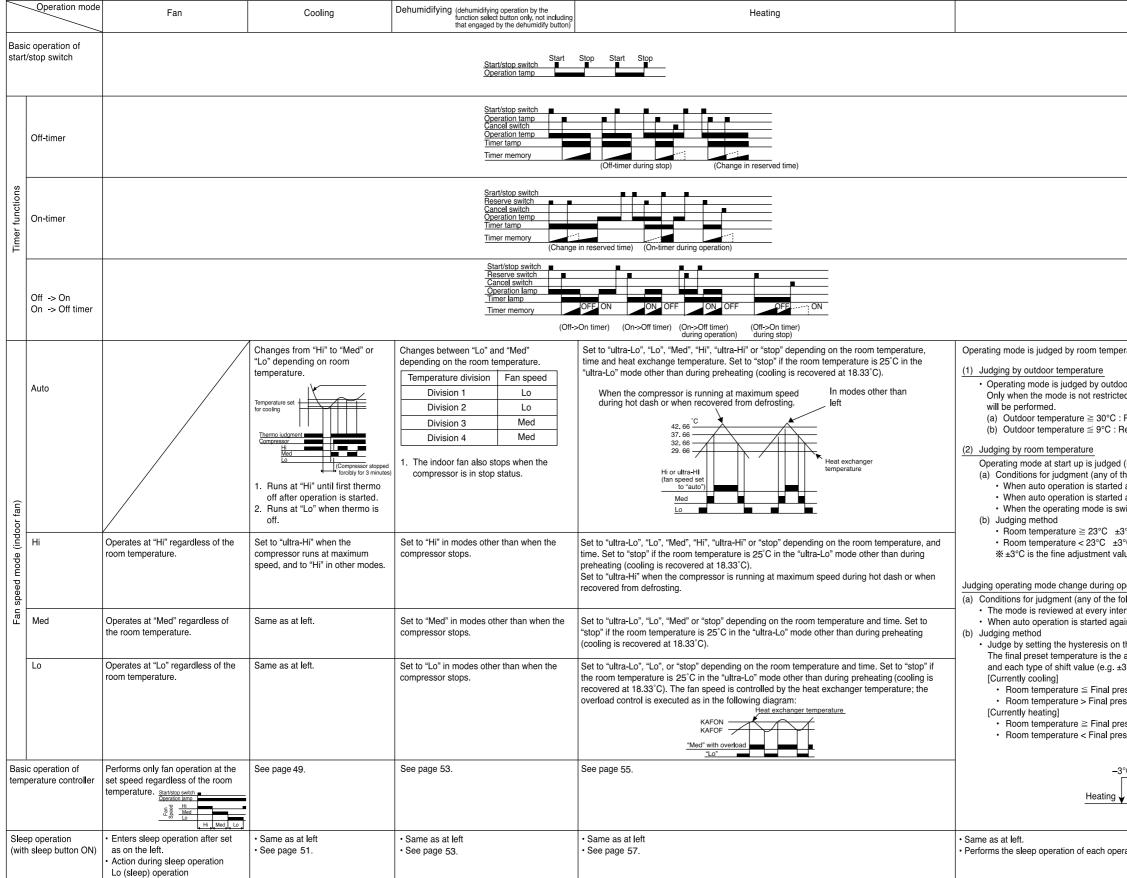

Auto
rature and outdoor temperature.
or temperature. d by this judgment, the judgment by room temperature in the next paragraph
Restricted to cooling estricted to heating
(initial judgment) he followings) after 1 hour has elapsed since the operation was stopped. after the previous manual mode operation. vitched to auto while operating at manual mode.
P°C : Cooling
°C : Heating ue from the remote controller. 23 °C Heating
peration (Continuous judgment) 9°C 30°C Outdoor temperature
rval time. in before 1 hour has elapsed since the operation was stopped.
the final preset temperature. actually targeted preset temperature which is the sum of the basic preset temperature 3°C by remote controller, preset temperature correction value, powerful shift value, etc.).
set temperature –3°C Change to heating set temperature –3°C Continue cooling
eset temperature +2°C Change to cooling set temperature +2°C Continue heating
°C Cooling
,
final preset temperature +2°C
ration mode.

	RAS-70YH7	
	VALUE	
WMAX	5700 min ⁻¹	
WMAX2	5700 min ⁻¹	
WSTD	5400 min ⁻¹	
WBEMAX	4000 min ⁻¹	
СМАХ	5200 min ⁻¹	
CSTD	4900 min ⁻¹	
СКҮМАХ	4000 min ⁻¹	
СЈКМАХ	4000 min ⁻¹	
CBEMAX	2300 min ⁻¹	
WMIN	1200 min ⁻¹	
CMIN	1200 min-1	
STARTMC	60 Seconds	
DWNRATEW	100%	
DWNRATEC	100%	
SHIFTW	0.00°C	
SHIFTC	1.00°C	
CLMXTP	30.00°C	
YNEOF	25.00°C	
TEION	2.00°C	
TEIOF	9.00°C	
SFTDSW	0.66°C	
DFTIM_OTP0	50 Minutes	
DFTIM_OTP10	50 Minutes	
DFTIM_OTP5	60 Minutes	
STARCPL	1600 min ⁻¹	

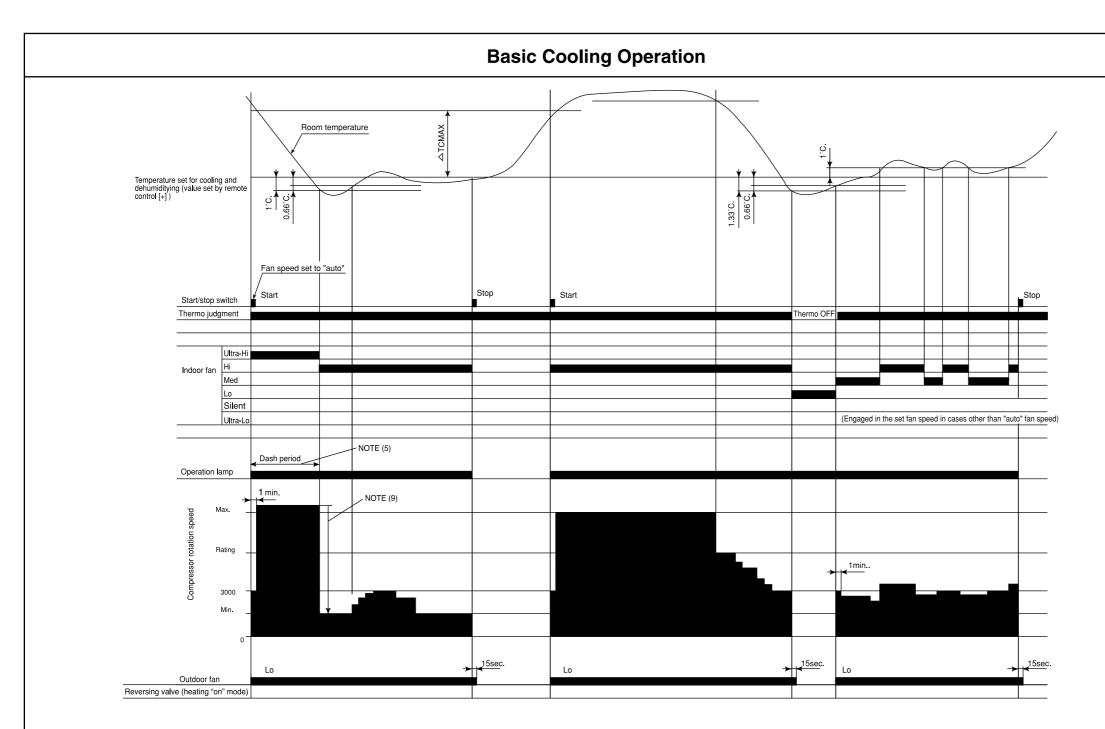


Notes:

- (1) Condition for entering into Cool Dashed mode. When fan set to "Hi" or "Auto mode" and temperature difference between indoor temperature and set temperature has a corresponding compressor rpm (calculated value in Table 2) larger than CMAX.
- (2) Cool Dashed will release when i) a maximum 25 minutes is lapsed and ii) room temperature is lower than set temperature -3°C (thermo off) and iii) when room temperature has achieved setting temperature -1°C then maximum Cool Dashed time will be revised to 20 minutes. And iv) indoor fan is set to Lo and Med fan mode and v) change operation mode.
- (3) During Cool Dashed operation, thermo off temperature is set temperature (with shift value) -3°C. After thermo off, operation continue in Fuzzy control mode.
- (4) Compressor minimum "ON" time and "OFF" time is 3 minutes.
- (5) During normal cooling mode, compressor maximum rpm CMAX will maintain for 60 minutes if indoor temperature is lower than CLMXTP. No time constrain if indoor temperature is higher than CLMXTP.
- (6) When fan is set to "Hi", compressor rpm will be limited to CKYMAX.
- (7) When fan is set to "Med", compressor rpm will be limited to CJKMAX.
- (8) When fan is set to "Lo", compressor rpm will be limited to CBEMAX.
- (9) During Cool Dashed, when room temperature reaches set temperature -1°C compressor rpm is actual rpm x DWNRATEC.


Table 2 $\Delta TCMAX$


Tamparatura	Calaulatad
Temperature difference	Calculated
	compressor rpm
1.66	2265 min ⁻¹
2	2435 min ⁻¹
2.33	2600 min ⁻¹
2.66	2765 min ⁻¹
3	2935 min ⁻¹
3.33	3100 min⁻¹
3.66	3265 min⁻¹
4	3435 min⁻¹
4.33	3600 min ⁻¹
4.66	3765 min⁻¹
5	3935 min⁻¹
5.33	4100 min ⁻¹
5.66	4265 min⁻¹
6	4435 min⁻¹
6.33	4600 min ⁻¹
6.66	4765 min⁻¹
7	4935 min⁻¹
7.33	5100 min-1
7.66	5265 min⁻¹
8	5435 min⁻¹
8.33	5600 min ⁻¹
8.66	5765 min⁻¹
9	5935 min⁻¹
9.33	6100 min ⁻¹
9.66	6265 min⁻¹
10	6435 min⁻¹
10.33	6600 min ⁻¹
10.66	6765 min⁻¹
11	6935 min ⁻¹

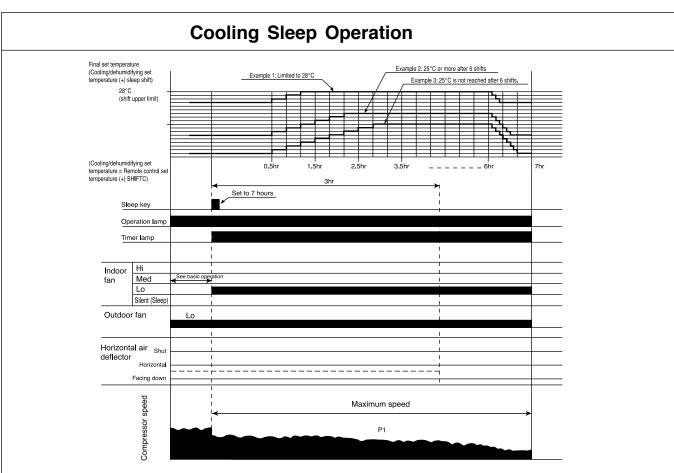


Notes:

- (1) The sleep operation starts when the sleep key is pressed.
- (2) When the sleep key is set, the maximum compressor speed is limited, and the indoor fan is set to "sleep".
- (3) 30 minutes after the sleep key is set, the sleep shift of temperature starts, and upper shift is made at least 6 times. If 25°C is not reached after 6 shifts, shifts repeat unit 25°C is reached.
- (4) The sleep shift upper value of set temperature is 28°C.
- (5) After 6 hours, a shift down to the initial set temperature is made at a rate of 0.33 C/5 min.
- (6) If the operation mode is changed during sleep operation, the set temperature is cleared, and shift starts from the point when switching is made.
- (7) The indoor fan speed does not change even when the fan speed mode is changed.
- (8) When operation is stopped during sleep operation, the set temperature when stopped, as well as the time, continue to be counted.
- (9) If the set time is changed during sleep operation, all data including set temperature, time, etc. is cleared and restarted.
- (10) If sleep operation is canceled by the cancel key or sleep key, all data is cleared.

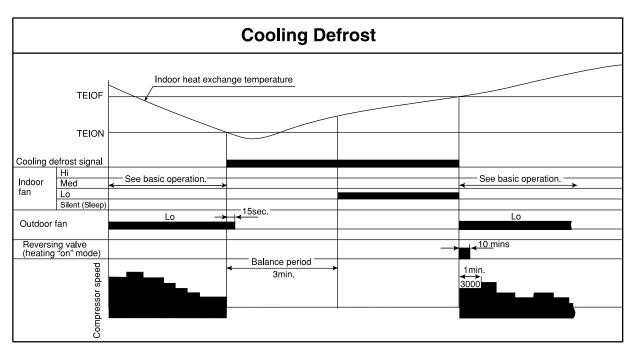

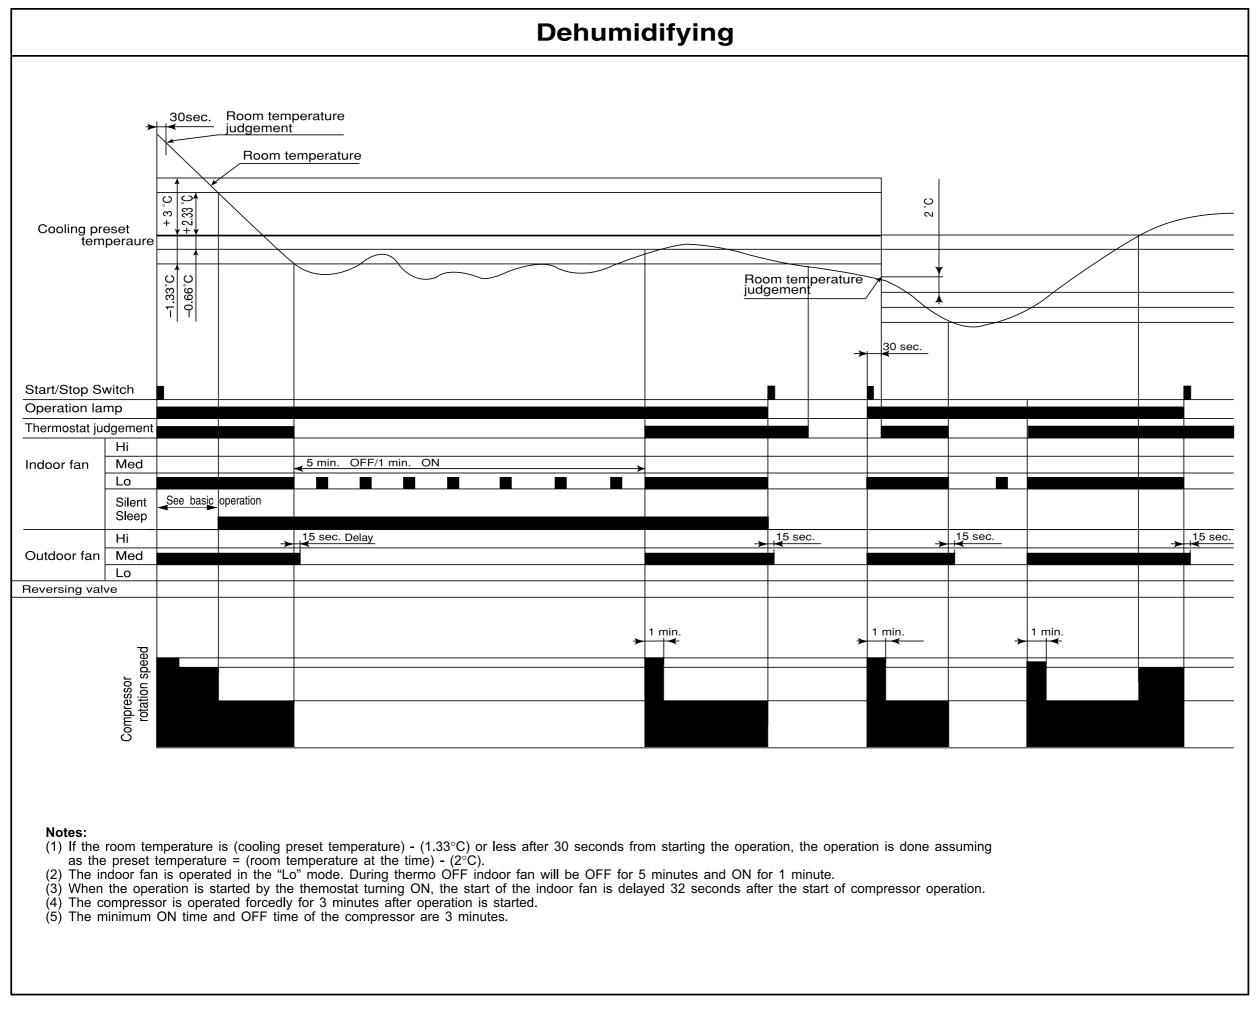

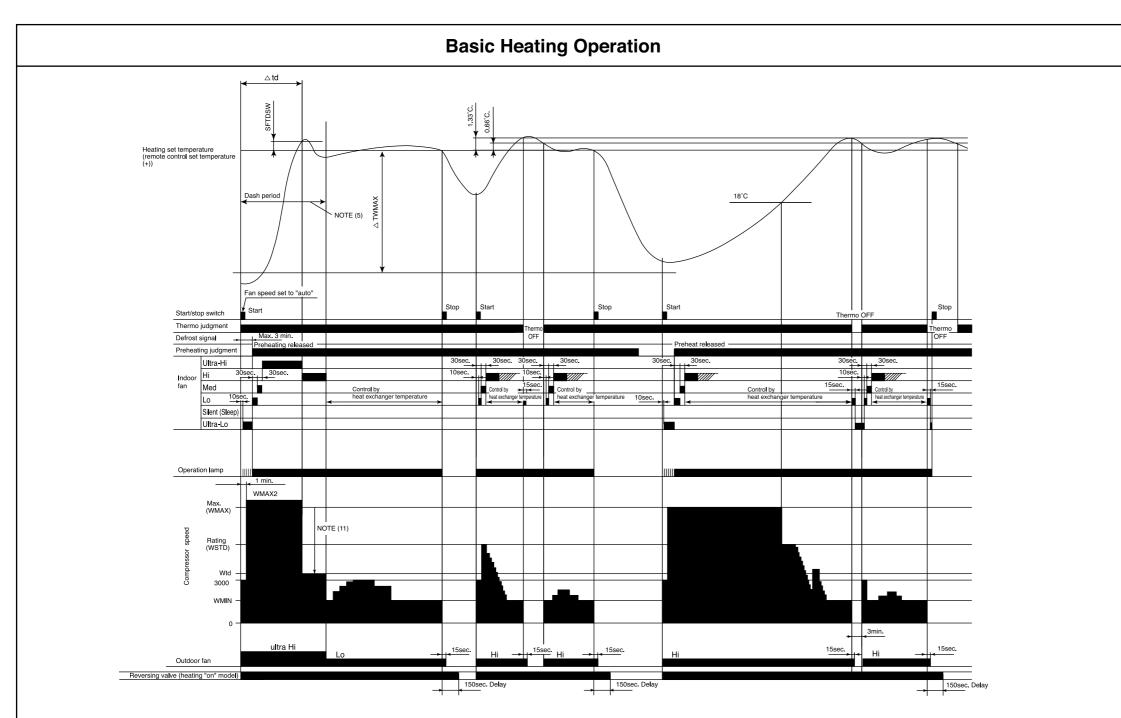

Notes:


- Condition for entering into Hot Dashed mode. When fan set to "Hi" or "Auto mode" and i) Indoor temperature is lower than 18°C, and ii) outdoor temperature is lower than 10°C, and iii) Temperature difference between indoor temperature and set temperature has a corresponding compressor rpm (calculated value in Table 3) larger than WMAX.
 Hot Dashed will release when i) Room temperature has achieved the set temperature + SFTDSW. ii) Thermo off.
- (3) During Hot Dashed operation, thermo off temperature is set temperature (with shift value) +3°C. After thermo off, operation continue in Fuzzy control mode.
- (4) Compressor minimum "ON" time and "OFF" time is 3 minutes.
- (5) During normal heating mode, compressor maximum rpm WMAX will maintain for 120 minutes if indoor temperature is higher than 18°C. No time limit constrain if indoor temperature is lower than 18°C and outdoor temperature is lower than 2°C.
- (6) During Hotkeep or Defrost mode, indoor operation lamp will blink at interval of 3 seconds "ON" and 0.5 second "OFF".
- (7) When heating mode starts, it will enter into Hotkeep mode if indoor heat exchanger temperature is lower than YNEOF + 0.33°C.
- (8) When fan is set to "Med" or "Lo", compressor rpm will be limited to WBEMAX.
- (9) In "Ultra-Lo" fan mode, if indoor temperature is lower than 18°C, indoor fan will stop. If indoor temperature is higher than 18°C + 0.33°C, fan will continue in "Ultra-Lo" mode. During Hotkeep or Defrost mode, fan will continue in "Ultra-Lo" mode.
- (10) During Hot Dashed or outdoor temperature is lower than -5°C, compressor rpm is WMAX2.
- (11) During Hot Dashed, when room temperature reaches set temperature + SFTDSW compressor rpm is actual rpm x DWNRATEW.

Table 3 $\Delta TWMAX$


Tomporatura	Calculated
Temperature difference	compressor rpm
1.66	1965 min ⁻¹
2	2135 min ⁻¹
2.33	2300 min ⁻¹
2.66	2465 min ⁻¹
3	2635 min ⁻¹
3.33	2800 min ⁻¹
3.66	2965 min ⁻¹
4	3135 min⁻¹
4.33	3300 min⁻¹
4.66	3465 min⁻¹
5	3635 min⁻¹
5.33	3800 min ⁻¹
5.66	3965 min⁻¹
6	4135 min⁻¹
6.33	4300 min ⁻¹
6.66	4465 min⁻¹
7	4635 min⁻¹
7.33	4800 min ⁻¹
7.66	4965 min⁻¹
8	5135 min⁻¹
8.33	5300 min ⁻¹
8.66	5465 min⁻¹
9	5635 min ⁻¹
9.33	5800 min ⁻¹
9.66	5965 min ⁻¹
10	6135 min ⁻¹
10.33	6300 min ⁻¹
10.66	6465 min⁻¹
11	6635 min⁻¹

Notes:


1. See the data in Table 1 on page 47 for each constant in capital letters in the diagrams.

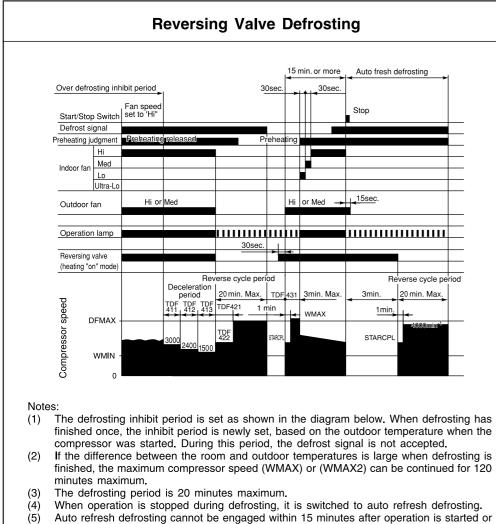

defrosting is finished.

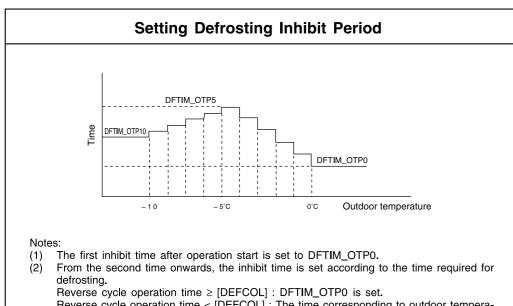

Reverse cycle operation time < [DEFCOL] : The time corresponding to outdoor temperature is set.

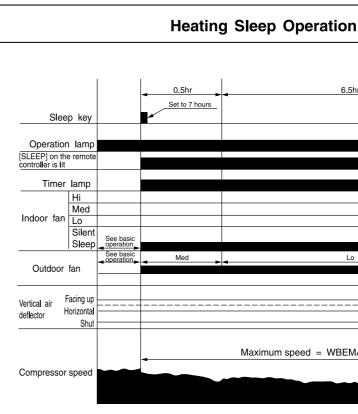

Notes:

- (1) The sleep operation starts when the sleep key is When the sleep key is set, the maximum compress (2)
- is set to "Sleep Silent" (FWSOY).
- (3) If the operation mode is changed during sleep oper control starts.
- (4) The indoor fan speed does not change even when When defrosting is to be set during sleep operation, (5) after defrosting.
- (6) When operation is stopped during sleep operation, the continue to be counted.
- (7) If the set time is changed during sleep operation, al and restarted.
- (8) If sleep operation is cancelled by the cancel key o
- There is no preset temperature shift due to time e (9)


NOTE

1. Refer to the Table 1 Mode data file on page 47 for the constants expressed by capital alphabet letters in the drawing.

6.5hr	
	_
Lo	
eed = WBEMAX	
pressed.	
sor speed is limited to WBEMAX, and the	
ration, the changed operation mode is se n the fan speed mode is changed. (Lo) defrosting is engaged and sleep operation	
he set temperature when stopped, as well	as the time,
Il data including set temperature, time, etc	. is cleared
or sleep key all data is cleared. elapse.	

REFRIGERATING CYCLE DIAGRAM

MODEL RAS-70YH7/RAC-70YH7A

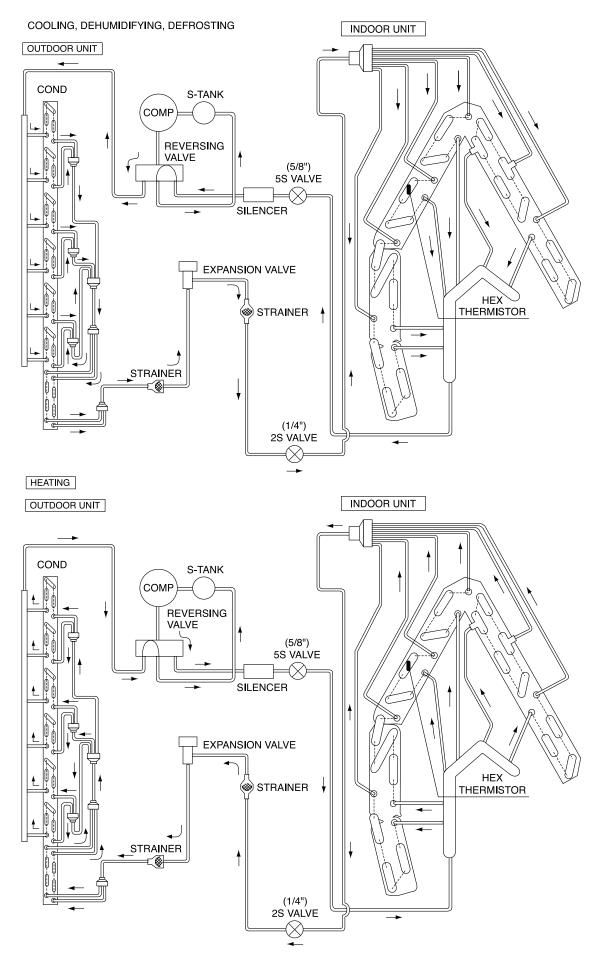


		PRESENT CONDITION	NOI		
INPUT SIGNAL	OPERATION	OPERATION MODE	AIR DEFLECTOR	OPERATING SPECIFICATION	KEFEKENCE
KEY INPUT	STOP	EACH MODE	STOP	ONE SWING (CLOSING AIR DEFLECTOR) ① DOWNWARD ② UPWARD	INITIALIZE AT NEXT OPERATION.
			DURING ONE SWING	STOP AT THE MOMENT.	
		AUTO COOL COOL FAN AUTO DRY	STOP	START SWINGING ① DOWNWARD ② UPWARD ③ DOWNWARD	
	DURING	5	DURING SWINGING	STOP AT THE MOMENT.	
	OPERATION	AUTO HEAT HEAT CIRCULATOR	STOP	START SWINGING ① DOWNWARD ② UPWARD ③ DOWNWARD	
			DURING SWINGING	STOP AT THE MOMENT.	
THERMO. ON (INTERNAL FAN ON)		AUTO DRY DRY	TEMPORARY STOP	START SWING AGAIN.	
THERMO. ON (INTERNAL FAN OFF)	OPERATION	AUTO HEAT HEAT CIRCULATOR	DURING SWINGING	stop swinging temporarily. (swing mode is cleared if swing command is transmitted during temporary stop.)	
MAIN SWITCH	STOP	COOL FAN DRY	stop During one swing	INITIALIZE ① DOWNWARD ② UPWARD	
Š		HEAT CIRCULATOR	stop During one swing	INITIALIZE ① DOWNWARD	
MAIN SWITCH	DURING	EACH MODE	stop During Swinging	ONE SWING (CLOSING AIR DEFLECTOR)	INITIALIZE AT NEXT
OFF	OPERATION		DURING INITIALIZING	© UPWARD	OPERATION.
			STOP	INITIALIZING CONDITION OF EACH MODE.	
CHANGE OF OPERATION	DURING OPERATION	EACH MODE	DURING SWINGING	STOP SWINGING AND MODE BECOMES INITIALIZING CONDITION.	
		_			

AUTO SWING FUNCTION

DESCRIPTION OF MAIN CIRCUIT OPERATION


RAS-70YH7

1. Reset Circuit

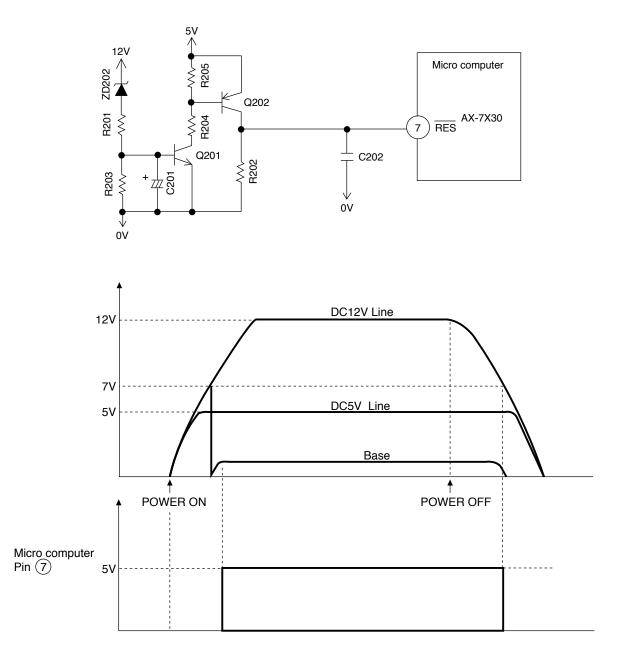

- The reset circuit is used to reset the program to its initial settings when the power is turned on or when the power is recovered after a power failure.
- The micro computer is reset when the reset input is "Lo", and operation is possible when the reset input is "Hi".
- The waveforms at each point when the power is turned on and off are shown in the diagrams.
- When the power is turned on, since Q202's collector is set to "Lo" at this time, Q202 is turned OFF and the reset input of the micro computer is set to "Lo". Then, the voltage of DC 12V line and DC 5V line are increase. When the voltage of DC 12V lines reaches about 7V, ZD202 is turn ON. The potential of Q201's base rises and Q202 is turned ON. The DC 5V line voltage already stable at this time and and the micro computer starts operations.
- When the power is turned OFF, the voltage of the DC 12V line decreases. When it becomes about 7V, ZD202 is turned OFF, then Q201 is turned OFF, Q202 is turned OFF, the reset input of the micro computer is set to "Lo" and the micro computer is under the reset mode.


2. Buzzer Circuit

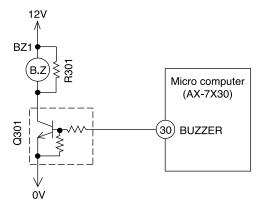


When the buzzer is to be activated, buzzer output pin (30) of the micro computer alternates between ON and OFF repeatedly at 4kHz and Q301 is turned ON/OFF accordingly. A 4kHz voltage/frequency is applied to the buzzer and the diaphragm of the buzzer vibrates to output 4kHz sound.

3. Initial setting (IC401)

The pre-heating operation start value, ratings of the compressor, maximum rotation speed, etc. are preset in the micro computer.

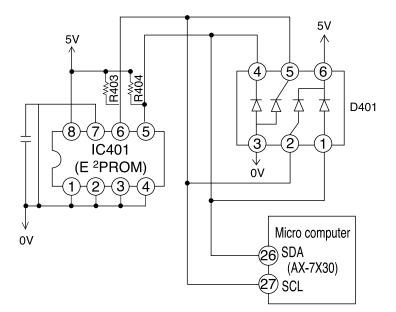

4. Receive circuit

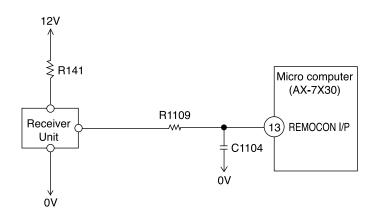

Infrared signals from the wireless remote controller are received by the light receiving unit and output after being amplified and shaped.

5. Auto Sweep Motor Circuit

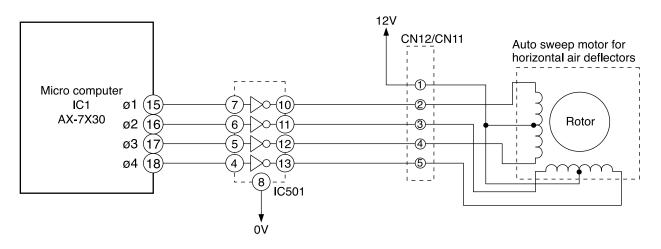


Fig. 5-1 Auto Sweep Motor Circuit (Horizontal air deflectors only)

• Fig. 5-1 shows the Auto sweep motor drive circuit; the signals shown in Fig. 5-2 are output from pins (5)-(18) of the micro computer.

Micro computer pins			Step	width			Horizor deflectors	
Horizontal air deflectors	1	2	3	4	5	¦ 6	7	8
(10)					 	 	 	
(11)		1	 	 	 	 		
(12)		 	 	 		 	 	
(13)		1 		1 1 1 1	1 1 1 1		1 	


Fig. 5-2 Micro computer Output Signals

• As the micro computer's outputs change as shown in Fig. 5-2, the core of the auto sweep motor is excited to turn the rotor. Table 5-1 shows the rotation angle of horizontal air deflectors.


	Rotation angle per step (°)	Time per step (ms)
Horizontal air deflectors	0.0879	10

6. Room Temperature Thermistor Circuit

- Fig. 6-1 shows the room temperature thermistor circuit.
- The voltage at (A) depends on the room temperature as shown in Fig. 6-2.

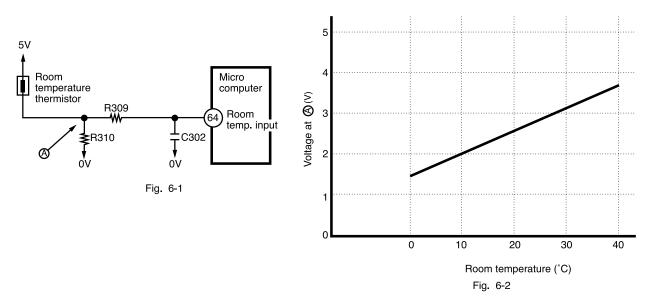


7. Heat exchanger temperature thermistor circuit

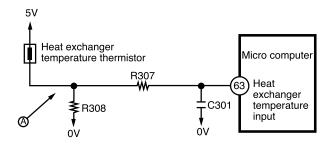




- The circuit detects the indoor heat exchanger temperature and controls the following.
 - (1) Low-temperature defrosting during cooling and dehumidifying operation.


The voltage at A depends on the heat exchanger temperature as shown in Fig. 7-2.

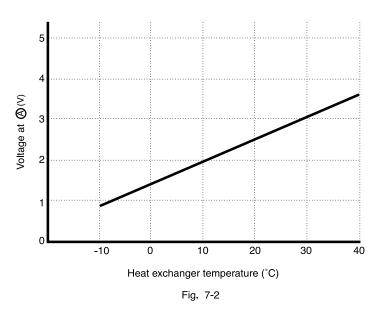



8. Temporary Switch

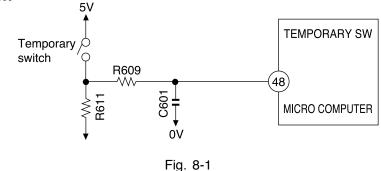

- The temporary switch is used to operate the air conditioner temporarily when the wireless remote control • is lost or faulty.
- The air conditioner operates in the previous mode at the previously set temperature. However, when the power switch is set to OFF, it starts automatic operation.

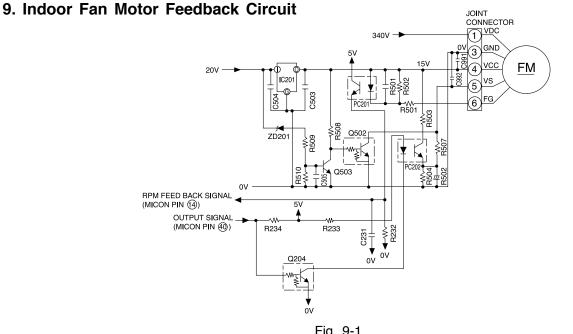

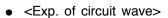

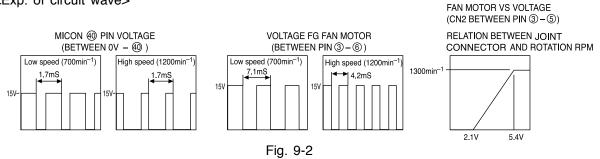

- Fan motor will receive signal thru Joint Connector with VDC (Motor Drive Voltage), VCC (Motor Controller Power Supply), VSC (RPM Instruction) motor WCC return the FG sinal under frequency RPM.
- The circuit produces fan motor drive from 340V DC supplied from the indoor unit and controls the fan • motor speed.

A CAUTION 1

Indoor fan motor circuit will be connected with primary power source line and please take care of the electrical shock.

A CAUTION 2


Please do not disconnect the fan motor connector during running due to the high voltage supply, it will cause the damage at fan motor and PWB.

Fig. 9-1

DESCRIPTION OF MAIN CIRCUIT OPERATION

MODEL RAC-70YH7A

1. Power Circuit

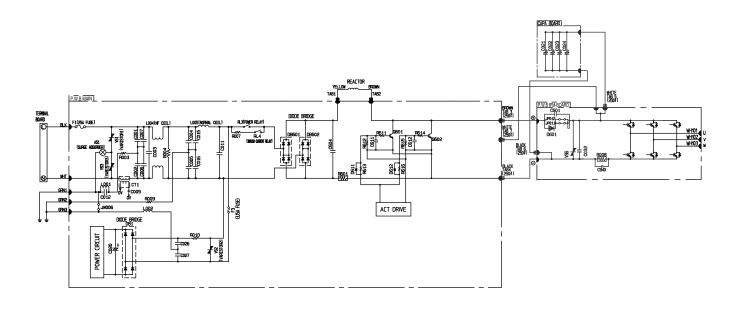



% This circuit full-wave rectifies 220 - 240 VAC applied between terminals L and N and boosts it to a required voltage with the IPM to create a DC voltage.

The voltage become 320-360V when the compressor is operated.

※ Importance component

- (1) Intelligence Power Module (IPM)A module that constitute by an inverter part.
- (2) Diode Stack (DB1, DB601, DB602)
 These rectify the 220 240VAC from terminal L and N to a DC power supply.

<Reference>


In case of Intelligence Power Module malfunction or connection failure immediately after compressor starts, its may stop due to error of [abnormal low speed], [switching failure],[Ip stop] and others.

<Reference>

If diode stack (DB601,DB602) are faulty, DC voltage may not be generated and the compressor may not operate at all. Also be aware that the 3.15A fuse might have blown.

(3) Smoothing capacitors (CO21 ~ CO24, 400 μ F, 450V)

This smoothes (averages) the voltage rectified by the diode stack.

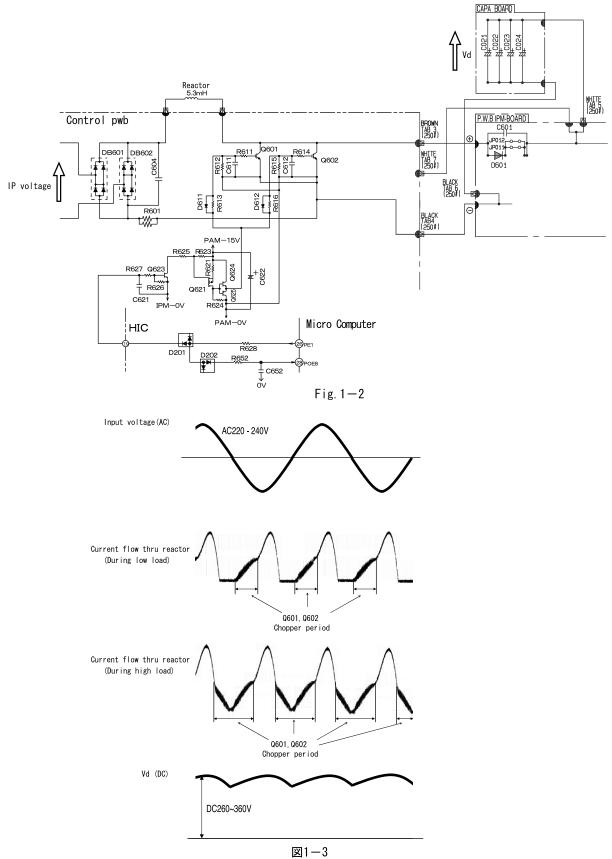

(4) IGBT to improve efficiency (Q601,Q602)


It will improve the efficiency during compressor load become heavy when current flow thru the chopper period of Q601, Q602.

(5) C001 ~ C007, C015, C016, C026, C027, L004, L005

These absorb electrical noise generated during operation of compressor and also absorb external noise entering from power line to protect electronic parts.

(6) Surge Absorber, Varistor1,2,3

These absorbs external power surge.

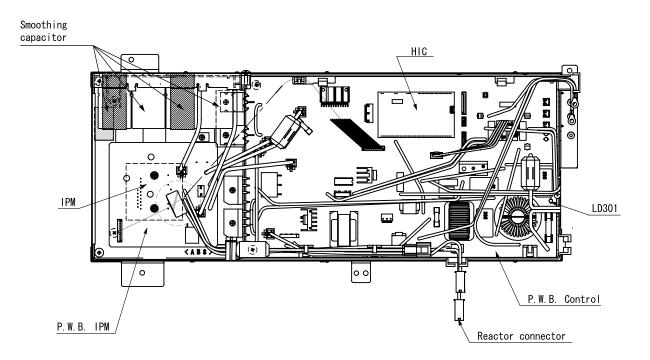

*Be careful to avoid an electric shock as a high voltage is generated. Also take care not to cause a short-circuit through incorrect connection of test equipment terminals. The circuit board can be damage.


2. PWB for power circuit

Voltage specification of power circuit as shown in below table. <Checking point>

Output	Spec	Main load	Measuring point	Example of possible failure mode.
5V 0/P	5 ±0. 4V	Micon, Thermistor	Tester⊕ : J19 (5V) Tester⊖ : J16 (0V)	Outdoor not operate, no blinking indication
12V 0/P	$12^{\pm 1}V$	Micon, IC2,3,4 Relay circuit	Tester⊕ : L104(12V) Tester⊖ : J16(0V)	Outdoor not operate, no blinking indication
16V 0/P	15. 5±¹. ⁵V	IPM for Comp IPM for DC fan	Tester⊕ : L103(16V) Tester⊖ : J16(0V)	Stop : LD301 3,4 or 12 times blinking
PAM-15V 0/P	15 ±1. 55 ∨	ACT circuit	Tester⊕ : J31 (PAM-15V) Tester⊖ : J16 (OV)	Stop : LD301 14 times blinking

X Power circuit for pwb can consider normal if the result is satisfied with above specification.

3. Reversing valve control circuit

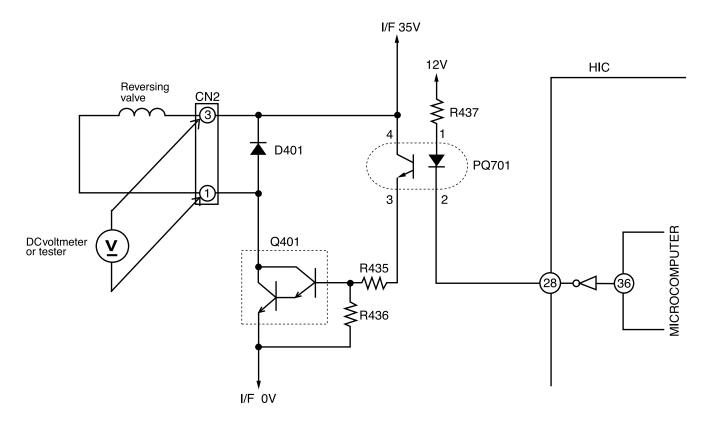



• Reversing valve control circuit can switch reversing valve ON/OFF according to instruction from indoor microcomputer depending on the operation condition shows in Table 3-1.

Voltage at each point in each operation condition is approximately as shown below when measured by tester. (When voltage between pin 1 and 3 CN2 is measured)

Op	peration condition	Voltage between pin 1 and 3 CN2
Cooling	General operation of Cooling	About 0V
	In normal heating operation	About 35V
Heating	MAX. rotation speed instructed by indoor microcomputer after defrost is completed	About 35V
	Defrosting	About 0V
Dehumidifying	Sensor dry	About 0V

Table 3-1

4. Temperature Detection Circuit

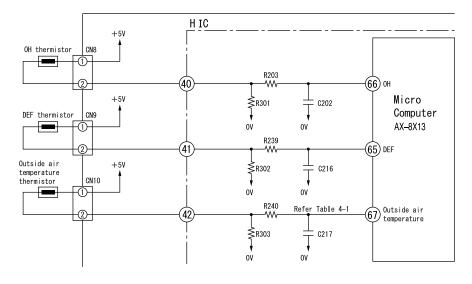


Fig. 4-1

- * OH thermistor circuit detect the temperature at the surface of compressor head, DEF thermistor circuit detect the defrosting operation temperature.
- * A thermistor is a negative resistor element which has characteristics that the higher (lower) the temperature, the lower(higher) the resistance.
- * When the compressor is heated, the resistance of the OH thermistor becomes low and \oplus 5V is divided by OH thermistor and R301 and the voltage at pin 66 of microcomputer.
- * Compare the voltage at microcomputer pin 66 and setting value stored inside. If the value exceed the set value, microcomputer will judge that the compressor is overheated and stop the operation.
- * When frost is formed on the outdoor heat exchanger, the temperature at the exchanger drops abruptly. Therefore the resistance of the DEF thermistor becomes high and the voltage at pin 65 of micro computer drops. If this voltage becomes lower than the set value stored inside, microcomputer will enter the defrost control.
- * During defrost operation, the microcomputer will transfer the defrosting condition command to indoor unit via SDO pin of interface of IF transmission output.
- * The microcomputer read the outdoor temperature by Outside Air thermistor and transfer it to the indoor unit, thus controlling the compressor rotation speed according to the set value in the EEPROM of indoor unit and switching the operation mode (outdoor fan on/off etc.) to DRY mode.

Below table show the typical values of outdoor temperature in relation to the voltage.

Outside Air Temperature (°C)	-10	0	10	20	30	40
Voltage at both side of R3O3 (V)	1.19	1.69	2.23	2. 75	3. 22	3. 62


Toble 1 1

<Reference>

When the thermistor is open open condition or disconnect, microcomputer pin $65 \sim 67$ are approx. 0V; When thermistor is shorted, they are approx.5V and LD301 will blink 7 times.

However, an error is detected when only the OH thermistor is shorted and will enter blinking mode after 12 minutes start the compressor operation.

5. Electric expansion valve circuit

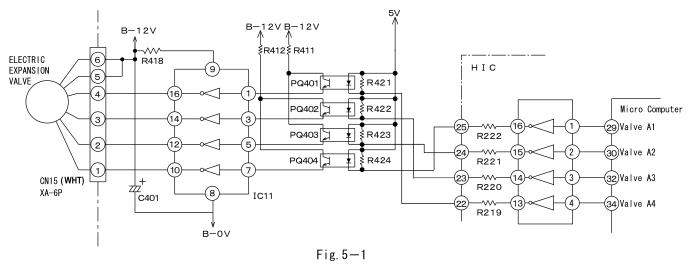

- * The electric expansion value is driven by DC12V. Power is supplied to 1 or 2 phases of 4-phase winding to switch magnetic pole of winding in order to control the opening degree.
- * Relationship between power switching direction of phase and open/close direction is shown below. When power is supplied, voltages at pins 4 to 1 of CN15 are about 0.9V and 12V when no power is supplied. When power is reset, initial operation is performed for 10 or 20 seconds. During initial operation, measure all voltages at pin 4 to 1 of CN15 by using a multimeter. If there is any pin with voltage that has not changed from 0.9V or 12V, expansion valve or micro computer is broken.
- * Fig. 5-1 shows logic waveform when expansion valve is operating.


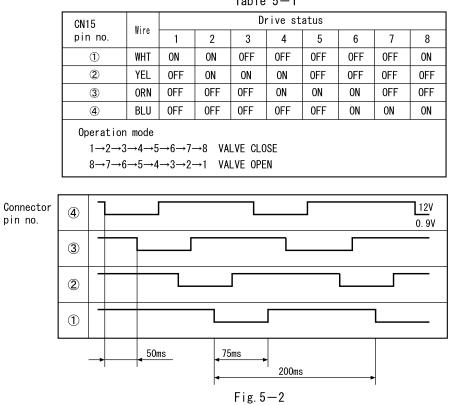


Table 5-1

With expansion valve control, opening degree is adjusted to stabilize target temperature by detecting compressor head temperature. The period of control is about once per 20 seconds and output a few pulse.

6. Outdoor DC fan motor control circuit

* This model is built with DC fan motor control circuit inside outdoor electrical unit.

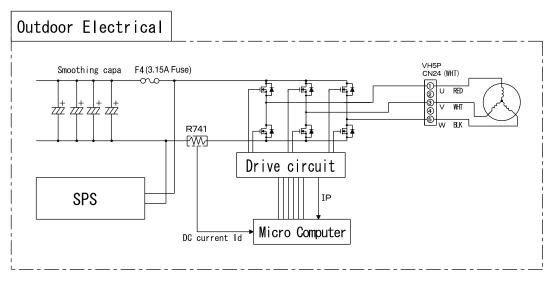



This DC fan motor is control by outdoor micro computer that follow the operating instruction received from indoor micro computer. The DC current that flow from R741 will presume actual operation speed and control the rotation to follow the operating instruction. Based on this DC current it will detect a over current and other fan motor failure.

(1) Fan motor speed controller during starting

Due to the interference of strong wind etc., operation movement is changed based on fan direction and rotation speed as shown below during starting of operation. In addition, the fair wind is define as wind that blow to outside direction using Mouth Ring part. At strong and contrary wind ... The rotational speed is not controlled as to protect the equipment and fan will rotate reversely depend on the wind. Automatically start when wind condition become weak.


At contrary wind	The rotational speed is controlled in fair wind direction after it
	slowly reduce the speed and finally stop.
At fair wind	The rotational speed is controlled as it is.
At strong fair wind	The rotational speed is not controlled as to protect the equipment
	and fan will rotate reversely depend on the wind. Automatically
	start when wind condition become weak.

(2) Fan motor speed controller during unit operating

There is a case where fan rpm is reducing during rotating caused by interference of strong wind If this condition continue in long period, fan will stop rotating. (LD301 : 11 times blinking) The unit will restart according to control as per during start (1).

- (3) Method of confirming self diagnosis LD301 lamp : 12 times blinking If the unit stop and LD301 on the pwb blinking 12 times [fan lock stop is detected], follow below steps to confirm it.
 - Fan lock stop is detected when something has disturb the fan rotation by inserting material into propeller fan or ice has growing inside outdoor unit caused by snow. Remove it if found something is bloking the fan.
 - 2. Confirmed that CN24 connector is securely inserted. Fan lock stop is detected also when connector is not properly inserted. Please securely insert if found any disconnection.
 - 3. Fan lock stop also can be detected where strong wind blown surrounding the unit. Please confirm after restart the unit. (It may take few minutes to operate the compressor) It is not a malfunction of electrical unit or fan motor if the unit run continuesly after restart the unit.
 - 4. Check fan motor condition as below procedure.

[Checking Fan Motor] procedure

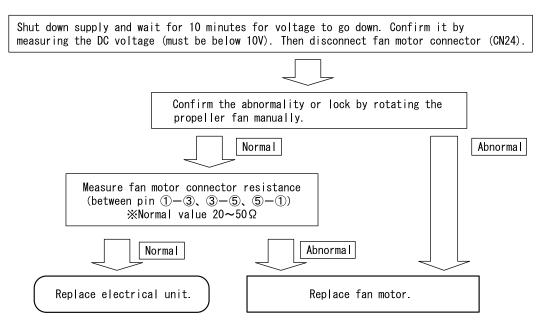

5. Reconnect again fan motor connector (CN24).

**Please confirm above checking procedure if found F4(3.15A fuse) blown.

If fan motor is broken, replace both electrical unit and fan motor.

Reference


**No power is supllied to the outdoor unit if F4(3.15A Fuse) is blown.

Both DC fan motor and switching power supply is using same fuse.


Caution

**Beware of electric shock due to high voltage when conducting an operation check. Power supply for DC fan motor and compressor is common (DC260~360V).


SERVICE CALL Q & A

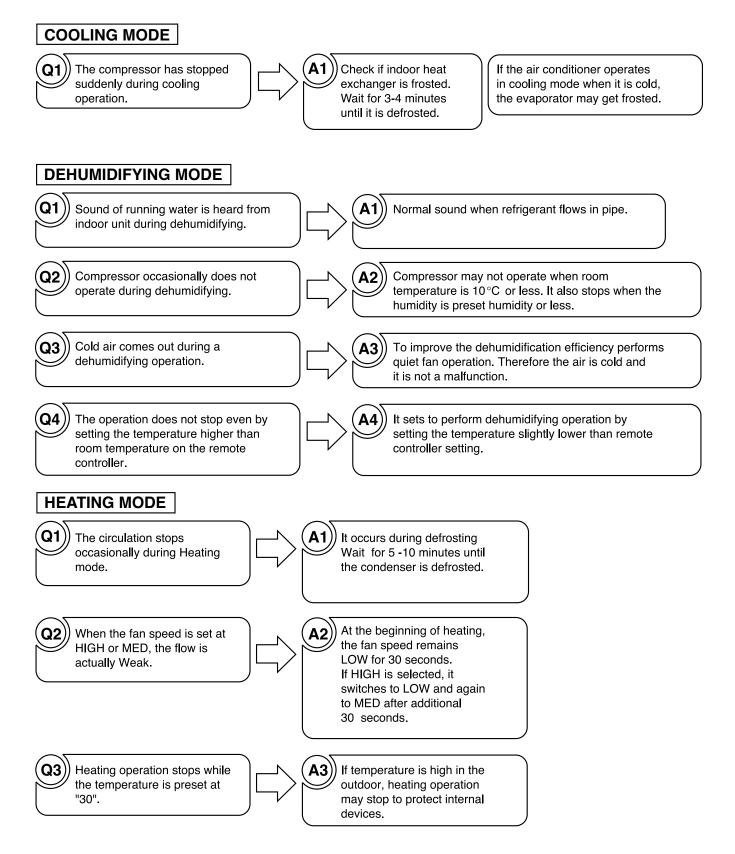


AUTO FRESH DEFROSTING

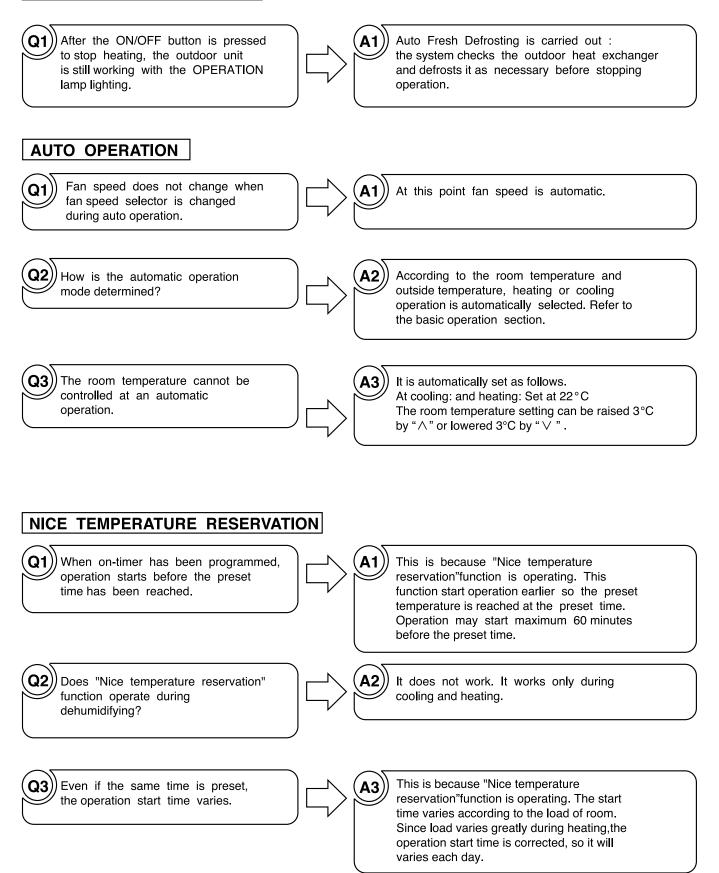


AT STARTING OPERATION

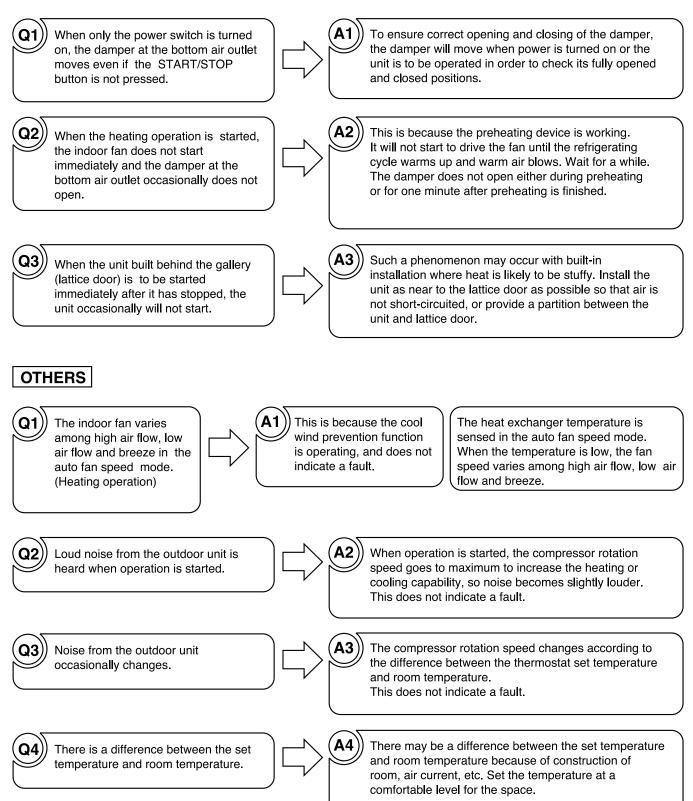


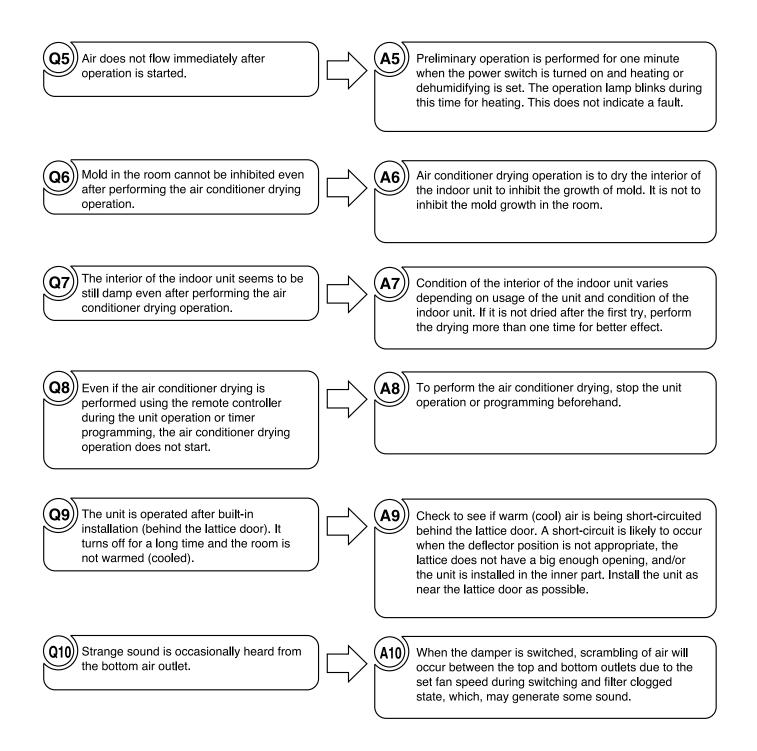

TROUBLE SHOOTING

PRECAUTIONS FOR CHECKING

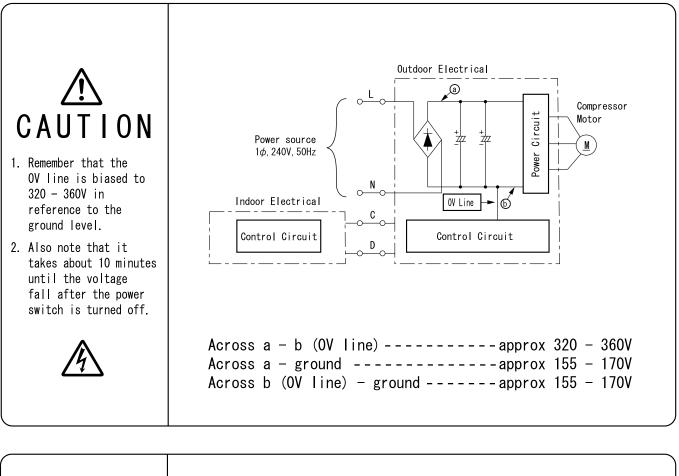

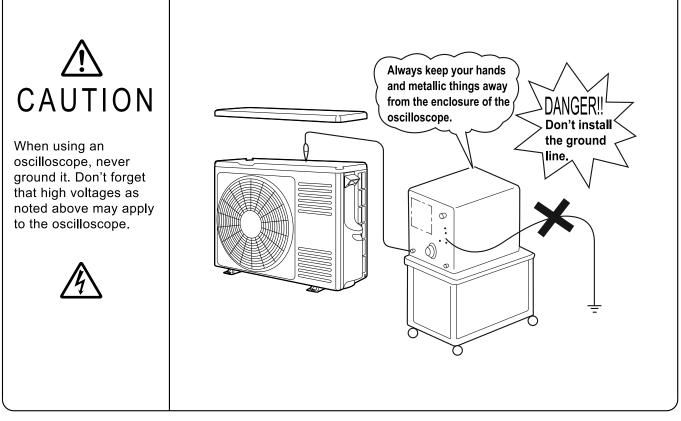


DISCHARGE PROCEDURE AND METHOD TO STOP ENERGIZE THE POWER CIRCUIT

\Lambda WARNING 🖄

Caution

- Voltage of about 300-330V is charged between both ends of smoothing capacitors.
- During continuity check for each part of circuit in outdoor electrical parts, be sure to discharge smoothing capacitor to prevent secondary trouble.
- 1. Turn OFF power supply to the outdoor unit.
- After power is turned OFF, wait for 15 minutes or more. Then remove electrical parts cover and apply soldering iron of 30 to 75W for 15 seconds or more to DC voltage ⊕ and DC voltage — terminals in order to discharge voltage in smoothing capacitors.

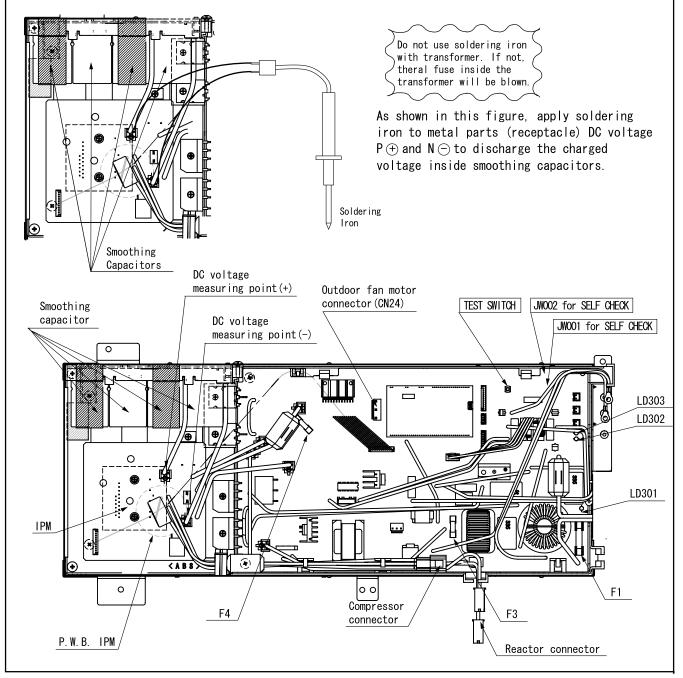


[Other cautions]


(1) Disconnection of tab terminal receptacle

All receptacle used to connect with tab terminal are built with lock mechanism. Please take note that by using a force to pull out the receptacle without releasing the lock, can cause a damage. Furthermore, during connecting the receptacle back make sure to securely insert until end.


* Receptacle type and procedure to releasing the lock

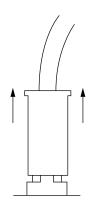

Vertical type (with plastic casing) Pull out by holding the plastic casing.

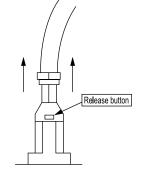

Vertical type (without casing) Pull out while pushing the release button.

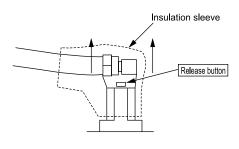

Horizontal type (with insulation sleeve)


Pull out from top of insulation sleeve while pushing the release button.

(2) Disconnecting on board connector

On board connector with lock machanism are widely used. Please take note that by using a force to pull out with out releasing the lock mechanism, can cause a damage.

Furthermore, during inserting back the connector make sure it surely done.

Release lock with finger before disconnecting.

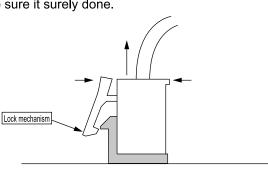


(3) Connector disconnection during discharge is prohibited


Disconnecting connector during discharge is extremely prohibited.Component on board and fan motor will damage. Proceed trouble shooting process after confirming smoothing capacitor of indoor & outdoor pwb has been discharge.

CHECKING THE INDOOR TIMER LAMP IF BLINKING 1 TIME

<Caution> Please turn OFF power supply before proceed with below checking flow.

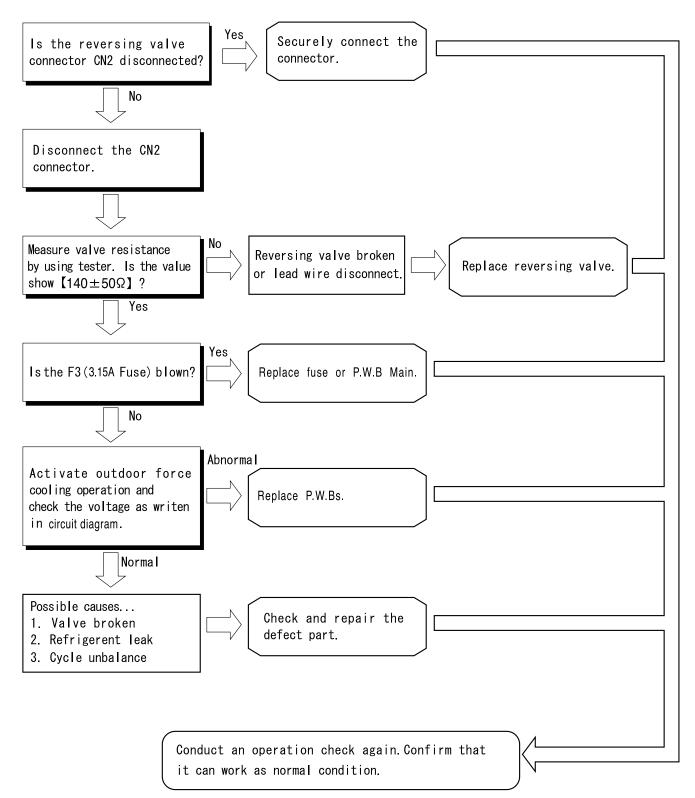

CHECKING THE INDOOR/OUTDOOR UNIT ELECTRICAL PARTS AND REFRIGERATING CYCLE

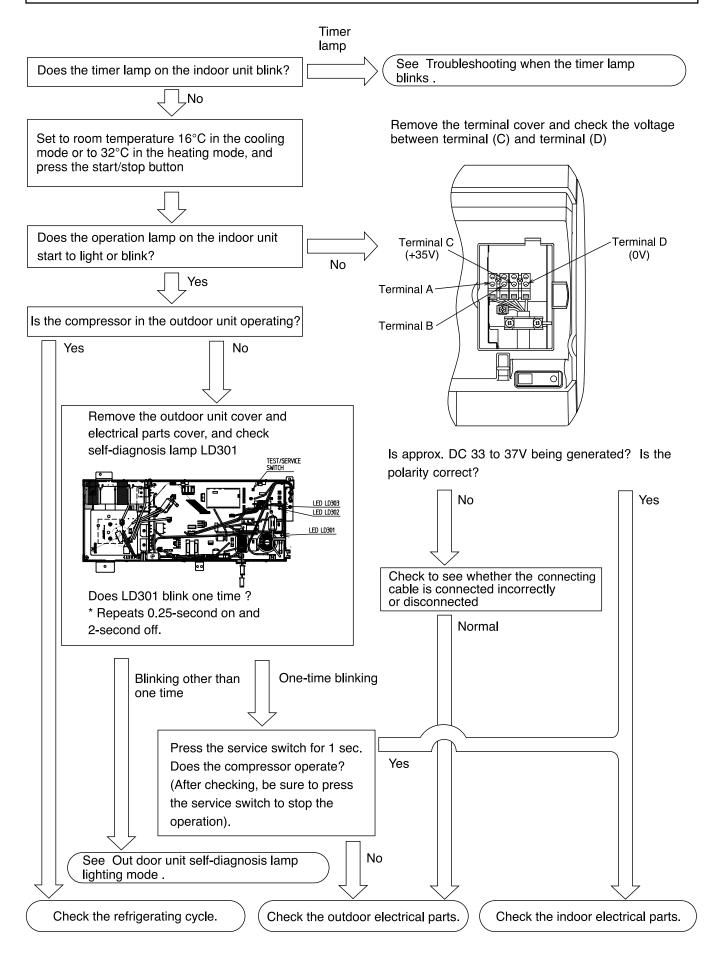

TROUBLESHOOTING WHEN TIMER LAMP BLINKS.

Perform troubleshooting according to the number of times the indoor timer lamp and outdoor LD301 blink.

SELF-DIAGNOSIS LIGHTING MODE

No.	Blinking of Timer lamp	Reason for indication	Possible cause
1	5∞c1 time	Reversing valve defective When the indoor heat exchanger temperature is too low in the heating mode or it is too high in the cooling mode.	 Reversing valve defective Heat exchanger thermistor disconnected (only in the heating mode) (Note) The malfunction mode is entered the 3rd time this abnormal indication appears (read every 3 minutes).
2	5;;c2 times	Outdoor unit forced operation When the outdoor unit is in forced operation or balancing operation after forced operation	Electrical parts in the outdoor unit
3	5∞. – – – – – 3 times	Indoor/outdoor interface defective When the interface signal from the outdoor unit is interrupted.	 Indoor interface circuit Outdoor interface circuit
4	5 5∞c. — — 4 times	Outdoor electrical assembly defective.	Please check at the outdoor elec- trical led lamp blinking (LD301) and refer to self diagnosis lighting mode for outdoor unit.
5	5 5000 − − 9 times	Room thermistor or heat exchanger thermistor is faulty When room thermistor or heat exchanger thermistor is opened circuit or short circuit.	(1) Room thermistor(2) Heat exchanger thermistor
6	5_5sec − − 10 times	Over-current detection at the DC fan motor when over-current is detected at the DC fan motor of the indoor unit.	 Indoor fan locked Indoor fan motor Indoor control P.W.B.
7	5₅€5586 − − 13 times	IC401 or IC402 data reading error When data read from IC401 or IC402 is incorrect.	IC401 or IC402 abnormal

(_____ - Lights for 0.5 sec. at interval of 0.5 sec..)


<Cautions>

※1


- (1) If the interface circuit is faulty when power is supplied, the self-diagnosis display will not be displayed.
- (2) If the indoor unit does not operate at all, check to see if the connecting cable is connected or disconnected.
- (3) To check operation again when the timer lamp is blinking, you can use the remote control for operation (except for mode mark ×1).

CHECKING INDOOR UNIT ELECTRICAL PARTS


1. Power does not come on (no operation)

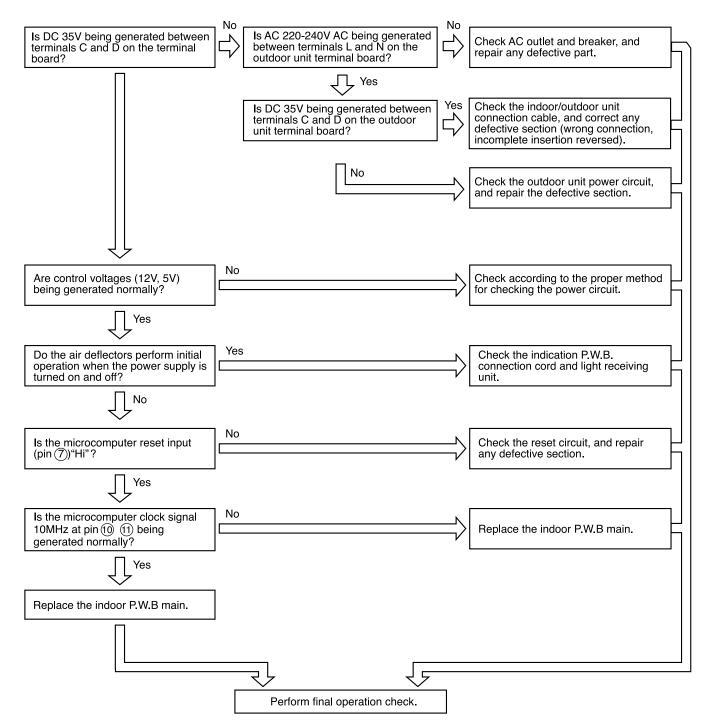


2. Outdoor unit does not operate (but receives remote infrared signal)

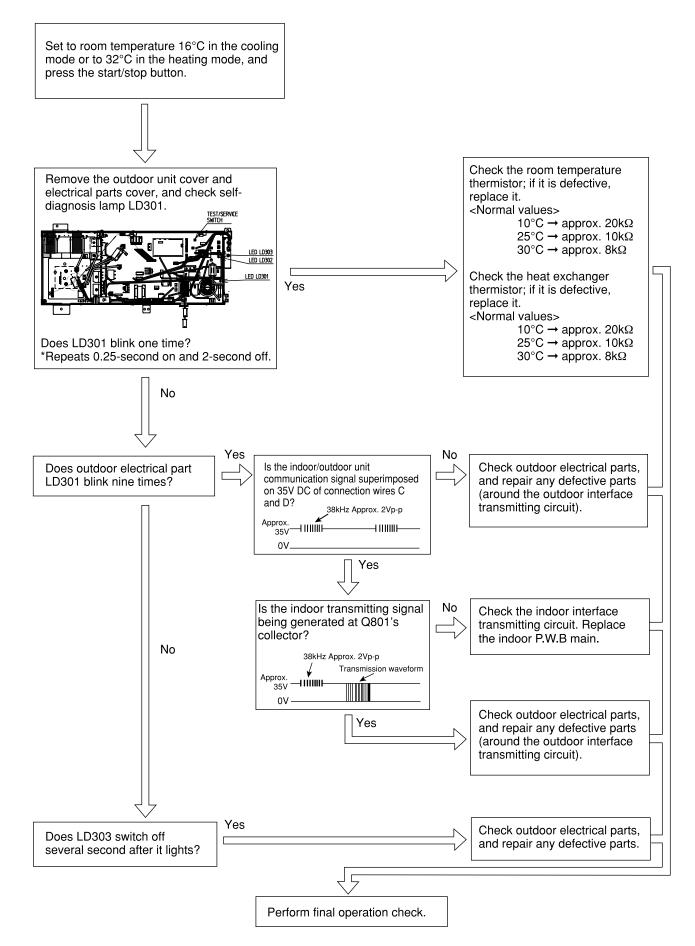


3. Only indoor fan does not operate (other is normal)

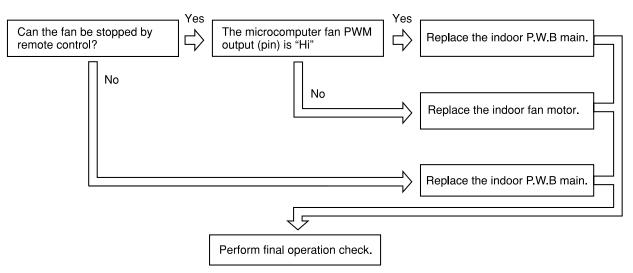


4. Air deflector does not move (others are normal)

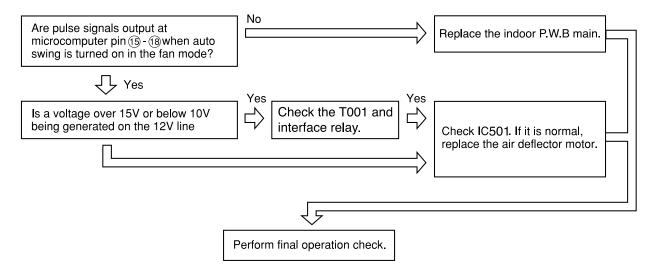


5. <u>All systems stop from several seconds to several minutes after operation is started (all indicators are also off)</u>

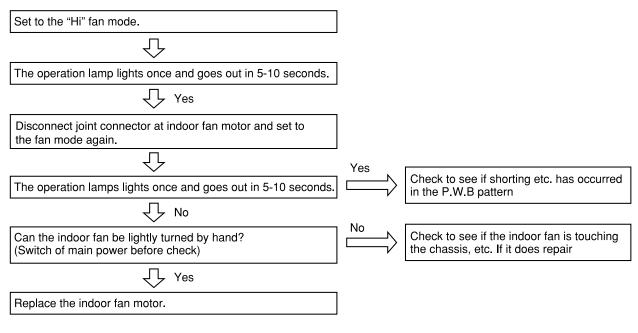


6. Check the main P.W.B (power circuit)

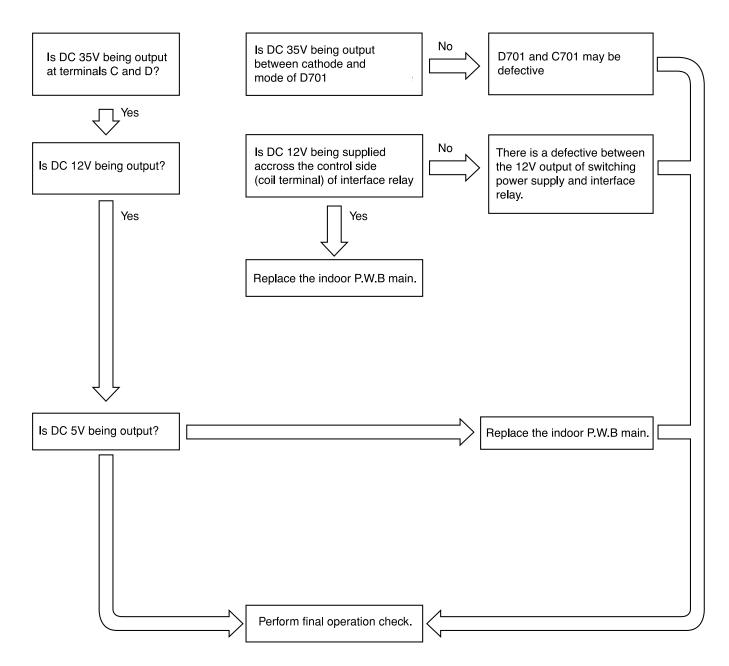



CHECKING THE OUTDOOR UNIT ELECTRICAL PART

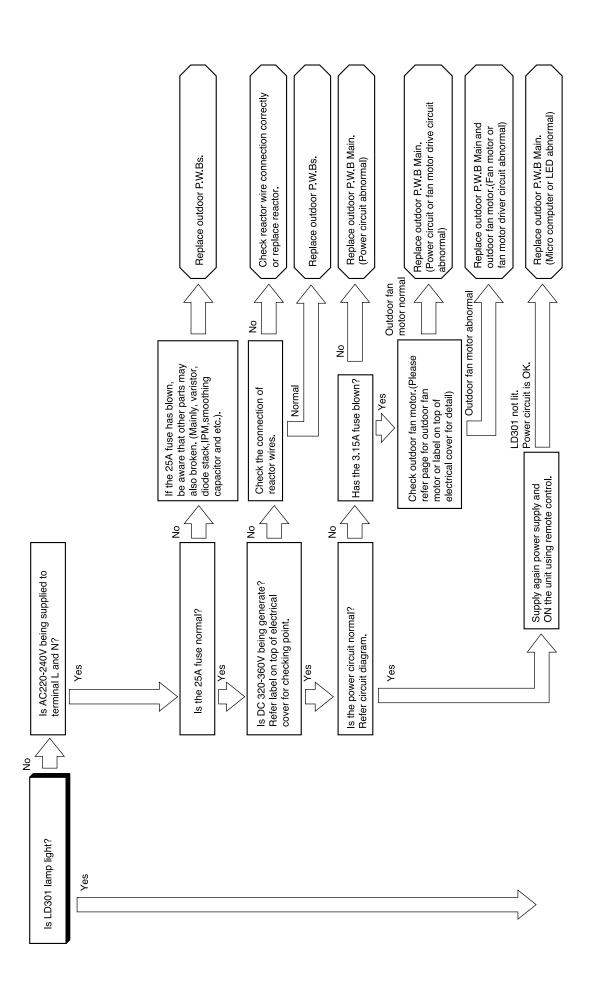

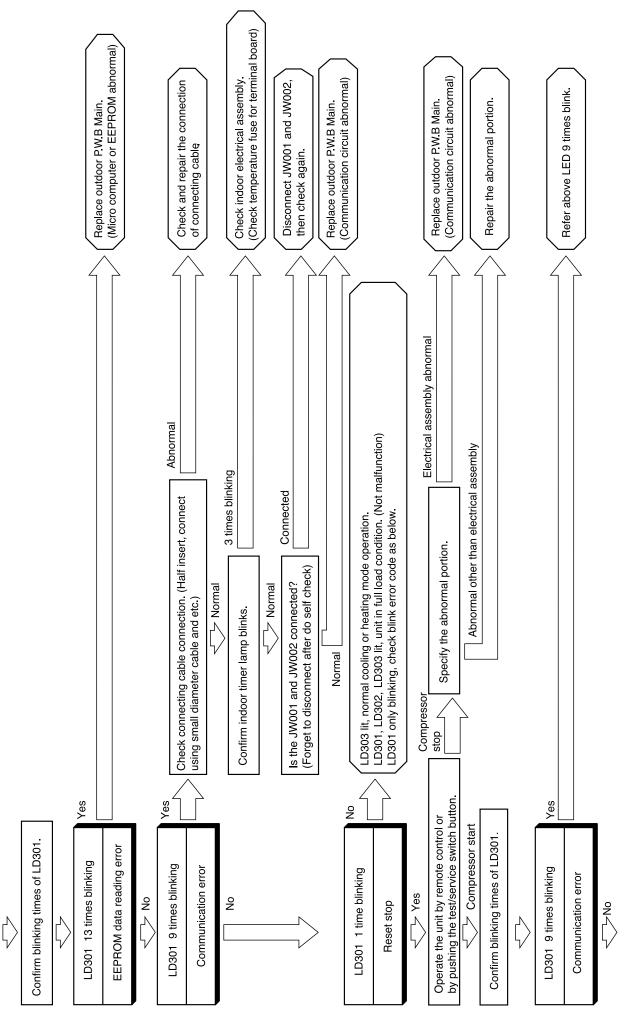

- 89 -

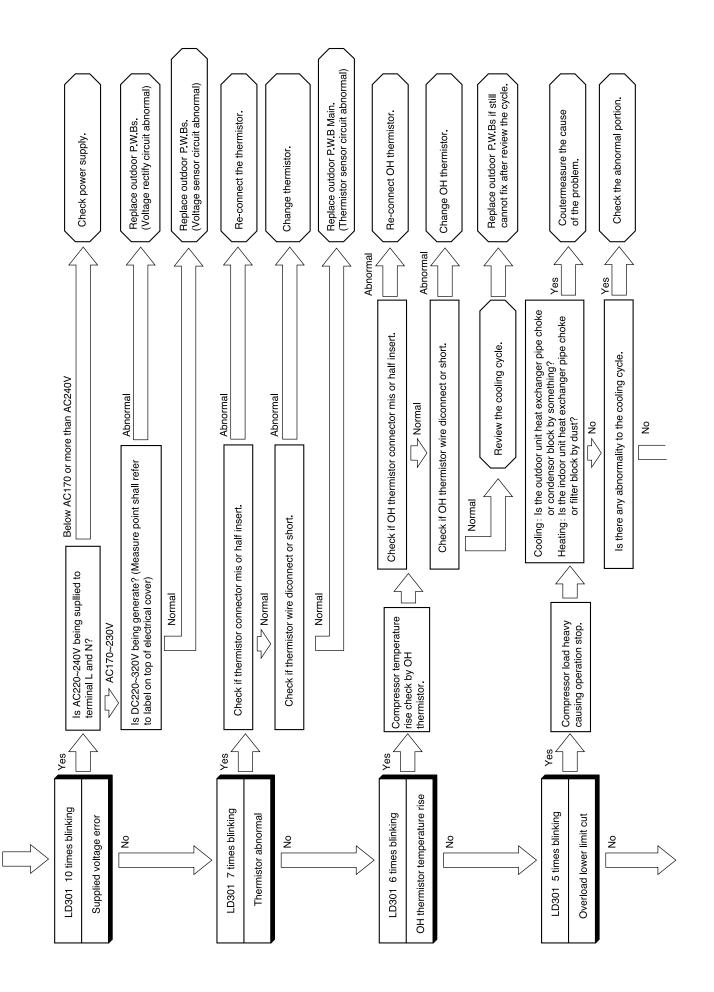

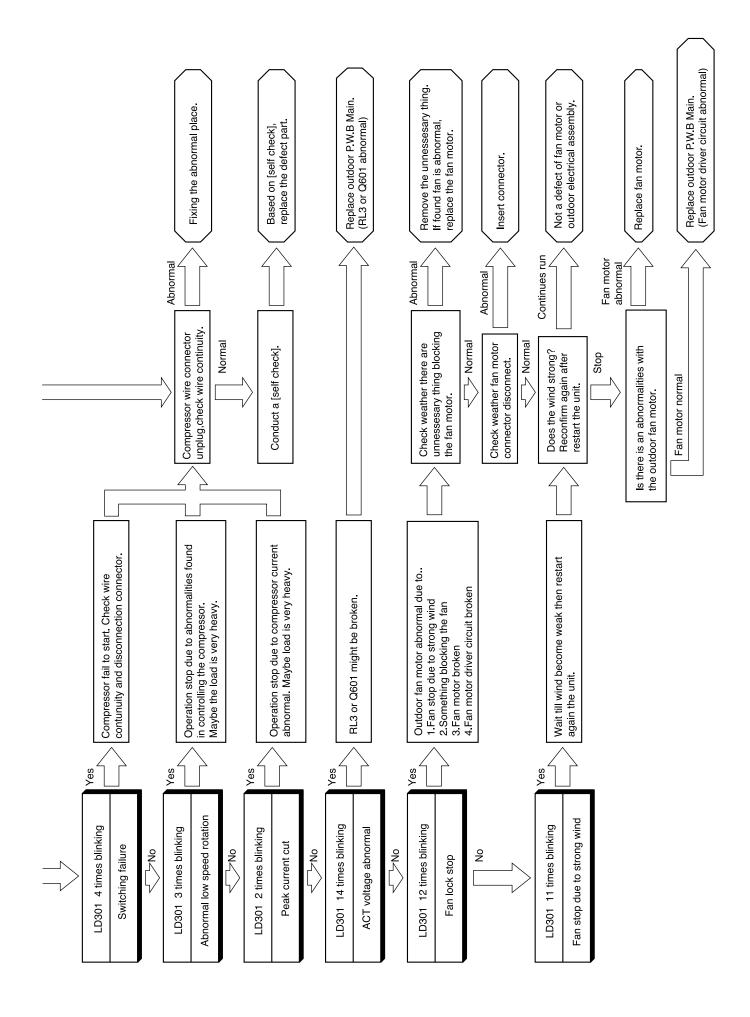

SELF CHECK

When self-diagnosis lamp blinks 2,3,4 and 5 times happen, to determine whether compressor faulty or electrical unit faulty, please conduct a SELF CHECK as below.

- 1. Switch OFF main power supply.
- 2. Short circuit between JW001 and JW002.
- 3. Switch ON main power supply LD302 will blink 1 time.
- 4. (Within 3 minutes) Press Test/Service Switch for 1 second or more.
- 5. Self-diagnosis result will be shown LD303 will ON (LIT) and LD301 will be blinking. Then refer to diagnosis table 2.
- 6. Switch OFF main power supply. Then release back JW001 and JW002 to original condition (no short circuit condition).
- * If step No. 6 is not carried out, the system will not operate properly until 3 minutes has lapsed after restore the power supply.

* SELF CHECK diagnosis result

SELF-DIA	AGNOSIS LIGHTING MODE	LIT 🛛 BLINKING 🗆 OFF
L L L D D D 3 3 3 0 0 0 1 2 3 REDREDRED	SELF-DIAGNOSIS RESULT	REPAIR METHOD
 □ □ ■ 1 TIME 	ELECTRICAL OK	O CHANGE COMPRESSOR
2 TIMES	PEAK CURRENT CUT OFF	© CHANGE P.W.B.s
Ø □ ■ 7 TIMES	COMPRESSOR CURRENT ABNORMAL	
I0 TIMES	DC VOLTAGE ABNORMAL	 IF AC VOLTAGE INPUT ABNORMAL (OVER STANDARD VOLTAGE ±10%), FOLLOW STANDARD AC VOLTAGE INPUT IF AC VOLTAGE INPUT IS NORMAL (WITHIN ±10%), - CHANGE P.W.B.S
 ☐ □ ■ 13 TIMES 	EEPROM READING ERROR	⊕ Change P.W.B. Main

In case abnormalities found in measurement result, change the defect part.

In case electrical is normal and before it can be use, modify back

JW001 and JW002 as normal condition (before conduct a self check).

In case of service person forgot to release JW001 and JW002 to original condition;

<u>Case 1:</u>

If main power supply continuously ON, outdoor microcomputer will keep showing diagnosis result (LD303 will ON and LD301 will blinks).

<u>Case 2:</u>

If main power supply OFF at once, then switch ON again:

a) Outdoor microcomputer will wait the self check command (by pressing test/service switch) within 3 minutes (LD302 blinks 1 time).

If test/service signal input is not received, unit will return to normal operation mode after this 3 minutes has lapsed. (LD302 OFF and LD301 blinks 1 time).


<u>Case 3:</u>

If main power supply OFF at once, then switch ON again and on indoor unit by remote control;

- a) Indoor unit will receive remote control signal and send signal to outdoor unit. For the first 3 minutes, outdoor micro-computer will ignore this indoor signal (LD302 blinks 1 time).
- b) After 3 minutes has lapsed (LD302 OFF and LD301 blinks 1 time), unit will return to normal operation mode.

HOW TO OPERATE USING OUTDOOR UNIT TEST SWITCH

- 1. Pull out power cord plug and wait for 1 minute before plug in again.
- 2. Remove outdoor electrical cover and confirm that LD301 will blink 1 time.
- 3. Force cooling operation is start when TEST SWITCH is pressed for 1 second or more.
 - % (There is a case where operation will only start after 1 minute after pressing the TEST SWITCH due to initilizing of the expansion valve)
- 5. Press again the TEST SWITCH for about 1 minute or more to stop the force cooling operation.

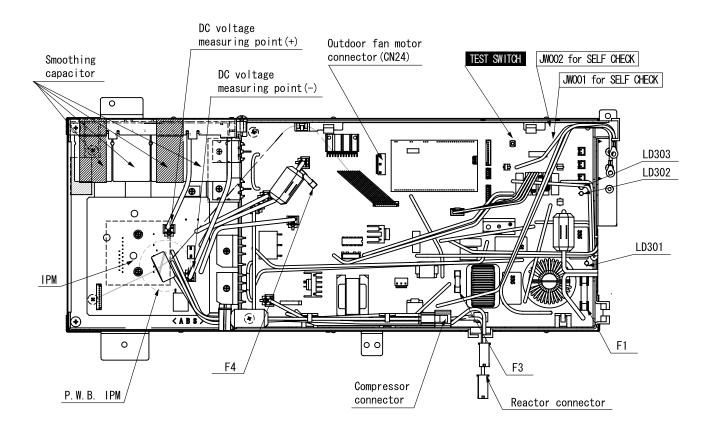


※ Caution

- 1. Turn OFF the breaker first before can start servicing.
- 2. Never operate the unit in this condition for more than 5 minutes.
- 3. If the checking is done with the compressor connector disconnected, the unit will continue normal operation when electrical part are normal, or it will repeat operating for approximate 1 minute and stop due to overload power limit cut
- 4 If interface signal (DC35V) terminal C and D are not connected when the outdoor unit TEST SWITCH is used for checking,LD301 will blink 9 times after operation to indicate a communication error.
- 5. To proceed with TEST SWITCH operation again, breaker must be turn OFF and ON it again. (TEST SWITCH will operate 1 time only once power is supplied)
- 6 When service operation is completed, restore the connection as original condition.

LIGHTING MODE OF SELF-DIAGNOSIS LAMP

POSITION OF SELF-DIAGNOSIS LAMP

1

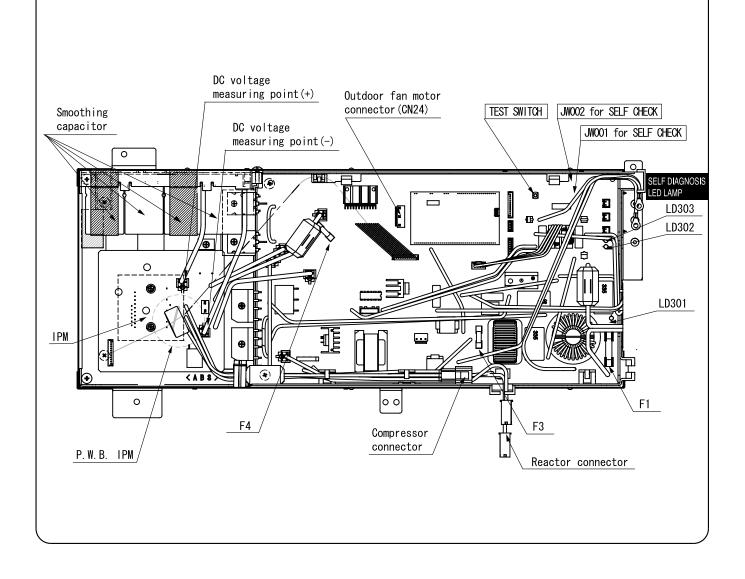


LIGHTING MODE SELF-DIAGNOSIS LAMP

2 LIGHTING MODE SELF-DIAGNOSIS LAMP

1 A A DANGER (DC360V)	SELF-DIAGNOSIS LIGHTING MODE		STRUCTURE OF ELECTRICAL	TABLE 2 : DURING SELF-DIAGNOSIS COMPLETED	SIS COMPLETED
				SELF-DIAGNOSIS LIGHTING MODE	LIT Z BLINKING COFF
to a	D D D D-SELF D 0 0 DIAGNOSIS DETAILS M 0 0 0 NAME REDREDRED REDREDRED	Main Check Point	PM CAPA PWB	L L L D D D 0 0 0 1 2 0	REPAIR METHOD
VOLTAGE BETWEEN TABS/WHT(+) AND TAB6/BJK(-) IS LESS THAN 10V	[2] DURING STOP				
SFLE DIAGNOSIS LIGHTING MODE	Image Image <th< td=""><td>1)Leak of Refrigerant 2)Compressor(3)oh thermstor circut 2)Fan imitir(5)Fan imitir circut</td><td></td><td></td><td></td></th<>	1)Leak of Refrigerant 2)Compressor(3)oh thermstor circut 2)Fan imitir(5)Fan imitir circut			
LIT ZBLINKING DFF	ABNOPMAL THERMISTOR IS OPENED	OTHERMISTOR CONNECTION OF THERMISTOR IS FAULTY		2 TIMES PEAK CURRENT CUT OFF	CHANGE P.W.B.S
D D D D D D D D D D D D D D D D D D D	NN WHEN NDOOR UNT IS R & NOT CONNECTED/T BLINKS R & SMLARTY	Othermistor cricuit Ocable IS wrong connected Ocable IS open Omiterace Cricuit Betneen Indoor Omiterace Cricuit Betneen Indoor	COLOR F4	7 TIMES ABNORMAL	© F COMPRESSOR CONNECTOR LODGE OR NG -CHECK CONNECTOR CONTINN © F COMPRESSOR CONNECTOR OK -CHECK COMPRESSOR, CHANGE P.M.B.S
m腔	POWER SUPPLY POWER SUPPLY VOLTAGE	OPOMER SUPPLY VOLTAGE Oreceptagle of Mre for P.M.B IPM IS			① IF AC VOLTAGE INPUT ABNORMAL (OVER STANDARD VOLTAGE ±10%)
[1] DURING OPERATION	IS INLURRELLI. FAN NOTOR LOAD IS TOO HEAVY OR ROTATION	NOT PROPERLY INSERTED ① FAN HOTOR ② OUTDOOR CONDITION (MND)		10 TIMES DC VOLTAGE ABNORMAL	-FOLLOM STANDARD AC VOLTAGE INPUT © IF AC VOLTAGE INPUT NORMAL (MITHIN ±10%) -CHANGE P.W.B.S.
	US LUNDEL DI WWU BLUM. OUTDOOR FAN RPM IS NOT ROTATE AS INTENDED RPM.	©FAN MOTOR ©FAN MOTOR CRCUIT		Image: Second Reading Error 13 TMES	© CHANGE P.W.B. MAIN
	□□□ = EEPROM READING READ THE DATA IN THESE ERROR READING READ THE DATA IN THESE ERROR	: MAN	EUSE F1 B C SELF DAGNOSIS USED-JW001	TABLE 3 : OUTDOOR FAN MOTOR INSPECTION (SELF-DIAGNOSIS)	<pre> INSPECTION (SELF-DIAGNOSIS) </pre>
	Image: Control of the contro	RESSOR	EDEGL COSOL DEGL COSOL	1. SWITCH OFF MAIN POWER SUPPLY.	
[2] DURING STOP	ACTIVE CONVERTER	9	WHEN SELF DIAGNOSIS BLINKS 2.3.4 AND 5 TIMES HAPPEN.TO DETERMINE WHETHER COMPRESSOR OR ELECTRICAL UNIT FAULTY,	2. DISCONNECT OUTDOOR FAN MOTOR P.W.B. MAIN.	2. DISCOMPELI OULDOOR FAN MOLOR CONNECLOR FROM CONNECLOR CNZ4 OF PMB MAN
. STOP		Market ALCHTS FOR 0.25 SEC. AT ALCHTS FOR 0.2	BELOW DIAGNOSIS CAN BE FOLLOWED.	3. ROTATE THE OUTDOOR FAN SHAFT EITHER NORMAL OR ABNORMAL.	ROTATE THE OUTDOOR FAN SHAFT TO CONFIRM THE FAN MOTOR MOVEMENT EITHER NORMAL OR ABNORMAL.
Image: Image of the state of the s	- II	ITERVAL OF 0.25 SEC. /	SELF-DIAGNOSIS METHOD	4. CHECK THE RESISTANCE VALUE BE	4. CHECK THE RESISTANCE VALUE BETWEEN PIN TERMINAL SHOULD BE WITHIN
JRRENT	SERVICE OPERATION To collect refrigerant from indoor unit and store it at outdoor unit		t switch off main Power Supply. 2. Short Crecut Between Jwoot and Jwoo2. 3. Switch on Main Power Supply - Jitady will bilink titme	*CONNECT BACK THE OUTDOOR FAN C	<pre>.co up up the cuttoor fan connector once fansh do inspection.</pre>
III II ABNORMAL POSTION DETECTION OP 7435 3 THES LOW SPEED Stand. Is NOT MPUT © COMPRESSOR	1. SWITCH OFF THE MAIN POWER SUPPLY AND THEN SWITCH IT ON AGAIN. (WAIT FOR 1 MINUTE).		4. (WITHIN 3 MINUTES) PRESS TEST/SERVICE SWITCH FOR 1 SEC. OR MORE. 5. SELF-DIAGNOSIS RESULT WILL BE SHOWN-LID303 WILL ON (LIT) AND	OTHER INSPECTION;	
	 PRESS AND HOLD TEST/SERVICE SWITCH FOR 1 SEC, OR MORE TO START OUTDOOR UNIT IN COOLING OPPEATION IN ONDER TO PREVEN PARTS FROM DAMAGE, DO NO OPPEATE THE OUTDOOR UNIT MORE THAN 5 MULTES. BREYSS AND HID TEST/SERVICE SWITCH FOR 1 SET OR MORE TO STOP THE 	MORE TO START VENT PARTS FROM HAN 5 MINUTES.	LD301 WILL BLINKING. THEN REFER TO DIAGNOSIS TABLE 2. 6. SWITCH OFF MAIN POWER SUPPLY. THEN RELEASE BACK JMOD1 AND JMOD2 TO ORIGINAL CONDITION IND SHORT CIRCUIT CONDITION.	1. DAGNOSIS FOR REVERSING VALVE OPERATION ERROR. -CHECK REVERSING VALVE OMECTION EITHER WRE BROKEN OR -OT. F. OK. CHECK FUSE F3. JF BROKEN, REPLACE FUSE FOR PM3.	peration Error. Wection Either Wire Broken or Oken, Replace Fuse or P.W.B.S.
THEST CUT FRENSTING EVEN WHEN BUCK SMUCHT OF ITS APPLON THEST CUT FRENSTING EVEN WHEN THEST CUT THE LOWER FRENUEN	SERVICE OPERATION. 4. REPEAT STEP 1 TO 3 IF		*F STEP NO.6 NOT CARRED OUT, THE SYSTEM WILL NOT OPERATE PROPERLY UNTIL 3 MINUTES HAS LAPSED AFTER RESTORE THE POWER SUPPLY.	2. Diagnosis for communication signal error or outdoor -Check wiring connection between indoor and outdoor.	 DIAGNOSIS FOR COMMUNICATION SIGNAL ERROR OR OUTDOOR NOT FUNCTIONAL. -CHECK WIRING CONNECTION BETWEEN INDOOR AND OUTDOOR.


CHECKING THE REMOTE CONTROLLER

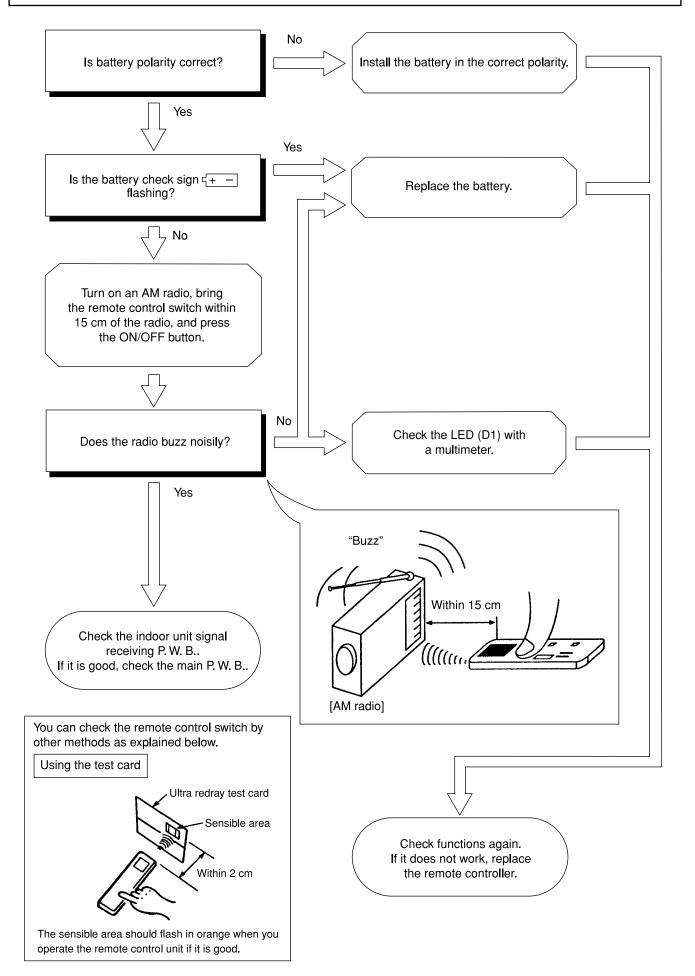

CHECKING THE REFRIGERATING CYCLE


(JUDGING BETWEEN GAS LEAKAGE AND COMPRESSOR DEFECTIVE)

1. Troubleshooting procedure (No operation, No heating, No cooling)

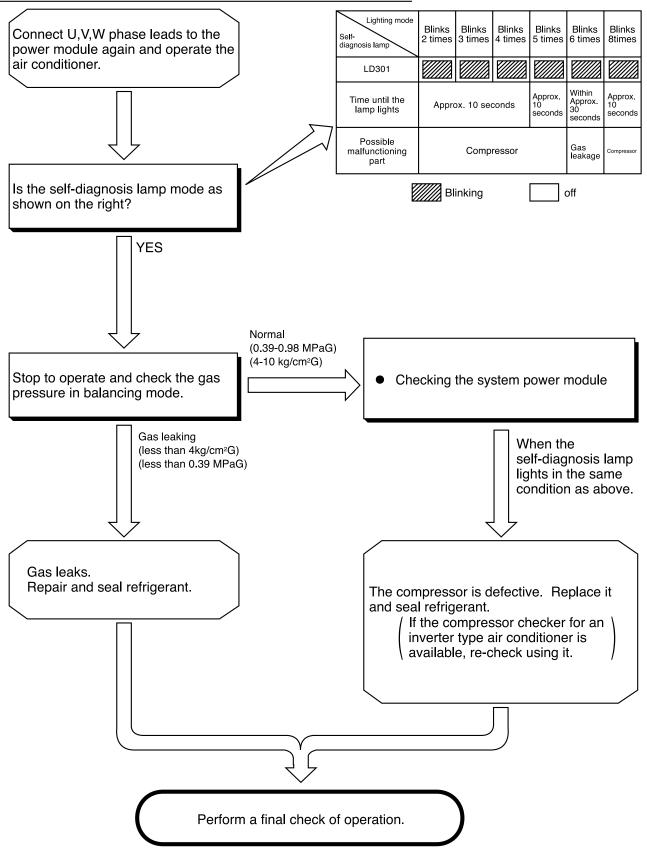

PARTS LIST AND DIAGRAM

INDOOR UNIT MODEL : RAS-70YH7

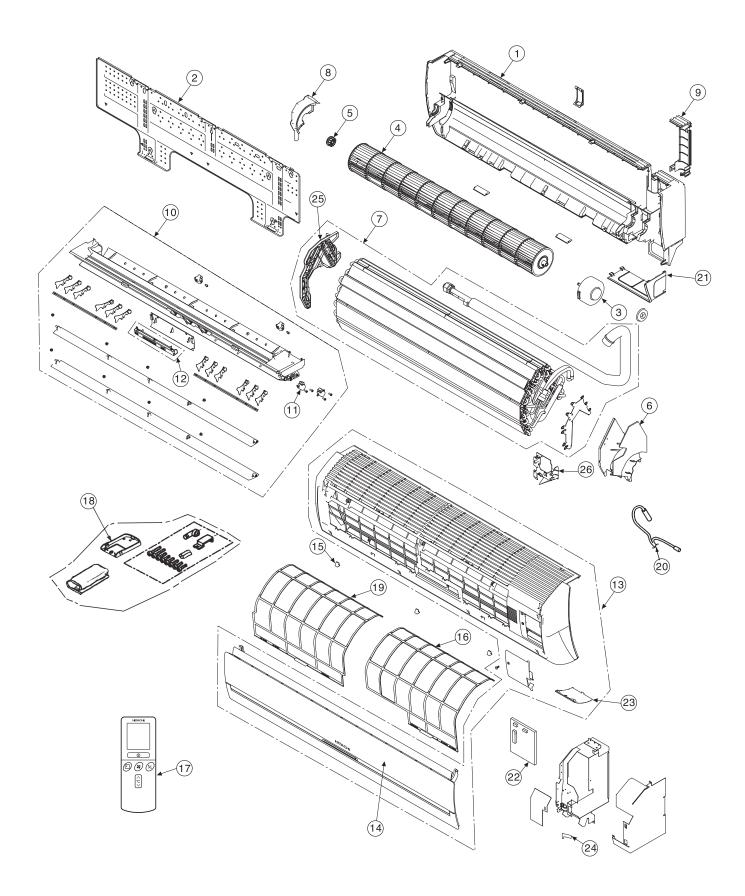


MODEL RAS-70YH7

NO.	PART NO.		Q'TY / UNIT	PARTS NAME
1	PMRAS-30CHP6	002	1	CABINET ASSY
2	PMRAS-72CHA3	R13	1	MOUNTING PLATE
3	PMRAS-80YHA	R01	1	FAN MOTOR
4	PMRAS-80YHA	R04	1	TANGENTIAL FAN
5	PMRAS-72CHA3	017	1	P-BEARING ASSY
6	PMRAS-72CHA3	007	1	FAN MOTOR SUPPORT
7	PMRAS-70YH7	R03	1	CYCLE ASSY
8	PMRAS-72CHA3	005	1	BEARING COVER
9	PMRAS-24CE9G	004	1	PIPE SUPPORT (U-COVER)
10	PMRAS-80YHA	R05	1	DRAIN PAN ASSY
11	PMRAS-72CHA3	R01	4	AUTO SWEEP MOTOR
12	PMRAS-70YH7	R04	1	P.W.B (LED)
13	PMRAS-80YH5	003	1	FRONT COVER ASSY
14	PMRAS-80YH5	002	1	FRONT PANEL
15	PMRAS-10C7M	008	3	САР
16	PMRAS-72CHA3	009	1	FILTER (R)
17	PMRAS-70YH7	R02	1	REMOTE CONTROL ASSY
18	PMRAS-10C3M	003	1	REMOTE CONTROL SUPPORT
19	PMRAS-72CHA3	008	1	FILTER (L)
20	PMRAS-72CHA3	R22	1	THERMISTOR
21	PMRAS-70YHA1	006	1	S-COVER R
22	PMRAS-70YH7	R01	1	P.W.B (MAIN)
23	SVP-2WDS62329A		1	SE-COVER
24	PMRAS-72CHA3	015	1	P.W.B (RECEIVER)
25	PMRAS-72CHA3	024	1	FAN COVER
26	PMRAS-72CHA3	018	1	PIPE SUPPORT

PARTS LIST AND DIAGRAM

OUTDOOR UNIT MODEL : RAC-70YH7A

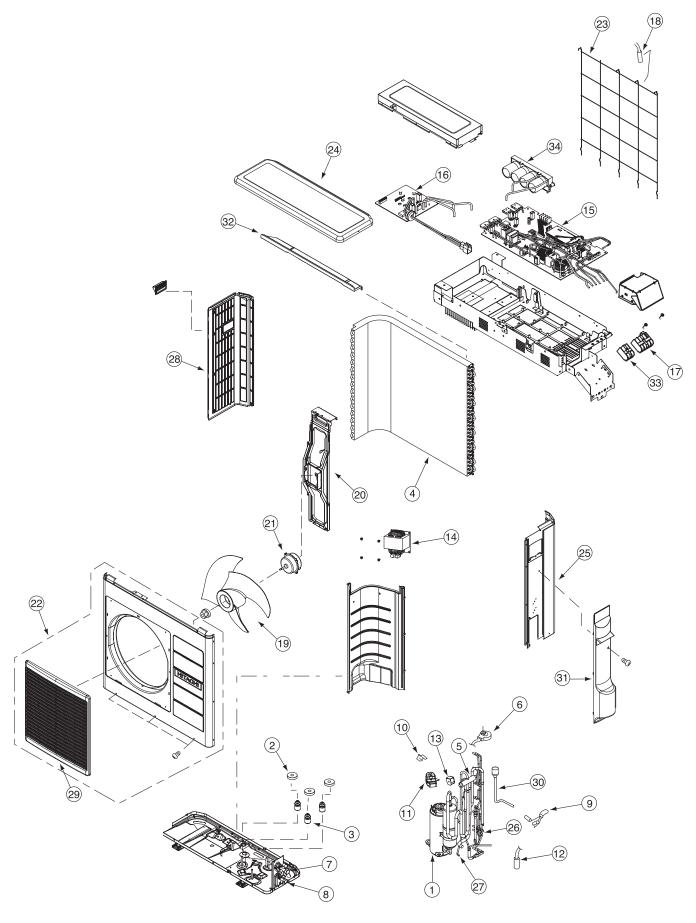

MODEL RAC-70YH7A

NO.	PART NO.		Q'TY / UNIT	PARTS NAME
1	PMRAC-60YH7	S01	1	COMPRESSOR
2	KPNT1	001	6	PUSH NUT
3	RAC-2226HV	805	3	COMPRESSOR RUBBER
4	PMRAC-70YHA	S03	1	CONDENSER
5	PMRAC-70YHA1	999	1	REVERSING VALVE
6	PMRAC-25NH4	S03	1	ELECTRICAL EXPANSION COIL
7	PMRAC-80YHA	905	1	VALVE (5S)
8	PMRAC-50NH4	S03	1	VALVE (2S)
9	PMRAM-72Q8	S03	1	THERMISTOR (OH)
10	PMRAC-25NH4	S09	1	OVERHEAT THERMISTOR SUPPORT
11	PMRAC-X13CX	906	1	OVERLOAD RELAY COVER
12	PMRAC-50YHA2	S07	1	THERMISTOR (DEFROST)
13	PMRAC-50YHA2	S09	1	COIL (REVERSING VALVE)
14	PMRAC-50YHA2	S04	1	REACTOR
15	PMRAC-70YH7A	S01	1	P.W.B (MAIN)
16	PMRAC-50YH7A	S02	1	P.W.B (IPM)
17	PMRAS-25NH4	S13	1	TERMINAL BOARD (4P)
18	PMRAM-72Q8	S03	1	THERMISTOR (OUTSIDE TEMPERATURE)
19	PMRAC-70YHA	907	1	PROPELLER FAN
20	PMRAC-70YHA	S12	1	SUPPORT (FAN MOTOR)
21	PMRAC-70YHA2	S05	1	FAN MOTOR
22	PMRAC-70YHA	S01	1	CABINET
23	PMRAC-70YHA	S06	1	NET
24	PMRAC-24CP5	905	1	TOP COVER
25	PMRAC-70YHA	S09	1	SIDE PLATE-R
26	PMRAC-70YHA2	S04	1	STRAINER (COND)
27	PMRAC-70YHA	910	1	STRAINER (PIPE)
28	PMRAC-70YHA	908	1	SIDE PLATE-L
29	PMRAC-70YHA	S05	1	GRILL
30	PMRAC-80YHA	906	1	EXPANSION VALVE
31	PMRAC-70YHA	915	1	SV-COVER
32	PMRAC-70YHA	916	1	NET COVER
33	PMRAC-63CA1	S02	1	TERMINAL BOARD (2P)
34	PMRAC-70YH7A	S02	1	P.W.B (CAPA-BOARD)

HITACHI

RAS-70YH7 / RAC-70YH7A

PM NO. 0509E

Printed in Malaysia