

Euro-Line®

TECHNICAL & SERVICE MANUAL

AWR508HL - AER507SH

AWR509HL - AER509SH

AWR512HL - AER512SH

SPLIT SYSTEM AIR CONDITIONER

Important!

Please Read Before Starting

This air conditioning system meets strict safety and operating standards. As the installer or service person, it is an important part of your job to install or service the system so it operates safely and efficiently.

For safe installation and trouble-free operation, you must:

- Carefully read this instruction booklet before beginning.
- Follow each installation or repair step exactly as shown.
- Observe all local, state, and national electrical codes.
- Pay close attention to all warning and caution notices given in this manual.



WARNING

This symbol refers to a hazard or unsafe practice which can result in severe personal injury or death.



CAUTION

This symbol refers to a hazard or unsafe practice which can result in personal injury or product or property damage.

If Necessary, Get Help

These instructions are all you need for most installation sites and maintenance conditions. If you require help for a special problem, contact our sales/service outlet or your certified dealer for additional instructions.

In Case of Improper Installation

The manufacturer shall in no way be responsible for improper installation or maintenance service, including failure to follow the instructions in this document.

Special Precautions

WARNING

When Wiring



ELECTRICAL SHOCK CAN CAUSE SEVERE PERSONAL INJURY OR DEATH. ONLY A QUALIFIED, EXPERIENCED ELECTRICIAN SHOULD ATTEMPT TO WIRE THIS SYSTEM.

- Do not supply power to the unit until all wiring and tubing are completed or reconnected and checked.
- Highly dangerous electrical voltages are used in this system. Carefully refer to the wiring diagram and these instructions when wiring. Improper connections and inadequate grounding can cause accidental injury or death.
- Ground the unit following local electrical codes.
- Connect all wiring tightly. Loose wiring may cause overheating at connection points and a possible fire hazard.

When Transporting

Be careful when picking up and moving the indoor and outdoor units. Get a partner to help, and bend your knees when lifting to reduce strain on your back. Sharp edges or thin aluminum fins on the air conditioner can cut your fingers.

When Installing...

...In a Ceiling or Wall

Make sure the ceiling/wall is strong enough to hold the unit's weight. It may be necessary to construct a strong wood or metal frame to provide added support.

...In a Room

Properly insulate any tubing run inside a room to prevent "sweating" that can cause dripping and water damage to walls and floors.

...In Moist or Uneven Locations

Use a raised concrete pad or concrete blocks to provide a solid, level foundation for the outdoor unit. This prevents water damage and abnormal vibration.

...In an Area with High Winds

Securely anchor the outdoor unit down with bolts and a metal frame. Provide a suitable air baffle.

...In a Snowy Area (for Heat Pump-type Systems)

Install the outdoor unit on a raised platform that is higher than drifting snow. Provide snow vents.

When Connecting Refrigerant Tubing

- Use the flare method for connecting tubing.
- Apply refrigerant lubricant to the matching surfaces of the flare and union tubes before connecting them, then tighten the nut with a torque wrench for a leak-free connection.
- Check carefully for leaks before starting the test run.

When Servicing

- Turn the power off at the main power box (mains) before opening the unit to check or repair electrical parts and wiring.
- Keep your fingers and clothing away from any moving parts.
- Clean up the site after you finish, remembering to check that no metal scraps or bits of wiring have been left inside the unit being serviced.

Others



CAUTION

- Ventilate any enclosed areas when installing or testing the refrigeration system. Escaped refrigerant gas, on contact with fire or heat, can produce dangerously toxic gas.
- Confirm upon completing installation that no refrigerant gas is leaking. If escaped gas comes in contact with a stove, gas water heater, electric room heater or other heat source, it can produce dangerously toxic gas.

Table of Contents

	Page
1. OPERATING RANGE	1
2. SPECIFICATIONS	
2-1. Unit Specifications	2
2-2. Major Component Specifications	5
2-3. Other Component Specifications	11
3. DIMENSIONAL DATA	12
4. REFRIGERANT FLOW DIAGRAM	15
5. PERFORMANCE DATA	
5-1. Performance charts	17
5-2. Air Throw Distance Chart	20
5-3. Cooling Capacity	23
5-4. Heating Capacity	26
6. ELECTRICAL DATA	
6-1. Electrical Characteristics	27
6-2. Electric Wiring Diagrams	30
7. FUNCTION	
7-1. Room Temperature Control	33
7-2. Dry Operation	35
7-3. Automatic Switching between Cooling and Heating	35
7-4. Freeze Prevention	36
7-5. Overload Prevention	37
7-6. Cold Draft Prevention	38
7-7. Defrosting Operation	39
8. TROUBLESHOOTING	
8-1. Check before and after troubleshooting	41
8-2. Air conditioner does not operate	42
8-3. Some part of air conditioner does not operate	46
8-4. Air conditioner operates, but abnormalities are observed	48
8-5. If a sensor is defective	50
9. REFRIGERANT R407C: SPECIAL PRECAUTIONS WHEN SERVICING THE UNIT	
9-1. Characteristics of new refrigerant R407C	51
9-2. Checklist before serving	51
9-3. Tools specifically for R407C	52
9-4. For tubing installation procedures	52
9-5. In case of compressor malfunction	53
9-6. In case refrigerant is leaking	55
9-7. Charging additional refrigerant	57
9-8. Retro-fitting existing systems	57
10. CHECKING ELECTRICAL COMPONENTS	
10-1. Measurement of Insulation Resistance	58
10-2. Checking Continuity of Fuse on PCB Ass'y	59
10-3. Checking Motor Capacitor	59

1. OPERATING RANGE

	Temperature	Indoor Air Intake Temp.	Outdoor Air Intake Temp.
Cooling	Maximum	32°C D.B. / 23°C W.B.	43°C D.B.
	Minimum	19°C D.B. / 14°C W.B.	19°C D.B.
Heating	Maximum	27°C D.B.	24°C D.B. / 18°C W.B.
	Minimum	16°C D.B.	- 8°C D.B. / - 9°C W.B.

2. SPECIFICATIONS

2-1. Unit Specifications

Indoor Unit **AWR508HL**

Outdoor Unit **AER507SH**

Power Source		220–240V ~ 50Hz	
Voltage rating		230 V	
Performance		Cooling	Heating
Capacity	kW	2.20	2.55
	BTU/h	7,500	8,700
Air circulation (High)	m ³ /h	430	
Moisture removal (High)	Liters/h	0.9	—
Electrical Rating		Cooling	Heating
Available voltage range	V	198 ~ 264	
Running amperes	A	3.7	3.6
Power input	W	820	790
Power factor	%	96	95
C.O.P.	W/W	2.7	3.2
Compressor locked rotor amperes	A	19	19
Features			
Controls / Temperature control		Microprocessor / I.C. thermostat	
Control unit		Wireless remote control unit	
Timer		ON/OFF 24 hours & Daily program, 1-hour OFF	
Fan speeds	Indoor / Outdoor	3 and Auto / 1(Hi)	
Airflow direction (Indoor)	Horizontal	Manual	
	Vertical	Auto	
Air filter		Washable, Anti-Mold	
Compressor		Rotary (Hermetic)	
Refrigerant / Amount charged at shipment		g R407C / 840	
Refrigerant control		Capillary tube	
Operation sound	Indoor : Hi / Me / Lo dB-A	37 / 31 / 29	
	Outdoor : Hi dB-A	43	
Refrigerant tubing connections		Flare type	
Max. allowable tubing length at shipment		m 7.5	
Refrigerant tube diameter	Narrow tube mm (in.)	6.35(1/4)	
	Wide tube mm (in.)	9.52(3/8)	
Refrigerant tube kit / Accessories		Optional / Air Clean Filter	
Dimensions & Weight		Indoor Unit	Outdoor Unit
Unit dimensions	Height	mm 270	525
	Width	mm 805	790
	Depth	mm 177	220
Package dimensions	Height	mm 243	585
	Width	mm 855	865
	Depth	mm 332	320
Weight	Net	kg 8.0	33.0
	Shipping	kg 10.0	36.0
Shipping volume	m ³	0.07	0.16

DATA SUBJECT TO CHANGE WITHOUT NOTICE.

Remarks:

Rating conditions are:

Cooling : Indoor air temperature 27°C D.B. / 19°C W.B.
 Outdoor air temperature 35°C D.B. / 24°C W.B.

Heating : Indoor air temperature 20°C D.B.
 Outdoor air temperature 7°C D.B. / 6°C W.B.

Indoor Unit **AWR509HL**
Outdoor Unit **AER509SH**

Power Source	220–240V ~ 50Hz
---------------------	-----------------

Voltage rating	220/230/240 V
-----------------------	---------------

Performance		Cooling			Heating		
Capacity	kW	2.65	/	2.65	/	2.70	3.20 / 3.20 / 3.25
	BTU/h	9,000	/	9,000	/	9,200	10,900 / 10,900 / 11,100
Air circulation (High)	m ³ /h	470					
Moisture removal (High)	Liters/h	1.1			—		

Electrical Rating		Cooling			Heating		
Available voltage range	V	198 ~ 264					
Running amperes	A	4.6	/	4.5	/	4.5	4.2 / 4.2 / 4.2
Power input	W	990	/	1,010	/	1,030	910 / 930 / 960
Power factor	%	98	/	98	/	95	98 / 96 / 95
C.O.P.	W/W	2.7	/	2.6	/	2.6	3.5 / 3.4 / 3.4
Compressor locked rotor amperes	A	22	/	23	/	24	22 / 23 / 24

Features			
Controls / Temperature control		Microprocessor / I.C. thermostat	
Control unit		Wireless remote control unit	
Timer		ON/OFF 24 hours & Daily program, 1-hour OFF	
Fan speeds	Indoor / Outdoor	3 and Auto / 1(Hi)	
Airflow direction (Indoor)	Horizontal	Manual	
	Vertical	Auto	
Air filter		Washable, Anti-Mold	
Compressor		Rotary (Hermetic)	
Refrigerant / Amount charged at shipment	g	R407C / 850	
Refrigerant control		Capillary tube	
Operation sound	Indoor : Hi / Me / Lo	dB-A	38 / 33 / 31
	Outdoor : Hi	dB-A	46
Refrigerant tubing connections		Flare type	
Max. allowable tubing length at shipment	m	7.5	
Refrigerant tube diameter	Narrow tube	mm (in.)	6.35(1/4)
	Wide tube	mm (in.)	9.52(3/8)
Refrigerant tube kit / Accessories		Optional / Air Clean Filter	

Dimensions & Weight				Indoor Unit	Outdoor Unit
Unit dimensions	Height	mm		270	525
	Width	mm		805	790
	Depth	mm		177	220
Package dimensions	Height	mm		243	585
	Width	mm		855	865
	Depth	mm		332	320
Weight	Net	kg		8.0	34.0
	Shipping	kg		10.0	37.0
Shipping volume		m ³		0.07	0.16

Remarks:

Rating conditions are:

- Cooling : Indoor air temperature 27°C D.B. / 19°C W.B.
Outdoor air temperature 35°C D.B. / 24°C W.B.
- Heating : Indoor air temperature 20°C D.B.
Outdoor air temperature 7°C D.B. / 6°C W.B.

DATA SUBJECT TO CHANGE WITHOUT NOTICE.

Indoor Unit **AWR512HL**
Outdoor Unit **AER512SH**

Power Source	220-240V ~ 50Hz
---------------------	-----------------

Voltage rating	220/230/240 V
-----------------------	---------------

Performance		Cooling			Heating		
Capacity	kW	3.30	/	3.35	/	3.35	
	BTU/h	11,300	/	11,400	/	11,400	
Air circulation (High)	m ³ /h	490					
Moisture removal (High)	Liters/h	1.5			—		

Electrical Rating		Cooling			Heating		
Available voltage range	V	198 ~ 264					
Running amperes	A	6.2	/	6.2	/	6.3	
Power input	W	1,310	/	1,330	/	1,370	
Power factor	%	96	/	93	/	91	
C.O.P.	W/W	2.5	/	2.5	/	2.4	
Compressor locked rotor amperes	A	32	/	33	/	35	

Features			
Controls / Temperature control		Microprocessor / I.C. thermostat	
Control unit		Wireless remote control unit	
Timer		ON/OFF 24 hours & Daily program, 1-hour OFF	
Fan speeds	Indoor / Outdoor	3 and Auto / 1(Hi)	
Airflow direction (Indoor)	Horizontal	Manual	
	Vertical	Auto	
Air filter		Washable, Anti-Mold	
Compressor		Rotary (Hermetic)	
Refrigerant / Amount charged at shipment	g	R407C / 1,230	
Refrigerant control		Capillary tube	
Operation sound	Indoor : Hi / Me / Lo	dB-A	
	Outdoor : Hi	dB-A	
Refrigerant tubing connections		Flare type	
Max. allowable tubing length at shipment	m	7.5	
Refrigerant tube diameter	Narrow tube	mm (in.)	
	Wide tube	mm (in.)	
Refrigerant tube kit / Accessories		Optional / Air Clean Filter	

Dimensions & Weight				Indoor Unit	Outdoor Unit
Unit dimensions	Height	mm		270	530
	Width	mm		805	750
	Depth	mm		177	270
Package dimensions	Height	mm		243	593
	Width	mm		855	895
	Depth	mm		332	348
Weight	Net	kg		8.0	40.0
	Shipping	kg		10.0	43.0
Shipping volume		m ³		0.07	0.18

Remarks:

Rating conditions are:

- Cooling : Indoor air temperature 27°C D.B. / 19°C W.B.
Outdoor air temperature 35°C D.B. / 24°C W.B.
- Heating : Indoor air temperature 20°C D.B.
Outdoor air temperature 7°C D.B. / 6°C W.B.

DATA SUBJECT TO CHANGE WITHOUT NOTICE.

2-2. Major Component Specifications

2-2-1. Indoor Unit

Indoor Unit **AWR508HL**

Controller PCB		
Part No.		POW-K98EH(A), POW-K8EH(B)
Controls		Microprocessor
Control circuit fuse		250 V 3.15 A
Remote Control Unit		RCS-8HPS3E
Fan & Fan Motor		
Type		Cross-flow
Q'ty ... Dia. and length	mm	1 ... ø95 / L617
Fan motor model ... Q'ty		KFV4Q-11H5P ... 1
No. of poles ... rpm (230 V, High)		4 ... 1,130
Nominal output	W	10
Coil resistance (Ambient temp. 20°C)	Ω	BRN-WHT: 561.8 VLT-WHT: 197.4 VLT-ORG: 63.4 YEL-ORG: 155.7 YEL-PNK: 115.9
Safety devices	Type	Internal fuse
	Operating temp.	145±2
	Open	°C
	Close	—
Run capacitor	μF	0.6
	VAC	440
Flap Motor		
Type		Stepping motor
Model		MP24GA1
Rating		DC 12 V
Coil resistance (Ambient temp. 25°C)	W	WHT – BLU (respectively 4 wires) : 380 ± 7%
Heat Exch. Coil		
Coil		Aluminum plate fin / Copper tube
Rows		2
Fin pitch	mm	1.4
Face area	m ²	0.130

DATA SUBJECT TO CHANGE WITHOUT NOTICE.

Indoor Unit **AWR509HL**

Controller PCB		
Part No.		POW-K98EH(A), POW-K8EH(B)
Controls		Microprocessor
Control circuit fuse		250 V 3.15 A
Remote Control Unit		RCS-8HPS3E
Fan & Fan Motor		
Type		Cross-flow
Q'ty ... Dia. and length	mm	1 ... ø95 / L617
Fan motor model ... Q'ty		KFV4Q-11H5P-S ... 1
No. of poles ... rpm (230 V, High)		4 ... 1,190
Nominal output	W	10
Coil resistance (Ambient temp. 20°C)	Ω	BRN-WHT : 561.8 VLT-WHT : 197.4 VLT-ORG : 63.4 YEL-ORG : 155.7 YEL-PNK : 115.9
Safety devices	Type	Internal fuse
	Operating temp.	Open °C Close —
Run capacitor	μF	0.8
	VAC	440
Flap Motor		
Type		Stepping motor
Model		MP24GA1
Rating		DC 12 V
Coil resistance (Ambient temp. 25°C)	W	WHT – BLU (respectively 4 wires) : 380 ± 7%
Heat Exch. Coil		
Coil		Aluminum plate fin / Copper tube
Rows		2
Fin pitch	mm	1.4
Face area	m ²	0.130

DATA SUBJECT TO CHANGE WITHOUT NOTICE.

Indoor Unit **AWR512HL**

Controller PCB		
Part No.		POW-K78EH(A), POW-K8EH(B)
Controls		Microprocessor
Control circuit fuse		250 V 3.15 A
Remote Control Unit		RCS-8HPS3E
Fan & Fan Motor		
Type		Cross-flow
Q'ty ... Dia. and length	mm	1 ... ø95 / L617
Fan motor model ... Q'ty		KFV4Q-11H5P-S ... 1
No. of poles ... rpm (230 V, High)		4 ... 1,230
Nominal output	W	10
Coil resistance (Ambient temp. 20°C)	Ω	BRN-WHT : 561.8 VLT-WHT : 197.4 VLT-ORG : 63.4 YEL-ORG : 155.7 YEL-PNK : 115.9
Safety devices	Type	Internal fuse
	Operating temp.	145±2
	Open	°C
	Close	—
Run capacitor	μF	1.0
	VAC	440
Flap Motor		
Type		Stepping motor
Model		MP24GA1
Rating		DC 12 V
Coil resistance (Ambient temp. 25°C)	W	WHT – BLU (respectively 4 wires) : 380 ± 7%
Heat Exch. Coil		
Coil		Aluminum plate fin / Copper tube
Rows		2
Fin pitch	mm	1.4
Face area	m ²	0.130

DATA SUBJECT TO CHANGE WITHOUT NOTICE.

2-2-2. Outdoor Unit

Outdoor Unit **AER507SH**

Controller PCB		POW-C96GH	
Compressor			
Type	Rotary (Hermetic)		
Compressor model	C-RN75H5B 80225235		
Nominal output	W	750	
Compressor oil ... Amount	cc	FV68S ... 500	
Coil resistance (Ambient temp. 25°C)	Ω	C-R : 3.38 C-S : 7.49	
Safety devices	Type	External(OLR A)	External(OLR T)
	Overload relay	MST38APU-9201	CS-7C115
	Operating temp.	Open °C	135±5
		Close °C	115±3
	Operating amp.(Ambient temp. 25°C)	Trip in 6 to 16 sec. at 14A	
			95±5
Run capacitor	μF	17.5	
	VAC	400	
Crank case heater	—		
Fan & Fan Motor			
Type	Propeller		
Q'ty ... Dia.	1 ... ø400		
Fan motor model ... Q'ty	K35610-M01388 ... 1		
No. of poles ... rpm (230 V, High)	6 ... 680		
Nominal output	W	20	
Coil resistance (Ambient temp. 20°C)	Ω	BRN-WHT: 358±7% PNK-WHT: 510±7% — —	
Safety devices	Type	Internal protector	
	Operating temp.	Open °C	150±10
		Close °C	Automatic reclosing
Run capacitor	μF	1.5	
	VAC	440	
Heat Exch. Coil			
Coil	Aluminum plate fin / Copper tube		
Rows	1		
Fin pitch	mm	1.4	
Face area	m ²	0.377	
External Finish		Acrylic baked-on enamel finish	

DATA SUBJECT TO CHANGE WITHOUT NOTICE.

Outdoor Unit **AER509SH**

Controller PCB		POW-C96GH		
Compressor				
Type		Rotary (Hermetic)		
Compressor model		C-RN90H5A 80228335		
Nominal output	W	900		
Compressor oil ... Amount	cc	FV68S ... 500		
Coil resistance (Ambient temp. 25°C)	Ω	C-R : 3.07 C-S : 7.97		
Safety devices	Type	External(OLR A)	External(OLR T)	
	Overload relay	MRA99057-9201	CS-7C115	
	Operating temp.	Open °C	145±5	115±3
		Close °C	69±11	95±5
Operating amp.(Ambient temp. 25°C)	Trip in 6 to 16 sec. at 18A		—	
Run capacitor	μF	22.5		
	VAC	400		
Crank case heater	—			
Fan & Fan Motor				
Type		Propeller		
Q'ty ... Dia.		1 ... ø400		
Fan motor model ... Q'ty		K35610-M01388 ... 1		
No. of poles ... rpm (230 V, High)		6 ... 680		
Nominal output	W	20		
Coil resistance (Ambient temp. 20°C)	Ω	BRN-WHT : 358±7% PNK-WHT : 510±7% — —		
Safety devices	Type	Internal protector		
	Operating temp.	Open °C	150±10	
		Close °C	Automatic reclosing	
Run capacitor	μF	1.5		
	VAC	440		
Heat Exch. Coil				
Coil		Aluminum plate fin / Copper tube		
Rows		1		
Fin pitch	mm	1.4		
Face area	m²	0.377		
External Finish		Acrylic baked-on enamel finish		

DATA SUBJECT TO CHANGE WITHOUT NOTICE.

Outdoor Unit **AER512SH**

Controller PCB		POW-C96GH	
Compressor			
Type		Rotary (Hermetic)	
Compressor model		C-RN110H5B 80235645	
Nominal output	W	1,100	
Compressor oil ... Amount	cc	FV68S ... 550	
Coil resistance (Ambient temp. 25°C)	Ω	C-R : 1.962 C-S : 5.38	
Safety devices	Type	External(OLR A)	External(OLR T)
	Overload relay	MRA98596-9201	CS-7C115
Operating temp.	Open	145±5	115±3
	Close	69±11	95±5
Operating amp.(Ambient temp. 25°C)		Trip in 6 to 16 sec. at 21A	
Run capacitor	μF	25.0	
	VAC	400	
Crank case heater		—	
Fan & Fan Motor			
Type		Propeller	
Q'ty ... Dia.		1 ... ø400	
Fan motor model ... Q'ty		K35610-M01402 ... 1	
No. of poles ... rpm (230 V, High)		6 ... 760	
Nominal output	W	20	
Coil resistance (Ambient temp. 20°C)	Ω	BRN-WHT : 256±7% YEL-WHT : 227±7% PNK-YEL : 103±7%	
Safety devices	Type	Internal protector	
Operating temp.	Open	150±10	
	Close	Automatic reclosing	
Run capacitor	μF	2.0	
	VAC	440	
Heat Exch. Coil			
Coil		Aluminum plate fin / Copper tube	
Rows		2	
Fin pitch	mm	1.6	
Face area	m ²	0.301	
External Finish		Acrylic baked-on enamel finish	

DATA SUBJECT TO CHANGE WITHOUT NOTICE.

2-3. Other Component Specifications

Indoor Unit **AWR508HL - AWR509HL**
AWR512HL

Transformer (TR)		ATR-J105	
Rating	Primary	AC 230V, 50/60Hz	
	Secondary	19V, 0.526A	
	Capacity	10VA	
Coil resistance	Ω (at 21°C)	Primary (WHT – WHT):	205 \pm 10%
		Secondary (BRN – BRN):	2.0 \pm 10%
Thermal cut-off temp.		150°C	

Thermistor (Coil sensor)		DTN-TKS131B	
Resistance	k Ω	0°C	15.0 \pm 2%

Thermistor (Room sensor)		DTN-TKS134B	
Resistance	k Ω	25°C	5.0 \pm 3%

Outdoor Unit **AER507SH - AER509SH**
AER512SH

Power Relay (PR)		DFU24D1-F (M)	
Coil rating		DC 24V	
Coil resistance	Ω (at 20°C)	650 \pm 10%	
Contact rating		AC 250V, 20A	

Thermostat (Defrost thermo. 23D)		TRS02-12MSR	
Operating temp.	°C	ON	12 \pm 2
		Diff.	8 deg. below

4-way Valve (SC)		LB60012 (Coil), VH7100C (Valve)	
Coil rating		AC 220/240V, 50Hz, 6W	
Coil resistance	Ω (at 20°C)	1,740 \pm 7%	

<Only for 9,000BTU/h class models>

4-way Valve (Solenoid coil)		LB60012 (Coil), V26-110B (Valve)	
Coil rating		AC 220/240V, 50Hz, 6W	
Coil resistance (SC)	(at 20°C)	1,740 \pm 7%	





<Only for 12,000BTU/h class models>

PTC Thermistor (TH)		TDK 101YV	
Resistance	Ω (at 25°C)	100 \pm 20%	

<Only for 12,000BTU/h class models>

3. DIMENSIONAL DATA

Indoor Unit **AWR508HL - AWR509HL**
AWR512HL

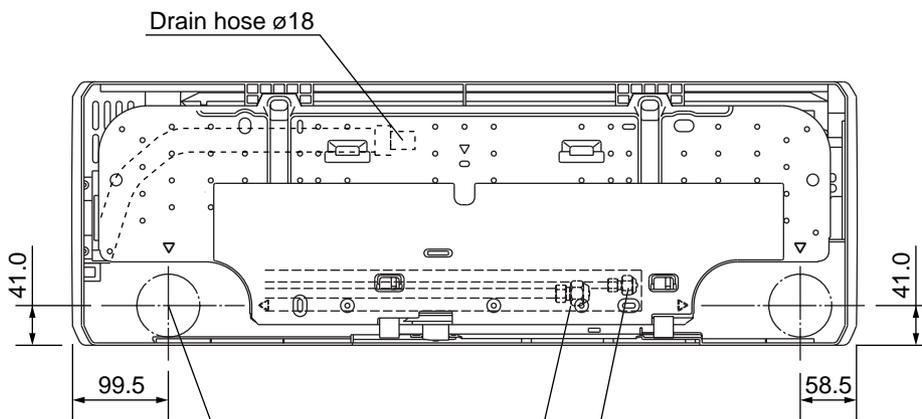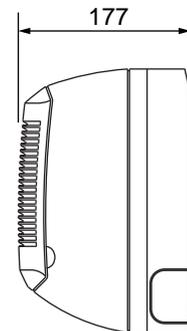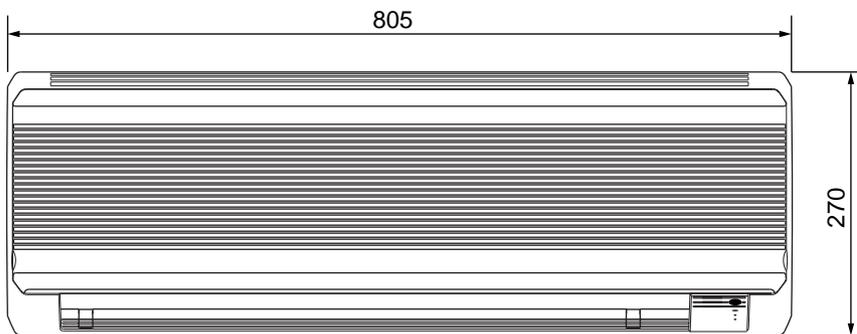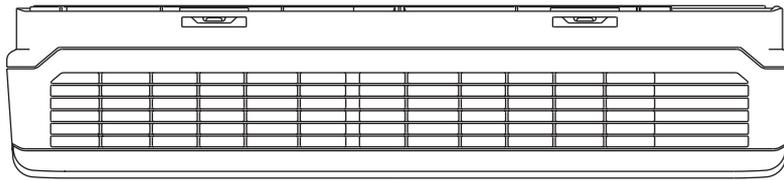

Drain hose $\varnothing 18$


Center of tubing hole (2 places)

Narrow tube $\varnothing 6.35$ (1/4")

Wide tube $\varnothing 9.52$ (3/8") - - - - AWR508-509


Wide tube $\varnothing 12.7$ (1/2") - - - - AWR512

Remote control unit

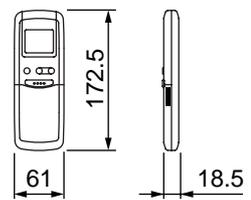


Unit : mm

Outdoor Unit **AER507SH - AER509SH**

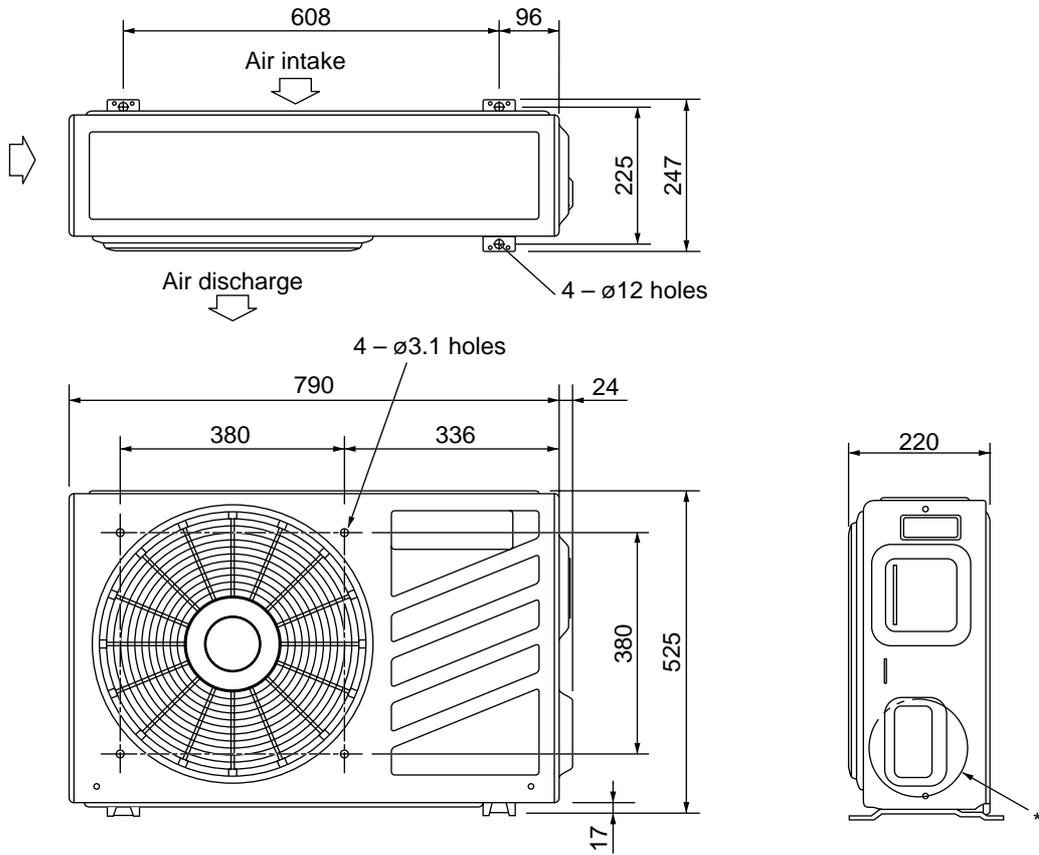



NOTE

<Location of Service Valve>
 Service valves are located behind the side panel.
 See the illustration below (*).

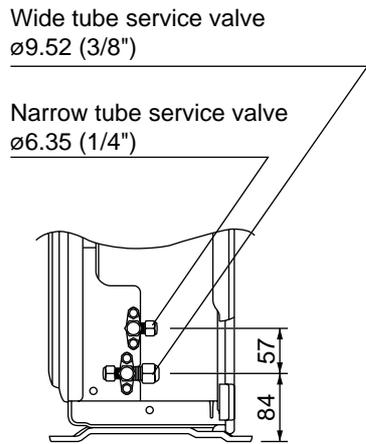


Unit : mm

Outdoor Unit **AER512SH**

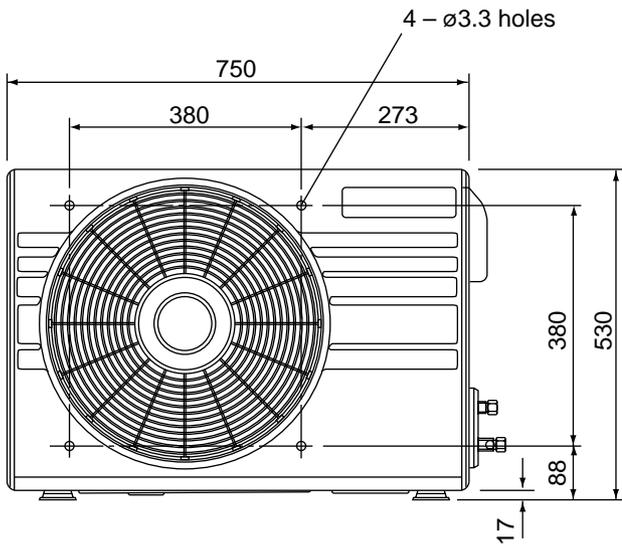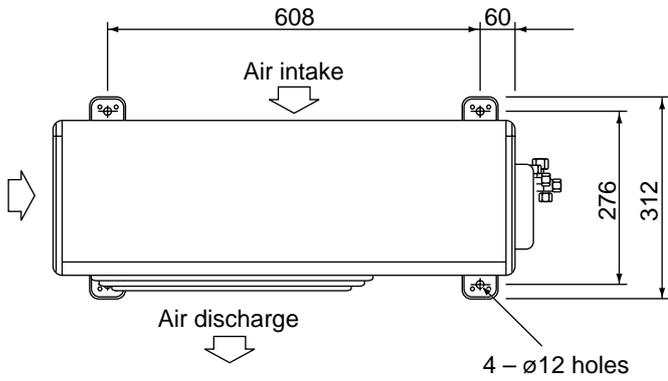

Wide tube service valve
 $\phi 12.7$ (1/2")
 Narrow tube service valve
 $\phi 6.35$ (1/4")

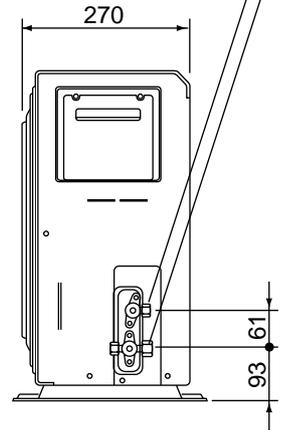


Unit : mm

4. REFRIGERANT FLOW DIAGRAM


Indoor Unit **AWR508HL - AWR509HL**

Outdoor Unit **AER507SH - AER509SH**

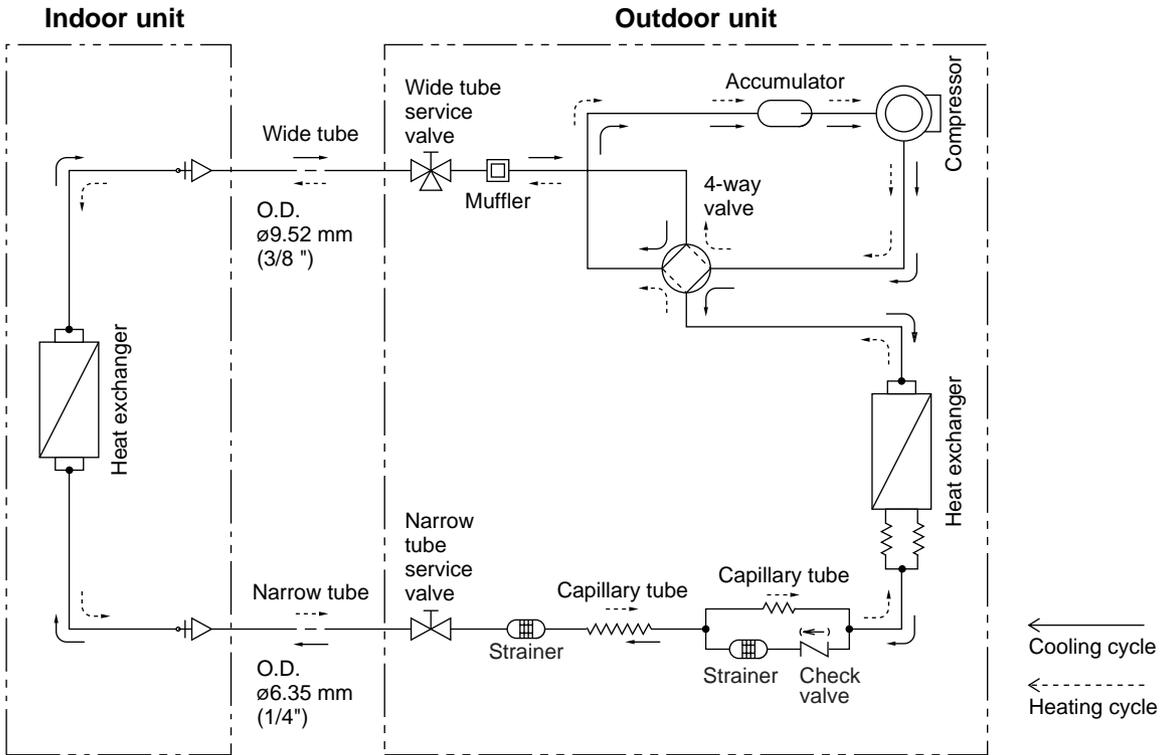

Indoor Unit **AWR512HL**

Outdoor Unit **AER512SH**

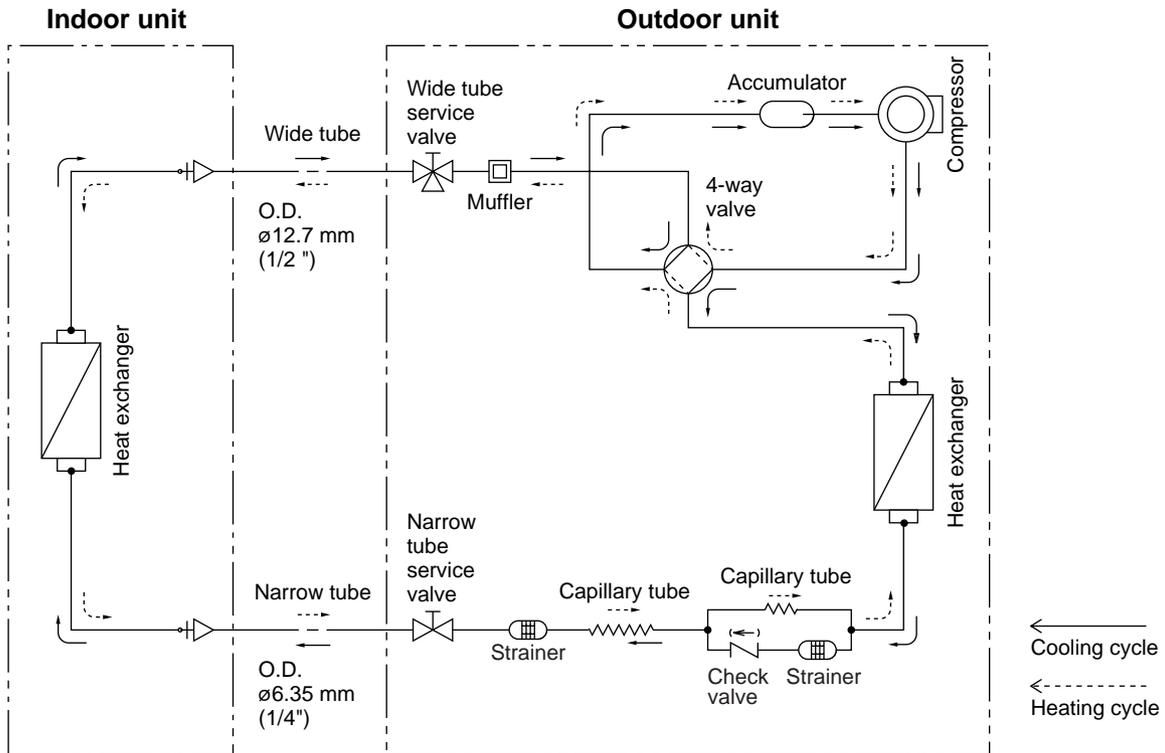

Insulation of Refrigerant Tubing


IMPORTANT

Because capillary tubing is used in the outdoor unit, both the wide and narrow tubes of this air conditioner become cold. To prevent heat loss and wet floors due to dripping of condensation, **both tubes must be well insulated** with a proper insulation material. The thickness of the insulation should be a min. 8 mm.



CAUTION

After a tube has been insulated, never try to bend it into a narrow curve because it can cause the tube to break or crack.

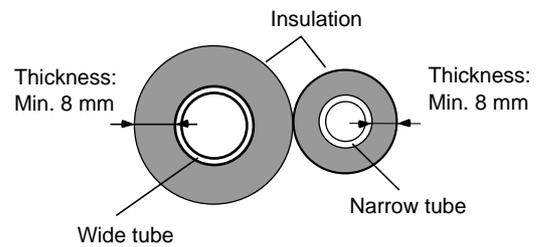


5. PERFORMANCE DATA




5-1. Performance charts

Indoor Unit **AWR508HL**
 Outdoor Unit **AER507SH**

■ Cooling Characteristics

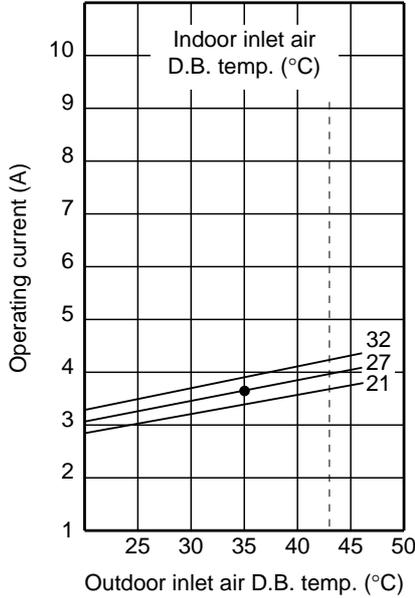

■ Heating Characteristics

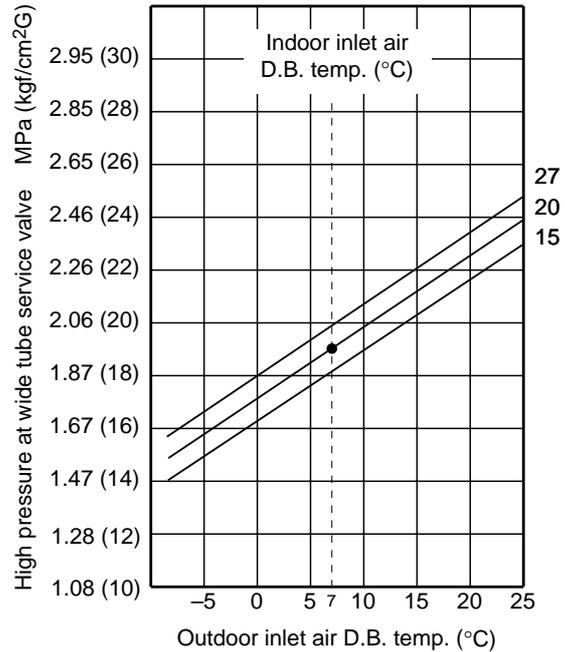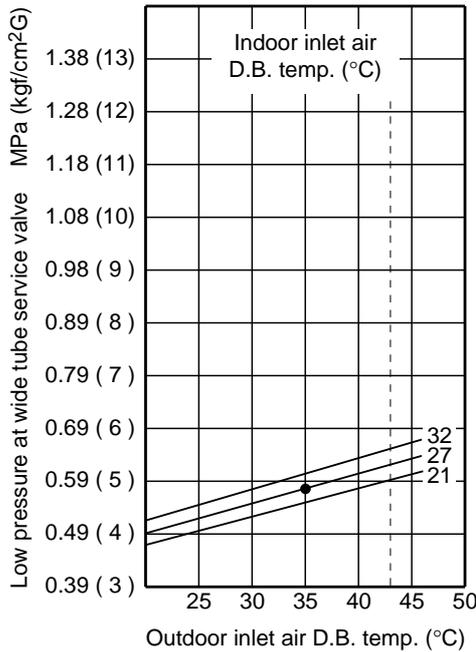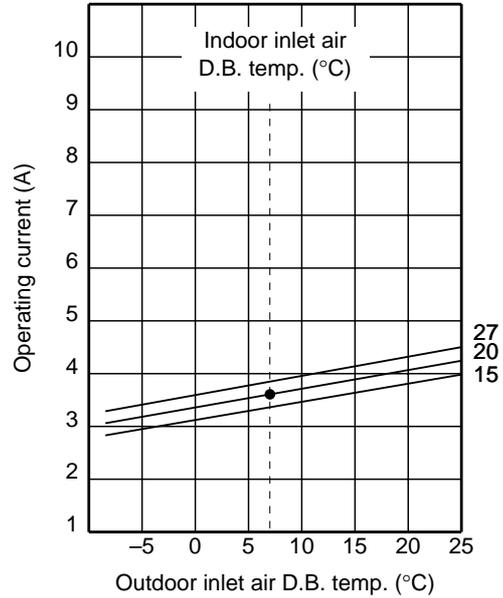

NOTE

Overload prevention operates to protect the air conditioner when outdoor ambient temperature becomes extremely high in heating mode. (Refer to "8-5 Overload prevention")

● Points of Rating condition

Black dots in above charts indicate the following rating conditions.


Cooling: Indoor air temperature 27°C D.B./19°C W.B.
 Outdoor air temperature 35°C D.B./24°C W.B.

Heating: Indoor air temperature 20°C D.B.
 Outdoor air temperature 7°C D.B./6°C W.B.




Indoor Unit
Outdoor Unit

AWR509HL
AER509SH

Cooling Characteristics

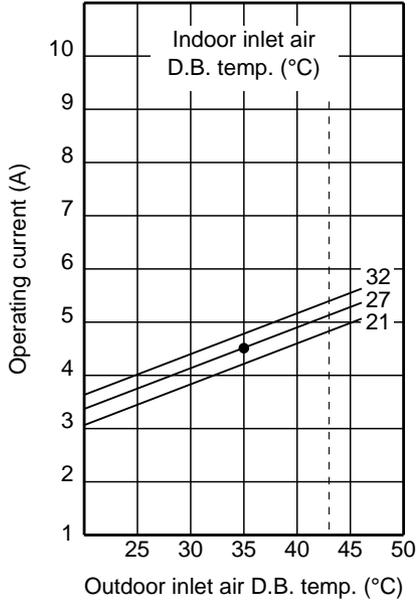

Heating Characteristics

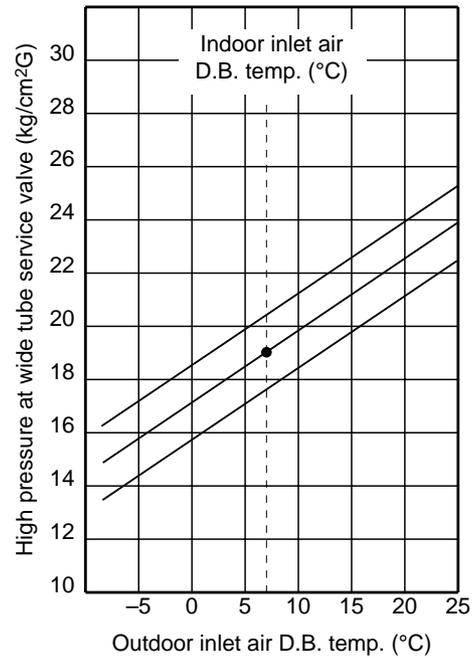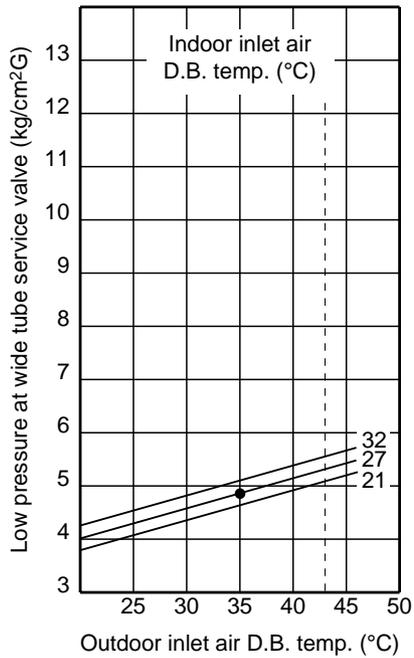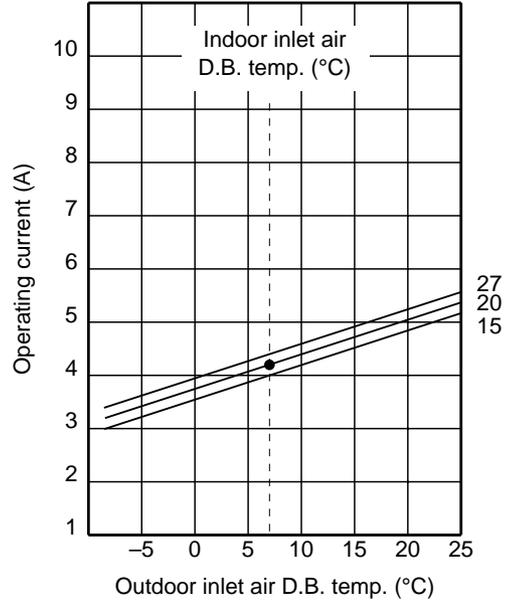

NOTE

Overload prevention operates to protect the air conditioner when outdoor ambient temperature reaches extremely high in heating mode. (Refer to "8-5 Overload prevention")

● Points of Rating condition

Black dots in above charts indicate the following rating conditions.


Cooling: Indoor air temperature 27°C D.B./19°C W.B.
Outdoor air temperature 35°C D.B./24°C W.B.

Heating: Indoor air temperature 20°C D.B.
Outdoor air temperature 7°C D.B./6°C W.B.




Indoor Unit
Outdoor Unit

AWR512HL
AER512SH

Cooling Characteristics

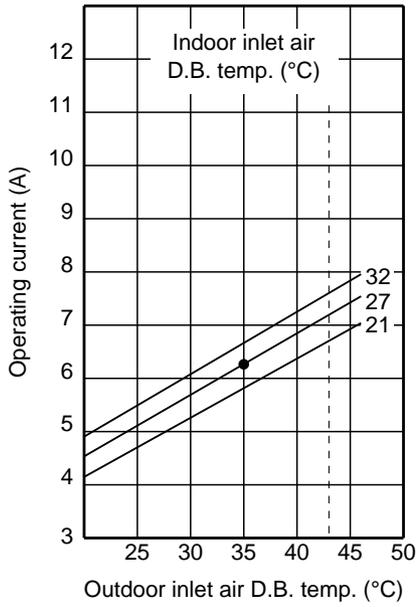

Heating Characteristics

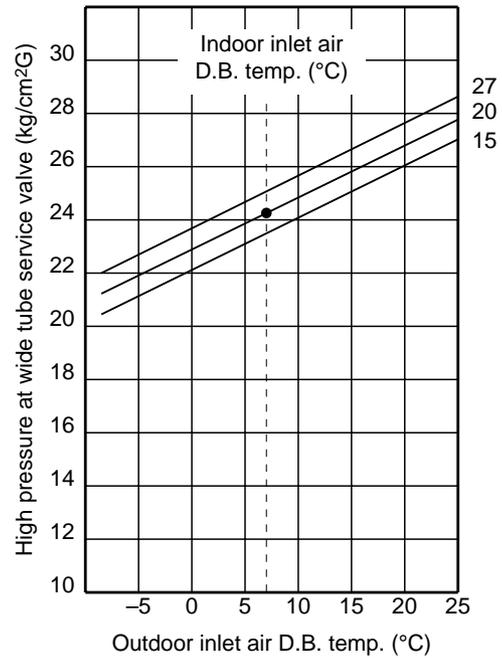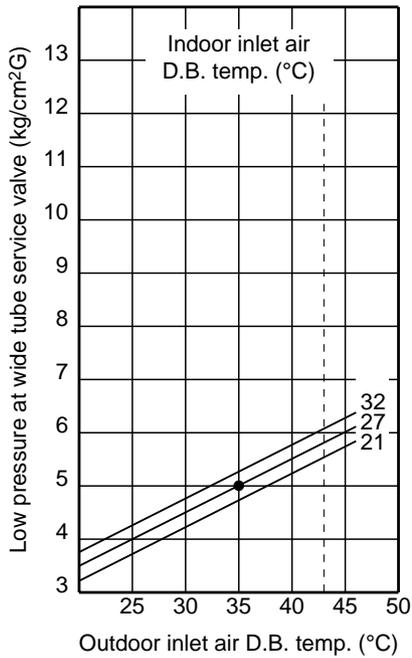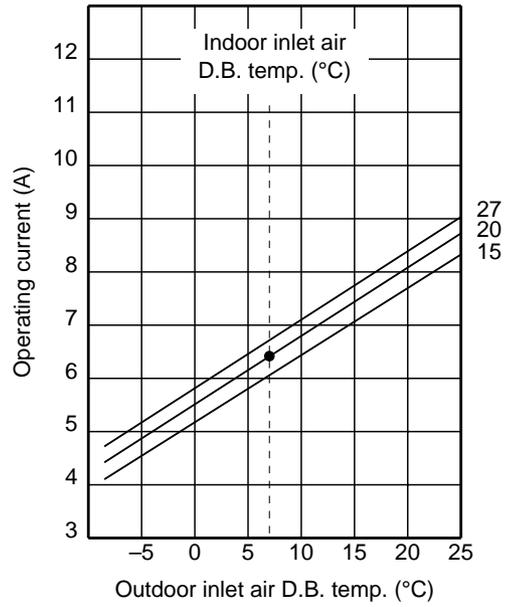

NOTE

Overload prevention operates to protect the air conditioner when outdoor ambient temperature reaches extremely high in heating mode. (Refer to "8-5 Overload prevention")

● Points of Rating condition

Black dots in above charts indicate the following rating conditions.

Cooling: Indoor air temperature 27°C D.B./19°C W.B.
Outdoor air temperature 35°C D.B./24°C W.B.


Heating: Indoor air temperature 20°C D.B.
Outdoor air temperature 7°C D.B./6°C W.B.

5-2. Air Throw Distance Chart

Indoor Unit AWR508HL


Cooling

Room air temp. : 27°C
 Fan speed : High

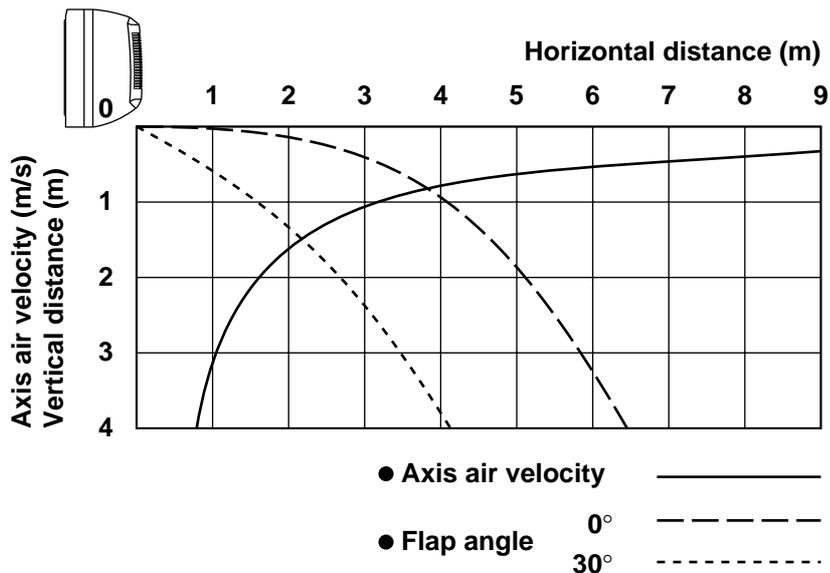


Heating

Room air temp. : 20°C
 Fan speed : High

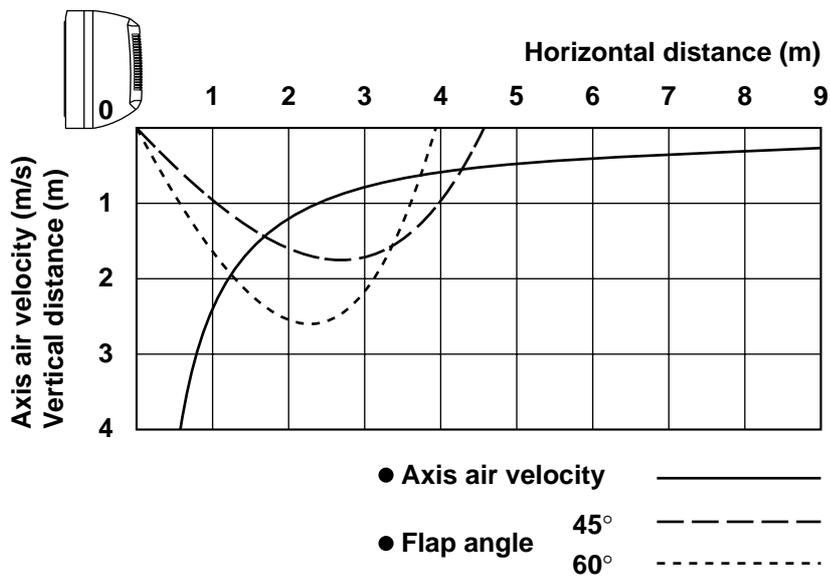


Cooling

Room air temp. : 27°C
 Fan speed : High

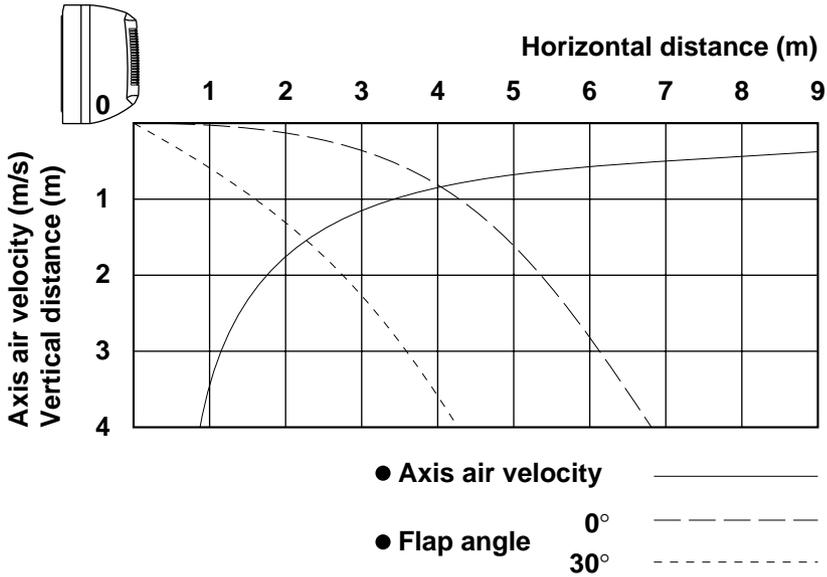


Heating

Room air temp. : 20°C
 Fan speed : High

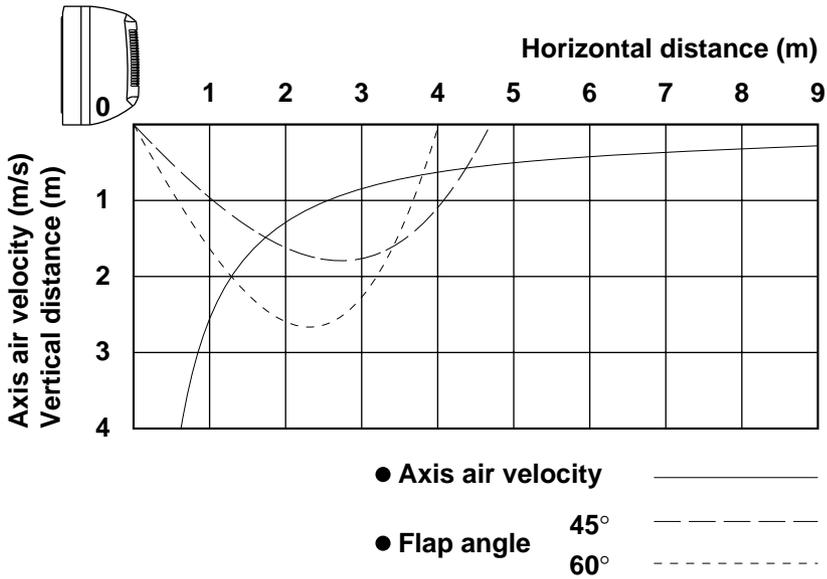


Cooling

Room air temp. : 27°C
 Fan speed : High

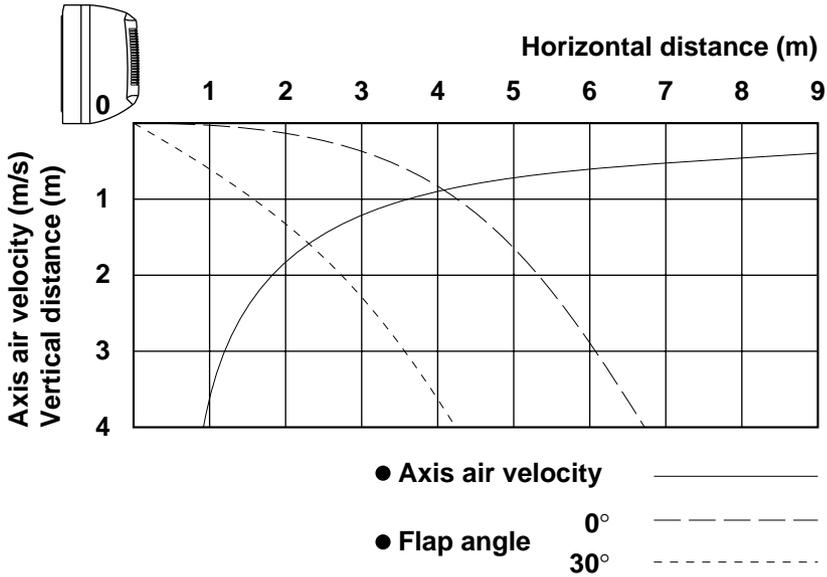

Heating

Room air temp. : 20°C
 Fan speed : High

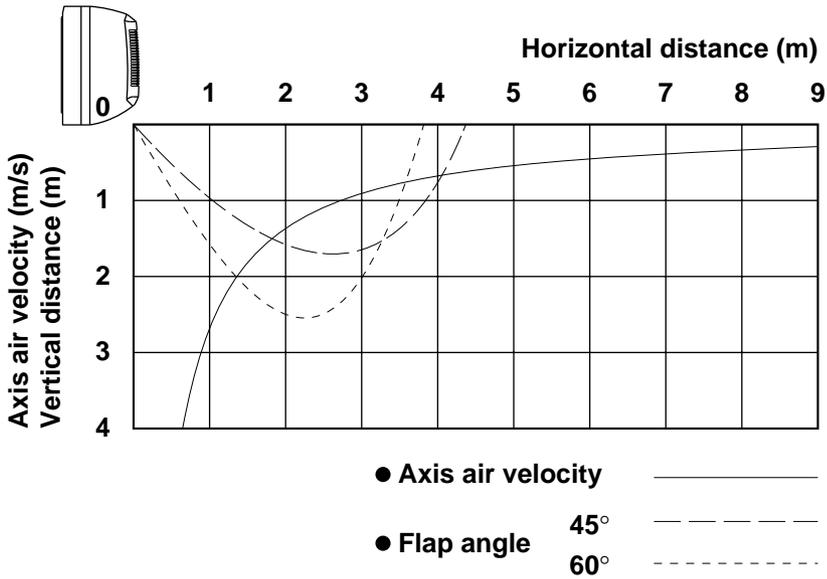

5-3. Cooling Capacity

Indoor Unit **AWR508HL**
 Outdoor Unit **AER507SH**

240V Single Phase 50Hz

EVAPORATOR		CONDENSER						
ENT. TEMP. °C		OUTDOOR AMBIENT TEMP. °C						
W.B.	D.B.		20	25	30	35	40	45
15		TC	2.22	2.12	2.02	1.93	1.81	1.67
		CM	0.56	0.61	0.65	0.70	0.77	0.86
	21	SHC	1.58	1.53	1.48	1.44	1.38	1.32
	23	SHC	1.79	1.75	1.70	1.65	1.60	1.53
	25	SHC	2.01	1.96	1.92	1.87	1.81	1.67
	27	SHC	2.22	2.12	2.02	1.93	1.81	1.67
	29	SHC	2.22	2.12	2.02	1.93	1.81	1.67
17		TC	2.38	2.27	2.17	2.07	1.94	1.79
		CM	0.58	0.62	0.67	0.72	0.80	0.88
	21	SHC	1.35	1.31	1.26	1.21	1.16	1.09
	23	SHC	1.57	1.52	1.48	1.43	1.38	1.31
	25	SHC	1.79	1.74	1.69	1.65	1.59	1.53
	27	SHC	2.00	1.96	1.91	1.86	1.81	1.74
	29	SHC	2.22	2.17	2.13	2.07	1.94	1.79
19		TC	2.53	2.42	2.31	# 2.20	2.07	1.90
		CM	0.59	0.64	0.69	0.74	0.82	0.90
	21	SHC	1.12	1.08	1.03	0.98	0.93	0.87
	23	SHC	1.34	1.29	1.25	1.20	1.15	1.08
	25	SHC	1.55	1.51	1.46	1.42	1.36	1.30
	27	SHC	1.77	1.72	1.68	1.63	1.58	1.51
	29	SHC	1.99	1.94	1.90	1.85	1.80	1.73
21		TC	2.68	2.57	2.45	2.33	2.19	2.02
		CM	0.61	0.66	0.71	0.76	0.84	0.92
	23	SHC	1.10	1.06	1.01	0.97	0.92	0.85
	25	SHC	1.32	1.28	1.23	1.19	1.13	1.07
	27	SHC	1.54	1.49	1.45	1.40	1.35	1.29
	29	SHC	1.75	1.71	1.66	1.62	1.57	1.50
23		TC	2.85	2.72	2.59	2.45	2.29	2.13
		CM	0.62	0.68	0.72	0.78	0.86	0.95
	25	SHC	1.08	1.03	0.98	0.93	0.88	0.83
	27	SHC	1.29	1.25	1.20	1.15	1.10	1.04
	29	SHC	1.51	1.46	1.42	1.37	1.31	1.26
		SHC	1.72	1.68	1.63	1.58	1.53	1.48

TC: Total Cooling Capacity (kW)
 SHC: Sensible Heat Capacity (kW)
 CM: Compressor Input (kW)

Rating conditions (#Mark) are

Outdoor Ambient Temp. 35°C D.B.

Indoor Unit Entering Air Temp. 27°C D.B. / 19°C W.B.

Indoor Unit **AWR509HL**
 Outdoor Unit **AER509SH**

240V Single Phase 50Hz

RATING CAPACITY		2.70 kW						
AIR FLOW RATE		470 m ³ /h						
EVAPORATOR		CONDENSER						
ENT. TEMP. °C		OUTDOOR AMBIENT TEMP. °C						
W.B.	D.B.		20	25	30	35	40	45
15		TC	2.72	2.60	2.48	2.37	2.22	2.05
		CM	0.71	0.77	0.82	0.89	0.96	1.03
	21	SHC	1.86	1.80	1.74	1.68	1.62	1.53
	23	SHC	2.10	2.04	1.98	1.92	1.85	1.76
	25	SHC	2.33	2.27	2.21	2.15	2.08	2.00
	27	SHC	2.56	2.50	2.44	2.37	2.22	2.05
	29	SHC	2.72	2.60	2.48	2.37	2.22	2.05
	31	SHC	2.72	2.60	2.48	2.37	2.22	2.05
17		TC	2.92	2.79	2.66	2.54	2.39	2.20
		CM	0.73	0.79	0.85	0.91	0.98	1.06
	21	SHC	1.62	1.56	1.50	1.45	1.38	1.29
	23	SHC	1.86	1.80	1.74	1.68	1.61	1.53
	25	SHC	2.09	2.03	1.97	1.91	1.84	1.76
	27	SHC	2.32	2.26	2.20	2.14	2.08	1.99
	29	SHC	2.56	2.49	2.44	2.38	2.31	2.20
	31	SHC	2.79	2.73	2.66	2.54	2.39	2.20
19		TC	3.11	2.97	2.84	# 2.70	2.54	2.34
		CM	0.76	0.82	0.87	0.94	1.01	1.09
	21	SHC	1.37	1.31	1.25	1.20	1.13	1.04
	23	SHC	1.61	1.55	1.49	1.43	1.36	1.28
	25	SHC	1.84	1.78	1.72	1.66	1.59	1.51
	27	SHC	2.07	2.01	1.95	1.89	1.83	1.74
	29	SHC	2.30	2.24	2.19	2.13	2.06	1.98
	31	SHC	2.54	2.48	2.42	2.36	2.29	2.21
21		TC	3.29	3.15	3.01	2.86	2.69	2.48
		CM	0.78	0.84	0.90	0.96	1.04	1.12
	23	SHC	1.35	1.29	1.23	1.18	1.11	1.03
	25	SHC	1.58	1.53	1.47	1.41	1.34	1.26
	27	SHC	1.82	1.76	1.70	1.64	1.58	1.49
	29	SHC	2.05	1.99	1.93	1.88	1.81	1.73
	31	SHC	2.28	2.22	2.17	2.11	2.04	1.96
23		TC	3.49	3.34	3.18	3.01	2.81	2.62
		CM	0.79	0.86	0.92	0.99	1.07	1.15
	25	SHC	1.32	1.26	1.20	1.13	1.07	1.00
	27	SHC	1.55	1.49	1.43	1.37	1.30	1.23
	29	SHC	1.78	1.72	1.67	1.60	1.53	1.46
	31	SHC	2.01	1.96	1.90	1.83	1.76	1.70

TC : Total Cooling Capacity (kW)

SHC : Sensible Heat Capacity (kW)

CM : Compressor Input (kW)

Rating conditions (#Mark) are

Outdoor Ambient Temp. 35°C D.B.

Indoor Unit Entering Air Temp. 27°C D.B. / 19°C W.B.

Indoor Unit **AWR512HL**
 Outdoor Unit **AER512SH**

240V Single Phase 50Hz

RATING CAPACITY		3.35 kW						
AIR FLOW RATE		490 m ³ /h						
EVAPORATOR		CONDENSER						
ENT. TEMP. °C		OUTDOOR AMBIENT TEMP. °C						
W.B.	D.B.		20	25	30	35	40	45
15		TC	3.38	3.23	3.08	2.93	2.76	2.54
		CM	0.96	1.04	1.11	1.19	1.30	1.42
	21	SHC	2.22	2.14	2.06	1.99	1.90	1.79
	23	SHC	2.46	2.38	2.31	2.23	2.14	2.03
	25	SHC	2.71	2.63	2.55	2.47	2.38	2.27
	27	SHC	2.95	2.87	2.79	2.71	2.62	2.51
	29	SHC	3.19	3.11	3.03	2.93	2.76	2.54
	31	SHC	3.38	3.23	3.08	2.93	2.76	2.54
17		TC	3.62	3.46	3.31	3.15	2.96	2.72
		CM	0.98	1.06	1.14	1.22	1.34	1.45
	21	SHC	1.98	1.90	1.82	1.74	1.65	1.54
	23	SHC	2.22	2.14	2.06	1.98	1.89	1.78
	25	SHC	2.46	2.38	2.30	2.22	2.13	2.02
	27	SHC	2.70	2.62	2.54	2.46	2.37	2.26
	29	SHC	2.94	2.86	2.78	2.70	2.61	2.50
	31	SHC	3.18	3.10	3.02	2.95	2.85	2.72
19		TC	3.85	3.69	3.52	# 3.35	3.15	2.90
		CM	1.01	1.10	1.17	1.26	1.38	1.49
	21	SHC	1.72	1.64	1.56	1.48	1.39	1.28
	23	SHC	1.96	1.88	1.80	1.72	1.63	1.52
	25	SHC	2.20	2.12	2.04	1.96	1.87	1.76
	27	SHC	2.44	2.36	2.28	2.20	2.11	2.00
	29	SHC	2.68	2.60	2.52	2.44	2.35	2.24
	31	SHC	2.92	2.84	2.76	2.68	2.59	2.48
21		TC	4.08	3.91	3.73	3.55	3.34	3.07
		CM	1.04	1.13	1.21	1.30	1.41	1.53
	23	SHC	1.69	1.61	1.53	1.46	1.37	1.26
	25	SHC	1.93	1.85	1.77	1.70	1.61	1.50
	27	SHC	2.17	2.09	2.02	1.94	1.85	1.74
	29	SHC	2.41	2.33	2.26	2.18	2.09	1.98
	31	SHC	2.65	2.57	2.50	2.42	2.33	2.22
23		TC	4.33	4.15	3.95	3.73	3.49	3.25
		CM	1.06	1.16	1.24	1.33	1.45	1.57
	25	SHC	1.65	1.57	1.49	1.40	1.31	1.22
	27	SHC	1.89	1.81	1.73	1.65	1.55	1.46
	29	SHC	2.13	2.05	1.97	1.89	1.79	1.70
	31	SHC	2.37	2.29	2.21	2.13	2.04	1.94

TC : Total Cooling Capacity (kW)

SHC : Sensible Heat Capacity (kW)


CM : Compressor Input (kW)

Rating conditions (#Mark) are

Outdoor Ambient Temp. 35°C D.B.

Indoor Unit Entering Air Temp. 27°C D.B. / 19°C W.B.

5-4. Heating Capacity

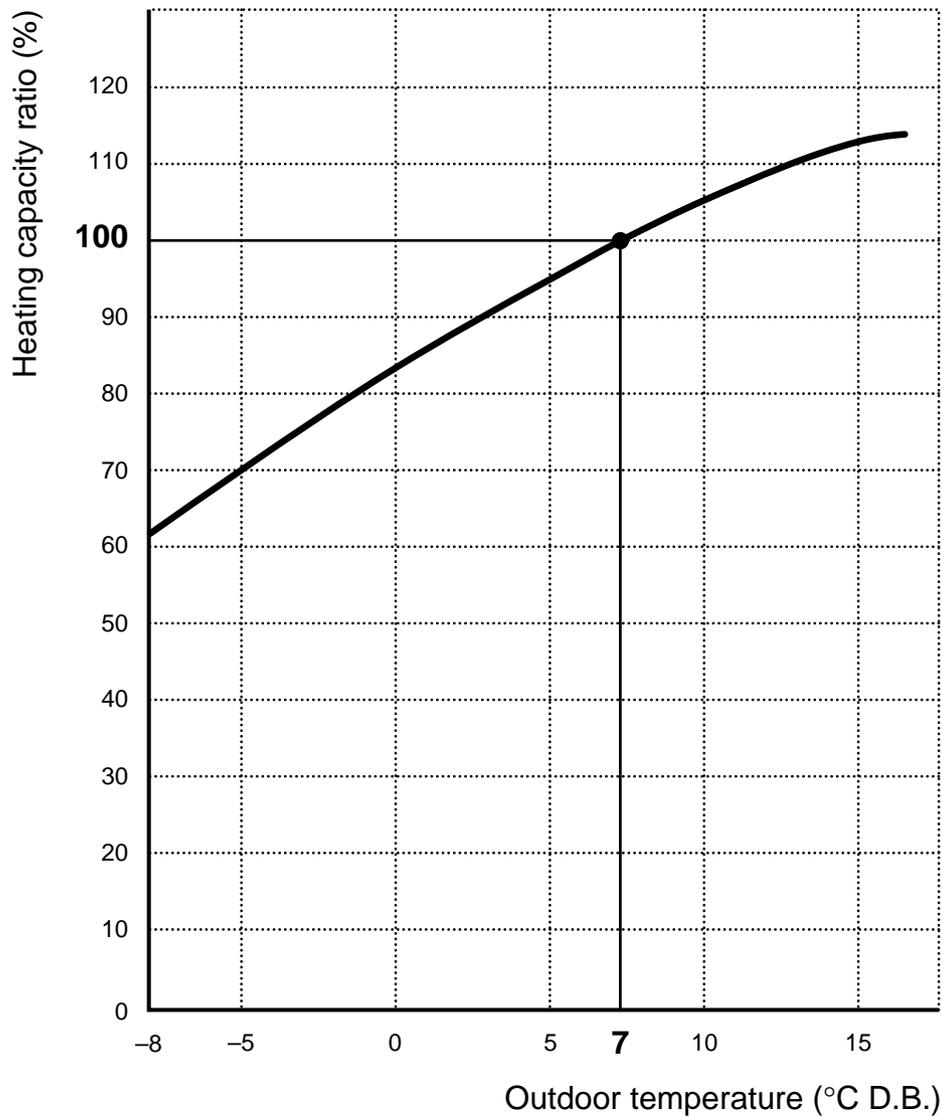

NOTE

- 1) ●... Point of Rating condition
Black dot in the chart indicate the following rating condition.
Indoor : 20°C D.B.
Outdoor : 7°C D.B. / 6°C W.B.
- 2) Above characteristics indicate instantaneous operation, which does not take into account defrost operation.
- 3) Fan speed : High
- 4) Because this air conditioner heats a room by drawing in the heat of the outside air (heat pump system), the heating efficiency will fall off when the outdoor temperature is very low. If sufficient heat cannot be obtained with this air conditioner, use another heating appliance in conjunction with it.

6. ELECTRICAL DATA

6-1. Electrical Characteristics

Indoor Unit **AWR508HL**
 Outdoor Unit **AER507SH**

COOLING

		Indoor Unit		Outdoor Unit		Complete Unit
		Fan Motor		Fan Motor	Compressor	
Performance at		230V ~ 50Hz				
Rating Conditions	Running Amps. A	0.11		0.26	3.3	3.7
	Power Input kW	0.025		0.058	0.737	0.82
Full Load Conditions	Running Amps. A	0.11		0.26	4.2	4.6
	Power Input kW	0.025		0.058	0.947	1.03

Rating Conditions : Indoor Air Temperature 27°C D.B. / 19°C W.B.
 Outdoor Air Temperature 35°C D.B.

Full Load Conditions : Indoor Air Temperature 32°C D.B. / 23°C W.B.
 Outdoor Air Temperature 43°C D.B.

HEATING

		Indoor Unit		Outdoor Unit		Complete Unit
		Fan Motor		Fan Motor	Compressor	
Performance at		230V ~ 50Hz				
Rating Conditions	Running Amps. A	0.11		0.26	3.2	3.6
	Power Input kW	0.025		0.058	0.707	0.79
Full Load Conditions	Running Amps. A	0.11		0.26	4.2	4.6
	Power Input kW	0.025		0.058	0.947	1.03

Rating Conditions : Indoor Air Temperature 20°C D.B.
 Outdoor Air Temperature 7°C D.B. / 6°C W.B.

Full Load Conditions : Indoor Air Temperature 27°C D.B.
 Outdoor Air Temperature 24°C D.B. / 18°C W.B.

Indoor Unit **AWR509HL**
 Outdoor Unit **AER509SH**

COOLING

		Indoor Unit		Outdoor Unit		Complete Unit
		Fan Motor		Fan Motor	Compressor	
Performance at		220 – 240V ~ 50Hz				
Rating Conditions	Running Amps. A	0.11 / 0.12	0.25 / 0.27	4.2 / 4.1	4.6 / 4.5	
	Power Input kW	0.025 / 0.029	0.054 / 0.063	0.91 / 0.94	0.99 / 1.03	
Full Load Conditions	Running Amps. A	0.11 / 0.12	0.25 / 0.27	5.2 / 5.0	5.6 / 5.4	
	Power Input kW	0.025 / 0.029	0.054 / 0.063	1.12 / 1.15	1.20 / 1.24	

Rating Conditions : Indoor Air Temperature 27°C D.B. / 19°C W.B.
 Outdoor Air Temperature 35°C D.B.

Full Load Conditions : Indoor Air Temperature 32°C D.B. / 23°C W.B.
 Outdoor Air Temperature 43°C D.B.

HEATING

		Indoor Unit		Outdoor Unit		Complete Unit
		Fan Motor		Fan Motor	Compressor	
Performance at		220 – 240V ~ 50Hz				
Rating Conditions	Running Amps. A	0.11 / 0.12	0.25 / 0.27	3.8 / 3.8	4.2 / 4.2	
	Power Input kW	0.025 / 0.029	0.054 / 0.063	0.83 / 0.87	0.91 / 0.96	
Full Load Conditions	Running Amps. A	0.11 / 0.12	0.25 / 0.27	5.3 / 5.0	5.7 / 5.4	
	Power Input kW	0.025 / 0.029	0.054 / 0.063	1.12 / 1.15	1.20 / 1.24	

Rating Conditions : Indoor Air Temperature 20°C D.B.
 Outdoor Air Temperature 7°C D.B. / 6°C W.B.

Full Load Conditions : Indoor Air Temperature 27°C D.B.
 Outdoor Air Temperature 24°C D.B. / 18°C W.B.

Indoor Unit **AWR512HL**
 Outdoor Unit **AER512SH**

COOLING

		Indoor Unit		Outdoor Unit		Complete Unit
		Fan Motor		Fan Motor	Compressor	
Performance at		220 – 240V ~ 50Hz				
Rating Conditions	Running Amps. A	0.13 / 0.14	0.30 / 0.32	5.8 / 5.8	6.2 / 6.3	
	Power Input kW	0.029 / 0.033	0.066 / 0.076	1.22 / 1.26	1.31 / 1.37	
Full Load Conditions	Running Amps. A	0.13 / 0.14	0.30 / 0.32	7.3 / 7.0	7.8 / 7.5	
	Power Input kW	0.029 / 0.033	0.066 / 0.076	1.56 / 1.57	1.65 / 1.68	

Rating Conditions : Indoor Air Temperature 27°C D.B. / 19°C W.B.
 Outdoor Air Temperature 35°C D.B.

Full Load Conditions : Indoor Air Temperature 32°C D.B. / 23°C W.B.
 Outdoor Air Temperature 43°C D.B.

HEATING

		Indoor Unit		Outdoor Unit		Complete Unit
		Fan Motor		Fan Motor	Compressor	
Performance at		220 – 240V ~ 50Hz				
Rating Conditions	Running Amps. A	0.13 / 0.14	0.30 / 0.32	5.9 / 5.9	6.3 / 6.4	
	Power Input kW	0.029 / 0.033	0.066 / 0.076	1.24 / 1.29	1.33 / 1.40	
Full Load Conditions	Running Amps. A	0.13 / 0.14	0.30 / 0.32	7.6 / 7.3	8.0 / 7.7	
	Power Input kW	0.029 / 0.033	0.066 / 0.076	1.61 / 1.62	1.70 / 1.73	

Rating Conditions : Indoor Air Temperature 20°C D.B.
 Outdoor Air Temperature 7°C D.B. / 6°C W.B.

Full Load Conditions : Indoor Air Temperature 27°C D.B.
 Outdoor Air Temperature 24°C D.B. / 18°C W.B.


6-2. Electric Wiring Diagrams

Indoor Unit **AWR508HL - AWR509HL**
AWR512HL



WARNING


To avoid electrical shock hazard, be sure to disconnect power before checking, servicing and/or cleaning any electrical parts.

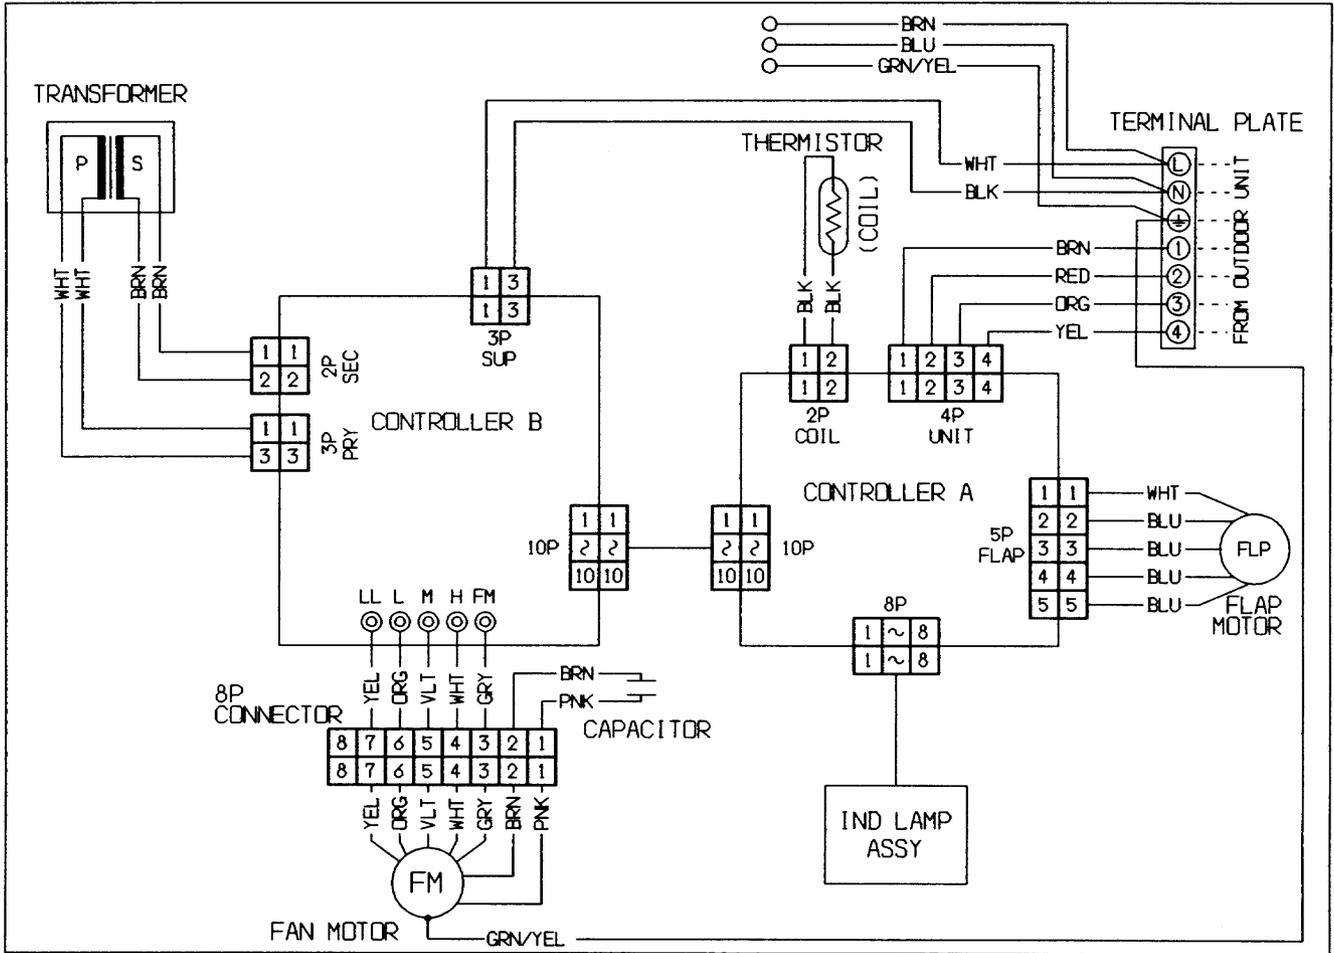



WARNING


To avoid electrical shock hazard, be sure to disconnect power before checking, servicing and/or cleaning any electrical parts.

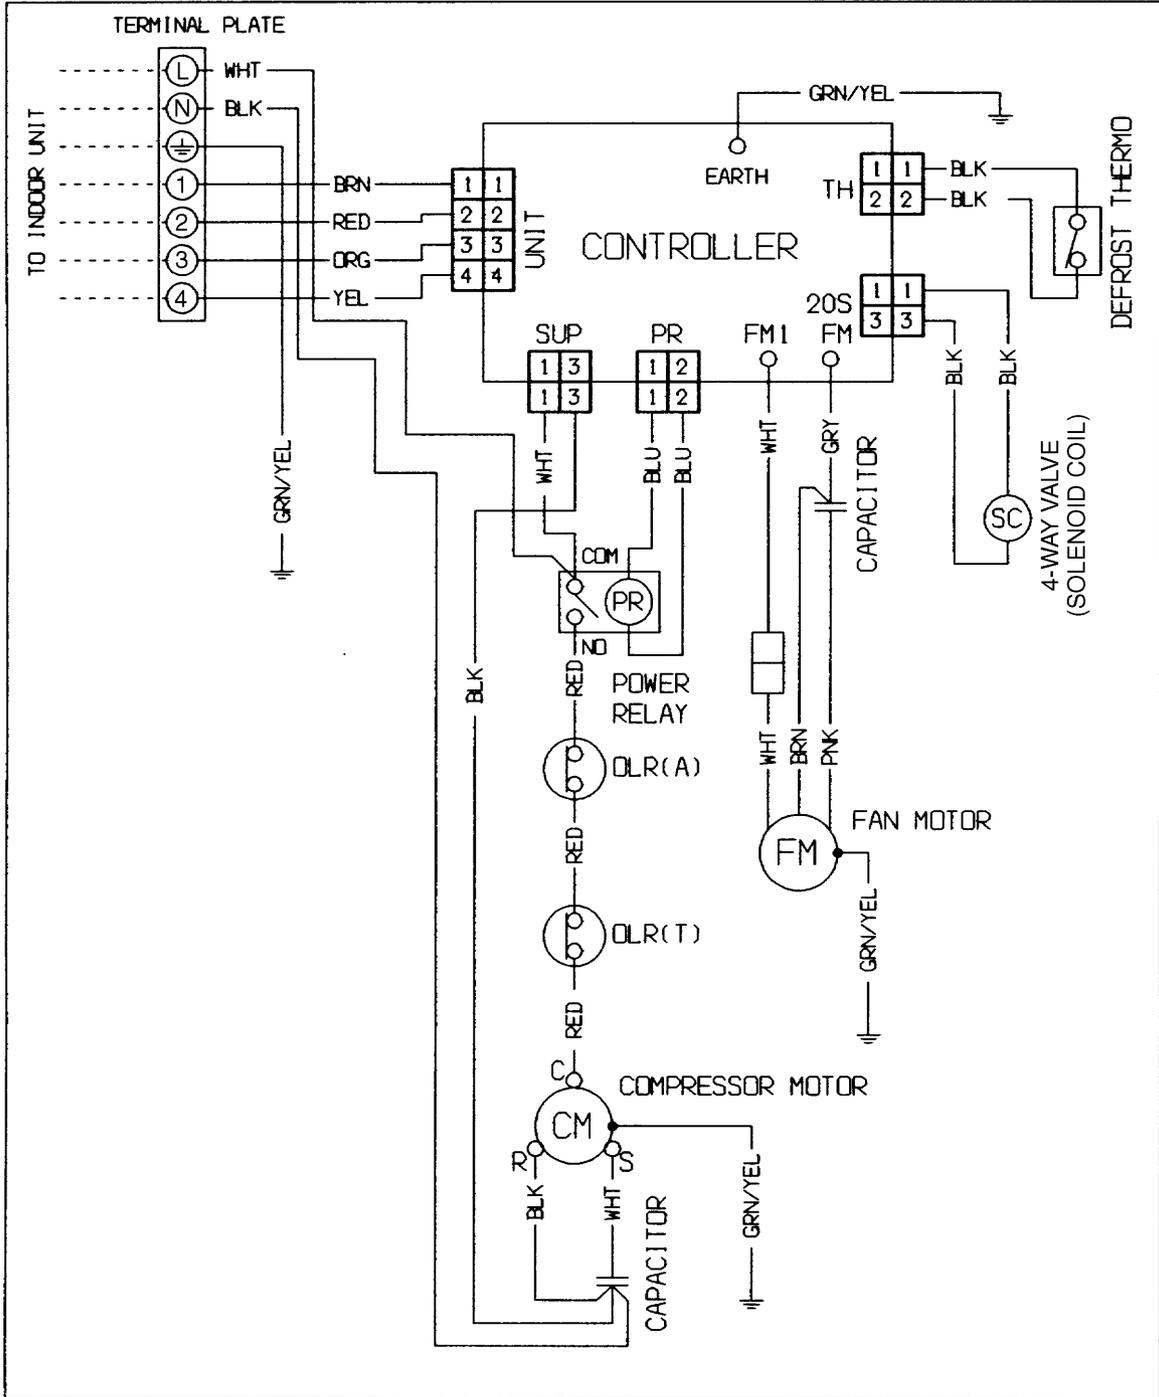



WARNING

To avoid electrical shock hazard, be sure to disconnect power before checking, servicing and/or cleaning any electrical parts.

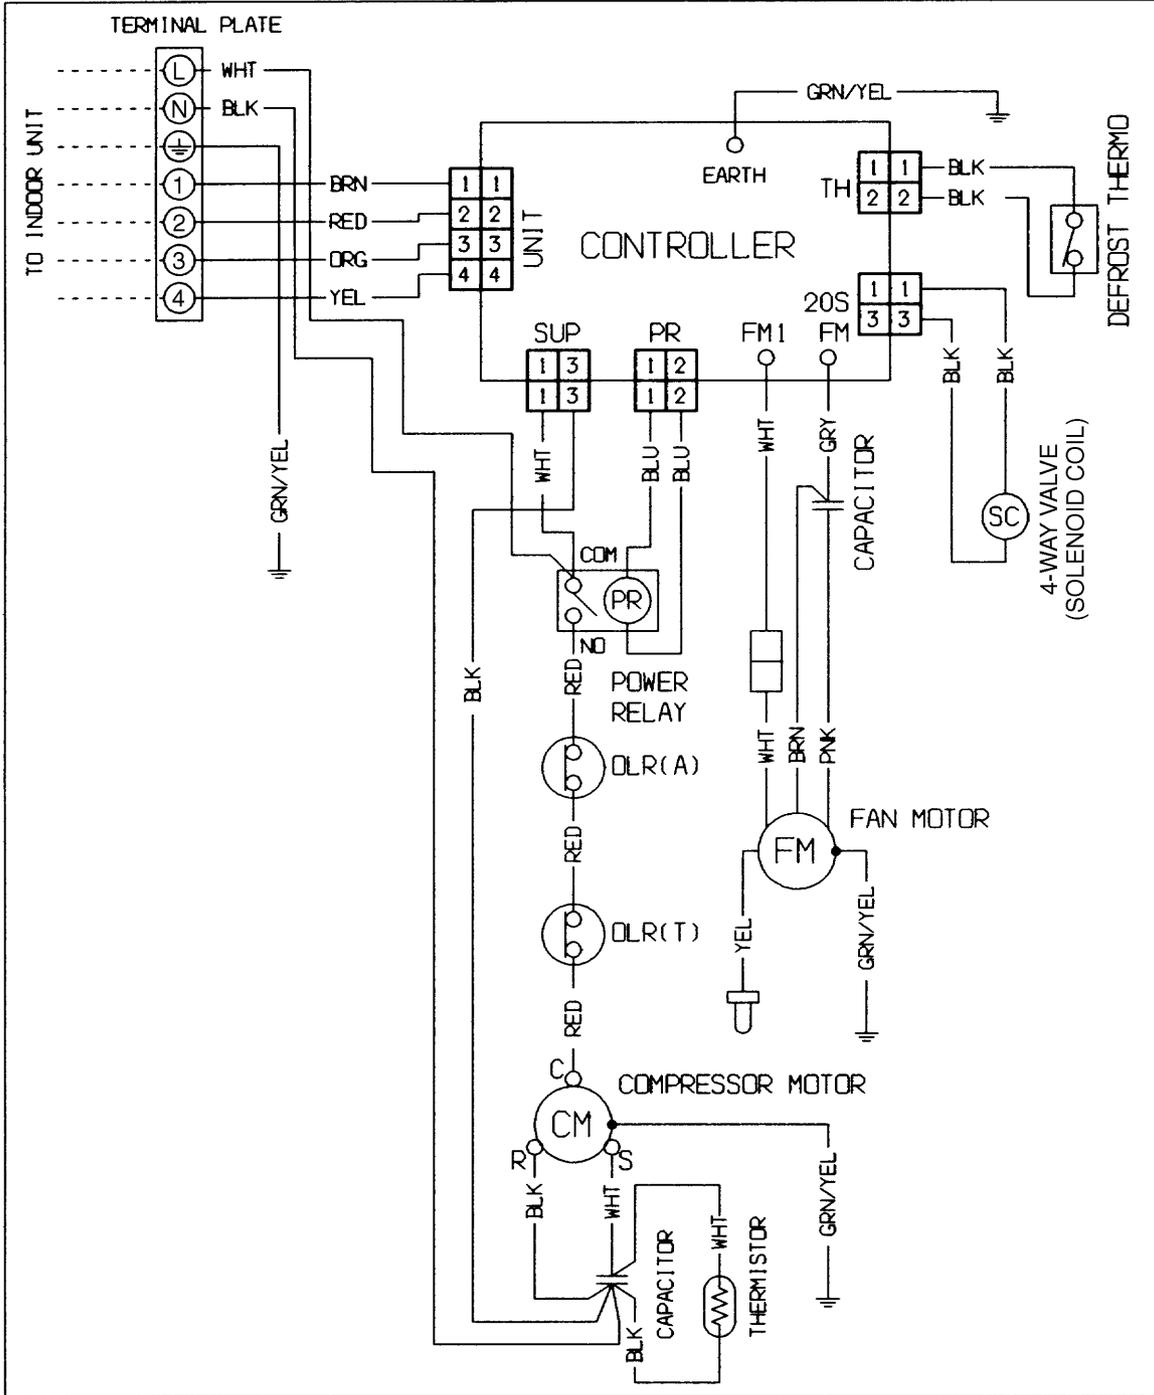


7. FUNCTION

7-1. Room Temperature Control

■ Cooling


- Room temperature control is obtained by cycling the compressor ON and OFF under control of the room temperature sensor in the remote control unit.
- The room temperature (and other information) is transmitted every 3 minutes by the remote control unit to the controller in the indoor unit.

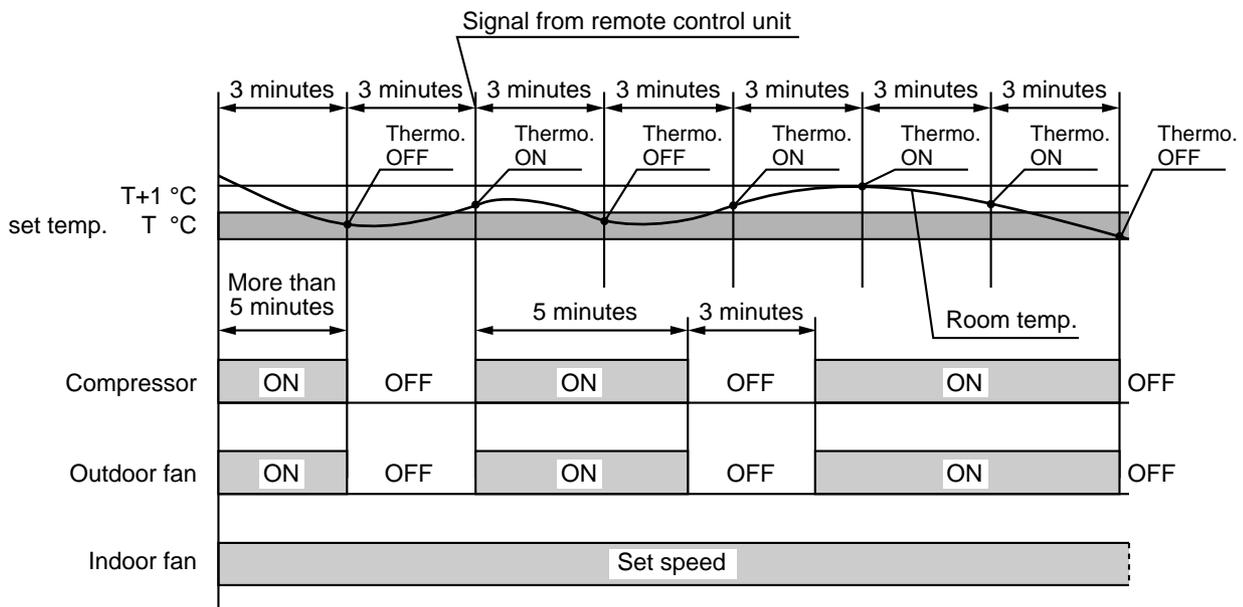

- The control circuit will not attempt to turn the compressor ON until the compressor has been OFF for at least 3 minutes. To protect the compressor from stalling out when trying to start against the high side refrigerant pressure, the control circuit has a built-in automatic time delay to allow the internal pressure to equalize.
- As a protective measure, the control circuit switches the compressor OFF after 5 minutes or more of compressor operation.
- Thermo. ON : When the room temperature is above T + 1°C (T°C is set temperature).
Compressor → ON
- Thermo. OFF : When the room temperature is equal to or below set temperature T°C.
Compressor → OFF

■ Heating

- Room temperature control is obtained by cycling the compressor ON and OFF under control of the room temperature sensor in the remote control unit.
- The room temperature (and other information) is transmitted every 3 minutes by the remote control unit to the controller in the indoor unit.

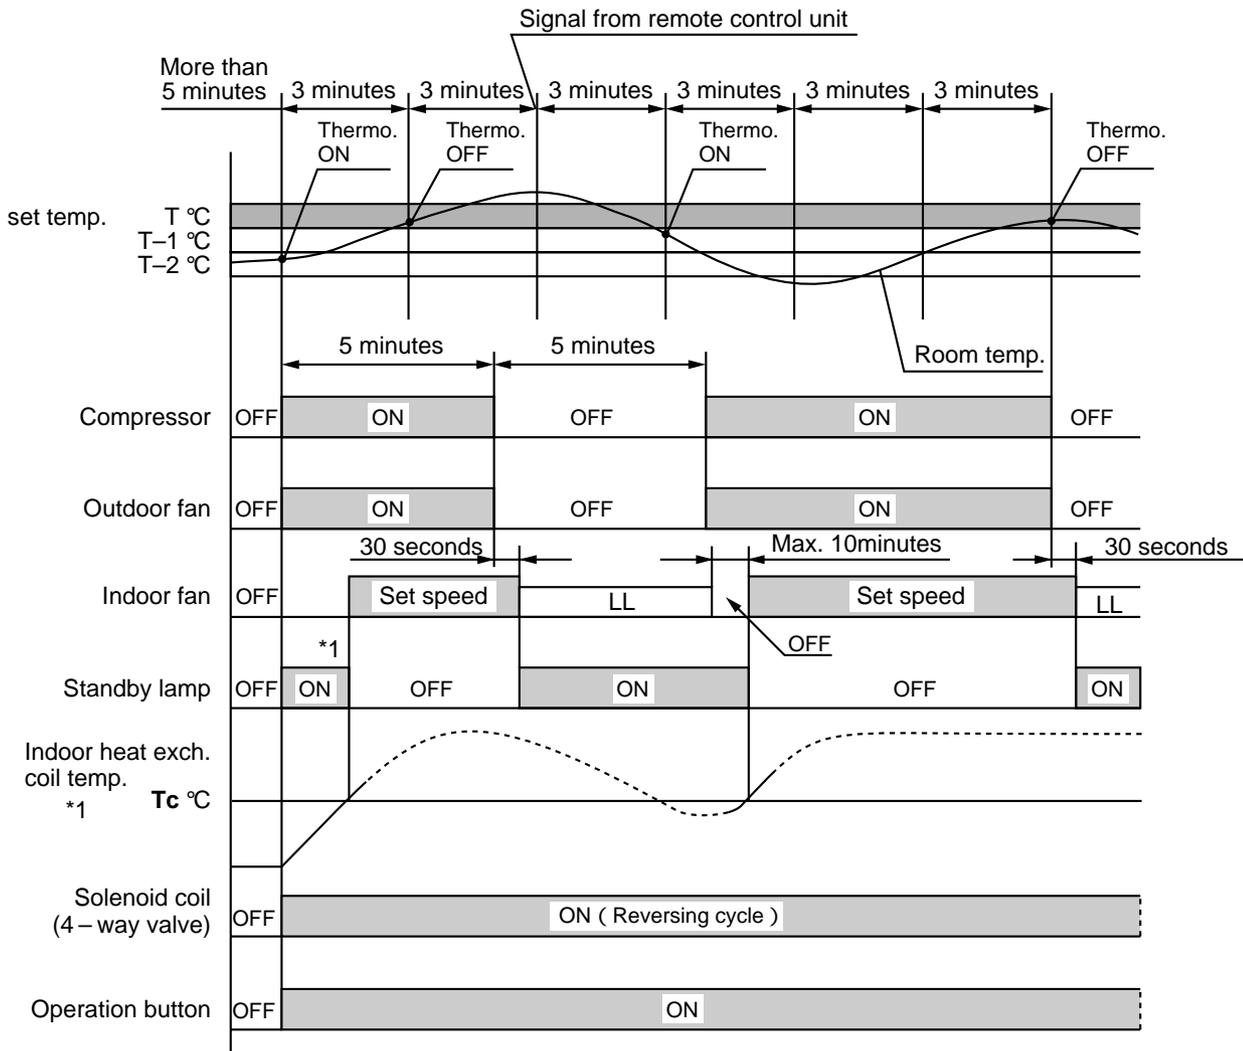


- The control circuit will not attempt to turn the compressor ON until the compressor has been OFF for at least 5 minutes. To protect the compressor from stalling out when trying to start against the high side refrigerant pressure, the control circuit has a built-in automatic time delay to allow the internal pressure to equalize.
- As a protective measure, the control circuit switches the compressor OFF after 5 minutes or more of compressor operation.
- Thermo. ON : When the room temperature is below $T - 1$ °C (T °C is set temperature).
Compressor → ON
- Thermo. OFF : When the room temperature is equal to or above set temperature T °C.
Compressor → OFF

NOTE

*1: Refer to "8-6 Cold Draft Prevention".

7-2. Dry Operation (Dehumidification)

- Dry operation uses the ability of the cooling cycle to remove moisture from the air, but by running at low level to dehumidify without greatly reducing the room temperature. The air conditioner repeats the cycle of turning ON and OFF automatically as shown in the chart below according to the room temperature.

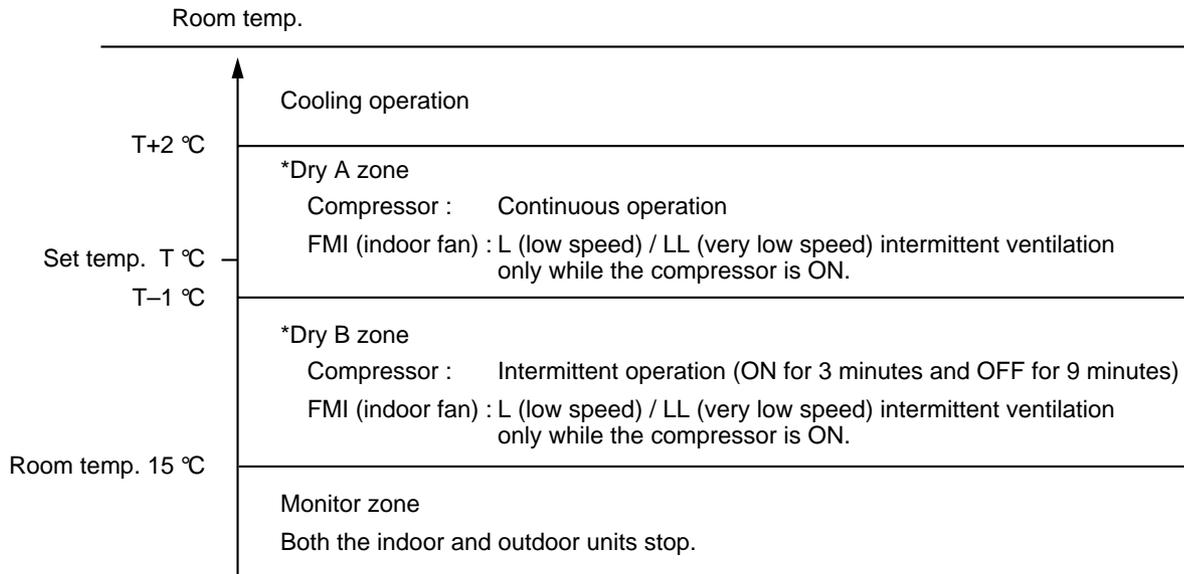

NOTE

- Intermittent ventilation occurs by switching the indoor fan speed between L ↔ LL.
- Dry operation does not occur when the room temperature is under 15°C, which is the monitor zone.
- When the compressor stops, the indoor fan stops as well.

7-3. Automatic Switching between Cooling and Heating

- When AUTO mode is selected, the microprocessor calculates the difference between the set temperature and the room temperature, and automatically switches to COOLING or HEATING mode to maintain the desired temperature.


Room temp. ≥ Set temp. → COOL

Room temp. < Set temp. → HEAT

This means that if the room temperature is **higher than** or **equal to** the set temperature, **COOLING** operation begins. If the room temperature is **lower than** the set temperature, **HEATING** operation begins.

7-4. Freeze Prevention (Cooling)

- This function prevents freezing of the indoor heat exchange coil.
- When the compressor has been running for 10 minutes^{*1)} or more and the temperature of the indoor heat exchange coil falls below -1°C , the control circuit stops the compressor for at least 6 minutes. The compressor does not start again until the temperature rises above 8°C or 6 minutes has elapsed.

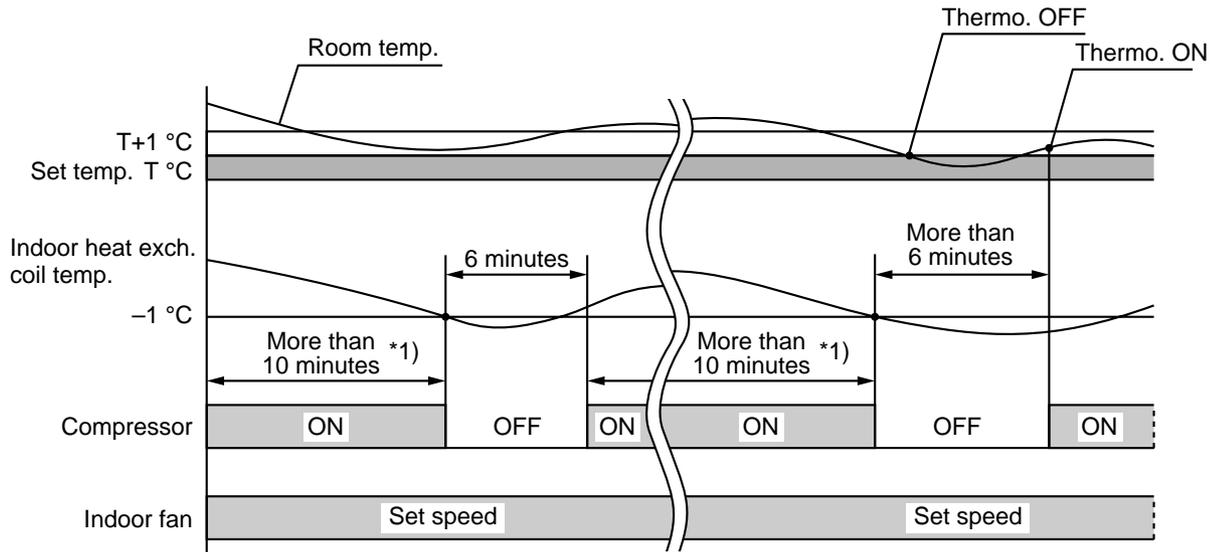


NOTE

*1) Functionally, compressor running period, or time are of two types, 10 minutes and 6 minutes depending upon production date.

7-5. Overload Prevention (Heating)

- This function prevents overheating of the indoor heat exchange coil.
- When the temperature of the indoor heat exchange coil rises above **B°C**, and if the indoor fan is L (low speed), then the fan speed changes from L (low speed) to M (medium speed).
- When the temperature of the indoor heat exchange coil rises above **A°C**, the outdoor fan stops.

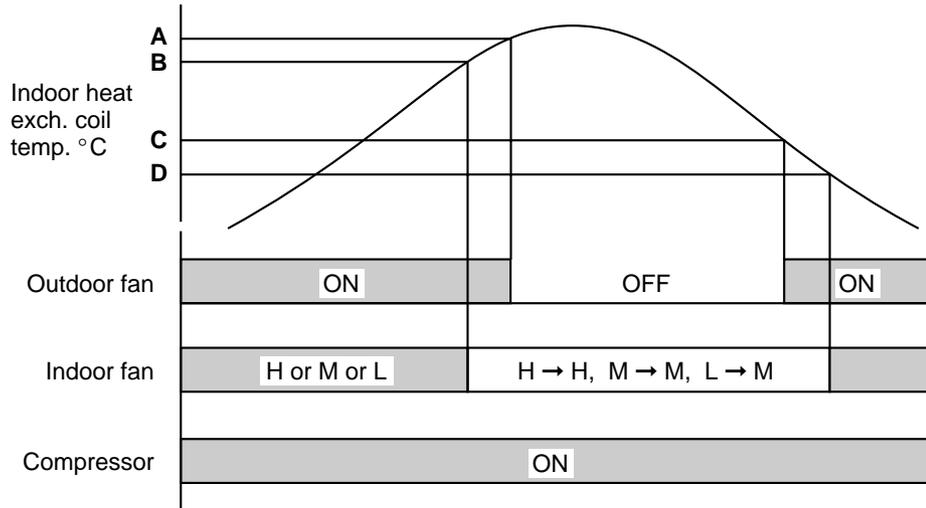


NOTE

The operation temperature shown as **A**, **B**, **C** and **D** in the chart differ by models.

	AWR509HL	AWR508/512HL
A	54°C	50°C
B	52°C	49°C
C	45°C	42°C
D	42°C	39°C

7-6. Cold Draft Prevention (Heating)

- This function controls indoor fan speed so a strong draft of cold air will not blow out before the indoor heat exchange coil have sufficiently warmed up.
- STANDBY lamp on front of the indoor unit lights up when this function is working.
- when 10 minutes has elapsed, the fan speed is automatically switched to set speed regardless of indoor heat exchange coil temperature.

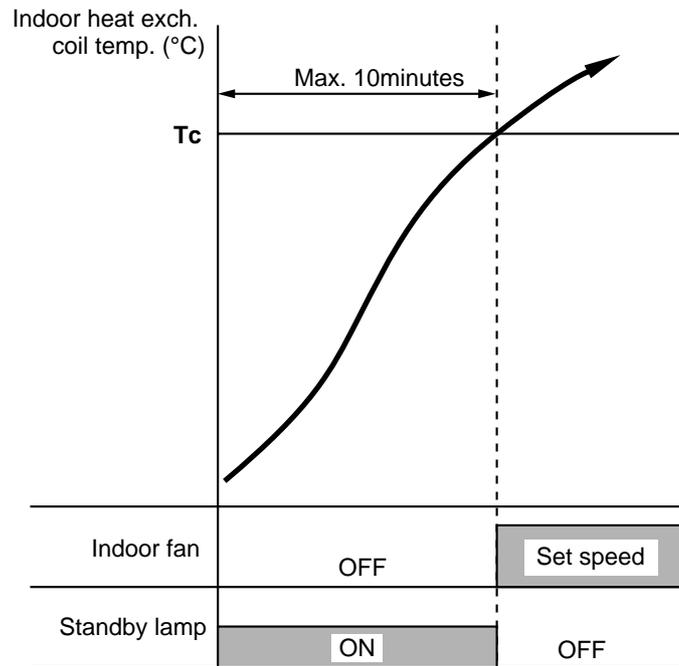


NOTE

The operation temperature shown as **Tc** in the chart differ by models.

	AWR509HL	AWR508/512HL
Tc	33°C	32°C

7-7. Defrosting Operation (Heating)

■ Defrosting Flowchart

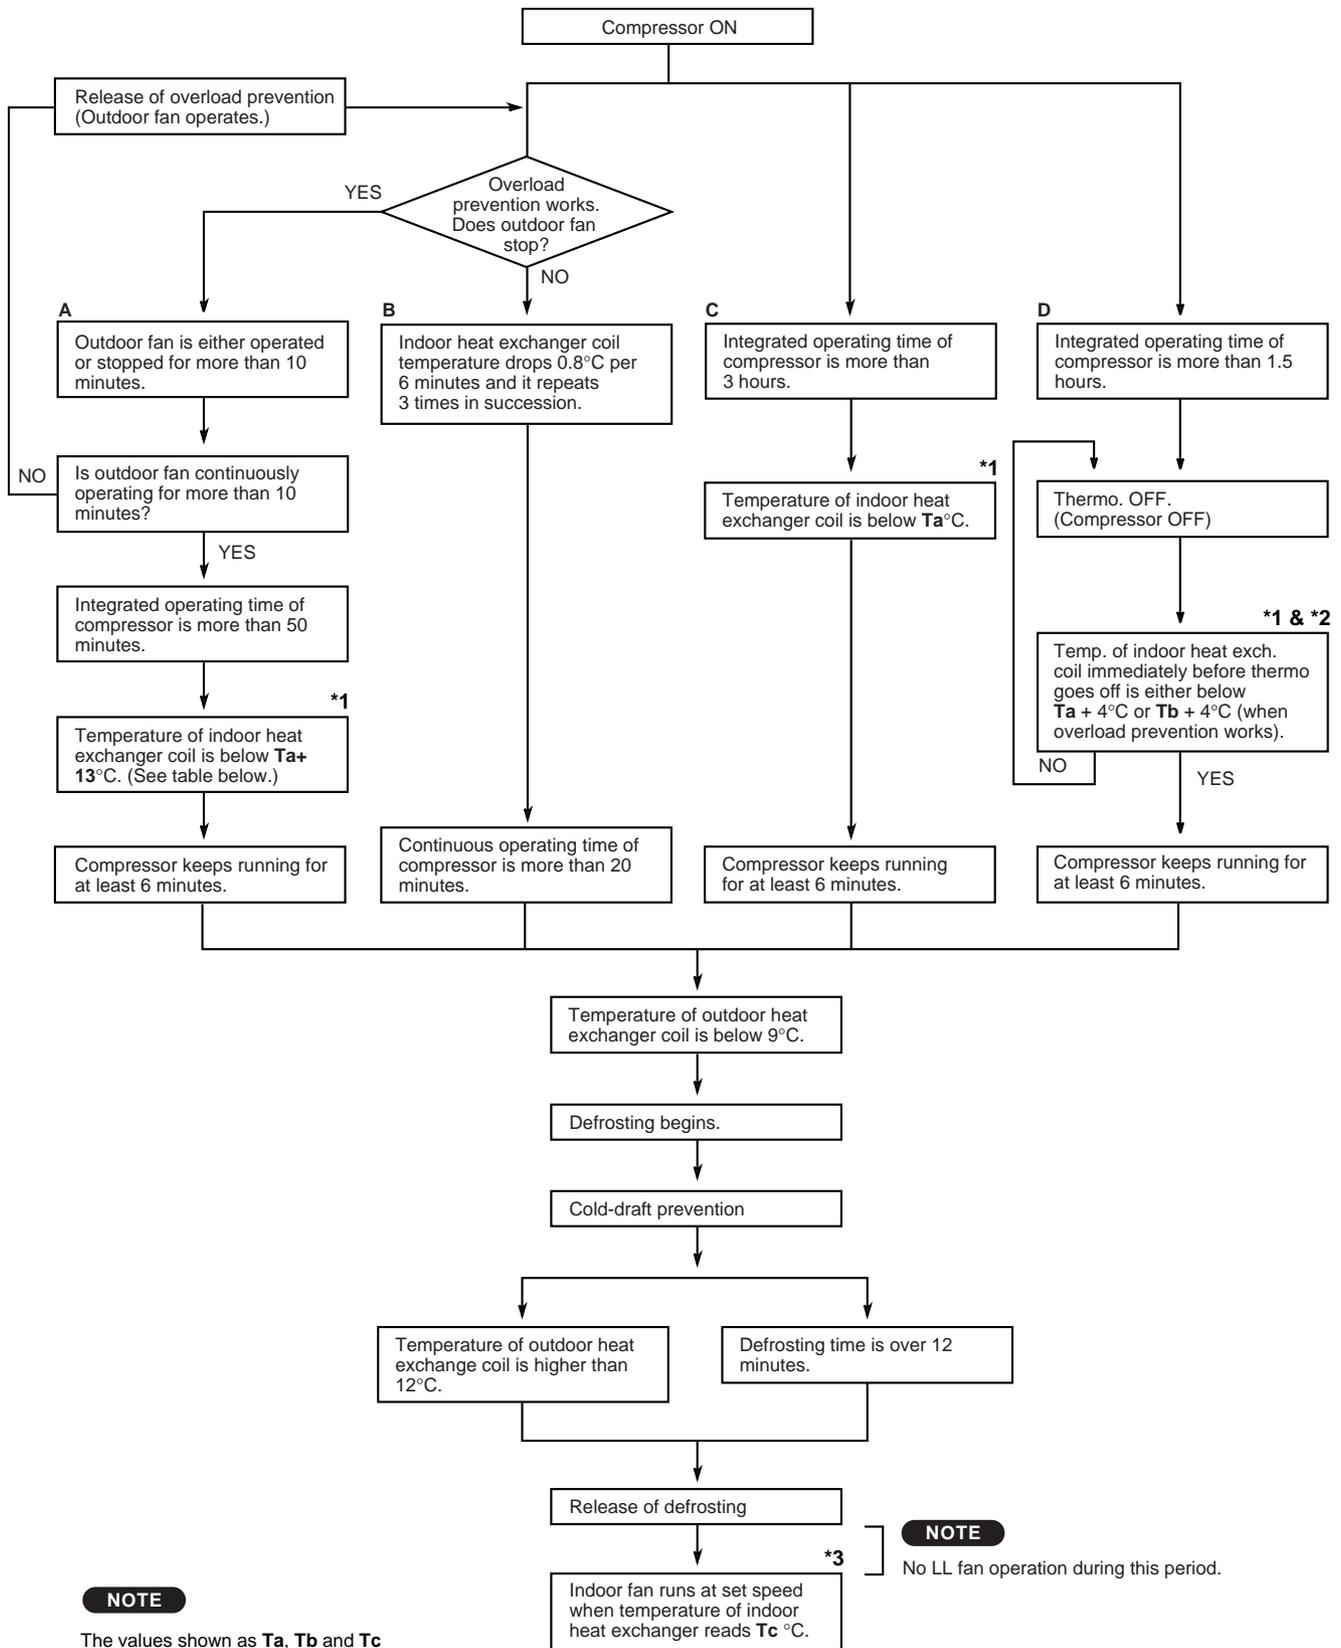

NOTE


The values shown as **Ta**, **Tb** and **Tc** differ according to the models.

		AWR509HL	AWR508/512HL
*1	Ta	38	35
*2	Tb	51	48
*3	Tc	33	32

NOTE

No LL fan operation during this period.

■ Defrosting Mode Timing Chart

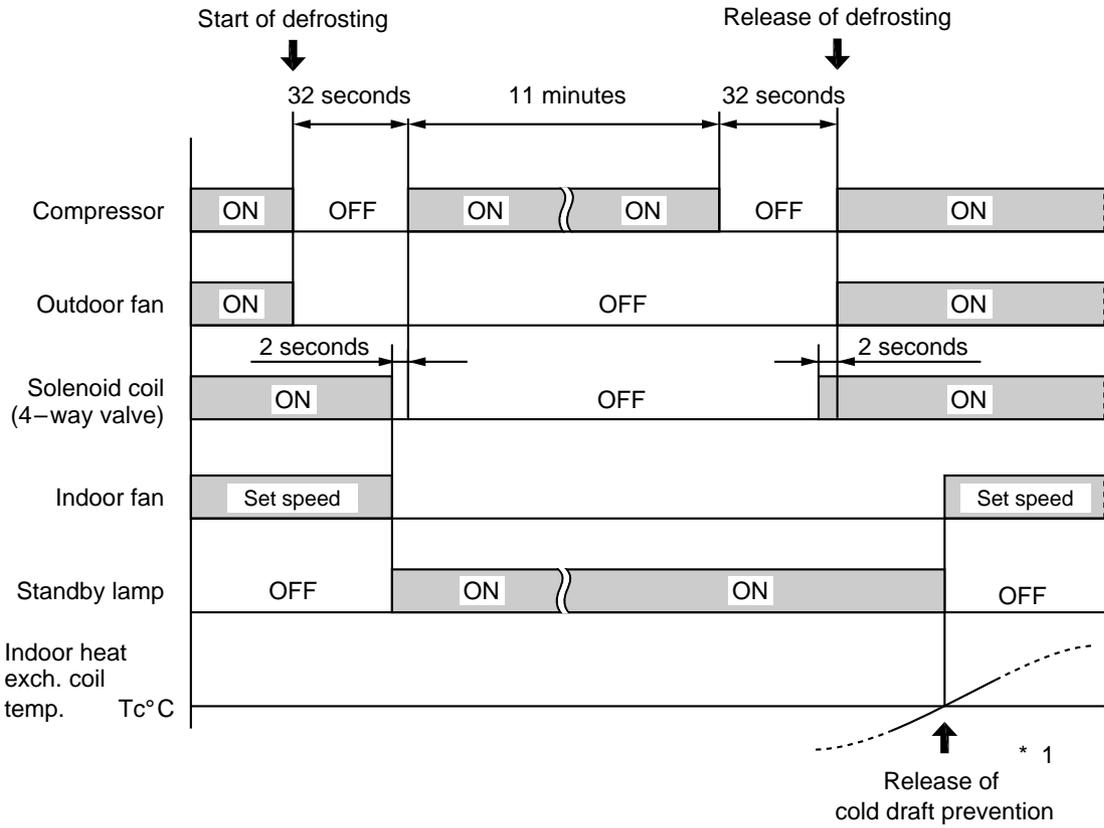

NOTE

*1: Refer to "8-6 Cold Draft Prevention".

8. TROUBLESHOOTING

8-1. Check before and after troubleshooting




WARNING

Hazardous voltage can cause **ELECTRIC SHOCK** or **DEATH**. Disconnect power or turn off circuit breaker before you start checking or servicing.

8-1-1. Check power supply wiring.

- Check that power supply wires are correctly connected to terminals **L** and **N** on the terminal plate in the indoor unit.

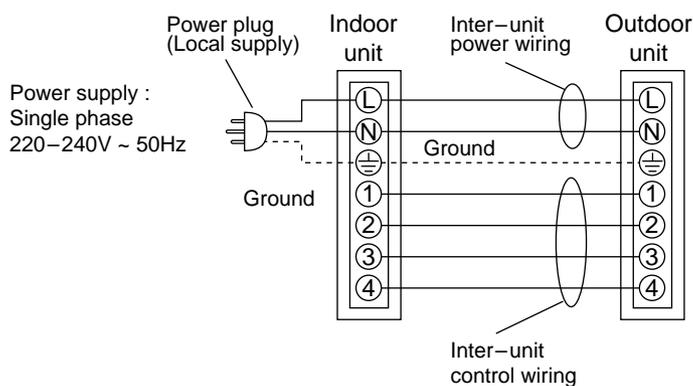

8-1-2. Check inter-unit wiring.

- Check that inter-unit wiring is correctly connected to the outdoor unit from the indoor unit.

8-1-3. Check power supply.

- Check that voltage is in specified range ($\pm 10\%$ of the rating).
- Check that power is being supplied.

8-1-4. Check lead wires and connectors in indoor and outdoor units.

- Check that coating of lead wires is not damaged.
- Check that lead wires and connectors are firmly connected.
- Check that wiring is correct.


8-2. Air conditioner does not operate.

8-2-1. Circuit breaker trips (or fuse blows).

A. When the circuit breaker is set to ON, it is tripped soon. (Resetting is not possible.)


- There is a possibility of ground fault.
- Check insulation resistance.

If resistance value is $2M\Omega$ or less, insulation is defective (“NO”).

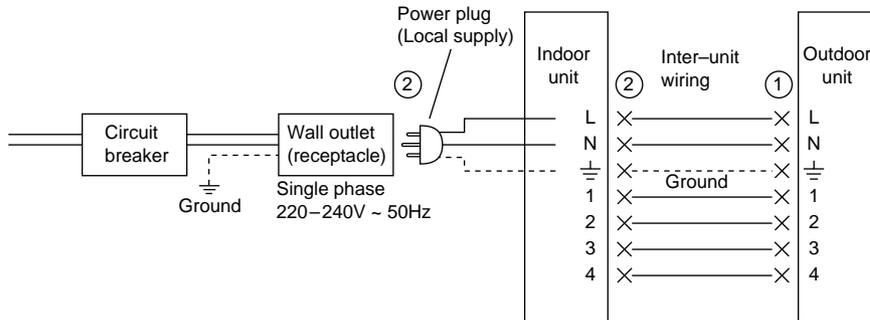


WARNING

* Set circuit breaker to OFF.



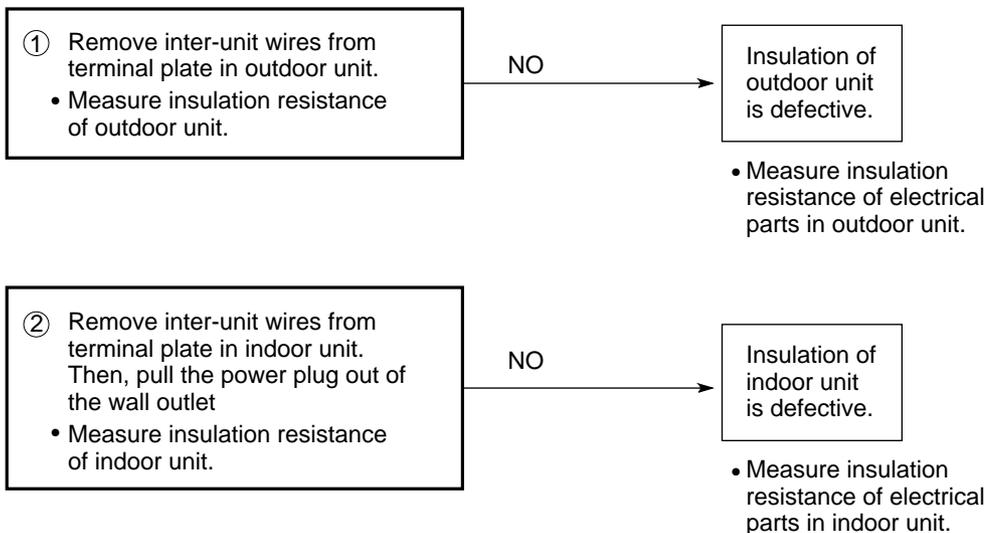


B. Circuit breaker trips in several minutes after turning the air conditioner on.

- There is a possibility of short circuit.

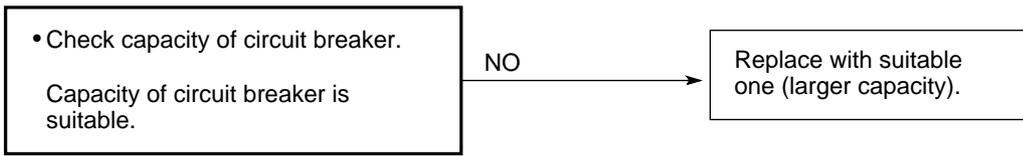


In case of Heating operation :

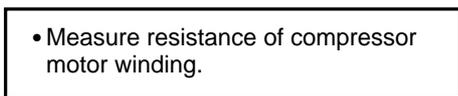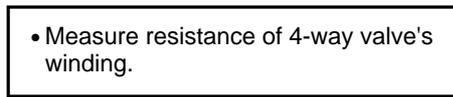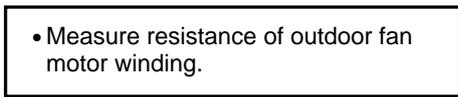


8-2-2. Neither indoor nor outdoor unit runs.


A. Power is not supplied.

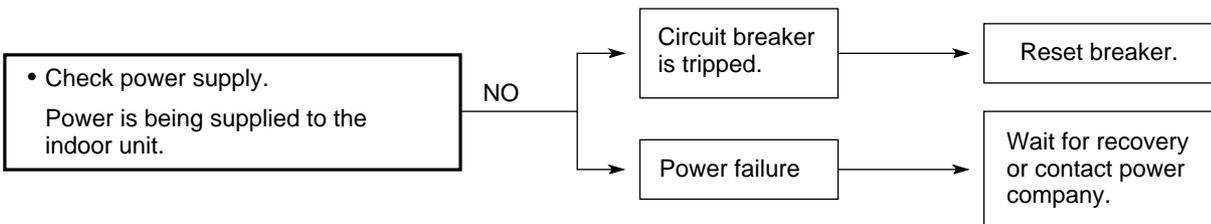


B. Check "OPERATION selector" switch in the indoor unit.

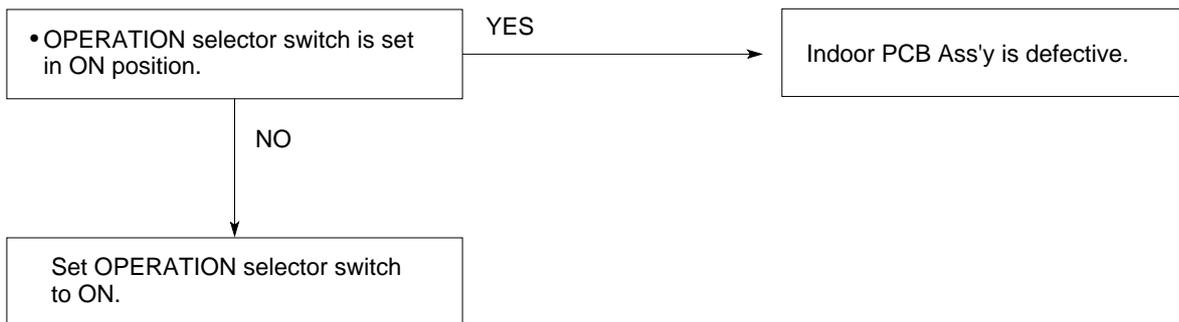

C. Check remote control unit.

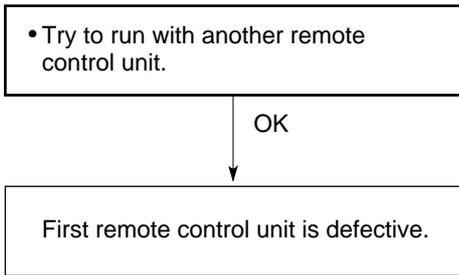

D. Check fuse on the indoor PCB Ass'y.

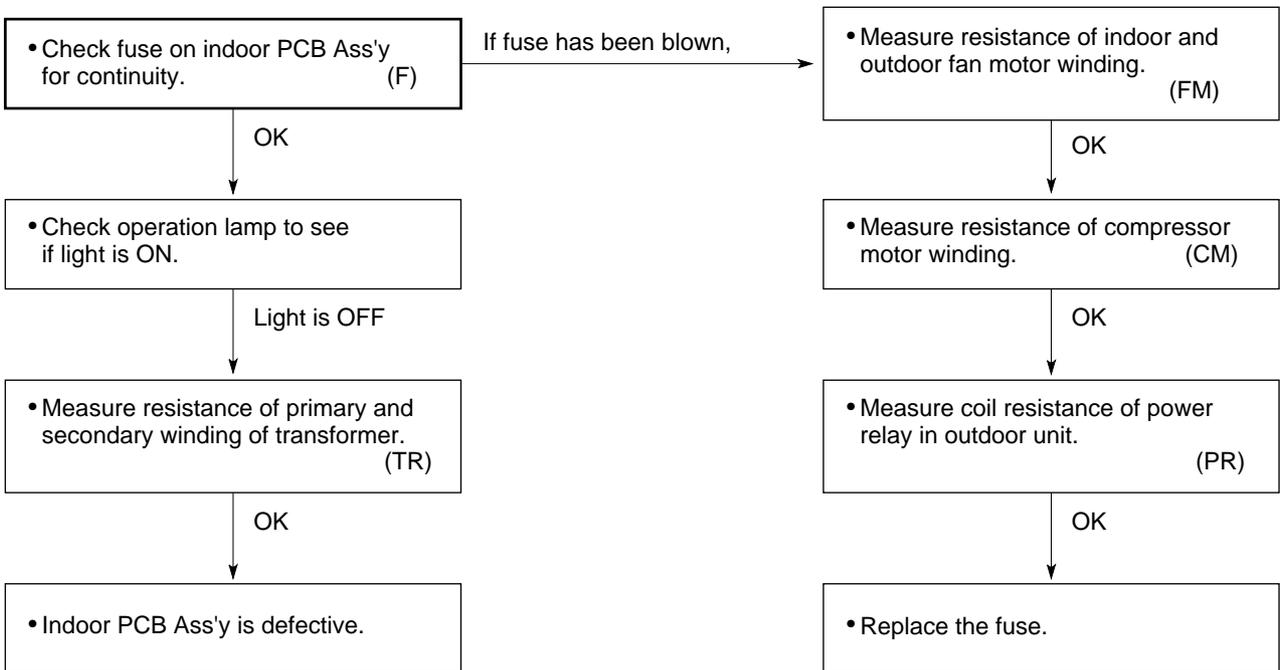


E. Check TIMER on the remote control unit.




8-2-3. Only outdoor unit does not run.

A. Check setting temperature.


COOL

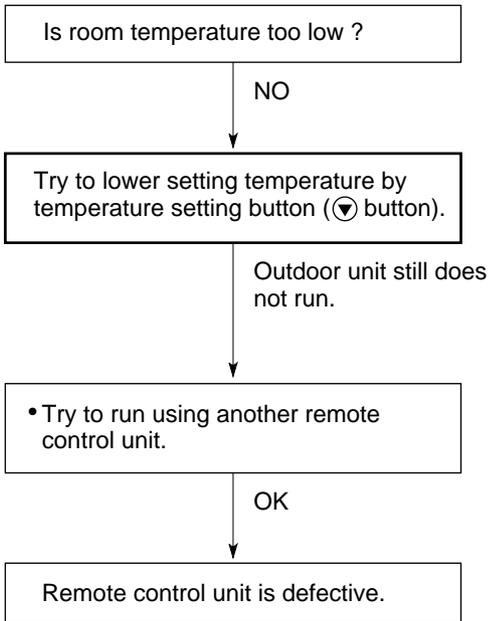


HEAT

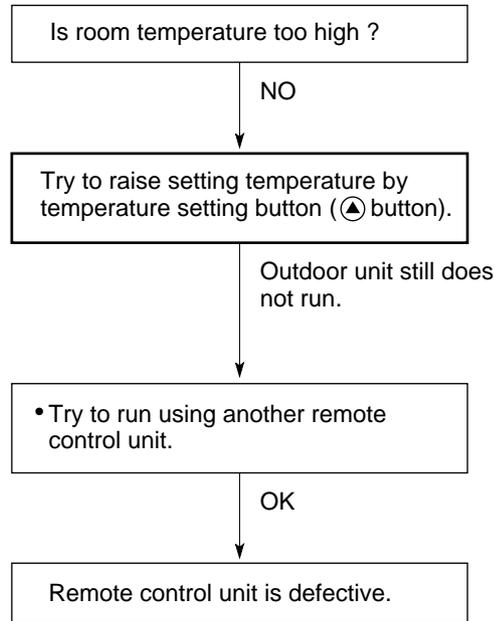

B. Check PCB Ass'y in either indoor or outdoor unit.

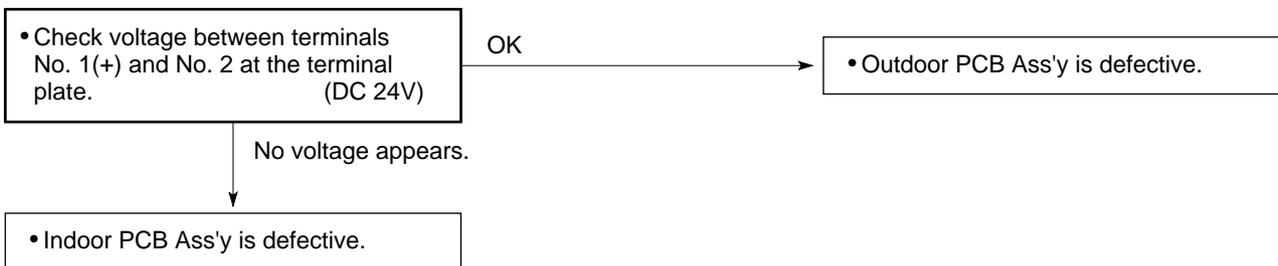


8-2-4. Only Indoor unit does not run.

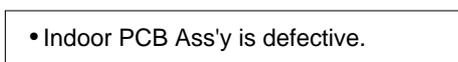


8-3. Some part of air conditioner does not operate.


8-3-1. Only indoor fan does not run.

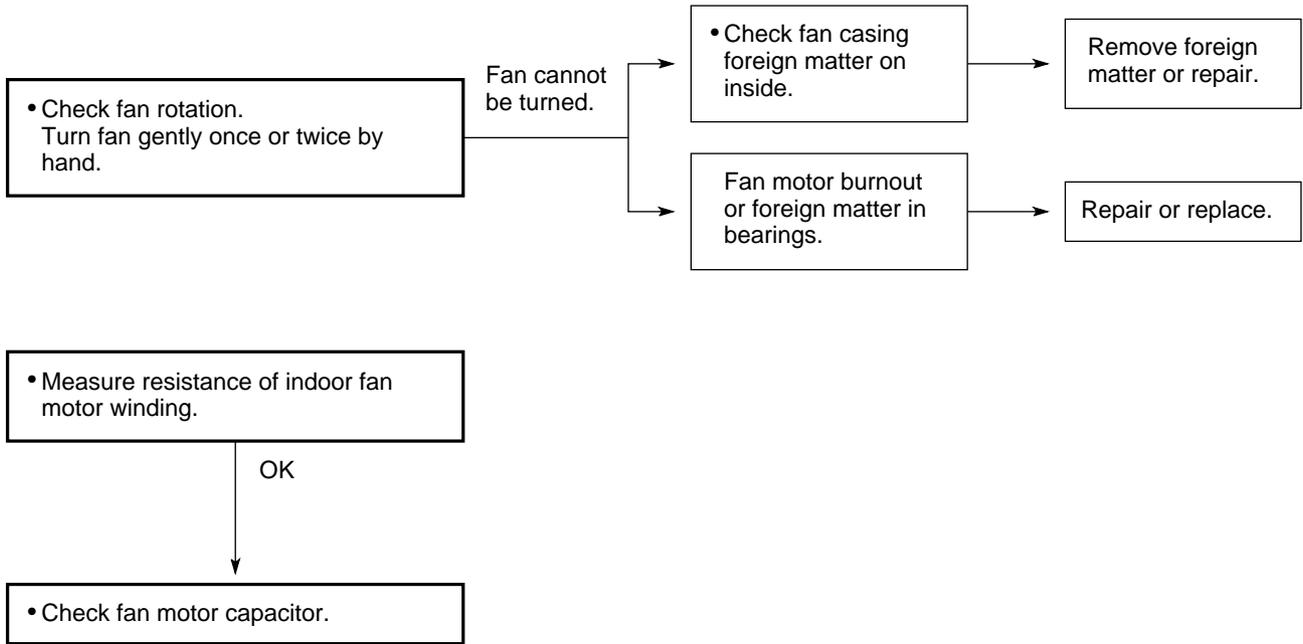


8-3-2. Only flap motor does not run.

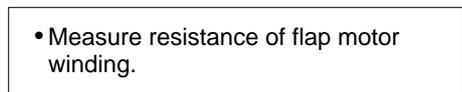

8-3-3. Only outdoor fan does not run.

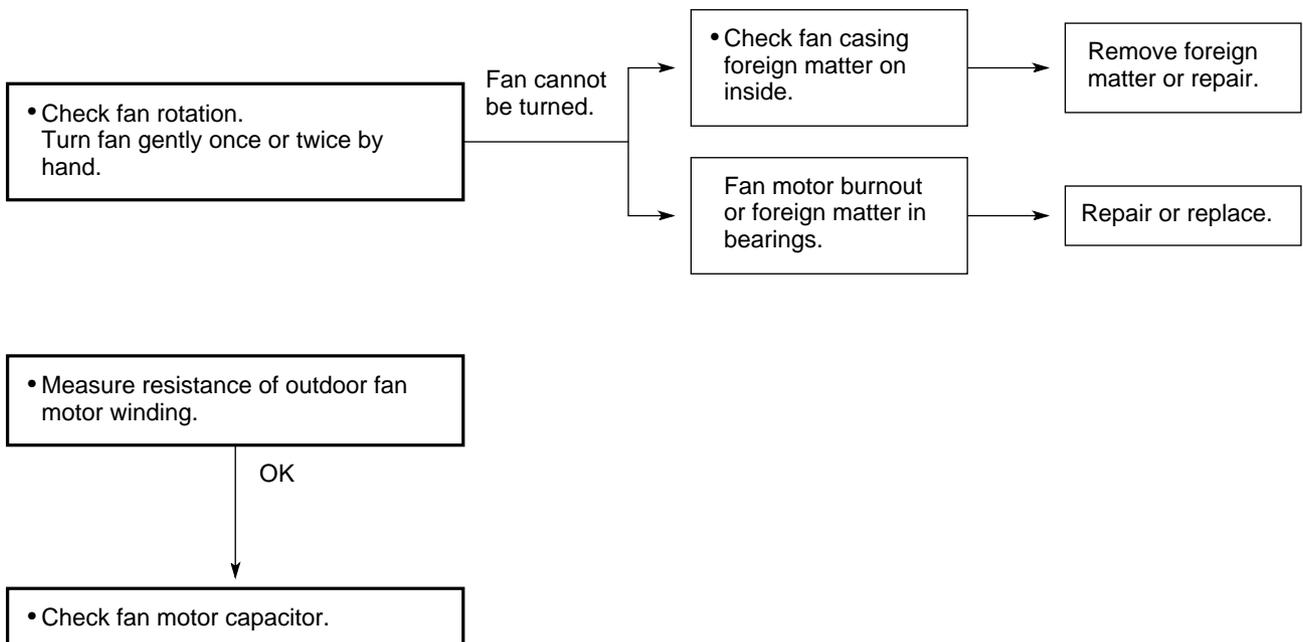

8-3-4. Only compressor does not run.

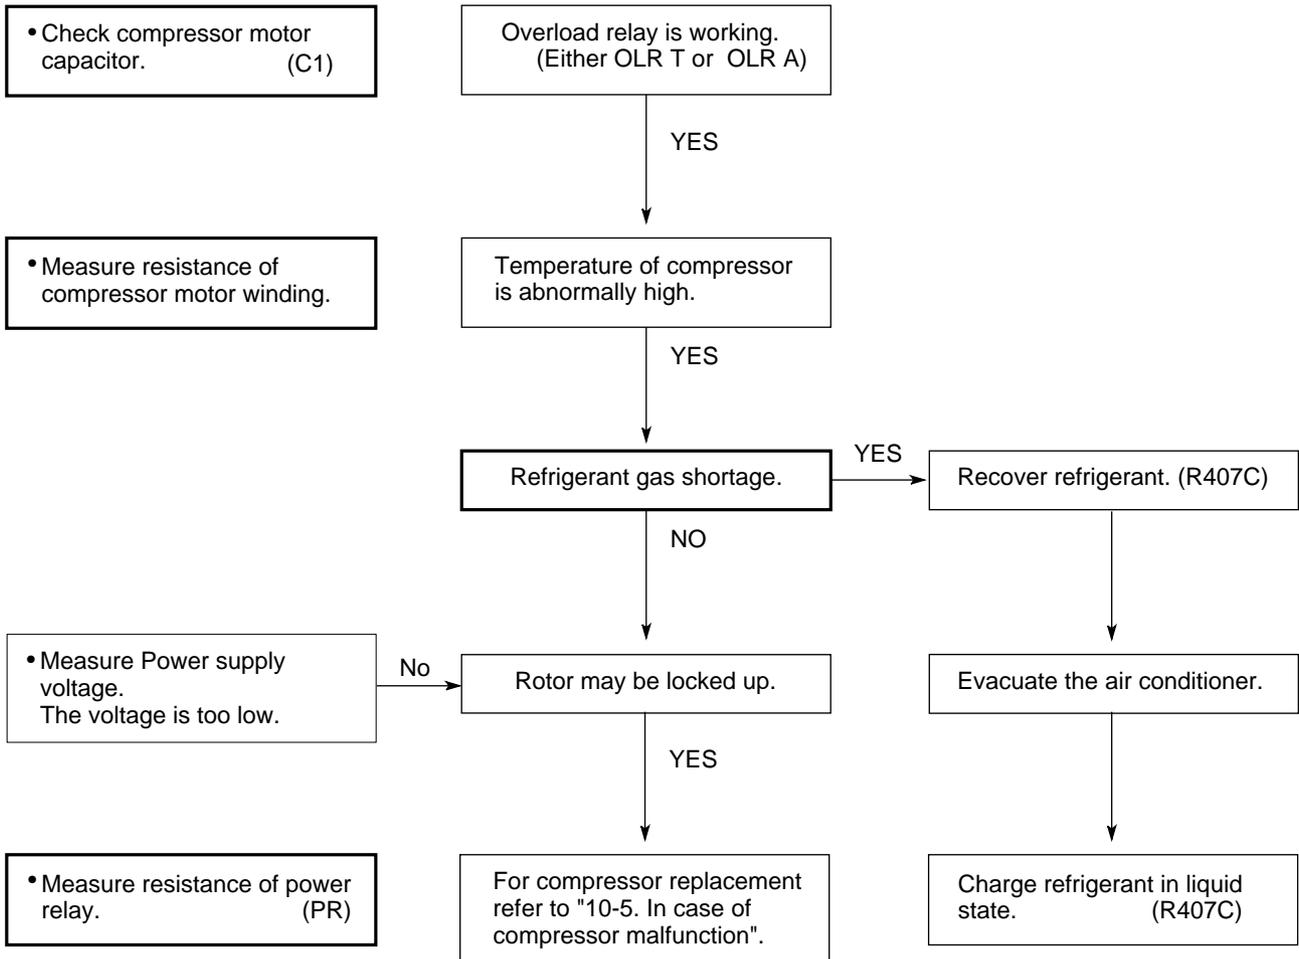

CAUTION

In case of leakage, do not add refrigerant. The unit must be vacuumed and recharged. This is because composition of refrigerant in the unit has been changed due to leakage. See "10-6. In case refrigerant is leaking".

8-4. Air conditioner operates, but abnormalities are observed.

8-4-1. Operation does not switch from HEAT to COOL (or COOL to HEAT).

• Remote control unit may be defective.

Receiver in lamp Ass'y may be defective.

• Measure resistance of 4-way valve's winding.

COOL → HEAT

• Check voltage between terminals No. 1(+) and No. 3 at the terminal plate. (DC 24V)

OK

Outdoor PCB Ass'y is defective.


No voltage appears.

• Indoor PCB Ass'y is defective.


HEAT → COOL

• Check voltage between terminals No. 1(+) and No. 3 at the terminal plate. (0V)

8-4-2. Poor cooling or heating.

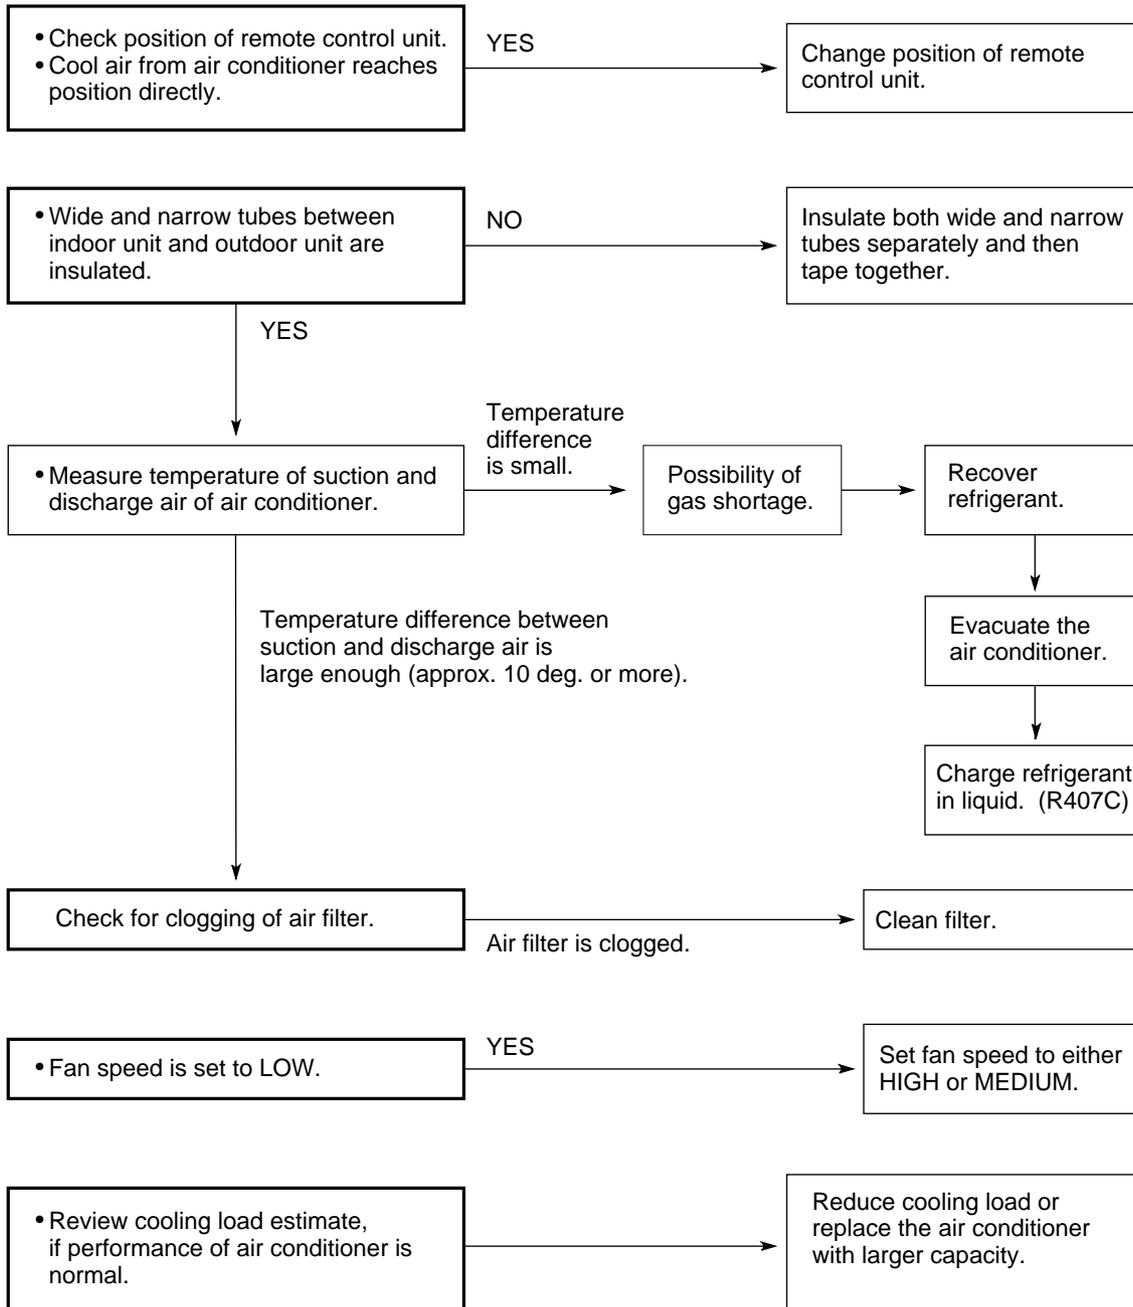


8-4-3. Excessive cooling or heating.

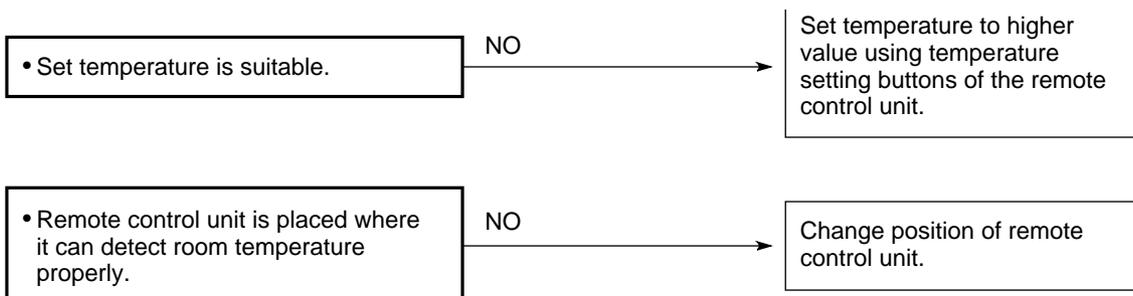

8-5. If a sensor is defective.

8-5-1. Indoor coil temp. thermistor (TH1) is defective.

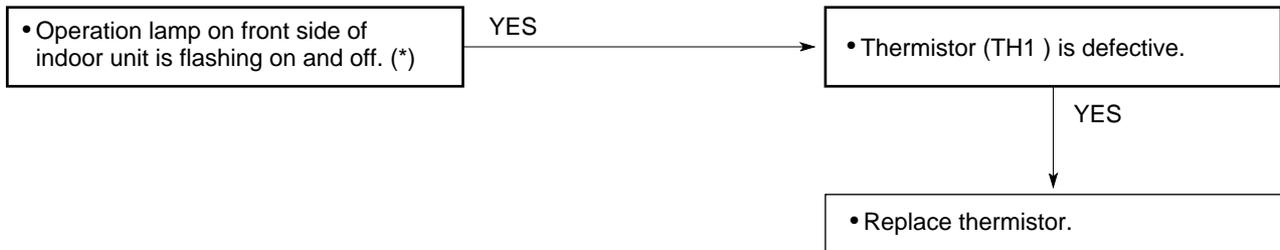

NOTE Alarm Signal (*)

Operation lamp on the front side of the indoor unit will flash on and off when the indoor coil thermistor is defective. At the same time the outdoor unit will stop. Indoor unit will operate only for ventilation.

8-5-2. Room temp. thermistor (TH2) is defective.

A. Open


When thermistor opens, the air conditioner will be in the following conditions as the controller tries to detect extremely low room temperature.

- In Cooling mode: The air conditioner soon stops and will not start again. (Thermo.OFF) Neither outdoor fan nor compressor runs.
- In Heating mode: The air conditioner continues to operate (Thermo.ON). Both the outdoor fan and compressor do not stop. As a result, the room becomes too warm.

B. Short

When thermistor is short, the air conditioner will be in the following conditions as the controller tries to detect extremely high room temperature.

- In Cooling mode: The air conditioner continues to operate (Thermo.ON). Both the outdoor fan and compressor do not stop. As a result, the room becomes too cold.
- In Heating mode: The air conditioner soon stops and will not start again (Thermo.OFF). Neither outdoor fan nor compressor runs.

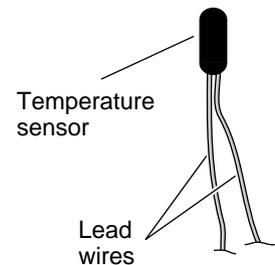

Thermistor Structure

NOTE

Definition of Open or Short Circuit of Sensor (Thermistor)

Open ... A lead wire is broken or disconnected or the circuit inside the temperature sensor is open .

Short ... The protective cover of a lead wire has been damaged, and the exposed wire is touching another metal part, or both lead wires have become exposed and are touching each other. Alternatively, the circuit inside the temperature sensor is closed.

9. REFRIGERANT R407C : SPECIAL PRECAUTIONS WHEN SERVICING UNIT

9-1. Characteristics of new refrigerant R407C

9-1-1. What is new refrigerant R407C

R407C is a new refrigerant that contains three types of non-azeotropy-type mixed refrigerant which does not adversely affect the Earth's ozone layer. Its refrigeration capacity and energy efficiency are about the same level as the conventional refrigerant R22

9-1-2. Components (mixing proportions)

HFC32 (23%) / HFC125 (25%) / HFC134a (52%)

9-1-3. Characteristics

- Less toxic, more chemically stable refrigerant.
- Composition of refrigerant R407C changes whether it is in gaseous phase or liquid phase. Thus, when there is a refrigerant leak the basic performance of the air conditioner may be degraded because of a change in composition of the remaining refrigerant. **Therefore, do not add new refrigerant.** Instead, recover the remaining refrigerant with the refrigerant recovery unit. Then, after evacuation, totally recharge the specified amount of refrigerant with the new refrigerant at its normal mixed composition state (liquid phase).
- When refrigerant R407C is used, the composition will differ depending on whether it is in gaseous or liquid phase, and the basic performance of the air conditioner will be degraded if it is charged while the refrigerant is in gaseous state. **Thus, always charge the refrigerant while it is in the liquid phase.**



CAUTION

- Ether-type oil is used for the compressor oil for R407C-type units, which is different from the mineral oil used for R22. Thus more attention to moisture prevention and faster replacement work compared with conventional models are required.

9-2. Checklist before servicing

● Tubing precautions

Refrigerant R407C is more easily affected by dust or moisture compared with R22, thus be sure to temporarily cover the ends of the tubing with caps or tape prior to installation.

● No addition of compressor oil for R407C

No additional charge of compressor oil is permitted.

● No use of refrigerant other than R407C

Never use a refrigerant other than R407C.

● If refrigerant R407C is exposed to fire

Through welding, etc., toxic gas may be released when R407C refrigerant is exposed to fire. Therefore, be sure to provide ample ventilation during installation work.

● Caution in case of R407C leak

Check for possible leak points with the special leak detector for R407C. If a leak occurs inside the room, immediately provide thorough ventilation.

9-3. Tools specifically for R407C

- For servicing, use the following tools for R407C

Tool Distinction	Tool Name
Tools specifically for R407C	<ul style="list-style-type: none"> • Gauge manifold • Charging hose • Gas leak detector • Refrigerant cylinder • Charging cylinder • Refrigerant recovery unit • Vacuum pump with anti-reverse flow (*1) (Solenoid valve-installed type, which prevents oil from flowing back into the unit when the power is off, is recommended.) • Vacuum pump (*2) can be used if the following adapter is attached. • Vacuum pump adapter (reverse-flow prevention adapter) (*3). (Solenoid valve-installed adapter attached to a conventional vacuum pump.) • Electronic scale for charging refrigerant • Flare tool
Tools which can be commonly used for R22 and R407C	<ul style="list-style-type: none"> • Bender • Torque wrench • Cutter, Reamer • Welding machine, nitrogen gas cylinder



CAUTION

- The above tools specifically for R407C must not be used for R22. Doing so will cause malfunction of the unit.
- For the above vacuum pump (*1, *2) and vacuum pump adapter (*3) , those for R22-type units can be used for R407C-type. However, they must be used exclusively for R407C and never alternately with R22.

9-4. For tubing installation procedures

- When the tubes are connected, *always apply HAB oil on the flare portions to improve the sealing of tubing.*

The following is the **HAB oil** generally used:
Esso: ZERICE S32

NOTE

For details on tubing installation procedures, refer to the installation manuals attached to the indoor unit and outdoor unit.

9-5. In case of compressor malfunction



CAUTION

- Should the compressor malfunction, be sure to replace compressor as quickly as possible.
- Use only the tools indicated exclusively for R407C. → See "10-3. Tools specifically for R407C".

10-5-1. Procedure for replacing compressor

(1) Recovering refrigerant

- Any remaining refrigerant inside the unit should not be released to the atmosphere, but recovered using the refrigerant recovery unit for R407C.
- Do not reuse the recovered refrigerant, since will contain impurities.

(2) Replacing compressor

- Soon after removing pinched pipes of both discharge and suction tubes of the new compressor, replace it quickly.

(3) Checking for sealing


- Use nitrogen gas for the pressurized gas, and never use a refrigerant other than R407C. Also do not use oxygen or any flammable gas.

(4) Evacuation

- **Use a solenoid valve-installed vacuum pump** so that even if power is cut off in the middle of evacuation of air due to a power interruption, the valve will prevent the pump oil from flowing back.
- The equipment may be damaged if moisture remains in the tubing, thus carry out the evacuation thoroughly.
- When using a vacuum pump with exhaust air volume more than 25L/min. and ultimate vacuum pressure rate of 0.05Torr:

Standard time of evacuation

Length of tubing	Less than 10 m	More than 10 m
Time	More than 10 min.	More than 15 min.

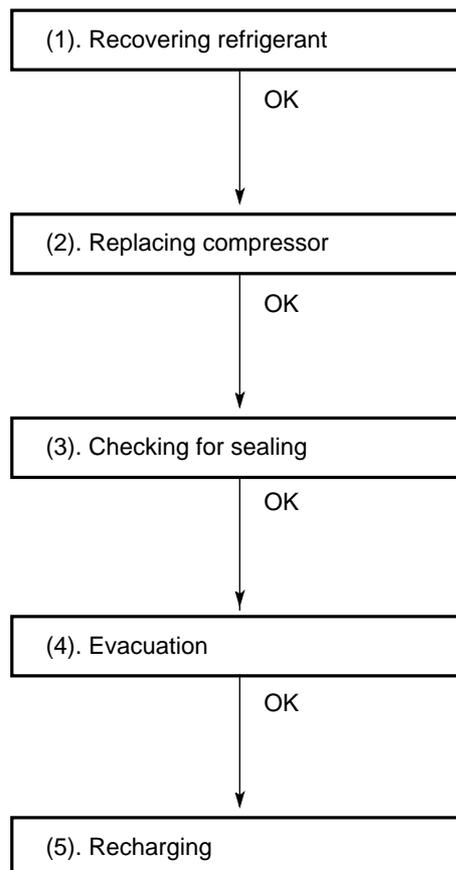

(5) Recharging

- **Be sure to charge the specified amount of refrigerant in liquid state** using the service port of wide tube service valve. The proper amount is listed on the unit's nameplate.

When the entire amount cannot be charged all at once, charge gradually while operating the unit in Cooling Operation.



CAUTION

- **Never charge a large amount of liquid refrigerant at once to the unit. This may cause damage to the compressor.**

- When charged with a refrigerant cylinder, use the electronic scale for charging refrigerant. In this case, if the volume of refrigerant in the cylinder becomes less than 20% of the fully-charged amount, the composition of the refrigerant starts to change. Thus, **do not use the refrigerant if the amount in the refrigerant cylinder is less than 20%.**

Also, charge the minimum necessary amount to the cylinder before using it for charging the air conditioning unit.

Example:

In case of charging refrigerant to a unit requiring 0.76Kg using a capacity of 10Kg-cylinder, the minimum necessary amount for the cylinder is:

$$0.76 + 10 \times 0.20 = 2.76\text{Kg}$$

For the remaining refrigerant, refer to the instructions of the refrigerant manufacturer.

- If using a charging cylinder, transfer the specified amount of liquid refrigerant from the refrigerant cylinder to the charging cylinder.


Prepare an evacuated charging cylinder beforehand.



CAUTION

- **To prevent the composition of R407C from changing, never bleed the refrigerant gas into the atmosphere while transferring the refrigerant. (Fig. 3)**


Do not use the refrigerant if the amount in the charging cylinder is less than 20%.

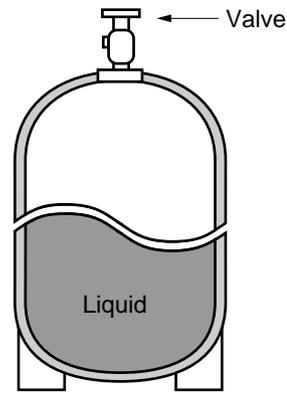

Single valve

Charge the liquid refrigerant with the cylinder in the up-side-down position.

Fig. 1

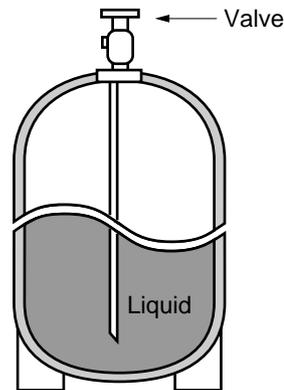

Single valve (with siphon tube)

Charge with the cylinder in the normal position.

Fig. 2

Configurations and characteristics of cylinders

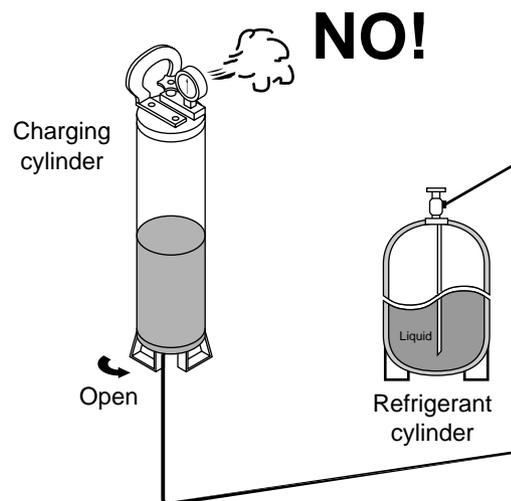


Fig.3

9-6. In case refrigerant is leaking



CAUTION

- Never attempt to charge additional refrigerant when refrigerant has been leaking from the unit. Follow the procedure described below to locate points of leaks and carry out repairs, then recharge the refrigerant.

(1) Detecting Leaks

- Use the detector for R407C to locate refrigerant leak points.

(2) Recovering refrigerant

- Never release the gas to the atmosphere, recover residual refrigerant using the refrigerant recovery unit for R407C, instead.
- Do not reuse the recovered refrigerant because its composition will have been altered.

(3) Welding leaking points

- Confirm again that no residual refrigerant exists in the unit before starting welding.
- Weld securely using flux and wax for R407C.
- Prevent oxide film from forming inside the tubes utilizing substitution with nitrogen (N₂) in the refrigerant circuit of the unit. Leave ends of tubes open during welding.

(4) Checking for sealing


- Use nitrogen gas for the pressurized gas, and never use a refrigerant other than R407C. Also do not use oxygen or any flammable gas.

(5) Evacuation

- **Use a solenoid valve-installed vacuum pump** so that even if power is cut off in the middle of evacuation of air due to a power interruption, the valve will prevent the pump oil from flowing back.
- The equipment may be damaged if moisture remains in the tubing, thus carry out the evacuation thoroughly.
- When using a vacuum pump with exhaust air volume more than 25L/min. and ultimate vacuum pressure rate of 0.05Torr:

Standard time of evacuation

Length of tubing	Less than 10 m	More than 10 m
Time	More than 10 min.	More than 15 min.

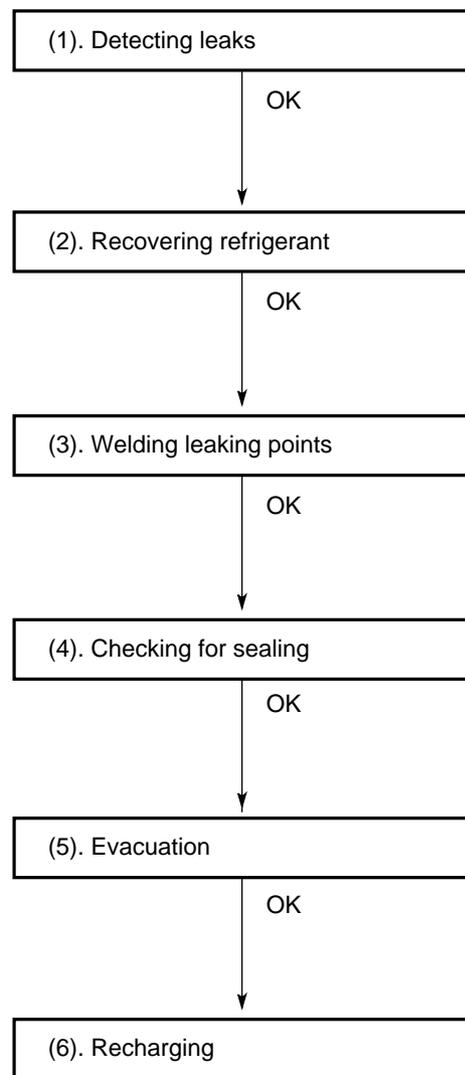

(6) Recharging

- **Be sure to charge the specified amount of refrigerant in liquid state** using the service port of wide tube service valve. The proper amount is listed on the unit's nameplate.

When the entire amount cannot be charged all at once, charge gradually while operating the unit in Cooling Operation.



CAUTION

- **Never charge a large amount of liquid refrigerant at once to the unit. This may cause damage to the compressor.**

- When charged with a refrigerant cylinder, use the electronic scale for charging refrigerant. In this case, if the volume of refrigerant in the cylinder becomes less than 20% of the fully-charged amount, the composition of the refrigerant starts to change. Thus, **do not use the refrigerant if the amount in the refrigerant cylinder is less than 20%.**

Also, charge the minimum necessary amount to the cylinder before using it for charging the air conditioning unit.

Example:

In case of charging refrigerant to a unit requiring 0.76Kg using a capacity of 10Kg-cylinder, the minimum necessary amount for the cylinder is:

$$0.76 + 10 \times 0.20 = 2.76\text{Kg}$$

For the remaining refrigerant, refer to the instructions of the refrigerant manufacturer.

- If using a charging cylinder, transfer the specified amount of liquid refrigerant from the refrigerant cylinder to the charging cylinder.


Prepare an evacuated charging cylinder beforehand.



CAUTION

- **To prevent the composition of R407C from changing, never bleed the refrigerant gas into the atmosphere while transferring the refrigerant. (Fig. 6)**


Do not use the refrigerant if the amount in the charging cylinder is less than 20%.

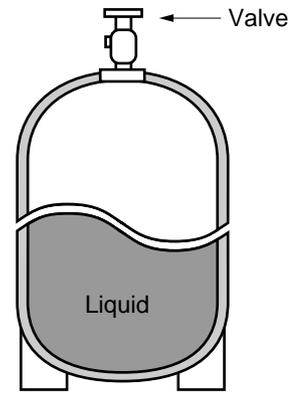

Single valve

Charge the liquid refrigerant with the cylinder in the up-side-down position.

Fig. 4

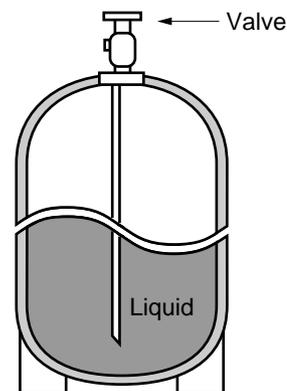

Single valve (with siphon tube)

Charge with the cylinder in the normal position.

Fig. 5

Configurations and characteristics of cylinders

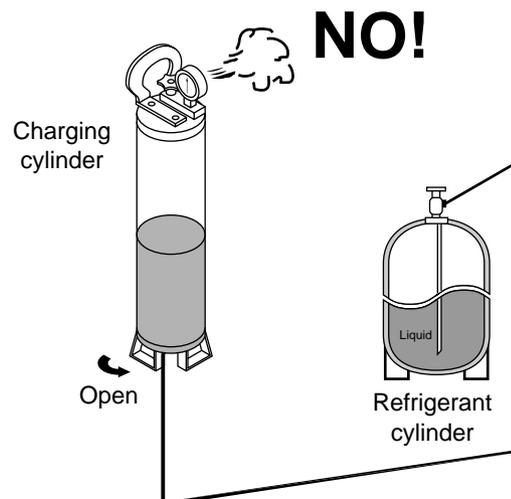


Fig. 6

9-7. Charging additional refrigerant

9-7-1. When tubes are extended

- Observe the proper amount of refrigerant as stated in this service manual or the installation manual that came with the indoor unit. **Charge additional refrigerant in liquid state.**



CAUTION

- Never charge additional refrigerant if refrigerant is leaking from the unit. Follow instructions given in "10-6. In case refrigerant is leaking" and completely carry out repairs. Only then should you recharge the refrigerant.

9-8. Retro-fitting existing systems

9-8-1 Use of existing units

- **Never use new refrigerant R407C for existing units which use R22.** This will cause the air conditioner to operate improperly and may result in a hazardous condition.

9-8-2 Use of existing tubing

- If replacing an older unit that used refrigerant R22 with a R407C unit, **do not use its existing tubing.** Instead, completely new tubing must be used.

10. CHECKING ELECTRICAL COMPONENTS

10-1. Measurement of Insulation Resistance

- The insulation is in good condition if the resistance exceeds $2M\Omega$.

10-1-1. Power Supply Wires

Clamp the grounding terminal of the power plug with a lead clip of the insulation resistance tester and measure the resistance by placing a probe on either of the two power terminals. (Fig. 1)

Then, also measure the resistance between the grounding and other power terminals. (Fig. 1)

10-1-2. Indoor Unit

Clamp an aluminum plate fin or copper tube with the lead clip of the insulation resistance tester and measure the resistance by placing a probe on each terminal screw where power supply lines are connected on the terminal plate. (Fig. 2)

10-1-3. Outdoor Unit

Clamp an aluminum plate fin or copper tube with the lead clip of the insulation resistance tester and measure the resistance by placing a probe on each terminal screw on the terminal plate. (Fig. 2)
Note that the ground line terminal should be skipped for the check.


10-1-4. Measurement of Insulation Resistance for Electrical Parts

Disconnect the lead wires of the desired electric part from terminal plate, capacitor, etc. Similarly disconnect the connector. Then measure the insulation resistance. (Figs. 3 and 4)

NOTE

Refer to Electric Wiring Diagram.

If the probe cannot enter the poles because the hole is too narrow then use a probe with a thinner pin.

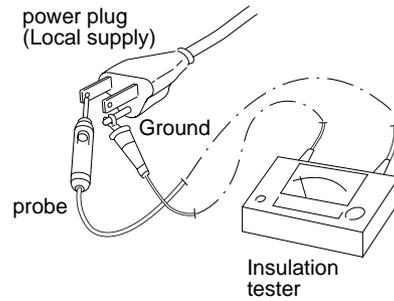

NOTE

The shape of the power plug may differ from that of the air conditioner which you are servicing.

Fig. 1

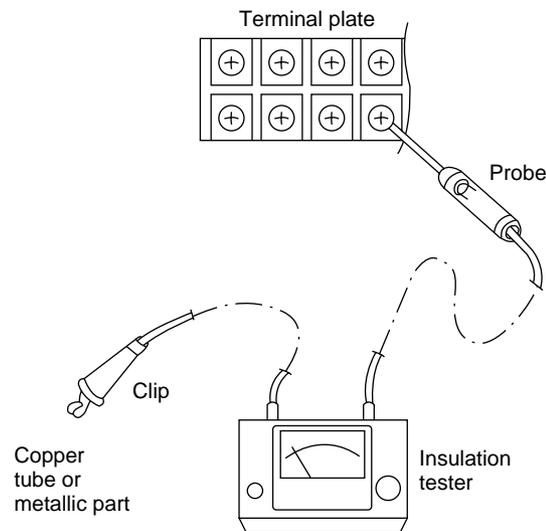


Fig. 2

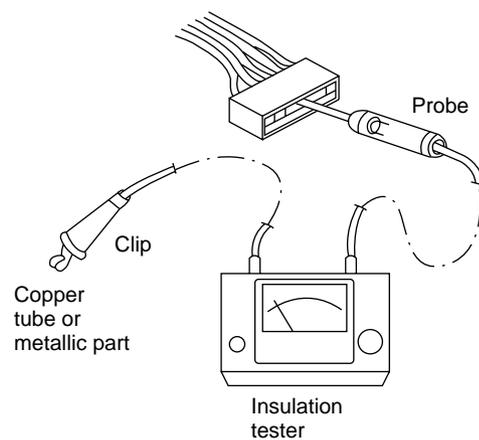


Fig. 3

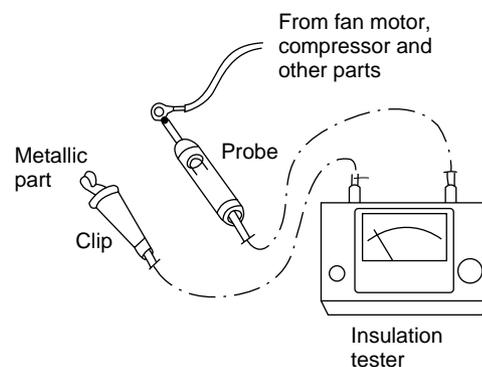


Fig. 4

10-2. Checking Continuity of Fuse on PCB Ass'y

- Remove the PCB Ass'y from the electrical component box. Then pull out the fuse from the PCB Ass'y. (Fig. 5)
- Check for continuity using a multimeter as shown in Fig. 6.

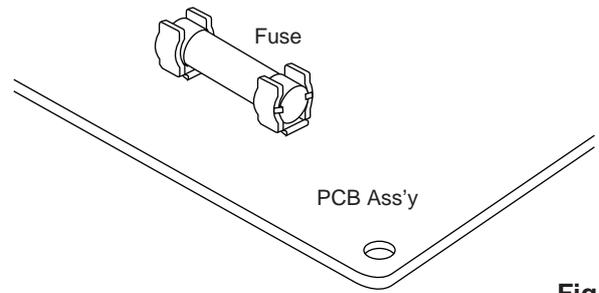


Fig. 5

10-3. Checking Motor Capacitor

Remove the lead wires from the capacitor terminals, and then place a probe on the capacitor terminals as shown in Fig. 7. Observe the deflection of the pointer, setting the resistance measuring range of the multimeter to the maximum value.

The capacitor is "good" if the pointer bounces to a great extent and then gradually returns to its original position.

The range of deflection and deflection time differ according to the capacity of the capacitor.

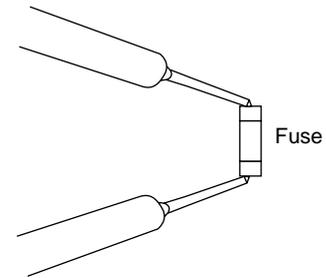


Fig. 6

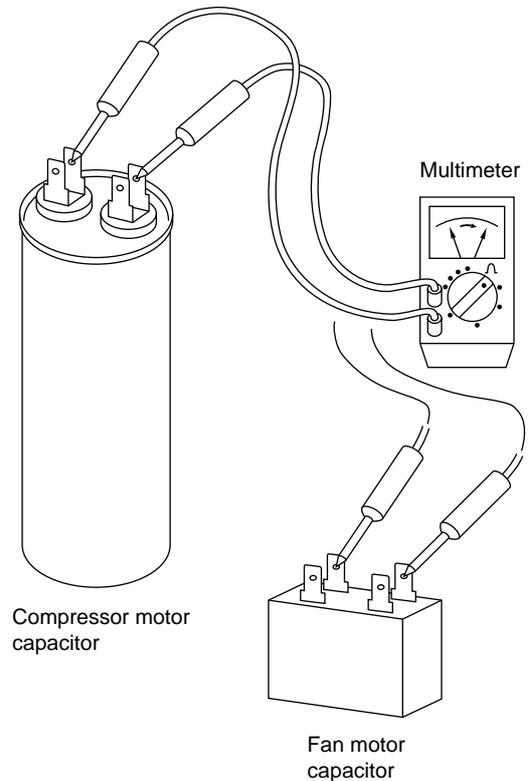


Fig. 7

argo

FILIBERTI
S.P.A.

21040 Oggiona con S. Stefano (VA) - Via Per Solbiate, 49 - Italy

Direzione e Uffici: Via Varese, 90 - 21013 GALLARATE (VA)

Tel. 0331/755.111 - Telex. 331060 ARGO I - FAX 0331/776.240
