
HITACHI Inspire the Next

SERVICE MANUAL TECHNICAL INFORMATION

FOR SERVICE PERSONNEL ONLY



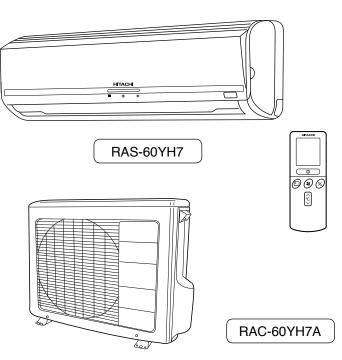

RAS-60YH7/RAC-60YH7A

REFER TO THE FOUNDATION MANUAL

CONTENTS

SPECIFICATIONS	5
HOW TO USE	7
CONSTRUCTION AND DIMENSIONAL DIAGRAM	29
MAIN PARTS COMPONENT	31
WIRING DIAGRAM	33
CIRCUIT DIAGRAM	35
PRINTED WIRING BOARD LOCATION DIAGRAM	41
BLOCK DIAGRAM	44
BASIC MODE	45
REFRIGERATING CYCLE DIAGRAM	59
AUTO SWING FUNCTION	60
DESCRIPTION OF MAIN CIRCUIT OPERATION	61
SERVICE CALL Q & A	74
TROUBLE SHOOTING	78
PARTS LIST AND DIAGRAM	98

SPECIFICATIONS

ТҮРЕ		(WALL TYPE)			
		INDOOR UNIT	OUTDOOR UNIT		
MODEL			RAS-60YH7	RAC-60YH7A	
POWER S	OURCE		1 PHASE, 50/60 Hz, 220-240V		
	TOTAL INPUT	(W)	1,850 (155 – 2,300)		
COOLING	TOTAL AMPERES	(A)	8.50 -	- 7.80	
		(kW)	6.00 (0.9 - 6.5)		
	CAPACITY	(B.T.U./h)	20,490 (3,070 - 22,190)		
TOTAL INPUT		(W)	1,880 (155 – 2,550)		
HEATING	TOTAL AMPERES	(A)	8.60 - 7.90		
	CADACITY	(kW)	6.80 (0.9 - 8.5)		
	CAPACITY	(B.T.U./h)	23,210 (3,070 – 29,000)		
		W	1030	850	
(mm)		Н	295	650	
		D	207	298	
NET WEIGHT (kg)		12	45		

 $\$ After installation


SPECIFICATIONS AND PARTS ARE SUBJECT TO CHANGE FOR IMPROVEMENT

ROOM AIR CONDITIONER

FEBRUARY 2012 Refrigeration & Air-Conditioning Division

SAFETY DURING REPAIR WORK


1. In order to disassemble and repair the unit in question, be sure to disconnect the power cord plug from the power outlet before starting the work.

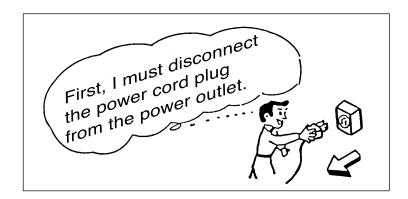

2. If it is necessary to replace any parts, they should be replaced with respective genuine parts for the unit, and the replacement must be effected in correct manner according to the instructions in the Service Manual of the unit.

If the contacts of electrical parts are defective, replace the electrical parts without trying to repair them.

- 3. After completion of repairs, the initial state should be restored.
- 4. Lead wires should be connected and laid as in the initial state.
- 5. Modification of the unit by user himself should absolutely be prohibited.

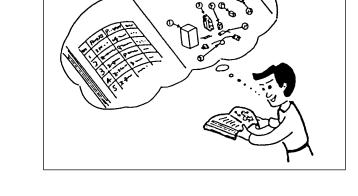

- 6. Tools and measuring instruments for use in repairs or inspection should be accurately calibrated in advance.
- 7. In installing the unit having been repaired, be careful to prevent the occurence of any accident such as electrical shock, leak of current, or bodily injury due to the drop of any part.
- 8. To check the insulation of the unit, measure the insulation resistance between the power cord plug and grounding terminal of the unit. The insulation resistance should be $1M\Omega$ or more as measured by a 500V DC megger.
- The initial location of installation such as window, floor or the other should be checked for being and safe enough to support the repaired unit again.
 If it is found not so strong and safe, the unit should be installed at the initial location reinforced or at a new location.
- 10. Any inflammable thing should never be placed about the location of installation.
- 11. Check the grounding to see whether it is proper or not, and if it is found improper, connect the grounding terminal to the earth.



WORKING STANDARDS FOR PREVENTING BREAKAGE OF SEMICONDUCTORS

1. Scope

The standards provide for items to be generally observed in carrying and handling semiconductors in relative manufacturers during maintenance and handling thereof. (They apply the same to handling of abnormal goods such as rejected goods being returned).

- 2. Object parts
 - (1) Micro computer
 - (2) Integrated circuits (IC)
 - (3) Field-effect transistors (FET)
 - (4) P.C. boards or the like on which the parts mentioned in (1) and (2) of this paragraph are equipped.
- 3. Items to be observed in handling
 - (1) Use a conductive container for carrying and storing of parts. (Even rejected goods should be handled in the same way).

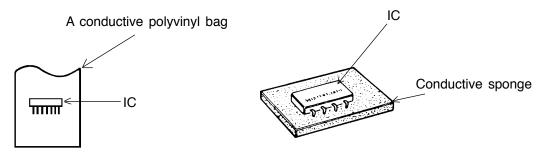


Fig. 1. Conductive Container

- (2) When any part is handled uncovered (in counting, packing and the like), the handling person must always use himself as a body earth. (Make yourself a body earth by passing $1M\Omega$ (earth resistance through a ring or bracelet).
- (3) Be careful not to touch the parts with your clothing when you hold a part even if a body earth is being taken.
- (4) Be sure to place a part on a metal plate with grounding.
- (5) Be careful not to fail to turn off power when you repair the printed circuit board. At the same time, try to repair the printed circuit board on a grounded metal plate.

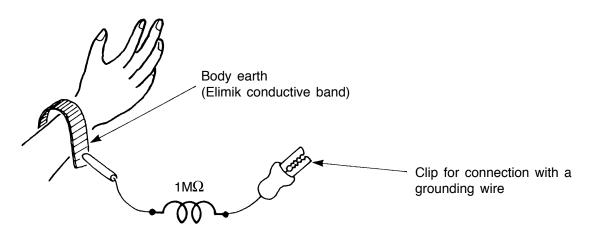


Fig. 2. Body Earth

(6) Use a three wire type soldering iron including a grounding wire.

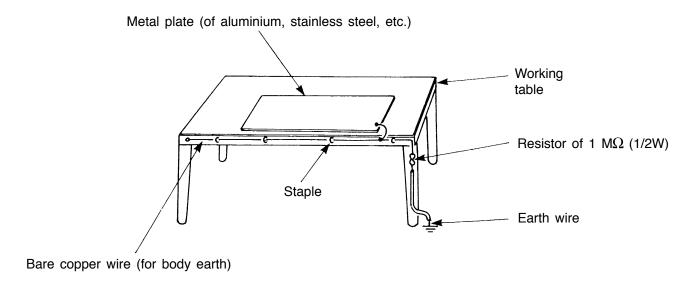


Fig. 3. Grounding of the working table

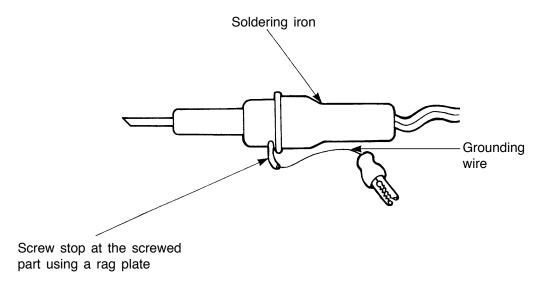


Fig. 4. Grounding a soldering iron


Use a high insulation mode (100V, $10M\Omega$ or higher) when ordinary iron is to be used.

(7) In checking circuits for maintenance, inspection or some others, be careful not to have the test probes of the measuring instrument shortcircuit a load circuit or the like.


- 1. In quiet or stop operation, slight flowing noise of refrigerant in the refrigerating cycle is heard occasionally, but this noise is not abnormal for the operation.
- 2. When it thunders near by, it is recommend to stop the operation and to disconnect the power cord plug from the power outlet for safety.
- 3. In the event of power failure, the air conditioner will restart automatically in the previously selected mode once the power is restored. In the event of power failure during TIMER operation, the air conditioner will not start automatically. Re-press ON/OFF button after 3 minutes from when the unit off or power recovery.
- 4. If the room air conditioner is stopped by adjusting thermostat, or missoperation, and re-start in a moment, there is occasion that the cooling and heating operation does not start for 3 minutes, it is not abnormal and this is the result of the operation of IC delay circuit. This IC delay circuit ensures that there is no danger of blowing fuse or damaging parts even if operation is restarted accidentally.
- 5. This room air conditioner should not be used at the cooling operation when the outside temperature is below -10°C (14°F).
- This room air conditioner (the reverse cycle) should not be used when the outside temperature is below -15°C (5°F).
 If the reverse cycle is used under this condition, the outside heat exchanger is frosted and efficiency falls.
- 7. When the outside heat exchanger is frosted, the frost is melted by operating the hot gas system, it is not trouble that at this time fan stops and the vapour may rise from the outside heat exchanger.

SPECIFICATIONS

MODEL		RAS-60YH7	RAC-60YH7A
FAN MOTOR		30 W	47 W
FAN MOTOR CAPACITOR		NO	NO
FAN MOTOR PROTECTOR		NO	NO
COMPRESSOR		_	JU1015D9
COMPRESSOR MOTOR CAP	ACITOR	NO	NO
OVERLOAD PROTECTOR		NO	YES (INTERNAL)
OVERHEAT PROTECTOR		NO	YES
FUSE (for MICROPROCESSC	PR)	3.15A	3.15A
POWER RELAY		G4A	G4A
POWER SWITCH		NO	NO
TEMPORARY SWITCH		YES	NO
TEST/SERVICE SWITCH		NO	YES
TRANSFORMER		NO	NO
VARISTOR		416NR	450NR
NOISE SUPPRESSOR		NO	YES
THERMOSTAT		YES(IC)	YES(IC)
REMOTE CONTROL SWITCH (LIQUID CRYSTAL)		YES	NO
REFRIGERANT CHARGING	UNIT		₩ 1650g
VOLUME (Refrigerant R410A)	PIPES (MAX. 30m) (MIN. 3m)	CHAR	GELESS

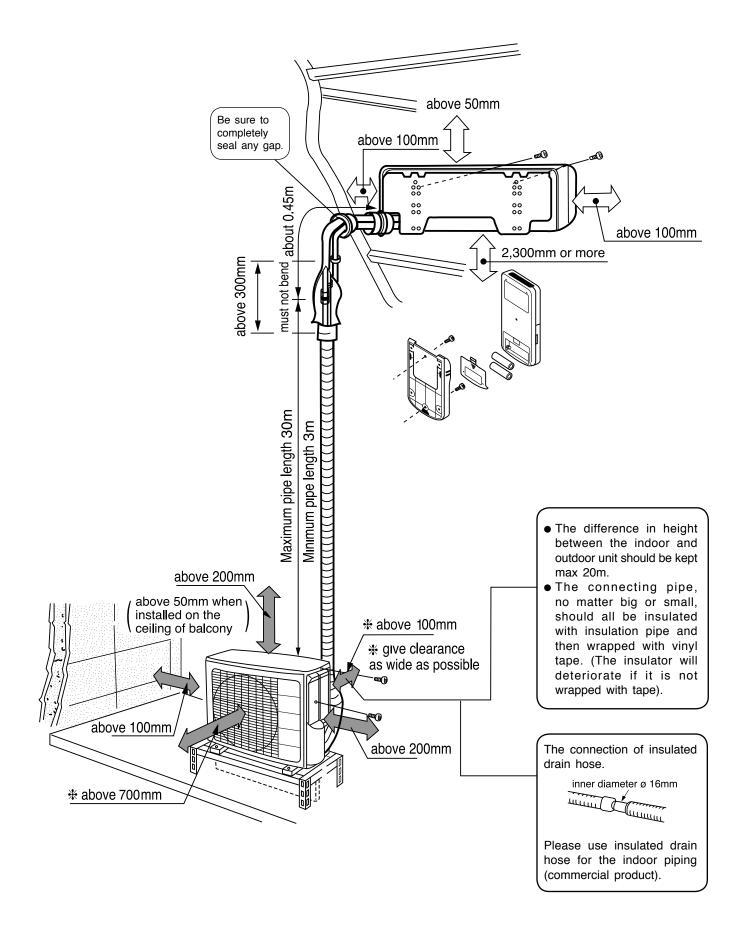


INDOOR UNIT

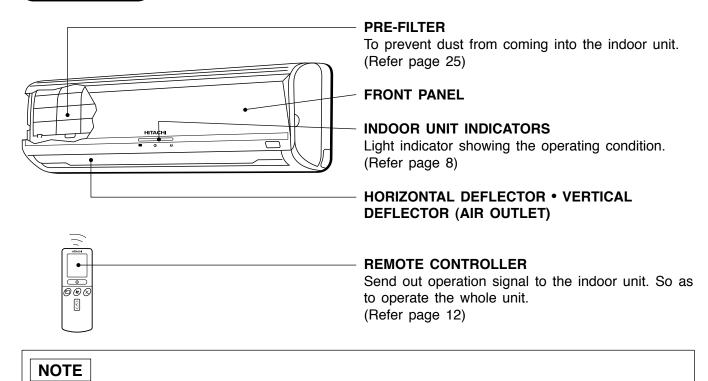

- Air cleansing filters are washable and can be use in 1 year time. Type number for this air cleansing filter is <SPX-CFH5>. Please use this number for ordering when you want to renew it.
- Air cleansing filter should be cleaned every month or sooner if noticeable loading occurs. When used overtime, it may loose its deodorizing function. For maximum performance, it is recommended to replace it every 1 year depending on application requirements.

OUTDOOR UNIT

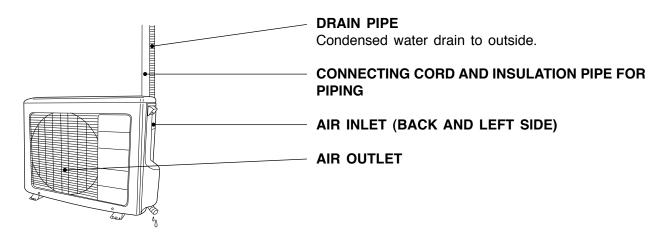

MODEL NAME AND DIMENSIONS

MODEL	WIDTH (mm)	HEIGHT (mm)	DEPTH (mm)
RAS-60YH7	1030	295	207
RAC-60YH7A	850	650	298

INDOOR UNIT INDICATORS



This lamp lights when the timer is working.

OPERATION LAMP

This lamp lights during operation. The OPERATION LAMP flashes in the following cases during heating.

(1) During preheating

For about 2–3 minutes after starting up.

(2) During defrosting


Defrosting will be performed about once an hour when frost forms on the heat exchanger of the outdoor unit, for 5–10 minutes each time.

FILTER LAMP

When the device is operated for a total of about 200 hours, the FILTER lamp lights to indicate that it is time to clean the filter. The lamp goes out when the " $(\underline{\times})$ (AUTO SWING)" button is pressed while the device is on "STANDBY MODE".

OPERATION INDICATOR


• This figure shows the opening condition of front panel. Refer to instruction manual in relation to how to open or close the front panel.

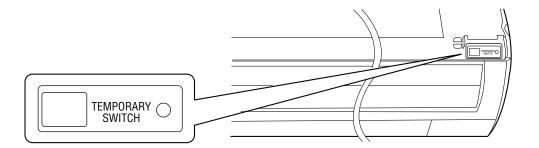

TEMPORARY SWITCH

Use this switch to start and stop when the remote controller does not work. [Use non-conductor stick (example: toothpick)]

- By pressing the temporary switch, the operation is done in previously set operation mode.
- When the operation is done using the temporary switch after the power source is turned off and turn on again, the operation is done in automatic mode.

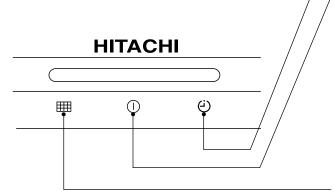

Note

 Avoid to use the room air conditioner for cooling operation when the outside temperature is below -10°C (14°F).

The recommended maximum and minimum operating temperatures of the hot and cold sides should be as below:

		Coo	ling	Heating	
		Minimum	Maximum	Minimum	Maximum
lundo e u	Dry bulb °C	21	32	20	27
Indoor	Wet bulb °C	15	23	12	19
Outdoor	Dry bulb °C	21	43	2	21
Outdoor	Wet bulb °C	15	26	1	15

MEMO




SAFETY PRECAUTION

- Please read the "Safety Precaution" carefully before operating the unit to ensure correct usage of the unit.
- Pay special attention to signs of "A Warning" and "A Caution". The "Warning" section contains matters which, if not observed strictly, may cause death or serious injury. The "Caution" section contains matters which may result in serious consequences if not observed properly. Please observe all instructions strictly to ensure safety.
- The sign indicate the following meanings.

Make sure to connect earth line.	\odot	The sign in the figure indicates prohibition.
Indicates the instructions that must be followed.		

Please keep this manual after reading.

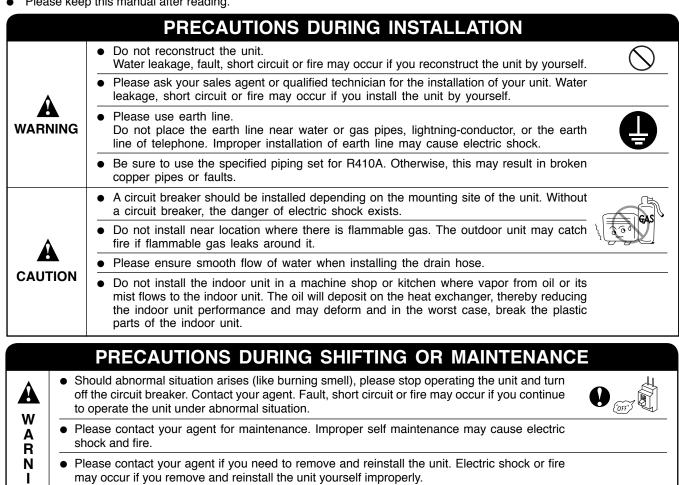

• If the supply cord is damaged, it must be replaced by the special cord obtainable at authorized service/parts centers.

PRECAUTIONS DURING OPERATION

- Avoid an extended period of direct air flow for your health.
- A W Α

Ν

G

R

Ν I

Ν

G

 Do not insert a finger, a rod or other objects into the air outlet or inlet. As the fan is rotating at a high speed, it will cause injury. Before cleaning, be sure to stop the operation and turn the breaker OFF.

(OFF)

Do not use any conductor as fuse wire, this could cause fatal accident.



• During thunder storm, disconnect and turn off the circuit breaker.

• Spray cans and other combustibles should not be located within a meter of the air outlets of both indoor and outdoor units. As a spray can's internal pressure can be increased by hot air, a rupture may result.

PRECAUTIONS DURING OPERATION

• The product shall be operated under the manufacturer specification and not for any other intended use.





- Do not attempt to operate the unit with wet hands, this could cause fatal accident.
- When operating the unit with burning equipments, regularly ventilate the room to avoid oxygen insufficiency.





• Do not direct the cool air coming out from the air-conditioner panel to face household heating apparatus as this may affect the working of apparatus such as the electric kettle, oven etc.

• Please ensure that outdoor mounting frame is always stable, firm and without defect. If not, the outdoor unit may collapse and cause danger.





• Do not splash or direct water to the body of the unit when cleaning it as this may cause short circuit.

• Do not use any aerosol or hair sprays near the indoor unit. This chemical can adhere on heat exchanger fin and blocked the evaporation water flow to drain pan. The water will drop on tangential fan and cause water splashing out from indoor unit.





C A

U

T I O

Ν

• Please switch off the unit and turn off the circuit breaker during cleaning, the high-speed fan inside the unit may cause danger.

• Turn off the circuit breaker if the unit is not to be operated for a long period.





("OFF"

• Do not climb on the outdoor unit or put objects on it.

• Do not put water container (like vase) on the indoor unit to avoid water dripping into the unit. Dripping water will damage the insulator inside the unit and causes short-circuit.






- Do not place plants directly under the air flow as it is bad for the plants.
- When operating the unit with the door and windows opened, (the room humidity is always above 80%) and with the air deflector facing down or moving automatically for a long period of time, water will condense on the air deflector and drips down occasionally. This will wet your furniture. Therefore, do not operate under such condition for a long time.
- If the amount of heat in the room is above the cooling or heating capability of the unit (for example: more people entering the room, using heating equipments and etc.), the preset room temperature cannot be achieved.
- This appliance is not intended for use by young children or infirm persons unless they have been adequately supervised by a responsible person to ensure that they can use the appliance safely.
 Young children should be supervised to ensure that they do not play with the appliance.

REMOTE CONTROLLER


- This controls the operation of the indoor unit. The range of control is about 7 meters. If indoor lighting is controlled electronically, the range of control may be shorter.
 This unit can be fixed on a wall using the fixture provided. Before fixing it, make sure the indoor unit can be controlled from the remote controller.
- Handle the remote controller with care. Dropping it or getting it wet may compromise its signal transmission capability.
- After new batteries are inserted into the remote controller, the unit will initially require approximately 10 seconds to respond to commands and operate.

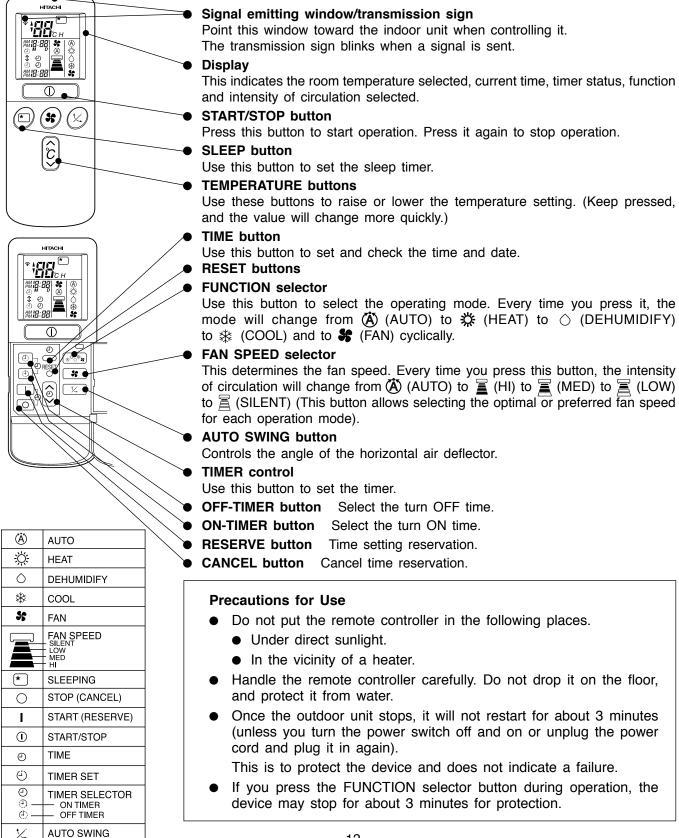


Auto Restart Control

- If there is a power failure, operation will be automatically restarted when the power is resumed with previous operation mode and airflow direction.
- (As the operation is not stopped by remote controller.)
- If you intend not to continue the operation when the power is resumed, switch off the power supply. When you switch on the circuit breaker, the operation will be automatically restarted with previous operation mode and airflow direction.
 - Note: 1. If you do not require Auto Restart Control, please consult your sales agent or OFF by remote control. 2. Auto Restart Control is not available when Timer or Sleep Timer mode is set.

The device will automatically determine the mode of operation, HEAT, COOL or DEHUMIDIFY depending on the current room temperature. The selected mode of operation will change when the room temperature varies. However the mode of operation will not change when indoor unit connected to multi type outdoor unit.

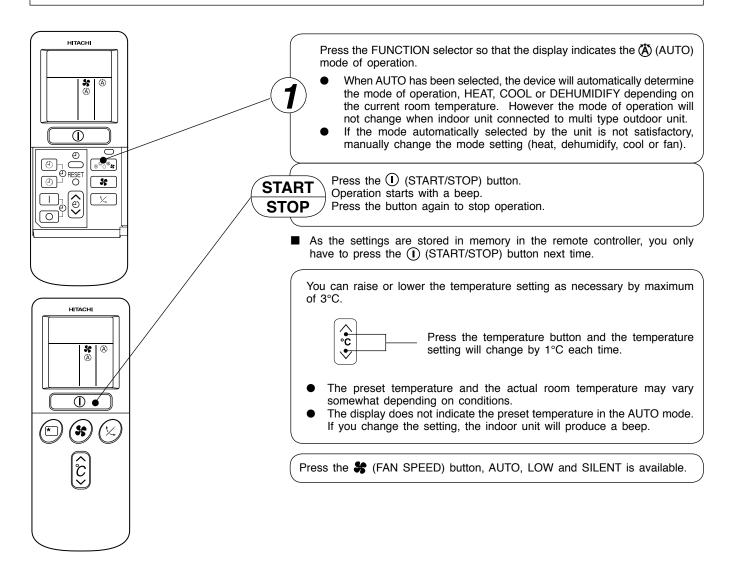

- Use the device for heating when the outdoor temperature is under 21°C.
- When it is too warm (over 21°C), the heating function may not work in order to protect the device.
- In order to keep reliability of the device, please use this device above -15°C of the outdoor temperature.

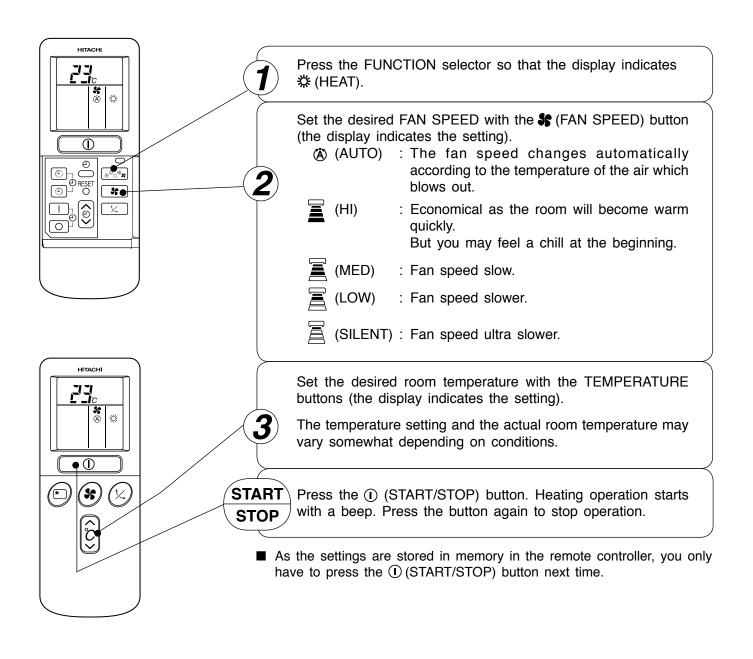

Defrosting


Defrosting will be performed about once an hour when frost forms on the heat exchange of the outdoor unit, for $5\sim10$ minutes each time.

During defrosting operation, the operation lamp blinks in cycle of 3 seconds on and 0.5 second off. The maximum time for defrosting is 20 minutes.

However, if it is connected to multi type outdoor unit, the maximum time for defrosting is 15 minutes. (If the piping length used is longer than usual, frost will likely to form.)

DEHUMIDIFYING OPERATION

Use the device for dehumidifying when the room temperature is over 16°C. When it is under 15°C, the dehumidifying function will not work.

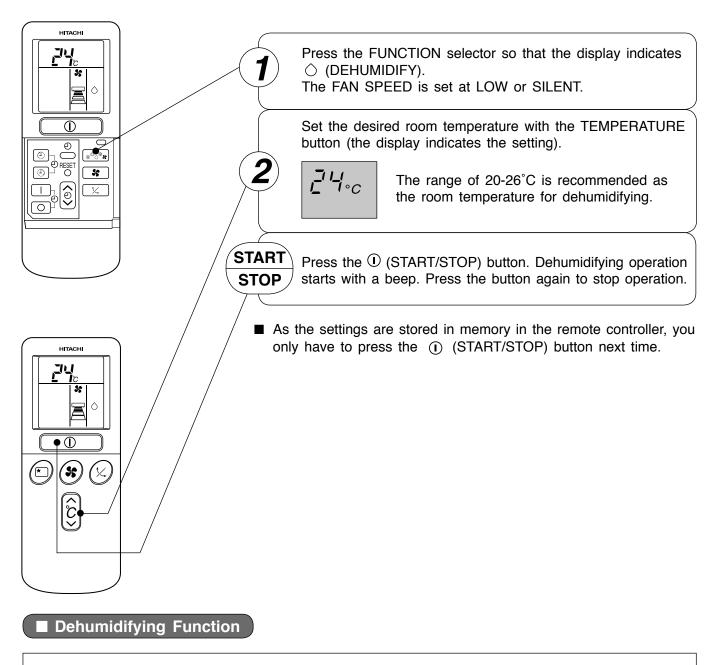


• When the room temperature is higher than the temperature setting: The device will dehumidify the room, reducing the room temperature to the preset level. When the room temperature is lower than the temperature setting: Dehumidifying will be performed at the temperature setting slightly lower than the current room temperature, regardless of the temperature setting. The function will stop (the indoor unit will stop emitting air) as soon as the room temperature becomes lower than the setting temperature.


• The preset room temperature may not be reached depending on the number of people present in the room or other room conditions.

COOLING OPERATION

Use the device for cooling when the outdoor temperature is $-10^{\circ}C \sim 43^{\circ}C$. If in doors humidity is very high (80%), some dew may form on the air outlet grille of the indoor unit.

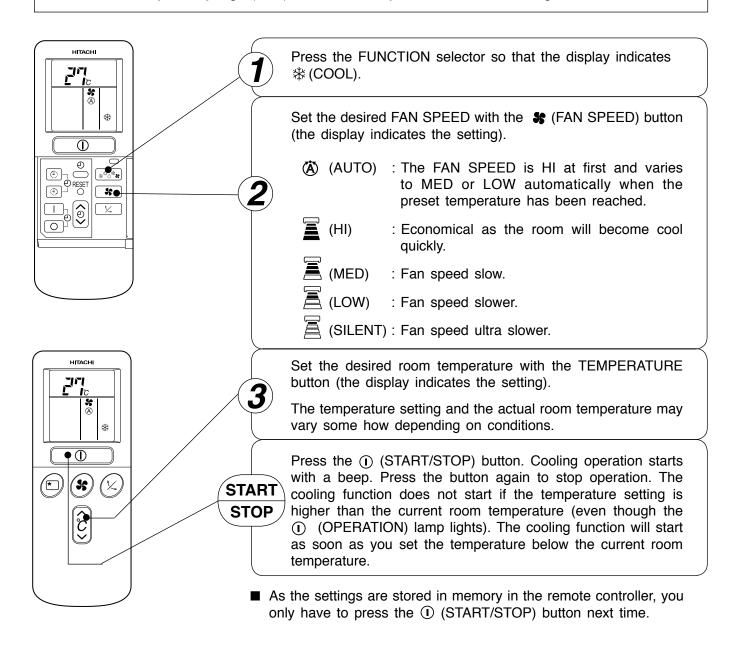


You can use the device simply as an air circulator. Use this function to dry the interior of the indoor unit at the end of summer.

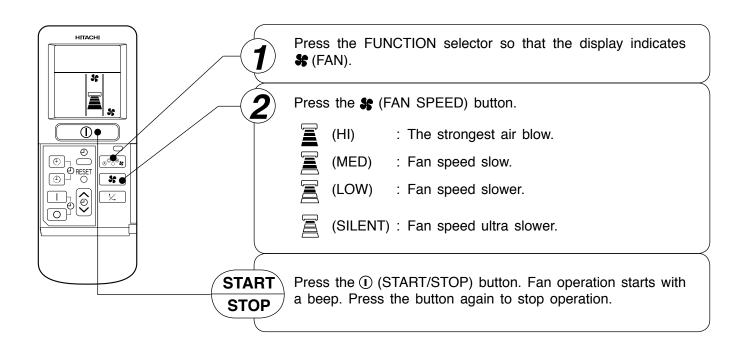


FAN SPEED (AUTO) When the AUTO fan speed mode is set in the cooling/heating operation:

For the heating operation	 When the difference of room temperature and setting temperature is large, fan starts to run at HI speed. After room temperature reaches the preset temperature, the heating operation, which changes the fan speed and room temperature to obtain optimum conditions for natural healthful heating will be performed.
For the cooling operation	 When the difference of room temperature and setting temperature is large, fan starts to run at HI speed. After room temperature reaches the preset temperature, the cooling operation, which changes the fan speed and room temperature to obtain optimum conditions for natural healthful cooling will be performed.

HOW TO SET THE TIMER

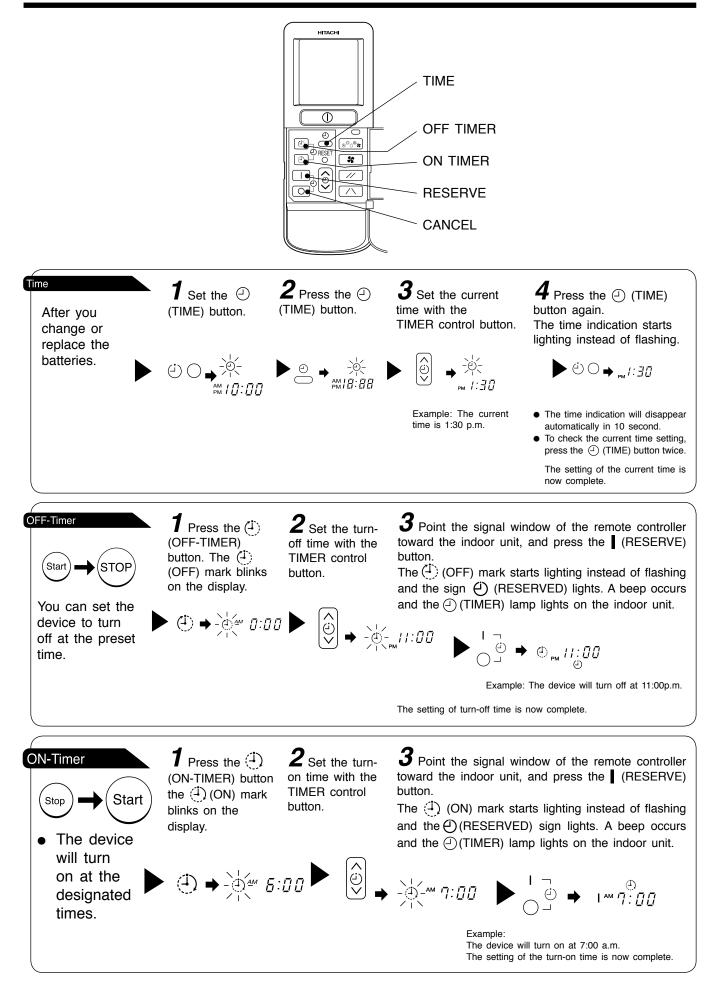

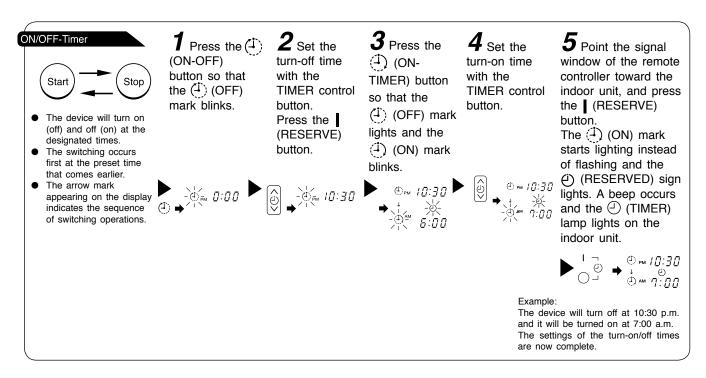

- The timer may be used in three ways: off-timer, on-timer, and ON/OFF (OFF/ON)-timer. Set the current time at first because it serves as a reference.
- As the time settings are stored in memory in the remote controller, you only have to press the
 (RESERVE) button in order to use the same settings next time.

How to Cancel Reservation

Point the signal window of the remote controller toward the indoor unit, and press the \bigcirc (CANCEL) button.


The () (RESERVED) sign goes out with a beep and the () (TIMER) lamp turns off on the indoor unit.

NOTE

You can set only one of the OFF-timer, ON-timer and ON/OFF-timer.

HOW TO SET THE SLEEP TIMER

Set the current time at first if it is not set before (see the pages for setting the current time). Press the \star (SLEEP) button, and the display changes as shown below.

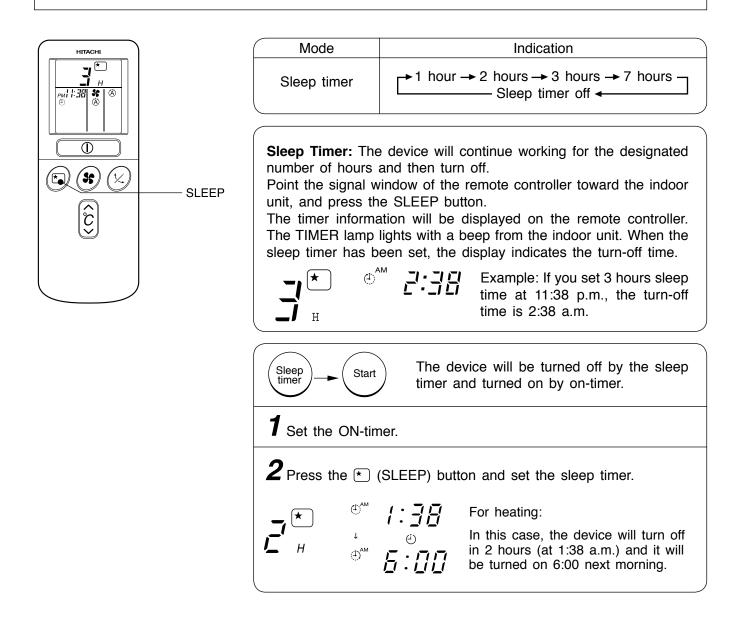

How to Cancel Reservation


Point the signal window of the remote controller toward the indoor unit, and press the \bigcirc (CANCEL) button.

The () (RESERVED) sign goes out with a beep and the () (TIMER) lamp turns off on the indoor unit.

HOW TO EXCHANGE THE BATTERIES IN THE REMOTE CONTROLLER

Remove the cover as shown in the figure and take out the old batteries.

Install the new batteries. The direction of the batteries should match the marks in the case.

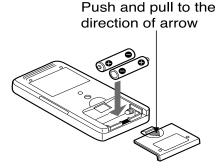

A CAUTION

- 1. Do not use new and old batteries, or different kinds of batteries together.
- 2. Take out the batteries when you do not use the remote controller for 2 or 3 months.


TEMPORARY SWITCH

If the remote controller does not work due to battery failure, press this switch to start and stop operation.


• This temporary operation will be at the setting made most recently. (The unit will immediately go into automatic operation once power is switched on.)

CIRCUIT BREAKER

When you do not use the room air conditioner, set the circuit breaker to "OFF".

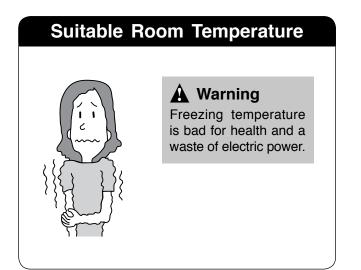

Install curtain or blinds

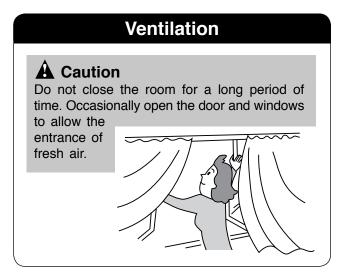

Do Not Forget To Clean The Pre-Filter

Dusty pre-filter will reduce the air volume and the cooling efficiency. To prevent from wasting electric energy, please clean the filter every 2 weeks.



Effective Usage Of Timer

At night, please use the "OFF or ON timer operation mode", together with your wake up time in the morning. This will enable you to enjoy a comfortable room temperature. Please use the timer effectively.



Please Adjust Suitable Temperature For Baby And Children

Please pay attention to the room temperature and air flow direction when operating the unit for baby, children and old folks who have difficulty in movement.




FOR USER'S INFORMATION

The Air Conditioner And The Heat Source In The Room


A Caution

If the amount of heat in the room is above the cooling capability of the air conditioner (for example: more people entering the room, using heating equipments and etc.), the preset room temperature cannot be achieved.

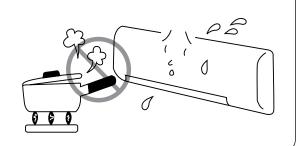

Not Operating For A Long Time


When the indoor unit is not to be used for a long period of time, please switch off the power from the mains. If the power from mains remains "ON", the indoor unit still consumes about 8W in the operation control circuit even if it is in "OFF" mode.

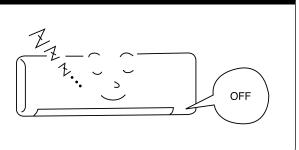

When Lightning Occurs

A Warning


To protect the whole unit during lightning, please stop operating the unit and remove the plug from the socket.

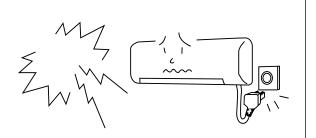

Interference From Electrical Products

A Caution

To avoid noise interference, please place the indoor unit and its remote controller at least 1m away from electrical products.

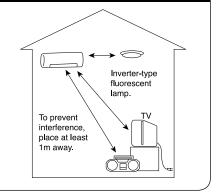



Cleaning and maintenance must be carried out only by qualified service personnel. Before cleaning, stop operation and switch off the power supply.



Open the front panel.

• Pull up the front panel by holding it at both sides with both hands.



Remove the pre-filter.

• Push upward to release the claws and pull out the pre-filter.



Attaching the air purifying filters to the pre-filter.


 Attach the air purifying filters to the frame by gently compress its both sides and release after insertion into filter frame.


Do not bend the air purifying filter as it may cause damage to

written "FRONT" is facing front.

the structure.

Attach the pre-filters.

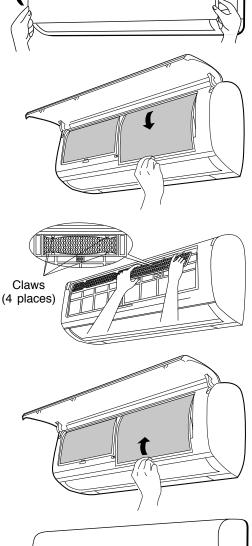



NOTE

- In case of removing the air purifying filters, please follow the above procedures.
- The cooling capacity is slightly weakened and the cooling speed becomes slower when the air purifying filters are used. So, set the fan speed to "HIGH" when using it in this condition.
- Do not operate the air conditioner without pre-filter. Dust may enter the air conditioner and fault may occur.



MAINTENANCE

Cleaning and maintenance must be carried out only by qualified service personnel. Before cleaning, stop operation and switch off the power supply.

1. PRE-FILTER I


Clean the pre-filter, as it removes dust inside the room. In case the pre-filter is full of dust, the air flow will decrease and the cooling capacity will be reduced. Further, noise may occur. Be sure to clean the pre-filter following the procedure below.

PROCEDURE

- Open the front panel and remove the pre-filter
 Gently lift and remove the air purifying filter from the pre-filter frame.
- Vacuum dust from the pre-filter and air purifying filter using vacuum cleaner. If there is too much dust, pre-filter only rinse under running tap water and gently brush it with soft bristle brush. Allow pre-filters to dry in shade.



- Re-insert the air purifying filter to the filter frame. Set the filter with "FRONT" mark facing front, and slot them into the original state.
 - After attaching the pre-filters, push the front panel at three arrow portions as shown in figure and close it.

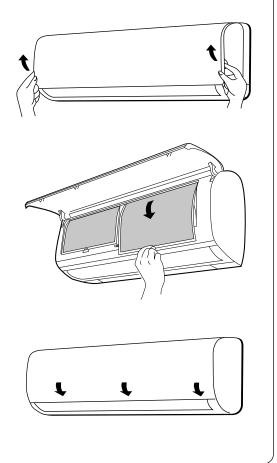


- Do not wash with hot water at more than 40°C. The pre-filter may shrink.
- When washing it, shake off moisture completely and dry it in the shade; do not expose it directly to the sun. The pre-filter may shrink.
- Do not use detergent on the air purifying filter as some detergent may deteriorate the filter electrostatic performance.

2. Washable Front Panel

- Remove the front panel and wash with clean water. Wash it with a soft sponge. After using neutral detergent, wash thoroughly with clean water.
- When front panel is not removed, wipe it with a soft dry cloth. Wipe the remote controller thoroughly with a soft dry cloth.
- Wipe the water thoroughly. If water remains at indicators or signal receiver of indoor unit, it causes trouble.

Method of removing the front panel. Be sure to hold the front panel with both hands to detach and attach it.

Removing the Front Panel



- When the front panel is fully opened with both hands, push the right arm to the inside to release it, and while closing the front panel slightly, put it out forward.
- Attaching the Front Panel
 - Move the projections of the left and right arms into the **Flanges** in the unit and securely insert them into the holes.

- Do not splash or direct water to the body of the unit when cleaning it as this may cause short circuit.
- Never use hot water (above 40°C), benzine, gasoline, acid, thinner or a brush, because they will damage the plastic surface and the coating.



A CAUTION

Cleaning and maintenance must be carried out only by qualified service personnel. Before cleaning, stop operation and switch off the power supply.

3. MAINTENANCE BEFORE LONG OFF PERIOD• Run the unit by setting the operation mode to * (COOL), the temperature to 32°C and the fan speed to HI for about half a day on a fine day, and dry the whole of the unit. • Switch off the power plug.

REGULAR INSPECTION

PLEASE CHECK THE FOLLOWING POINTS BY QUALIFIED SERVICE PERSONNEL EITHER EVERY HALF YEARLY OR YEARLY. CONTACT YOUR SALES AGENT OR SERVICE SHOP.

1		Is the earth line disconnected or broken?
2		Is the mounting frame seriously affected by rust and is the outdoor unit tilted or unstable?
3	Confirm	Is the plug of power line firmly plugged into the socket? (Please ensure no loose contact between them).

AFTER SALE SERVICE AND WARRANTY

WHEN ASKING FOR SERVICE, CHECK THE FOLLOWING POINTS.

CONDITION	CHECK THE FOLLOWING POINTS
If the remote controller is not transmitting a signal. Remote controller display is dim or blank.	 Do the batteries need replacement? Is the polarity of the inserted batteries correct?
When it does not operate	 Is the fuse all right? Is the voltage extremely high or low? Is the circuit breaker "ON"? Is the setting of operation mode different from other indoor units?
When it does not cool well When it does not hot well	 Is the pre-filter blocked with dust? Does sunlight fall directly on the outdoor unit? Is the air flow of the outdoor unit obstructed? Are the doors or windows opened, or is there any source of heat in the room? Is the set temperature suitable? Are the air inlets or air outlets of indoor and outdoor units blocked? Is the fan speed "LOW" or "SILENT"?

Notes


- In quiet operation or stopping the operation, the following phenomena may occassionally occur, but they are not abnormal for the operation.
 - (1) Slight flowing noise of refrigerant in the refrigerating cycle.
 - (2) Slight rubbing noise from the fan casing which is cooled and then gradually warmed as operation stops.
- The odor will possibly be emitted from the room air conditioner because the various odor, emitted by smoke, foodstuffs, cosmetics and so on, sticks to it. So the pre-filter and the evaporator regularly must be cleaned to reduce the odor.
- Please contact your sales agent immediately if the air conditioner still fails to operate normally after the above inspections. Inform your agent of the model of your unit, production number, date of installation. Please also inform him regarding the fault.
- Power supply shall be connected at the rated voltage, otherwise the unit will be broken or could not reach the specified capacity.

NOTE:

- If the supply cord is damaged, it must be replaced by the special cord obtainable at authorized service parts centers.
- On switching on the equipment, particularly when the room light is dimmed, a slight brightness fluctuation may occur. This is of no consequence.
 - The conditions of the local Power Supply Companies are to be observed.


CONSTRUCTION AND DIMENSIONAL DIAGRAM

MODEL RAS-60YH7

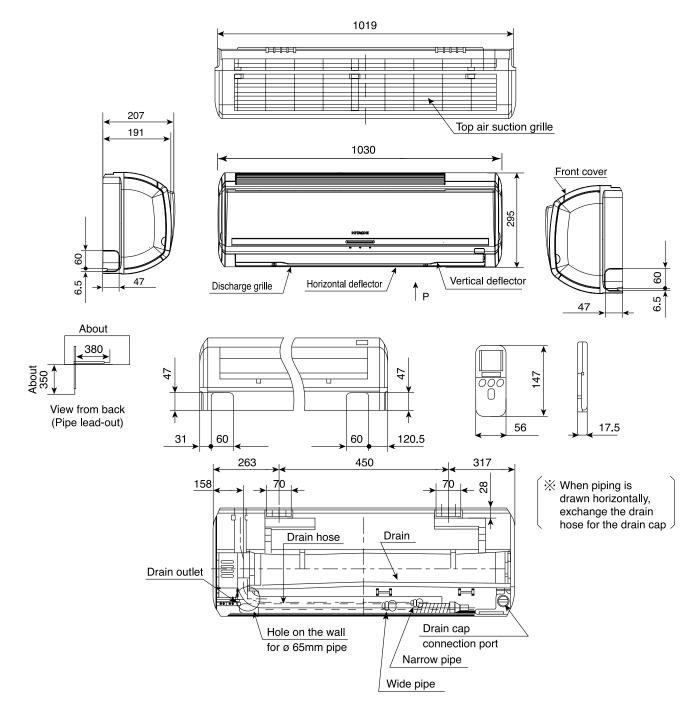

CONSTRUCTION AND DIMENSIONAL DIAGRAM

MODEL RAC-60YH7A

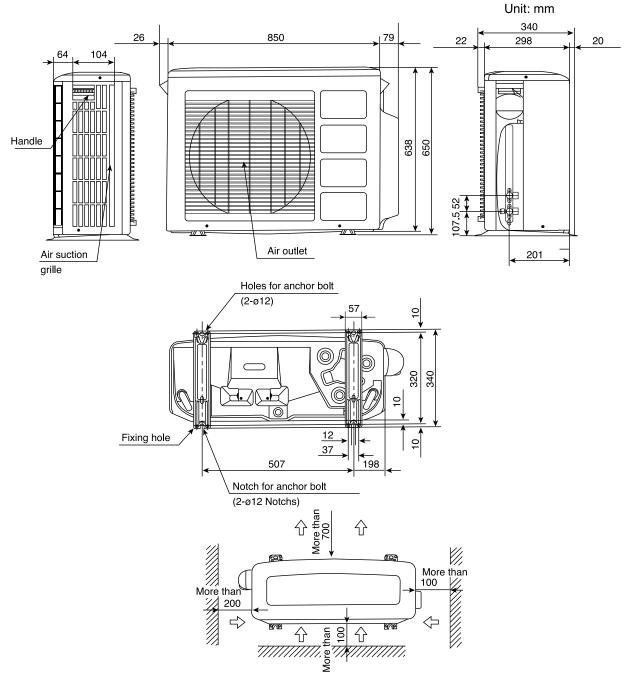

Service space

MAIN PARTS COMPONENT

THERMOSTAT (Room Temperature Thermistor)

Thermostat Specifications

MODEL			RAS-60YH7		
THERMOSTAT MODEL			IC		
OPERATION MODE			COOL	HEAT	
	INDICATION		15.6 (60.1)	20.0 (68.0)	
	16	OFF	15.3 (59.5)	20.7 (69.3)	
TEMPERATURE °C (°F)	INDICATION	ON	23.6 (74.5)	28.0 (82.4)	
	24	OFF	23.3 (73.9)	28.7 (83.7)	
	INDICATION	ON	31.6 (88.9)	36.0 (96.8)	
	32	OFF	31.3 (88.3)	36.7 (98.1)	

INDOOR FAN MOTOR

Fan Motor Specifications

MODEL	RAS-60YH7		
POWER SOURCE	DC: 100 ~ 322V		
OUTPUT	30W		
CONNECTION	35V 0 RED 0V 0 BLK 5V 0 WHT 0 ~ 5V 0 FG 0 BLU FG 0 BLU FG 0 BLU FG 0 BLU		


OUTDOOR FAN MOTOR


Fan Motor Specifications

ITEM	MODEL	RAC-60YH7A
POWER SOURCE		DC: 120 ~ 380V
OUTPUT	(W) MAX	47
COIL		BLACK (W)
RESISTANCE VALUE (Ω)	20°C 2M	U-V 35 ± 2.5 V-W 35 ± 2.5 W-U 35 ± 2.5
BLU : BLUE GRY : GRAY BLK : BLACK	YEL : YELLO ORN : ORANO PNK : PINK	


COMPRESSOR MOTOR

Compressor Motor Specifications

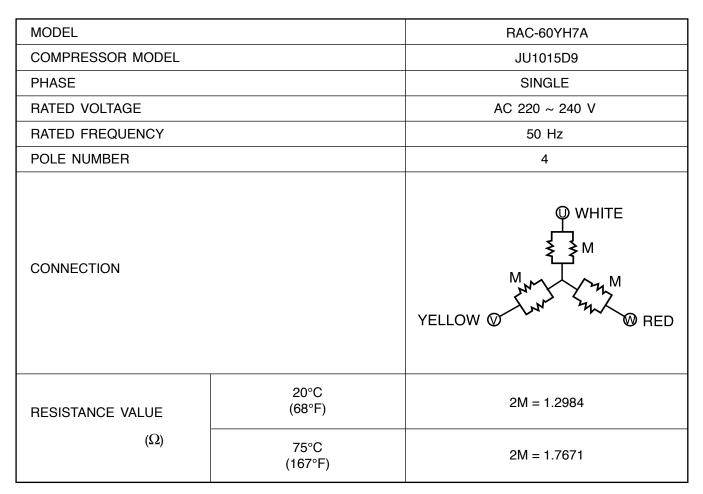


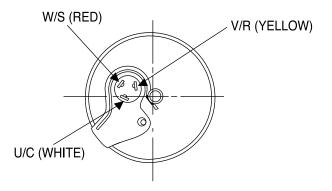


When the Air Conditioner has been operated for a long time with the capillary tubes clogged or crushed or with too little refrigerant, check the color of the refrigerant oil inside the compressor. If the color has been changed conspicuously, replace the compressor.

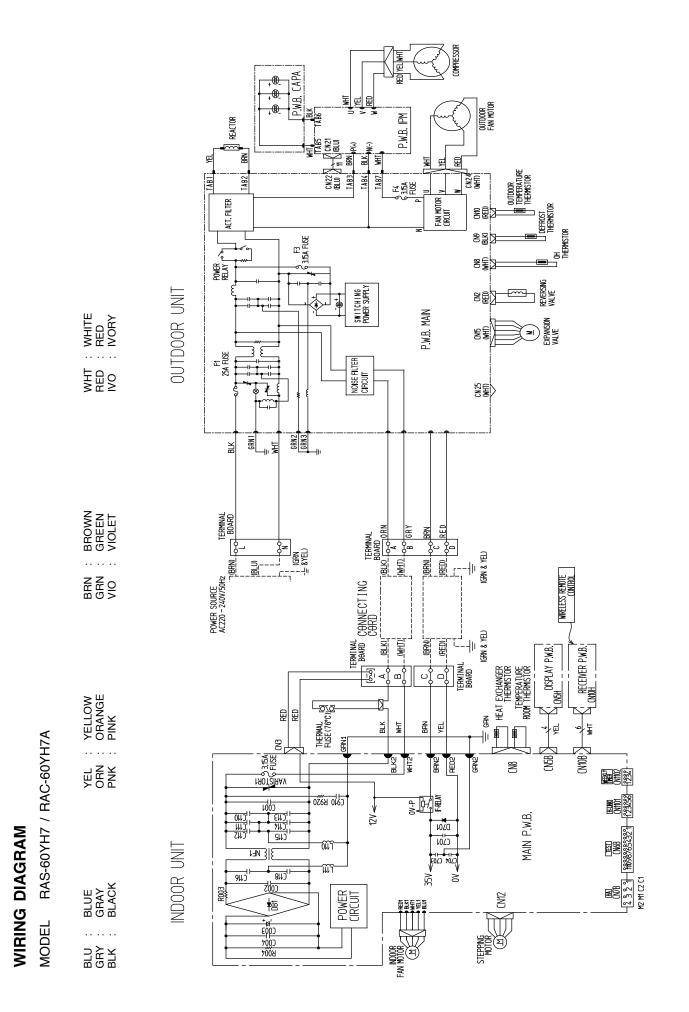

Remote Control

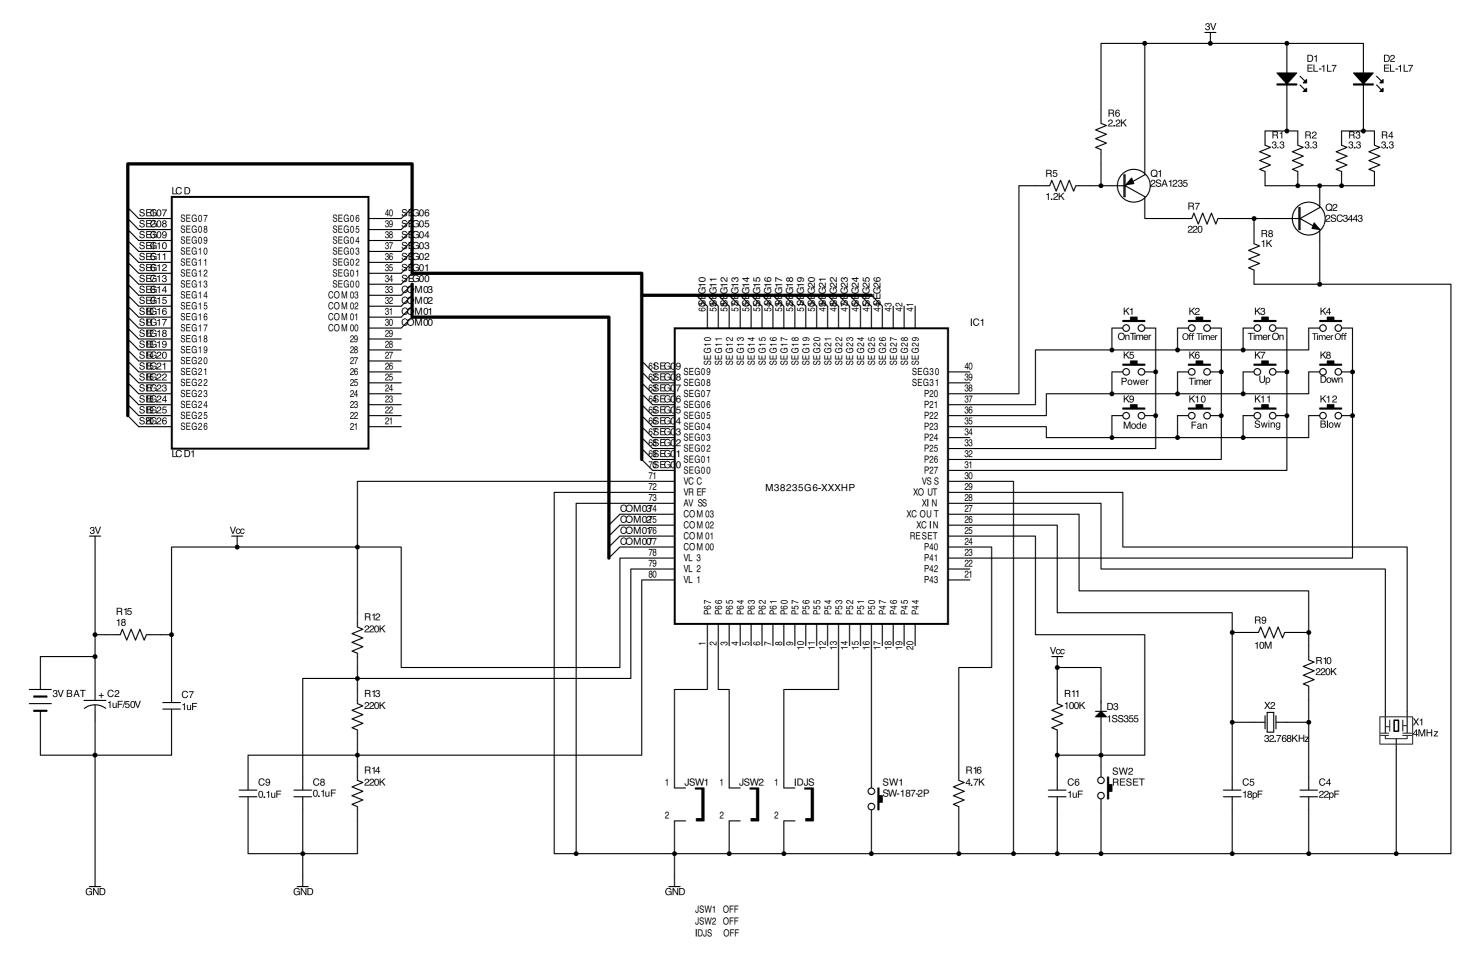

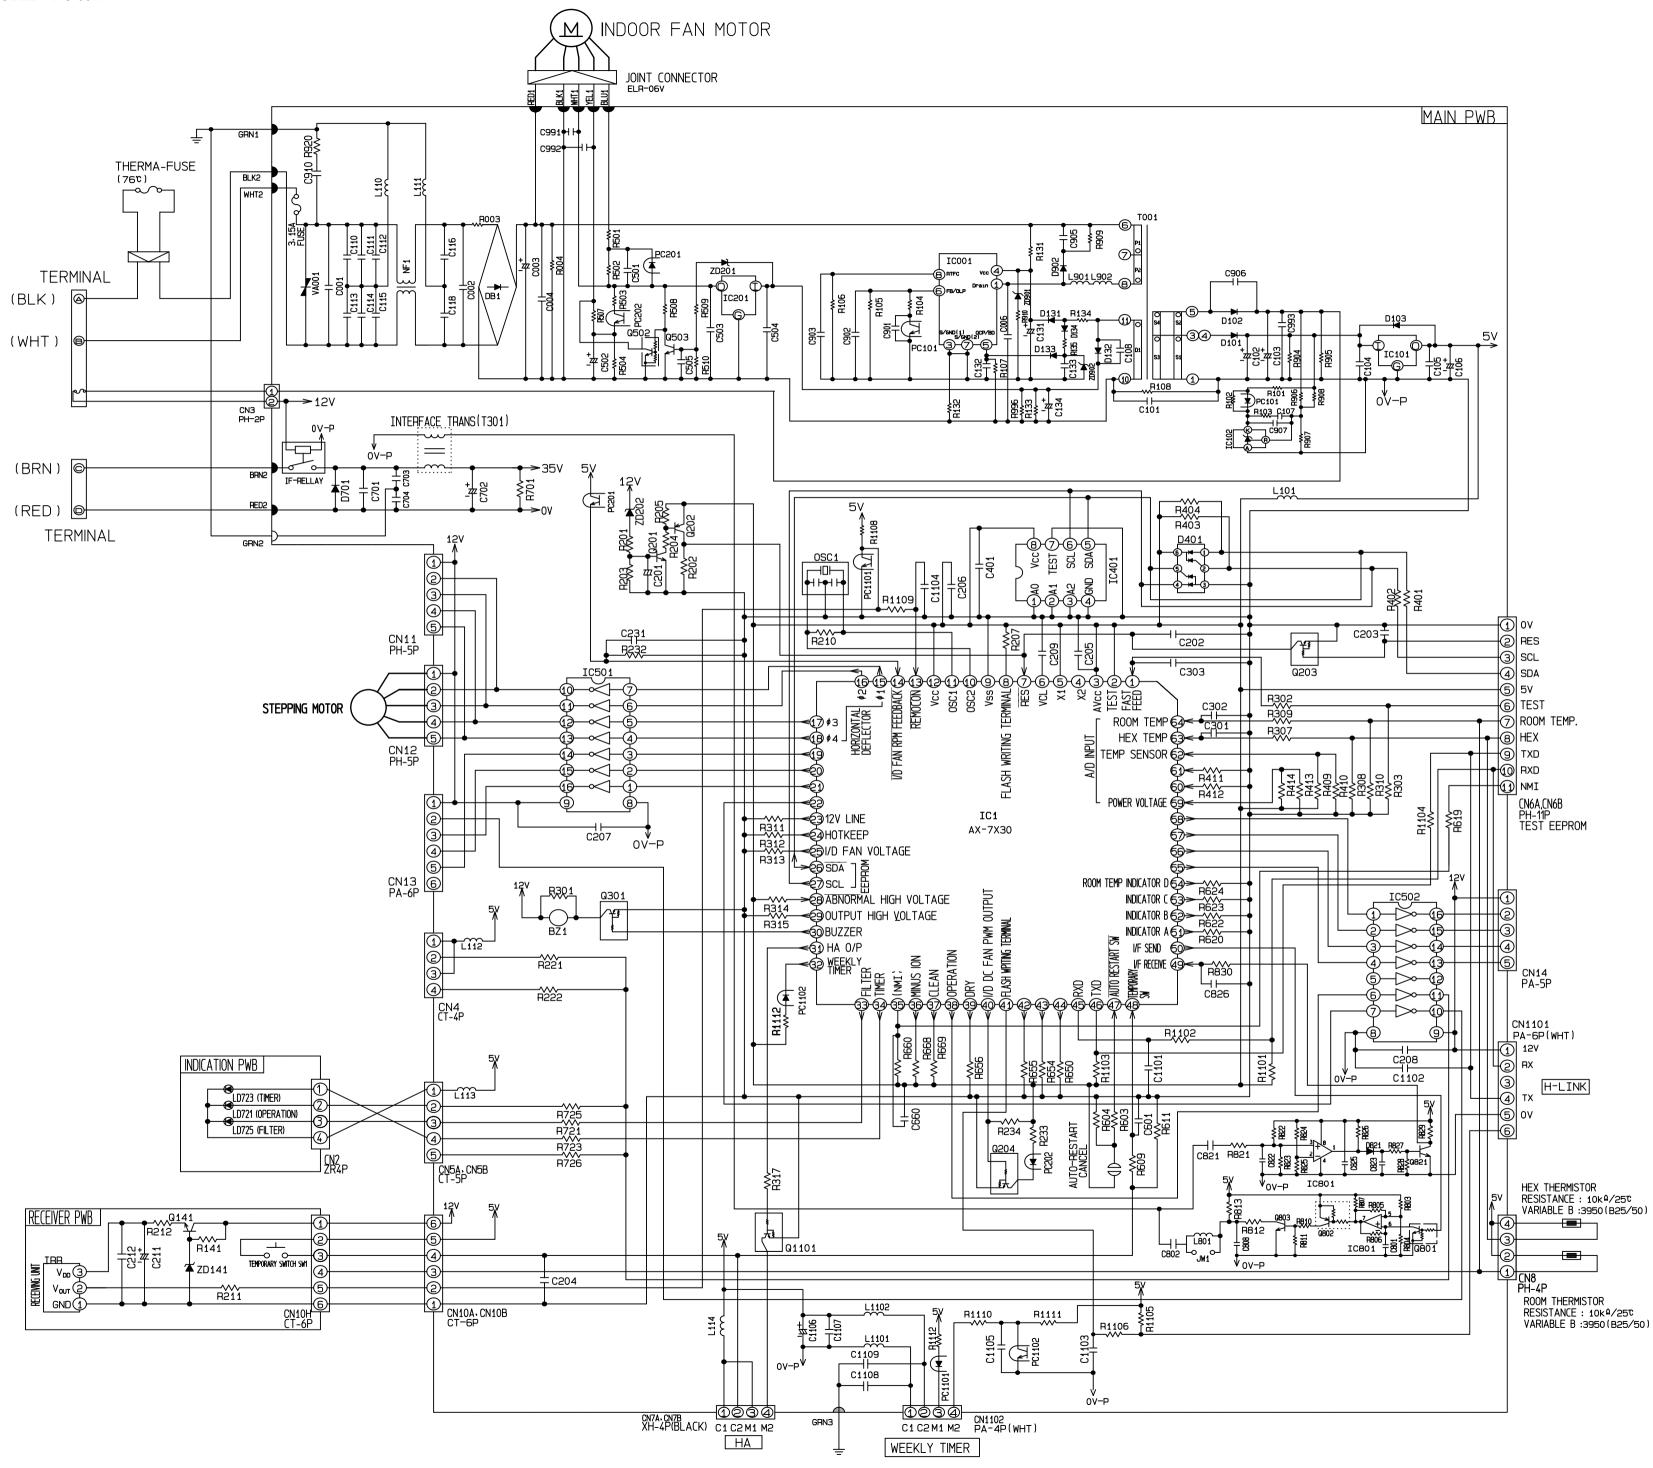

Compone Solder		1	R: P:		IAL		PITCH)		
			С:						
<u>res</u> Isymbol	IST (A)	<u>OF</u> TOL	POWER		NING	REMARK		<u>CAP</u> Symbol	<u>4</u> (μ
R003	<u>2.2</u> 1M	5%	(W) 5 1/4	TYPE H A	FACE A	RCR		C001 C002	0.
R101 R102	620 1K	5% 5%	1/4 1/10 1/10	100	BB	поп		C002 C003 C004	0. 1 0.
R103 R104	15K 2.2K	5% 5%	1/10 1/10	υu	BB			C006 C101	22 220
R105 R106	33K 150K	5% 1% 5%	1/10 1/10 1/4	000	B A B			C102 C103	4
R107 R108 R131	330 1.2M	5%	1/4	┙╲≖	A	RCR		C104 C105 C106	0
R132 R133	0.62 1M	5% 5%	2 1/2	PC	A B			C107 C108	0
R134 R135	22 750	5% 5%	1/2 1/2	A C	A			C110 C111 C112	0.
R141	1K	5%	1/6	A				C113 C114	0.
R201 R202	5.1K 5.1K	5%	1/16 1/16	υu	A			C115 C116	0.
R203 R204 R205	2K 10K 2.7K	5% 5%	1/16 1/16 1/16	C C C	A A A			C118 C131 C132	100 1 47
R207	10K	5%	1/16	C	A			C133 C134	2
R210	1M	5%	1/16	С	в			C201	1
R211 R212	1K 47	5% 5%	1/6 1/6	A				C202 C203	0
R221 R222	390 390	5% 5%	1/4 1/4	C C	A			C204	0
R232 R233	1K 390	5% 5%	1/10	C C C	B			C205	0
R234 R301	<u>1к</u> 3.3к	5% 5%	1/16 1/10	c c	в			C206 C207 C208	0
R302 R303	1K 10K	5% 5%	1/16 1/16	C C	A			C209	0
R307 R308	1K 12.7K	5% 1%	1/16 1/16 1/16	C C C	A			C211 C212	4
R309 R310 R311	1K 12.7K 10K	5% 1% 5%	$\frac{1}{16}$ $\frac{1}{16}$	C C C	A A A			C231	100
R312 R313	10K 10K	5% 5%	1/16 1/16 1/16	C C	A			C301 C302	0
R314 R315	10K 10K	5% 5%	1/16 1/16	C C	A			C303 C401	0
R317	1K	5%	1/16	С	A			C501 C502	100
R401 R402	390 390	5% 5%	1/16 1/16	C C	A			C503 C504	0
R403 R404	5.1K	5%	1/16 1/16 1/16	C C	A			C505	100
R410 R411	5. 1K 5. 1K 10K		1/16 1/16 1/16	000	A A A			C601 C660	0
R412 R413	10K 5.1K	5% 5%	1/16 1/16	C C	A			C701 C702	0.1
R414	5.1K 4.3K	5% 5%	1/16 1/4	C C	A B			C703 C704	0.0
R502 R503	4.3K 4.3K 4.7K	5% 5%	1/4 1/10 1/8	C C C	8 8 8			C801 C802	150 0.2
R504 R507	3.3K 7.5K	5% 5%	1/10 1/2	СС	BB			C808 C821	0.1
R508 R509 R510	10K 100 15K	5% 5%	1/10 1/10 1/10	C C C	B A B			C822 C823	100
R603	15K	5%	1/16	c	A			C825 C826 C901	0. :
R604 R609	20K 1K	5% 5%	1/16 1/16	сc	A			C902 C903	0.4
R611	10K	5%	1/16	С	A			C905 C906 C907	550 0
R619	100	5%	1/10	С	A			C910 C991	4
R620 R622	10K	5%	1/16 1/16		A			C992 C993	0.
R623 R624	10K 10K	5% 5%	1/16 1/16	C C	A			C1101 C1102	100
R650	10K	5%	1/16	С	A			C1102 C1103 C1104	0.1
R654 R655 R656	10K 10K 10K	5% 5%	1/16 1/16 1/16	C C C	A A A			C1105 C1106	100
R660	10K 1K	5%	1/16	C C	A			C1107 C1108 C1109	0. : 0. 0.
								COIL	
R668 R669	10K 10K	5% 5%	1/16 1/16	C C	A			SYMBOL	
R701 R721	20K 300	5% 5%	1/6 1/10	A C	A			L101	EXC EXC
R723 R725	240 240	5% 5%	1/10 1/10	C C	A			L111	JUM
R726 R803	240 120K	5% 5%	1/10 1/16	C C	A			L112 L113	EXC EXC
RB04 RB05	120K 120K	5% 5%	1/16 1/16	C C	A			L114 L801	EXC
R806 R807	120K 4.3K	5% 5%	1/16 1/16	υuu	A A A			L901	HF7
R810 R811 R812	680 2K 39	5% 5%	1/10 1/16 1/4	сc	A			L902 NF1 T001	HF7 HRMH: 2007-
R813 R821	39 470	5% 5%	1/4 1/16	сc	A			T301	armf:
R822 R823 R824	10K 10K 8.25K	1% 1% 1%	1/16 1/16 1/16	000	A A A			L1101 L1102	
R825 R826	10K 1K	1% 5%	1/16 1/16	C C	A			TRA	<u> </u>
R827 R828	3K 10K	5% 5%	1/16 1/16	υu	A			SYMBOL Q141	
R829 R830	5.1K 1K	5% 5%	1/16 1/16	с с	A			Q201	
R904 R905	1M 1M	5% 5%	1/2 1/2	C C	B			Q202	í
R906 R907	12K 2K	1% 1%	1/10	C C C	B			Q203 Q204 Q301	
R908 R909 R910	12K 220K 270K	1% 5%	1/10 2 1/2	С Р С	B A A			Q502	-
R920 R996	10	5%	1/2		AB	CFS		Q503	í
	401	E*/	4 / 1 -					Q801 Q802 Q803	F
R1101 R1102 R1103	10K 1K 10K	5% 5%	1/10 1/10 1/10	C C C	A B A			Q821	é
R1104 R1105	1K 10K	5% 5%	1/10 1/16	C C	B			Q1101	1
R1106 R1107 R1108	1K 150 2K	5% 5%	1/6 1/4	с с с	BA			ZEN	
R1108 R1109 R1110	2K 1K 150	5% 5%	1/10 1/4	000	B B A			SYMBOL	
R1111 R1112	2К	5% 5%	1/10 1/10	C C	B			ZD141 ZD202	Ē
					-			ZD201	
								ZD901 ZD902	

Mounting face A: Component side B: Solder side

Mounting type A : Axial R : Radial

<u>CAP</u> SYMBOL	(#F)	(v)	KIND	MOU Type	Tin i Face	REMAR
C001 C002	0.68	AC250 AC250	F	H	A	規格品
C003	100 0.01	450 1000V	D	н	A	KMH
C004 C006	220p	2000	C C	н Р	A	
C101 C102	2200p 470	AC250 25	C D	8 8	A	LXZ
C103 C104	1800	25	D C	H	AB	LXZ
C105	0.1	25	С	С	в	
C106 C107	220 0.1	10 25	D C	R C	AB	YXA
C108 C110	0.01	AC250	c	P	A	STD PAR
C111						
C112 C113	0.01	AC250 AC250	C C	P	A	STD PAR STD PAR
C114 C115	0.01	AC250	C	P	A	STD PAR
C116	1000p 1000p	AC250	С	P	A	STD PAR
C118 C131	10	AC250 50	C D	R	A	ND PAR PF
C132 C133	470p 22p	50 50	C C	C C	B	
C134	68	50	D	R	A	LXZ
C201	10	16	D	R	Α	
C202	0.1	25	С	С	в	
C203	0.1	25	С	С	A	
C204	0.1	25	С	С	A	
C205	0.1	25	С	С	в	
C206 C207	0.1	25 25	C C	C C	B	
C208 C209	0.1	25 25	C C	C C	AB	
C211 C212	47	16		R		
C231	1000p	50	c	c	В	
C301 C302	0.1	25 25	C C	C C	B	
C303 C401	0.1	25 25	C C	C C	B	
C501 C502	1000p 10	50 16	C D	C Fl	B	КL
C503 C504	0.1	25 50	C C	C C	B	
C505	1000p	50	C	C	в	
C601	0.1	25	С	С	в	
C660	0.1	25	С	С	В	
C701 C702	0.15u 68#	50 50	F	R	A	IJJ
C703	0.01	AC250	С	Р	Α	STD PAR
C704	0.01	AC250	С	Р	A	STD PAR
C801 C802	150P 0.22u	50 50	C F	C R	A	СН
C808	0. 1u	25	C F	С	Α	F
C821 C822	0.01u 1000p	50 50	С	R C	A	в
C823 C825	0.047u 0.1u	25 25	C C	C C	A	B F
C826 C901	0.01	50	C C	C C	B	
C902	0.47u	10	С	С	В	
C903 C905	0.01	50 1000	C C	C P	A	
C906 C907	2200p	1000	C C	P C	A B	
C910 C991	470p	AC250	C	PC	A	
C992	0.1	50 50	C	С	A	
C993	0.1	50	С	С	В	
C1101 C1102	1000p 1000p	50 50	C C	C C	B	B B
C1103	0. 1u	25	С	С	Α	F
C1104 C1105	1000p 1000p	50 50	C C	C C	B	B B
C1106 C1107	47 0. 1u	25 25	C C	C C	A	B
C1108	0.01	AC250	С	P	A	STD PAR
	0.01	AC250	С	Ρ	A	STD PAR
				, MUL	TNG	
SYMBOL		L TYP	Ľ	TYPE	FACE	Remar
L101	EXCELS			A	A	
L110 L111	EXCELS			A	A	
L112	EXCELS			A	A	
L113	EXCELS	A35		A	A	
					A	—
L114	EXCELS			A		
L114 L801	EXCELS		1	C A	A	
L801	LB2518 HF70BT	101N	K6A	C	A	
L801 L901 L902 NF1	LB2518	101N L3-5) L3-5)	K6R K6R	C A A H	A A A	
L801 L901 L902 NF1 T001	LB2518 HF70BT HF70BT RFM-13901 2007-TRAN	101N L3.5) L3.5) NF-C0II	K6R K6R	C A H H	A	
L901 L902 NF1 T001 T301	LB2518 HF70BT HF70BT FFM-13901 2007-TRAN FFM-73636	101N L3.5) L3.5) NF-COIL S	K6R K6R	C A H H H	A A A A	
L801 L901 L902 NF1 T001 T301	LB2518 HF70BT HF70BT RFM-13901 2007-TRAN	101N L3.5) L3.5) NF-COIL S	K6R K6R	C A H H	A A A A	
L801 L901 L902 NF1 T001 T301 L1101 L1102	LB2518 HF70BT HF70BT PFW13901 200V-TRAN FFWF3636 EXCELS EXCELS	101N L3.5) L3.5) NF-C011 S A35 A35	K6R K6R _6.7	C A H H H	A A A A A	
L801 L901 L902 NF1 T001 T301 L1101 L1102	LB2518 HF70BT HF70BT IFMF3011 2007-TRAN FRMF3636 EXCELS EXCELS	101N L3.5) L3.5) NF-COIL S A35 A35	к <u>е</u> я <u>ке</u> я <u>.</u> в. 7	C A H H A A	A A A A A A	REMAR
L801 L901 L902 NF1 T001 T301 L1101 L1102	LB2518 HF70BT HF70BT HF70BT RTH9301 200V-TRAN FTHF3636 EXCELS EXCELS VSIS	101N L3.5) L3.5) NF-C011 S A35 A35		C A H H A A	A A A A A	REMAR
L801 L901 L902 NF1 T001 T301 L1101 L1102 TRAN SYMBOL Q141	LB2518 HF70BT HF70BT RFH3901 200V-TRAN RFH73636 EXCELS EXCELS MODE KTC:	101N L3.52 L3.52 NF-COIL S A35 A35 TOF 3199-			A A A A A FACE	REMAR
L801 L901 NF1 T001 T301 L1101 L1102 TRAN SYMBOL	LB2518 HF70BT HF70BT RPH9301 200V-TRAN FPH9335 EXCELS EXCELS VSIS MODE KTC: 225C2	101N L3.5 L3.5 S NF-COIL S A35 A35 TOF		C A H H A A TYPE	A A A A A A	REMARI
L801 L901 NF1 T301 L1101 L1102 TRAN SYMBOL Q141 Q201	LB2518 HF70BT HF70BT HF70BT F7M13901 EXCELS EXCELS VSIS MODE KTC3 2SC2 2SA3	101N L3.52 L3.52 NF-COIL S A35 A35 TOF 3199- 2462L			A A A A A A FACE	REMAR
LB01 L901 L902 NF1 T001 T301 L1101 L1102 TRAN SYMBOL Q141 Q201 Q202 Q203 Q204	LB2518 HF70BT HF70BT HF70BT MPH3901 Z00-TRM HH75636 EXCELS EXCELS EXCELS MODE KTC: 2502 2503 2504 2504 CTC: DTC:	101N L3.53 L3.57 L3.		C A A H H H A A A TYPE R C C C C C	A A A A A A FACE	REMARI
LB01 L901 NF1 T001 T301 L1101 L1102 TRAN SYMB0L Q141 Q201 Q202 Q203 Q204 Q301	LB2518 HF70BT HF70BT HF70BT HF70B301 2007 TRAN PFF3636 EXCELS EXCELS VSIS MODE KTC3 2502 2503 2503 DTC3 DTC3	101N L3.52 13.52 ₩-COII S 		A A H H H TYPE C C C C C C	A A A A A A A A A A A A A A A	REMARI
LB01 L901 L902 NF1 T001 T301 L1101 L1102 TRAN SYMBOL Q141 Q201 Q202 Q203 Q204	LB2518 HF70BT HF70BT HF70BT 2004-TRAN PRH3001 2004-TRAN EXCELS EXCELS EXCELS EXCELS MODE KTC: 2562 2562 2562 2562 2562 2562 2562 256	101N L3.52 13.52 ₩-COII S 	К6Я К6Я .6.7 .7	C A A H H H A A A TYPE R C C C C C	A A A A A A FACE	REMARI
LB01 L901 L902 NF1 T001 T301 L1102 TRAN G201 G202 G203 G204 G301 G502 G503	LB2518 HF70BT HF70BT HF70B7 HF70B301 2007 TRAN PFF3636 EXCELS EXCELS VSIS MODE KTC3 2502 2503 DTC2 DTC2 DTC2 CTC2 2502	101N L3.5: L3.5: A35:	К6Я К6Я .6.7 .7	C A A H H H A A A A C C C C C C C C C C	A A A A A A A A A A A A A B B	REMARI
LB01 L901 L902 NF1 T301 L1101 L1102 TRAN G201 G202 G203 G204 G301 G802 G801 G802	LB2518 HF70BT HF70BT HF70BT RF70BT EXCELS EXCELS VSIS MODE KTC2 2SC2 2SA2 DTC2 DTC2 DTC2 DTC2 CTC2 RRC2 2SC2 DTC2 DTC2 DTC2 DTC2 DTC2 DTC2 DTC2 DT	101N 13.52 13.52 13.52 13.52 14.52 14.52 11.21 1.21 11.2	К6Я К6Я 7 	C A A H H H A A A A C C C C C C C C C C	A A A A A A A A A A A A A A A A A A A	REMARI
LB01 L901 L902 NF1 T001 T301 L1101 L1102 TRAN SYMB0L Q141 Q202 Q204 Q301 Q502 Q503 Q801	LB2518 HF70BT HF70BT HF70BT HF70BT RMF3636 EXCELS EXCELS VSIS MODE KTC2 2SC2 DTC2 DTC2 DTC2 DTC2 2SC2 PTC2 CDTC2 DTC2 CDTC2 DTC2 CDT	101N L3.52 L3.57 MF-COIL S A35 A35 TOF 3199- 2462L 11212 3199- 2462L 11225 114EL 114EL 402E 2412K 102		C A A H H H A A A C C C C C C C C C C C	A A A A A A A A A A A A A A A A A A A	REMARI


ZENNER DIODE

		-		
MBOL	MODEL TYPE	MOU Type	(TNG Face	REMARK
)141	HZS68ILTA	A		
0202	ALZ7.58	С	Α	
0201	RD15UJN3	С	Α	
0901	JUMPER	С	Α	
902	UDZS3+6B	С	A	

1131 U16044 C B 0132 U16044 C B 0134 U16044 C B 0134 U16044 C A 0134 U16044 C A 0134 U16044 C A 0131 DS3555 C A 0701 DSM3 C A 0902 E601C A A 0902 E601C A A 0101 DSSBA60 H A 110201 K107905APT H A 110201 K107905APT C A 110201 NM2903M C A 110201 <td< th=""><th>D102 D103</th><th>FMB-G16L 1SS355</th><th>н С</th><th>A</th><th></th></td<>	D102 D103	FMB-G16L 1SS355	н С	A	
D134 U1GU44 C B D401 HN1D03FU C A D701 D5M3 F A D101 TC F F D102 K1A7913AN R A D1020 K1A391APT H A D1020 COUPLER C A D1030 NM2903M C A D1050 COUPLER F F SYM60L MO0EL TYPE TYPE FACE F PC201 PS2701-1 C B D201 TLP421BL C	D132	U1GU44	С	В	
D701 D8H3 C A D821 1SS355 C A D902 EG01C A D902 STR-V852 H A IC101 K178055P1 H A IC201 K1780503AF C A IC201 K1780503F C A IC201 K176503AF C A IC201 K105003AF C A IC201 NM203M C B PC101 NUP203H C B PC201 PS2701-1 C B PC202 PS2701-1 C B PC203 PS2701-1 C B PC3102 TLP421BL C B PC3102 TLP421BL					
DB21 1SS355 C A D902 EG01C A A D902 EG01C A A DB1 D3SBA60 H A JLC SYMBOL MODEL TYPE TYPE FACE ENANG SYMBOL MODEL TYPE TYPE FACE ENANG IC101 KLA7805API H A IC203 KLA7805API H A IC201 KLA7805API H A IC201 KLA7805API C A IC203 KLA95003AF C A IC201 NLM2903M C A IC201 NLM2903M C A PC301 PS2701-1 C B PC202 PS2701-1 C B PC3102 TLP421BL C B PC3102 TLP421BL C B PC3102 TLP421BL C B PC3102 TLP421BL C B	D401	HN1D03FU	с	A	
D302 EG01C A A DB1 D3SBA60 H A JLC SYM60L MODEL TYPE TYPE FACE ENANG SYM60L MODEL TYPE TYPE FACE ENANG IC3 K137805API H A IC103 K137805API H A IC203 K137805API H A IC203 K137805API H A IC203 K137805API H A IC203 K137805API C A IC203 K137805API C A IC203 BR24L04F-W C A IC201 NUM2903M C A PG010 COUPLER F F SYM60L MODEL TYPE TYPE FACE ENANG PC203 PS2701-1 C B PC204 PS2701-1 C B PC205 PS2701-1 C B PC204 PS2701-1 C B	D701	DSM3	с	A	
DB1 D3SBA60 H A I.C. SYMBOL MODEL TYPE TYPE FACE FMAR IC1 C A I C A IC001 STR-V852 H A I IC101 KLA7805API H A I IC201 KLA7815API H A I IC201 KLA7815API H A I IC201 KLA951API H A I IC201 KLA951API H A I IC201 KLA951API C A I IC201 NME00API C A I IC301 NME0API C B I PC201 PS2701-1 C B I PC3102 TLP421BL C B I PC3102 TLP421BL C B I SW60L MODEL TYPE TYPE FACE EMAR SW60L	D821	155355	с	A	
DB1 D3SBA60 H A I.C. SYMBOL MODEL TYPE TYPE FACE FMAR IC1 C A I C A IC001 STR-V852 H A I IC101 KLA7805API H A I IC201 KLA7815API H A I IC201 KLA7815API H A I IC201 KLA951API H A I IC201 KLA951API H A I IC201 KLA951API C A I IC201 NME00API C A I IC301 NME0API C B I PC201 PS2701-1 C B I PC3102 TLP421BL C B I PC3102 TLP421BL C B I SW60L MODEL TYPE TYPE FACE EMAR SW60L	D902	EG01C	A	A	
SYM60L MODEL TYPE TYPE IC1 PARA IC11 PARA IC11 PARA IC11 FARA IC11 FARA IC11 FARA IC11 FARA IC121 KIA7805API IC1202 KIA7815API IC1202 KIA7805API PHOTO COUPLER SVMBOL MODEL TYPE PC202 PS2701-1 C B PC202 PS2701-1 R A JUMPER MODEL TYPE SYM60L MODEL TYPE SYM60L </td <td></td> <td></td> <td>н</td> <td>A</td> <td></td>			н	A	
STRUC THULL TIPE TYPE FACE CHAW IC1 C A IC201 STR-V852 H A IC201 KIA/31A R A IC201 KIA/31A R A IC201 KIA/31A R A IC201 KIA/31A R A IC301 KID65003AF C A IC502 KID65003AF C A IC502 KID65003AF C A IC502 KID65003AF C A IC502 F52701-1 C B PC201 P52701-1 C B PC3102 TLP421BL C B <td>IC</td> <td></td> <td>- 480</td> <td></td> <td></td>	IC		- 480		
IC001 STR-V852 H A IC001 KIA7805API H A IC201 KIA7815API H A IC201 KIA7815API H A IC201 KIA7815API H A IC201 KIA7815API H A IC302 KIA65003AF C A IC502 KID65003AF C A IC301 NJM2903M C A IC801 MODEL TYPE TYPE FAR EMAR PC101 PS2701-1 C B PC201 PS2701-1 C B PC201 PS2701-1 C B PC202 PS2701-1 C B PC3102 TLP421BL C B F TP00351-51 R A HF TP00351-51 R A HF TP00351-51 R A SYM60L M00EL TYPE TYPE FAR		MODEL TYPE		FACE	REMARK
$\begin{array}{c cccc} ICADA STATUS SAPET H A INTEGRATION AND A INTEGRATION A$	IC1		С	A	
IC102 XIAA3IA R A IC201 KIA7BISAPI H A IC201 KIA7BISAPI H A IC201 KIA7BISAPI C A IC301 KIAPSIAPI C A IC302 KIDESCOJAF C A IC301 NJM2003AF C A IC301 NJM2003AF C A PC202 PS2701-1 C B PC202 PS2701-1 C B PC202 PS2701-1 C B PC202 TLP421BL C B PC202 TLP421BL C B PC202 TLP421BL C B PC202 TLP421BL C B PC203 TLP421BL C B PC204 TLP421BL C B JUMPER TWME FAC EMAR SYM80L MODEL TYPE TYME FAC					
Image: Constraint of the second se	IC102	KIA431A	R	A	
ICS01 KID65003AF C A ICS02 KID65003AF C A IC801 NUM2903M C A IC801 NUM2903M C A IC801 M00EL TYPE TYPE FALL PC202 PS2701-1 C B PC1001 TUPATRIA PALNAX A A A					
ICB001 NJM2903M C A PHOTO COUPLER SYM80L MODEL TYPE TWNN PC101 PS2701-1 C B PC202 PS2701-1 C B PC203 PS2701-1 C B PC204 PS2701-1 C B PC202 PS2701-1 C B PC1101 TLP4218L C B PC1102 TLP4218L C B PC1102 TLP4218L C B PC1102 TLP4218L C B PC1101 TLP4218L C B PC1102 TLP4218L C B PC1101 TLP4218L C B FW00L MODEL TYPE TYME FAC EMAR SYM80L MODEL TYPE TYME FAC EMAR SW160L MODEL TYPE TYPE FAC EMAR SYM80L MODEL TYPE TYPE FAC EMAR CO	IC501	KID65003AF	С	A	
$\begin{tabular}{ c c c c c c c c c c c c c c c c c c c$					
SYMBOL MODEL TYPE TYPE FALL PC201 PS2701-1 C B PC202 PS2701-1 C B PC202 PS2701-1 C B PC202 PS2701-1 C B PC1101 TLP421BL C B PC1102 TLP421BL C B FE TP00351-51 R A JUMPER SWB0L MODEL TYPE FAC SYMB0L MODEL TYPE FAC ENAR JW1 A A A A SWB0L MODEL TYPE FAC ENAR SWB0L MODEL TYPE FAC ENAR SWB0L MODEL TYPE FAC ENAR SYMB0L MODEL TYPE FAC ENAR SYMB0L MODEL TYPE FAC ENAR SYMB0L MODEL TYPE FAC ENAR <t< td=""><td>10801</td><td>MEGERMIN</td><td>C</td><td>A</td><td></td></t<>	10801	MEGERMIN	C	A	
STROL PROLE TYPE FACE C/MAR PC101 PS2701-1 C B PC202 PS2701-1 C B PC202 PS2701-1 C B PC PS2701-1 C B PC1101 TLP421BL C B P P P P SYM60L MODEL TYPE TYPE FACE PHAR SAFUSE 28073-151 R A P P PAR JUMPER SYM60L MODEL TYPE TYPE FACE PHAR SWB0L MODEL TYPE TYPE FACE PHAR SWB0L MODEL TYPE TYPE FACE PHAR SWB0L MODEL TYPE TYPE FACE PHAR SYM60L MODEL TYPE TYPE FACE PHAR SYM60L MODEL TYPE TYPE FACE PHAR CONNECTOR SYM60L MODEL </td <td>PHO⁻</td> <td><u>to couf</u></td> <td></td> <td></td> <td></td>	PHO ⁻	<u>to couf</u>			
PC201 PS2701-1 C B PC202 PS2701-1 C B PC202 PS2701-1 C B PC202 PS2701-1 C B PC102 TLP421BL C B PC1102 TLP421BL C B SVM00 MODEL TYPE TWN FARE SVM01 MODEL TYPE TWN FARE JUMPER SVM01 MODEL TYPE TYPE FARE SWB01 MODEL TYPE TYPE FARE EMAR JW1 A A A A SWB01 MODEL TYPE TYPE FARE EMAR SWH00 MODEL TYPE TYPE FARE	SYMBOL	MODEL TYPE			Remark
PC2022 PS2701-1 C B PC1101 TLP421BL C B PC1102 TLP421BL C B FUIDE TLP421BL C B SVMB0L MODEL TYPE TWME FARE SVMB0L MODEL TYPE TAL A F TP00351-51 R A JUMPER SVMB0L MODEL TYPE TYPE SWB0L MODEL TYPE TYPE FARE SWB0L MODEL TYPE TYPE FARE SVMB0L MODEL TYPE TYPE FARE S			С	В	
PC1102 TLP421BL C B FUSE SYMBOL MODEL TYPE TYPE TALE FAARX SAFUSE 250/3.154.0ET3.151 H A H HF TP00351-51 R A H SYMBOL MODEL TYPE TYPE FACE RMARK JUMPER SWITCH SWITCH SWINS RMARK SWMBOL MODEL TYPE TYPE FACE RMARK SWMBOL MODEL TYPE TYPE FACE RMARK SWMBOL MODEL TYPE TYPE FACE RMARK SYMBOL MODEL TYPE TYPE FACE RMARK VA001 416NP-12D P A OCCILATOR SYMBOL MODEL TYPE TYPE FACE SYMBOL MODEL TYPE TYPE FACE RMARK CN3 B28-PH-K-S H A CN4 CT-4P-V H A CN5B B11B-PH-K-S H A CN6B B11B-PH-K-S H A CN4B B4B-PH-K-S H A CN16B B11B-PH-					
Image: style is a style					
SYMBOL MODEL TYPE TYPE FALE EPARA JUMPER 200/3.5406T3.151 R A HF TP00351-51 R A JUMPER TYPE FALE REMAR SYMBOL MODEL TYPE TYPE FALE JW1 A A SWITCH SWITCH SWMBOL MODEL TYPE TYPE FALE SYMBOL MODEL TYPE TYPE FALE QCCILATOR SYMBOL MODEL TYPE SYMBOL MODEL TYPE TYPE FALE CNAS EEPMEX-S H A CNAS EEPMEX-S H A CNAB B2B-PH-K-S H A CNAS B2B-PH-K-S H A CNAS B2B-PH-K-S H A CNAS CT-6P-V H	PC1102	TLP421BL		в	
$\begin{array}{c c c c c c c c c c c c c c c c c c c $	FUSE	-			
$\begin{array}{c c c c c c c c c c c c c c c c c c c $	SYMBOL	MODEL TYPE	NOU TYPE	NTNG Leace	Remark
HF TPD0351-51 R A JUMPER SYMBOL MODEL TYPE TYPE FACE SWITCH A A SYMBOL MODEL TYPE TYPE FACE CONNECTOR TORN STANK STANK CONNECTOR TORN FACE FACE SYMBOL MODEL TYPE TYPE FACE CONNECTOR SYMBOL MODEL TYPE TYPE CONNECTOR SYMBOL MODEL TYPE H A CNMB E829-PH-K-S H A A CN110 B58-PH-K-S H A A CN110			<u> </u>	A	
SYMBOL MODEL TYPE TYPE FACE EPARK JW1 A A A SWITCH SWIDEL TYPE TYPE FACE EPARK SWIBOL MODEL TYPE TYPE FACE SYMBOL MODEL TYPE TYPE FACE CN3 B2B-PH-K-S H A CN4 CT-4P-V H A CN5B CT-5P-V H A CN5B B11B-PH-K-S H A CN12 B5B-PH-K-S H A CN12 B5B-PH-K-S H A CN14 B5B-PH-K-S H				~	
SYMBOL MODEL TYPE MUTTE FACE EMARK SWITCH SWITCH SWITCH SWING MODEL TYPE TYPE FACE EMARK SWMBOL MODEL TYPE TYPE FACE EMARK SWID MODEL TYPE TYPE FACE EMARK SWMBOL MODEL TYPE TYPE FACE EMARK SYMBOL MODEL TYPE TYPE FACE EMARK VA001 416NP-12D P A		PER			
JW1 A A SWIDL MODEL TYPE TYPE FACE EMARK SYMBOL MODEL TYPE TYPE FACE EMARK CONNECTOR SYMBOL MODEL TYPE TYPE FACE CONNECTOR SYMBOL MODEL TYPE CONNECTOR SYMBOL MODEL TYPE CON11 B5B-PH-K-S H A CON13 B5B-PH-K-S H A			NOU	NTING	REMADIA
SYMBOL MODEL TYPE TYPE FALE FEMAR SW1 EVOPACOSP H Image: Signame and the second constraints of the second consecond constraints of th		MODEL TIPE	TYPE	FACE	
SYMBOL MODEL TYPE MUTHS TYPE FALE FEMAR SW1 EVOPACOSP H Image: Second	<u>су</u> ит				
STIDUL TOPL TYPE FACE CUNN SW1 EVOPACOSR H Image: Construction of the second of the		1		NTING	
SURGE ARRESTER SURGE ARRESTER SYMBOL MODEL TYPE TALE PARE VA001 416NP-12D P A OCCILATOR SYMBOL MODEL TYPE TYPE FACE CONNECTOR SYMBOL MODEL TYPE TYPE FACE EMARY CONNECTOR SYMBOL MODEL TYPE TYPE FACE CONNECTOR CONNECTOR CONNECTOR CONSECTOR MAINE CONSECTOR MAINE CONSECTOR MAINE CONSECTOR CONSECTOR CONSED			TYPE	FACE	remark
SYMBOL MODEL TYPE TYPE FACE VA001 416NP-12D P A OCCILATOR SYMBOL MODEL TYPE TYPE CONNECTOR TYPE FACE SYMBOL MODEL TYPE TYPE CN3 B2B-PH-K-S H CN4 CT-4P-V H CN5B B11B-PH-K-S H CN6B B11B-PH-K-S H CN19 B4B-XH-K-S H CN110 B5B-PH-K-S H CN12 B5B-PH-K-S H CN13 B5B-PA-K-S H CN14 B5B-PA-K-S H CN13 B5B-PA-K-S H CN14 B0ARD-IN TYPE <tr< td=""><td>3#1</td><td>EVGPACUSH</td><td></td><td></td><td></td></tr<>	3#1	EVGPACUSH			
YAOUI YIGHT 12D P A OCCILATOR SYMBOL MODEL TYPE TYPE FALE SYMBOL MODEL TYPE TYPE FALE CONNECTOR SYMBOL MODEL TYPE TYPE FALE CNOTE B4B-2H-K-S H A CN11 B5B-2H-K-S H A CN1101 B5B-2H-K-S H A<	<u>SUR(</u>	<u>JE ARRES</u>	TE	<u>R</u>	
YAOUI YIGHT 12D P A OCCILATOR SYMBOL MODEL TYPE TYPE FALE SYMBOL MODEL TYPE TYPE FALE CONNECTOR SYMBOL MODEL TYPE TYPE FALE CNOTE B4B-2H-K-S H A CN11 B5B-2H-K-S H A CN1101 B5B-2H-K-S H A<		MODEL TYPE	TYPE	NING I Face	Remark
SYMBOL MODEL TYPE FALE FEMAR OSC1 EFOMC1005 R A A CONNECTOR SYMBOL MODEL TYPE TYPE FALE SYMBOL MODEL TYPE TYPE FALE FEMAR CN3 B2B-PH-K-S H A CN6B B11B-PH-K-S H A CN6B B11B-PH-K-S H A CN6B B4B-PH-K-S H A CN10B CT-GP-V H A CN11 B5B-PH-K-S H A CN12 B5B-PH-K-S H A CN13 B6B-PA-K-S H A CN14 B5B-PA-K-S H A CN10H CT-GP-V H A CN110 PA-G	VA001	416NR-12D	Р	A	
SYMBOL MODEL TYPE FALE FEMAR OSC1 EFOMC1005 R A A CONNECTOR SYMBOL MODEL TYPE TYPE FALE SYMBOL MODEL TYPE TYPE FALE FEMAR CN3 B2B-PH-K-S H A CN6B B11B-PH-K-S H A CN6B B11B-PH-K-S H A CN6B B4B-PH-K-S H A CN10B CT-GP-V H A CN11 B5B-PH-K-S H A CN12 B5B-PH-K-S H A CN13 B6B-PA-K-S H A CN14 B5B-PA-K-S H A CN10H CT-GP-V H A CN110 PA-G					
SYMBOL MODEL TYPE FALE FEMAR OSC1 EFOMC1005 R A A CONNECTOR SYMBOL MODEL TYPE TYPE FALE SYMBOL MODEL TYPE TYPE FALE FEMAR CN3 B2B-PH-K-S H A CN6B B11B-PH-K-S H A CN6B B11B-PH-K-S H A CN6B B4B-PH-K-S H A CN10B CT-GP-V H A CN11 B5B-PH-K-S H A CN12 B5B-PH-K-S H A CN13 B6B-PA-K-S H A CN14 B5B-PA-K-S H A CN10H CT-GP-V H A CN110 PA-G	סככוו	ATOR			
OSC1 IEFOMC1005 R A CONNECTOR SYMBOL MODEL TYPE TYPE FAC CN3 B2B-PH-K-S H A CN5B CT-5P-V H A CN5B CT-6P-V H A CN6B B11B-PH-K-S H A CN7B B4B-XH-K-S H A CN7B B4B-PH-K-S H A CN11 B5B-PH-K-S H A CN12 B5B-PH-K-S H A CN13 B6B-PA-K-S H A CN14 B5B-PH-K-S H A CN11 B5B-PH-K-S H A CN14 B5B-PH-K-S H A CN1					
SYMBOL MODEL TYPE WITE FAC EMAR CN3 B28-PH-K-S H A A CN4 CT-4P-V H A A CN5B CT-5P-V H A A CN6B B18-PH-K-S H A A CN6B B18-PH-K-S H A A CN10B CT-6P-V H A A CN10B CT-6P-V H A A CN11 B5B-PA-K-S H A C CN11 B5B-PA-K-S H A C CN14 B5B-PA-K-S H A C CN10H CT-6P-V H A C CN101		1		NING	REMARK
SYMBOL MODEL TYPE WITE FAC EMAR CN3 B28-PH-K-S H A A CN4 CT-4P-V H A A CN5B CT-5P-V H A A CN6B B18-PH-K-S H A A CN6B B18-PH-K-S H A A CN10B CT-6P-V H A A CN10B CT-6P-V H A A CN11 B5B-PA-K-S H A C CN11 B5B-PA-K-S H A C CN14 B5B-PA-K-S H A C CN10H CT-6P-V H A C CN101	Symbol	MODEL TYPE	NOU Type R	FACE A	Remark
$\begin{array}{c c c c c c c c c c c c c c c c c c c $	SYMBOL osc1	MODEL TYPE	nou Type R	FACE A	Remark
$\begin{array}{c c c c c c c c c c c c c c c c c c c $	SYMBOL OSC1	MODEL TYPE EFOMC1005			
CN7B B4B-XH-K-S H A CN8 B4B-PH-K-S H A CN10B CT-6P-V H A CN11 B5B-PH-K-S H A CN12 B5B-PH-K-S H A CN11 B5B-PH-K-S H A CN12 B5B-PH-K-S H A CN13 B6B-PA-K-S H A CN14 B5B-PA-K-S H A CN14 B5B-PA-K-S H A CN110 DAPONTONI ELP-06V(FM981281) H A CN5H SJM-GP H A CN1102 PA-4P H A BLU1 BOARD-IN TYPE H A BLK2 BOARD-IN TYPE H A	SYMBOL OSC1 CONN SYMBOL CN3	MODEL TYPE IEFOMC1005 NECTOR MODEL TYPE B2B-PH-K-S	NOU TYPE H	A FACE A	
$\begin{array}{c c c c c c c c c c c c c c c c c c c $	SYMBOL OSC1 CONN SYMBOL CN3 CN4	MODEL TYPE EFOMC1005 NECTOR MODEL TYPE B2B-PH-K-S CT-4P-V	н Түре н	A FACE A	
CN10B CT-6P-V H A CN11 B5B-PH-K-K H A CN12 B5B-PH-K-S H A CN13 B6B-PA-K-S H A CN14 B5B-PA-K-S H A CN14 B5B-PA-K-S H A CN14 B5B-PA-K-S H A CN14 B5B-PA-K-S H A CN10N ELP-06V(FMB1281) H A CN10H CT-6P-V H A CN1101 PA-6P H A CN1102 PA-4P H A CN1102 PA-4P H A CN1102 PA-4P H A CN1102 PA-4P H A BLU1 BOARD-IN TYPE H A BLK1 BOARD-IN TYPE H A HT2 BOARD-IN TYPE H A HT2 BOARD-IN TYPE H A	SYMBOL OSC 1 CONN SYMBOL CN3 CN4 CN5B	MODEL TYPE LEFOMC1005	Р ТҮРЕ Н Н	A FACE A A	
CN11 B5B-PH-K-S H A CN12 B5B-PH-K-S H A CN13 B5B-PA-K-S H A CN14 B5B-PA-K-S H A CN10H CT-GP-V H A CN10H CT-GP-V H A CN1101 PA-6P H A CN1102 PA-4P H A CN1101 BOARD-IN TYPE H A BLK2 BOARD-IN TYPE H A PED1 BOARD-IN TYPE H A PHT1 BOARD-IN TYPE H A GRN2 BOARD-IN TYPE H A	SYMBOL OSC1 CONN SYMBOL CN3 CN4 CN5B CN5B CN5B CN5B	MODEL TYPE EFOMC1005	я Түре н н н н	A FACE A A A A	
$\begin{array}{c c c c c c c c c c c c c c c c c c c $	SYMBOL OSC1 CONN SYMBOL CN3 CN4 CN5B CN6B CN7B CN7B CN8	MODEL TYPE EFOMC1005		A FACE A A A A A	
$\begin{array}{c c c c c c c c c c c c c c c c c c c $	SYMBOL OSC1 CONN SYMBOL CN3 CN4 CN5B CN6B CN7B CN7B CN8	MODEL TYPE EFOMC1005		A FACE A A A A A	
$\begin{array}{c c c c c c c c c c c c c c c c c c c $	SYMBOL OSC1 CONN SYMBOL CN3 CN4 CN5B CN5B CN5B CN7B CN7B CN7B CN7B CN10B	MODEL TYPE EFOMC1005		A FACE A A A A A A A A	
CNSH SJN-6P H I CN10H CT-6P-V H I CN1101 PA-6P H A CN1102 PA-6P H A CN1102 PA-4P H A BLU1 BOARD-IN TYPE H A BLK1 BOARD-IN TYPE H A BLK2 BOARD-IN TYPE H A BLK2 BOARD-IN TYPE H A BLK2 BOARD-IN TYPE H A PRD1 BOARD-IN TYPE H A BRD2 BOARD-IN TYPE H A GRN1 BOARD-IN TYPE H A GRN1 BOARD-IN TYPE H A GRN2 BOARD-IN TYPE H A GRN3 BOARD-IN TYPE H A	SYMBOL OSC1 CONN SYMBOL CN3 CN4 CN5B CN6B CN6B CN6B CN7B CN6B CN10B CN10B	MODEL TYPE EFOMC1005		A FACE A A A A A A A A A A	
$\begin{array}{c c c c c c c c c c c c c c c c c c c $	SYMBOL OSC1 CONN SYMBOL CN3 CN4 CN5B CN5B CN5B CN5B CN6B CN6B CN10B CN10B CN11 CN12 CN14	MODEL TYPE EFOMC1005		A FACE A A A A A A A A A A A A A A	
$\begin{array}{c c c c c c c c c c c c c c c c c c c $	SYMBOL OSC1 CONN SYMBOL CN3 CN4 CN5B CN5B CN5B CN5B CN5B CN5B CN5B CN5B	MODEL TYPE EFOMC1005		A FACE A A A A A A A A A A A A A A	
BLU1 BOARD-IN TYPE H A YEL1 BOARD-IN TYPE H A BLK1 BOARD-IN TYPE H A BLK2 BOARD-IN TYPE H A RED1 BOARD-IN TYPE H A RED2 BOARD-IN TYPE H A RED2 BOARD-IN TYPE H A PRD2 BOARD-IN TYPE H A MHT1 BOARD-IN TYPE H A GRIN2 BOARD-IN TYPE H A GRIN2 BOARD-IN TYPE H A GRIN2 BOARD-IN TYPE H A GRIN3 BOARD-IN TYPE H A BUZZ MODEL TYPE </td <td>SYMBOL OSC1 CONI SYMBOL CN3 CN4 CN5B CN6B CN6B CN6B CN6B CN10B CN10B CN11 CN12 CN14 CN14 CN14 CN14 CN14 CN14 CN14 CN5H</td> <td>MODEL TYPE EFOMC1005 </td> <td></td> <td>A FACE A A A A A A A A A A A A A A</td> <td></td>	SYMBOL OSC1 CONI SYMBOL CN3 CN4 CN5B CN6B CN6B CN6B CN6B CN10B CN10B CN11 CN12 CN14 CN14 CN14 CN14 CN14 CN14 CN14 CN5H	MODEL TYPE EFOMC1005		A FACE A A A A A A A A A A A A A A	
$\begin{array}{c ccccccccccccccccccccccccccccccccccc$	SYMBOL OSC1 CONI SYMBOL CN3 CN4 CN5B CN6B CN6B CN6B CN7B CN10B CN10B CN11 CN12 CN11 CN12 CN13 CN14 CN15H CN10H CN1101	MODEL TYPE EFOMC1005		A FACE A A A A A A A A A A A A A A A A A A	
$\begin{array}{c ccccccccccccccccccccccccccccccccccc$	SYMBOL OSC1 CONI SYMBOL CN3 CN4 CN5B CN6B CN6B CN6B CN7B CN10B CN10B CN11 CN12 CN11 CN12 CN13 CN14 CN15H CN10H CN1101	MODEL TYPE EFOMC1005		A FACE A A A A A A A A A A A A A A A A A A	
BLK2 BOARD-IN TYPE H A RED1 BOARD-IN TYPE H A RED2 BOARD-IN TYPE H A WHT1 BOARD-IN TYPE H A WHT2 BOARD-IN TYPE H A BIN2 BOARD-IN TYPE H A GRN1 BOARD-IN TYPE H A GRN2 BOARD-IN TYPE H A GRN2 BOARD-IN TYPE H A GRN3 BOARD-IN TYPE H A RELAY FTR-F3-RY H A BUZZER SYMBOL MODEL TYPE TYPE SYMBOL MODEL TYPE	SYMBOL OSC1 CONI SYMBOL CN3 CN4 CN5B CN5B CN6B CN6B CN7B CN10B CN10B CN11 CN12 CN11 CN12 CN11 CN11 CN11 CN110H CN1101 CN1102	MODEL TYPE EFOMC1005		A FACE A A A A A A A A A A A A A A A A A A	
RED2 BOARD-IN TYPE H A WHT1 BOARD-IN TYPE H A WHT2 BOARD-IN TYPE H A BRIN2 BOARD-IN TYPE H A BRIN2 BOARD-IN TYPE H A GRIN1 BOARD-IN TYPE H A GRIN2 BOARD-IN TYPE H A GRIN2 BOARD-IN TYPE H A GRIN3 BOARD-IN TYPE H A BUZZER TYPE FACE EMARY BZ1 PKM13EPY H A LED SUMBOL MODEL TYPE TYPE FACE SYMBOL MODEL TYPE TYPE FACE EMARY LD721 SEL2713K YELLOW H L LD725 SEL6414E GREN H <td>SYMBOL OSC1 CONI SYMBOL CN3 CN4 CN5B CN6B CN6B CN7B CN6B CN10B CN10B CN11 CN10B CN11 CN10C CN11 CN10H CN1101 CN1101 CN1101 CN1101 CN1102 BLU1 YEL1</td> <td>MODEL TYPE EFOMC1005 </td> <td></td> <td>A FACE A A A A A A A A A A A A A A A A A A</td> <td></td>	SYMBOL OSC1 CONI SYMBOL CN3 CN4 CN5B CN6B CN6B CN7B CN6B CN10B CN10B CN11 CN10B CN11 CN10C CN11 CN10H CN1101 CN1101 CN1101 CN1101 CN1102 BLU1 YEL1	MODEL TYPE EFOMC1005		A FACE A A A A A A A A A A A A A A A A A A	
WHT2 BOARD-IN TYPE H A BFIN2 BOARD-IN TYPE H A GRN1 BOARD-IN TYPE H A GRN2 BOARD-IN TYPE H A GRN3 BOARD-IN TYPE H A GRN4 MODEL TYPE H A BUZZER	SYMBOL OSC1 CON1 SYMBOL CN3 CN4 CN5B CN5B CN6B CN7B CN10 CN11 CN11 CN11 CN11 CN12 CN14 CN10H CN10H CN1101 CN10H CN1101 CN1102 CN101 BLU1	MODEL TYPE EFOMC1005		A FACE A A A A A A A A A A A A A A A A A A	
GRN1 BOARD-IN TYPE H A GRN2 BOARD-IN TYPE H A GRN3 BOARD-IN TYPE H A SYMBOL MODEL TYPE TYPE FACE BUZZER_ SYMBOL MODEL TYPE TYPE B21 PKM13EPY H A LED SYMBOL MODEL TYPE TYPE SYMBOL MODEL TYPE TYPE FACE L0721 SEL6914A - ORANCE H H L0725 SEL6914A - ORANCE H H L0221 E1319-OPOA7 VOLET H H	SYMBOL OSC1 CONI SYMBOL CN3 CN4 CN5B CN6B CN6B CN6B CN6B CN10B CN10B CN110 CN110 CN111 CN12 CN11 CN12 CN14 CN5H CN10H CN1101 CN1101 CN1101 CN1102 BLU1 YEL1 BLK1 BLK1 BLK1 BLK2 RED2	MODEL TYPE EFOMC1005		A FACE A A A A A A A A A A A A A A A A A A	
GRINE BOARD-IN TYPE H A GRN3 BOARD-IN TYPE H A RELAY H A SYMBOL MODEL TYPE HOUTH IF-RELLAY FTR-F3-RY H BUZZER SYMBOL MODEL TYPE SYMBOL MODEL TYPE TYPE FACE BUZZER SYMBOL MODEL TYPE SYMBOL MODEL TYPE TYPE FACE BZ1 PKM13EPY H LED SYMBOL MODEL TYPE SYMBOL MODEL TYPE HOUTH LD721 SEL6914A - ORANCE H LD723 SEL6914A - ORANCE H LD725 SEL6914A - GREEN H LD221 E1S19-OP0A7 VIOLET H	SYMBOL OSC1 CONI SYMBOL CN3 CN4 CN5B CN6B CN6B CN7B CN10B CN11 CN12 CN12 CN14 CN10B CN11 CN14 CN10B CN14 CN10B CN14 CN10B CN14 CN15H CN14 CN10H CN14 CN14 CN14 CN14 CN14 CN14 CN14 CN14 CN15 CN14 CN14 CN15 CN14 CN16 CN14 CN16 CN11 CN17 CN14 CN16 CN14 CN16 CN16 CN16 CN16 CN16 CN16 CN16 CN16 CN16 CN16 CN16 CN16 CN16 CN16 CN17 CN1	MODEL TYPE EFOMC1005		A FACE A A A A A A A A A A A A A A A A A A	
GRN3 BOARD-IN TYPE H A RELAY	SYMBOL OSC1 CONI SYMBOL CN3 CN4 CN5B CN6B CN6B CN7B CN6B CN10B CN10B CN11 CN13 CN14 ONT COM CN10H CN110C CN10H CN110C CN10H CN110C CN10H CN110C CN10C C	MODEL TYPE EFOMC1005		A FALE A A A A A A A A A A A A A	
NUEL MODEL TYPE MODEL TYPE FALLE EMARK SYMBOL MODEL TYPE TYPE FALE EMARK BUZZER SYMBOL MODEL TYPE TYPE FALE EMARK BUZZER SYMBOL MODEL TYPE TYPE FALE EMARK BZ1 PKM13EPY H A A A A LED SYMBOL MODEL TYPE TYPE FALE EMARK LD721 SEL6914A - ORANCE H A A A LD725 SEL6914A - ORANCE H A A A LD221 E1319-OP0A7 WOLET H A A	SYMBOL OSC1 CONI SYMBOL CN3 CN4 CN5B CN6B CN6B CN6B CN10B CN10B CN112 CN12 CN112 CN14 ONT COM CN110H CN140H	MODEL TYPE EFOMC1005		A HKG FACE A A A A A A A A A A A A A	
NUEL MODEL TYPE MODEL TYPE FALLE EMARK SYMBOL MODEL TYPE TYPE FALE EMARK BUZZER_ SYMBOL MODEL TYPE TYPE FALE EMARK BUZZER_ SYMBOL MODEL TYPE TYPE FALE EMARK BZ1 PKM13EPY H A A A A A LED SYMBOL MODEL TYPE TYPE FALE EMARK LD721 SEL6914A - ORANCE H A A A A LD725 SEL6914A - ORANCE H A A A A LD221 E1S19-OP0A7 WOLEL H A A A	SYMBOL OSC1 CON1 SYMBOL CN3 CN4 CN5B CN6B CN7B CN10 CN11 CN112 CN11 CN113 CN14 CN	MODEL TYPE EFOMC1005		A ING FALE A A A A A A A A A A A A A	
STROL HOLL TITL TYPE FACE PLINW IF-RELLAY FTR-F3-RY H A BUZZER_	SYMBOL OSC1 CON1 SYMBOL CN3 CN4 CN5B CN6B CN7B CN10 CN11 CN112 CN11 CN113 CN14 CN	MODEL TYPE EFOMC1005		A ING FALE A A A A A A A A A A A A A	
IF-FELLAY FTR-F3-RY H A BUZZER SYMBOL MODEL TYPE MOUNTME BZ1 PKM13EPY H A LED SYMBOL MODEL TYPE MUNIME SYMBOL MODEL TYPE TYPE FACE REMARK LD721 SEL2713K YELLOW H L L0725 SEL6414E GREEN H L LD221 E1319-OP0A7 WOLET H L	SYMBOL OSC1 CONI SYMBOL CN3 CN4 CN6B CN6B CN7B CN8 CN10B CN11 CN12 CN13 CN14 CN13 CN14 CN13 CN14 CN15H CN10H CN10H CN10H	MODEL TYPE EFOMC1005		A ING FACE A A A A A A A A A A A A A	
SYMBOL MODEL TYPE MODEL TYPE MODEL TYPE FACE REMARK BZ1 PKM13EPY H A <t< td=""><td>SYMBOL OSC1 CONI SYMBOL CN3 CN4 CN5B CN6B CN6B CN7B CN10B CN10B CN11 CN112 CN12 CN14 CN12 CN14 CN14 CN10H CN110C CN110C CN110C CN110C CN14 CN10H CN110C CN110C CN14 CN12 CN14 CN12 CN14 CN12 CN14 CN12 CN14 CN12 CN14 CN12 CN14 CN12 CN14 CN12 CN14 CN12 CN14 CN12 CN14 CN12 CN14 CN12 CN14 CN12 CN14 CN12 CN14 CN12 CN14 CN12 CN14 CN12 CN14 CN12 CN14 CN12 CN14 CN14 CN10H CN110 CN110C CN110 CN110C CN110 CN110C CN110C CN110C CN110C CN110C CN14 CN10C CN14 CN12 CN14 CN12 CN14 CN12 CN14 CN12 CN14 CN12 CN14 CN14 CN12 CN14 CN12 CN14 CN14 CN10H CN110C CN110C CN110C CN110C CN14 CN10C CN14</td><td>MODEL TYPE EFOMC1005 </td><td></td><td></td><td></td></t<>	SYMBOL OSC1 CONI SYMBOL CN3 CN4 CN5B CN6B CN6B CN7B CN10B CN10B CN11 CN112 CN12 CN14 CN12 CN14 CN14 CN10H CN110C CN110C CN110C CN110C CN14 CN10H CN110C CN110C CN14 CN12 CN14 CN12 CN14 CN12 CN14 CN12 CN14 CN12 CN14 CN12 CN14 CN12 CN14 CN12 CN14 CN12 CN14 CN12 CN14 CN12 CN14 CN12 CN14 CN12 CN14 CN12 CN14 CN12 CN14 CN12 CN14 CN12 CN14 CN12 CN14 CN12 CN14 CN14 CN10H CN110 CN110C CN110 CN110C CN110 CN110C CN110C CN110C CN110C CN110C CN14 CN10C CN14 CN12 CN14 CN12 CN14 CN12 CN14 CN12 CN14 CN12 CN14 CN14 CN12 CN14 CN12 CN14 CN14 CN10H CN110C CN110C CN110C CN110C CN14 CN10C CN14	MODEL TYPE EFOMC1005			
SYMBOL MODEL TYPE MODEL TYPE MODEL TYPE FACE REMARK BZ1 PKM13EPY H A <t< td=""><td>SYMBOL OSC1 CONI SYMBOL CN3 CN4 CN5B CN6B CN7B CN6B CN10B CN10B CN11 CN110 CN110 CN110 CN1101 CN1101 CN1101 CN1101 CN1101 CN1101 CN1102 BLU1 YEL1 BLU1 YEL1 BLU1 YEL1 BLU1 YEL1 SIMBOL GRN3 CR12 SYMBOL</td><td>MODEL TYPE EFOMC1005 </td><td></td><td>A ING FACE A A A A A A A A A A A A A</td><td></td></t<>	SYMBOL OSC1 CONI SYMBOL CN3 CN4 CN5B CN6B CN7B CN6B CN10B CN10B CN11 CN110 CN110 CN110 CN1101 CN1101 CN1101 CN1101 CN1101 CN1101 CN1102 BLU1 YEL1 BLU1 YEL1 BLU1 YEL1 BLU1 YEL1 SIMBOL GRN3 CR12 SYMBOL	MODEL TYPE EFOMC1005		A ING FACE A A A A A A A A A A A A A	
STRUCL HOLL TIPL TYPE FACE FLINHW BZ1 PKM13EPY H A LED SYMBOL MODEL TYPE TYPE FACE LD721 SEL2713K - YELLOW H H LD723 SEL6914A - ORANGE H H LD725 SEL6414E - GREEN H H LD221 E1S19-OP0A7 VOLET H H	SYMBOL OSC1 CONI SYMBOL CN3 CN4 CN6B CN6B CN6B CN7B CN10B CN10B CN11 CN10B CN11 CN112 CN13 CN14 CN10H CN14 CN14 CN10H CN1101 CN1101 CN14	MODEL TYPE EFOMC1005		A ING FACE A A A A A A A A A A A A A	
BZ1 PKM13EPY H A LED	SYMBOL OSC1 CONI SYMBOL CN3 CN4 CN6B CN6B CN6B CN7B CN10B CN10B CN11 CN10B CN11 CN112 CN13 CN14 CN10H CN14 CN14 CN10H CN1101 CN1101 CN14	MODEL TYPE EFOMC1005		A INS FALE A A A A A A A A A A A A A	
SYMBOL MODEL TYPE MONTH LD721 SEL2713K YELLOW H LD723 SEL6914A ORANGE H LD725 SEL6414E GREEN H LD725 SEL6414E GREEN H LD221 E1519-OP0A7 VOLET H	SYMBOL OSC1 CONI SYMBOL CN3 CN4 CN5B CN6B CN7B CN6B CN10B CN11 CN10B CN11 CN112 CN14 CN10H CN1101 CN1101 CN1101 CN1101 CN1101 BLU1 SLU1 BLU1 SLU1 SIMBOL GRN1 GRN1 GRN1 GRN1 GRN2 GRN3 SYMBOL JF-RELLAY BUZZ SYMBOL	MODEL TYPE EFOMC1005		A THE A A A A A A A A A A A A A	
OTD21 SEL273% YELL0W H L0723 SEL694A ORANGE H L0725 SEL644E GREEN H L0221 EIS19-0P0A7 WOLET H	SYMBOL OSC1 CONI SYMBOL CN3 CN4 CN55B CN68 CN78 CN10 CN11 CN11 CN12 CN11 CN14 ONT COM CN11 CN14 ONT COM CN14 ONT COM CN14	MODEL TYPE EFOMC1005		A THE A A A A A A A A A A A A A	
LD723 SEL6914A - ORANGE H LD725 SEL6414E - GREEN H LD221 E1S19-OP0A7 VIOLET H	SYMBOL OSC1 CONI SYMBOL CN3 CN4 CN6B CN6B CN7B CN6B CN10B CN11 CN12 CN12 CN14 CN10B CN14 CN10B CN14 CN10B CN14 CN10B CN14 CN14 CN15H CN14	MODEL TYPE EFOMC1005		A A A A A A A A A A A A A A	
LD221 E1S19-OP0A7 VIOLET H	SYMBOL DSC1 CONI SYMBOL CN3 CN4 CN6B CN6B CN7B CN6B CN10B CN11 CN12 CN12 CN13 CN14 CN10B CN14 CN10B CN14 CN10B CN14 CN15 CN14	MODEL TYPE EFOMC1005			
LD221 E1S19-OPOA7 VIOLET H	SYMBOL OSC1 CONI SYMBOL CN3 CN4 CN5B CN6B CN7B CN6B CN10B CN10B CN11 CN110 CN110 CN1101 CN1101 CN1101 CN1101 CN1101 CN1101 CN1101 CN1101 CN1101 CN1101 CN1101 CN1102 BLU1 YEL1 BLU1 YEL1 BLU1 YEL1 BLU1 YEL1 BLU1 YEL1 BLU1 YEL1 BLU1 YEL1 SYMBOL JF-FELLAY SYMBOL BZ1 LED SYMBOL LDZ2	MODEL TYPE EFOMC1005			
	SYMBOL OSC1 CONI SYMBOL CN3 CN4 CN5B CN6B CN6B CN7B CN10B CN11 CN112 CN112 CN114 ONT COM CN1101 CN1101 CN1101 CN1101 CN1101 CN1101 CN1101 CN1101 BLU1 YEL1 BLU1 YEL1 BLU1 YEL1 BLU1 YEL1 BLU1 YEL1 BLU1 YEL1 BLU1 YEL1 BLU1 YEL1 BLU1 YEL1 BLU1 YEL1 BLU1 YEL1 BLU1 YEL1 BLU1 YEL1 BLU1 YEL1 BLU1 YEL1 BLU1 YEL1 BLU1 YEL1 BLU1 YEL1 BLU1 YEL1 SYMBOL LT2 SYMBOL BLU2 SYMBOL BZ1 LT23 LD725	MODEL TYPE EFOMC1005			

DIODE

SYMBOL MODEL TYPE TALE ENARK D101 RK16 A A D102 FMB-G16L H A

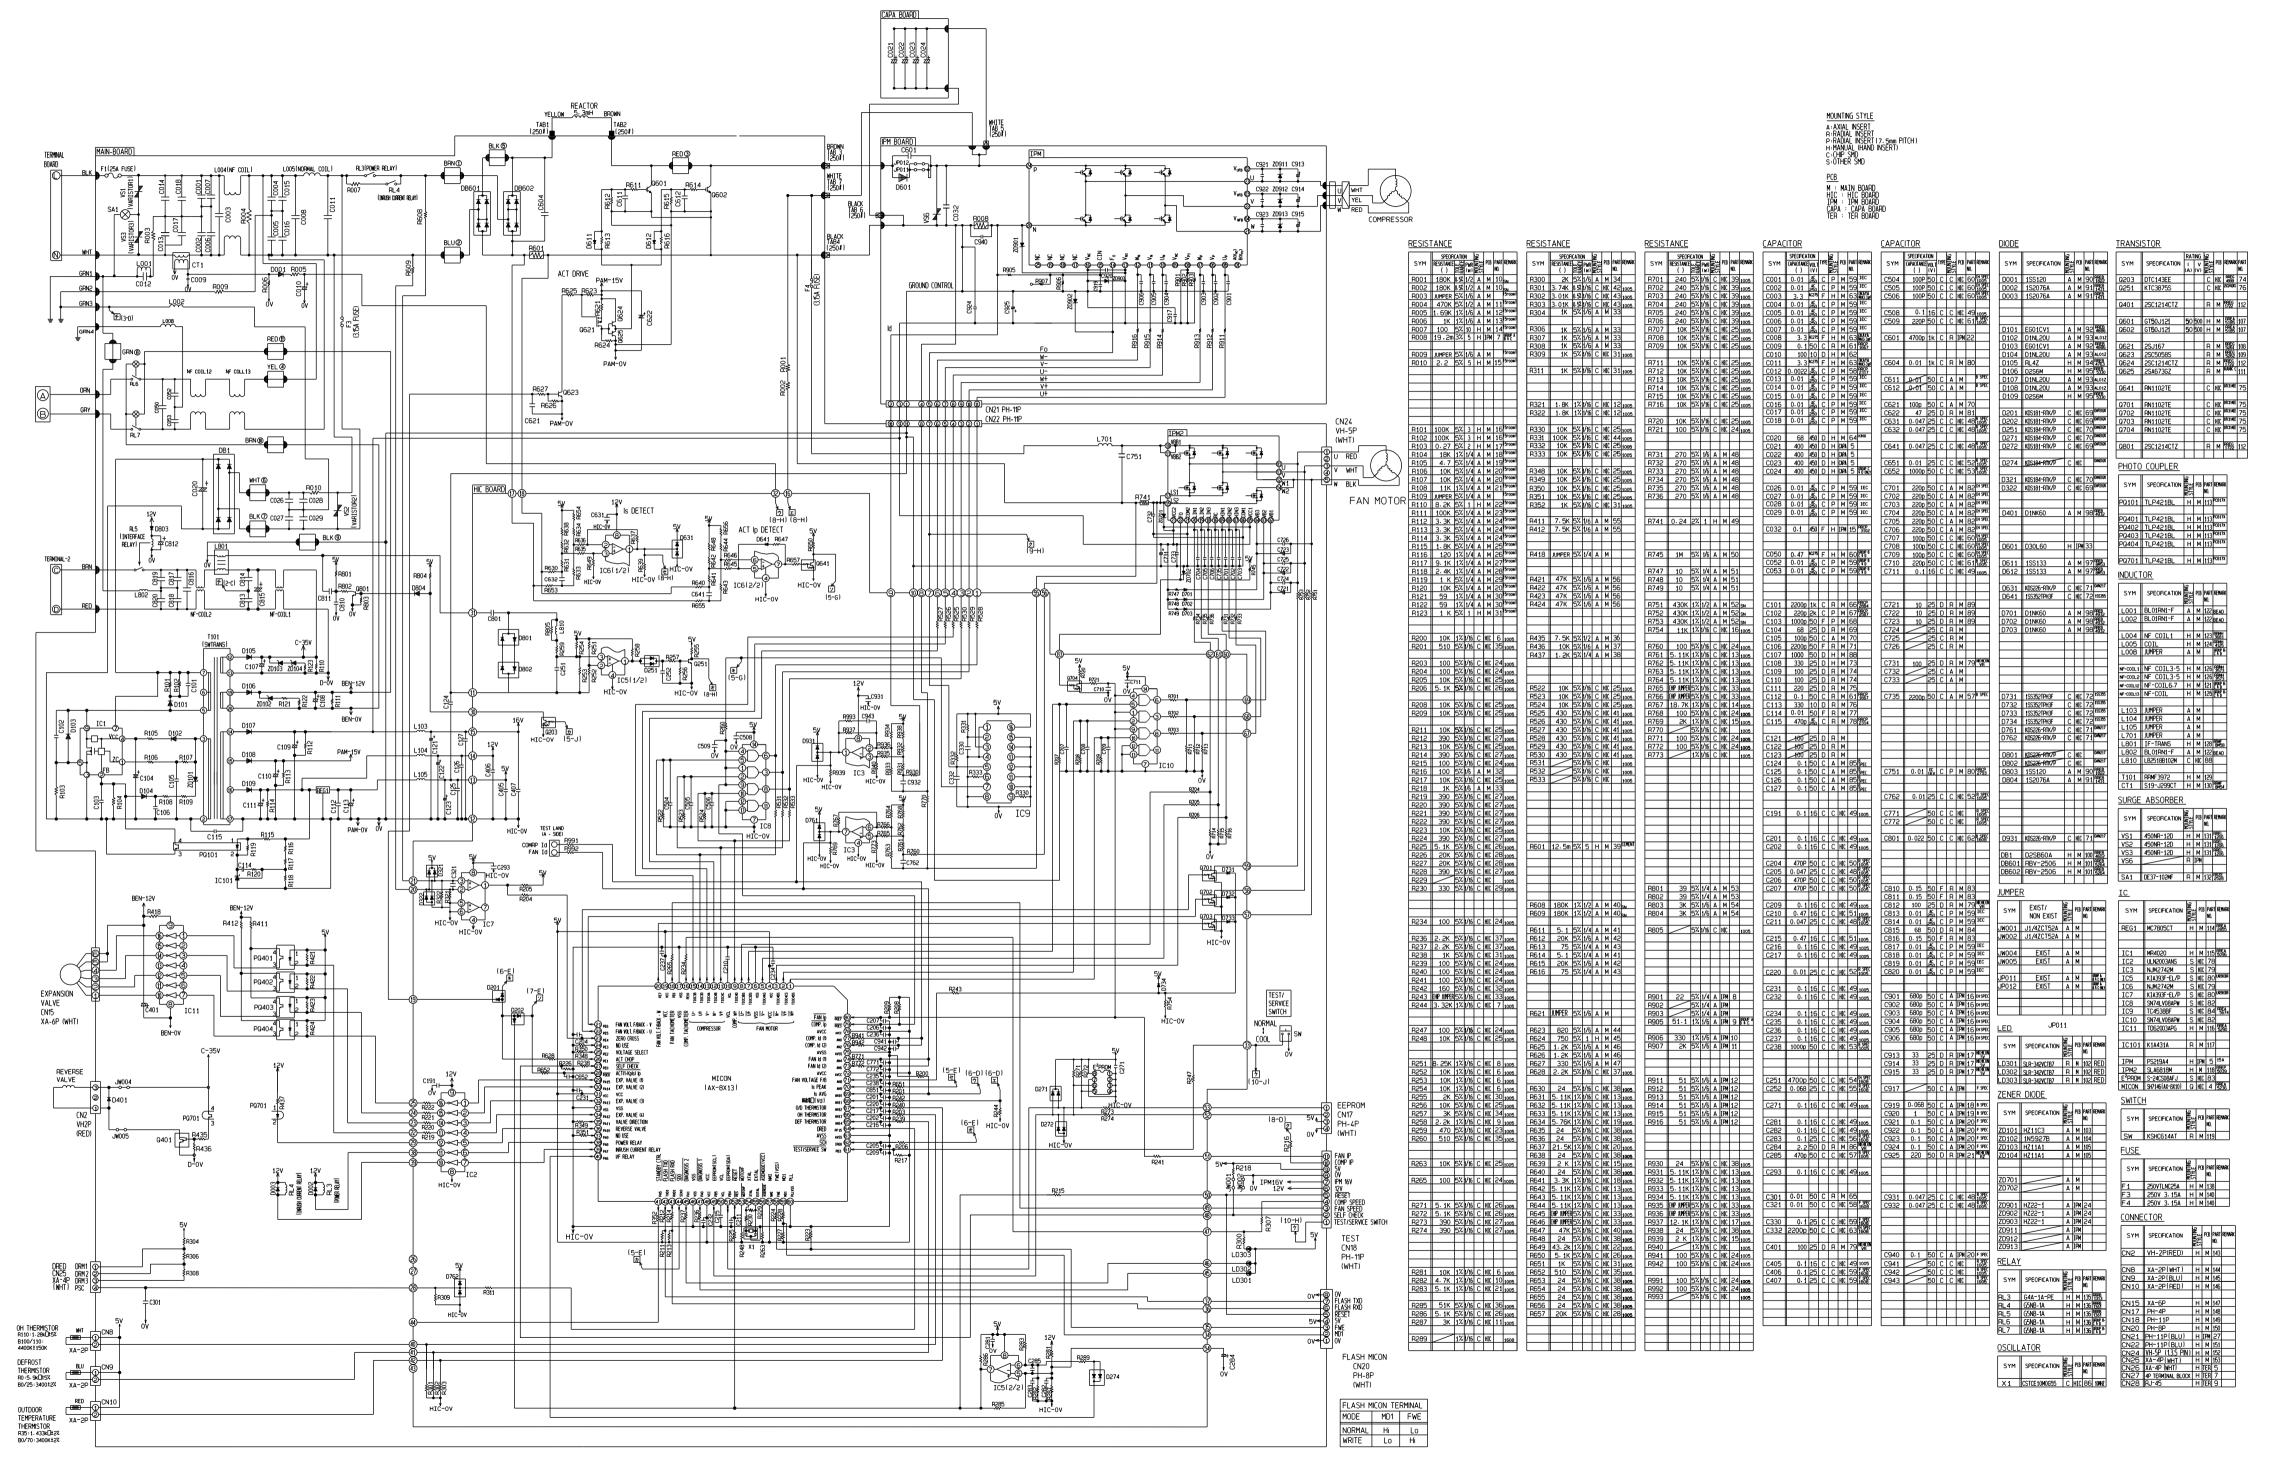


PRINTED WIRING BOARD LOCATION DIAGRAM


MODEL RAS-60YH7

MAIN P.W.B.

Marking on P.W.B

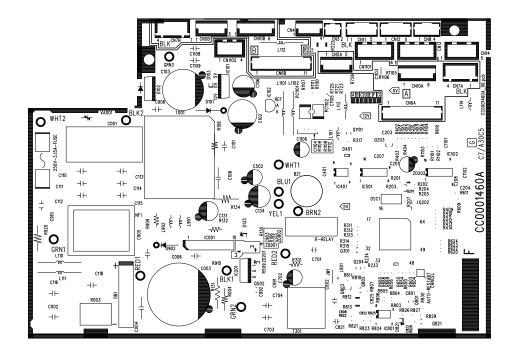


COMPONENT SIDE

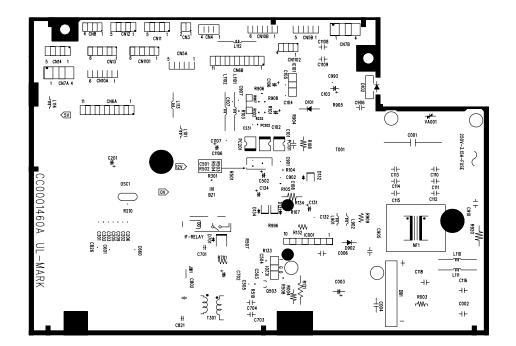


SOLDERING SIDE

RECEIVING P.W.B.


Marking on P.W.B

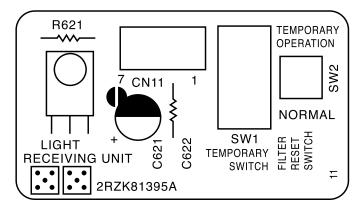


P.W.B. MAIN

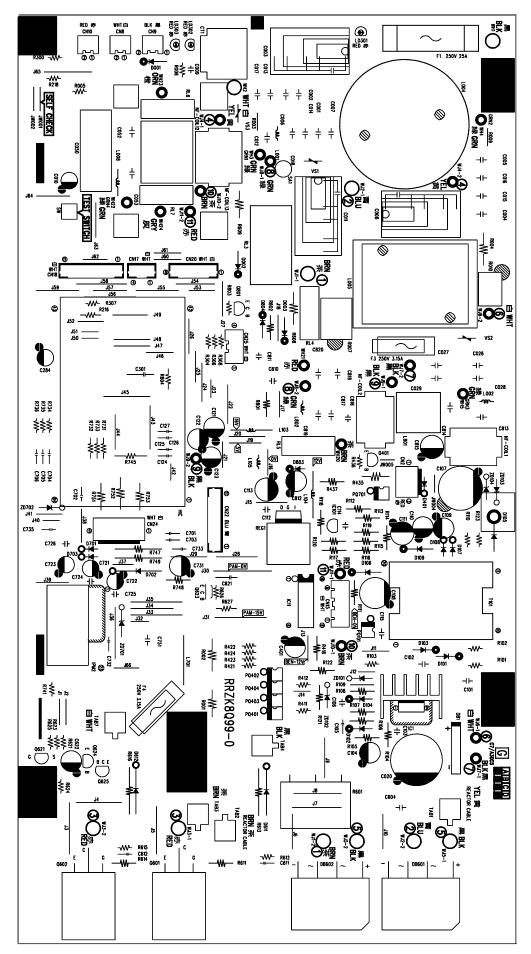


P.W.B. IPM

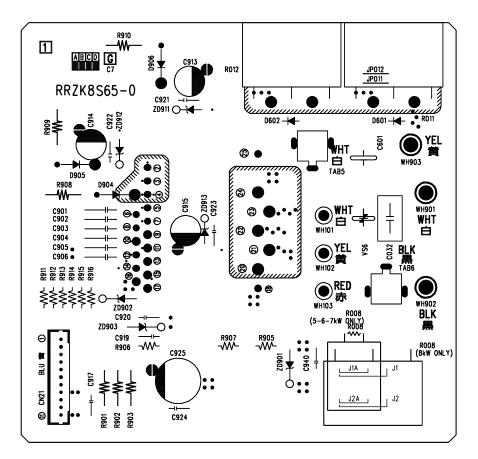


P.W.B. CAPA-BOARD

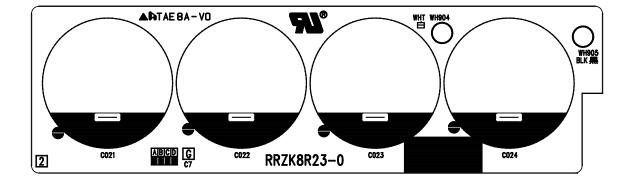

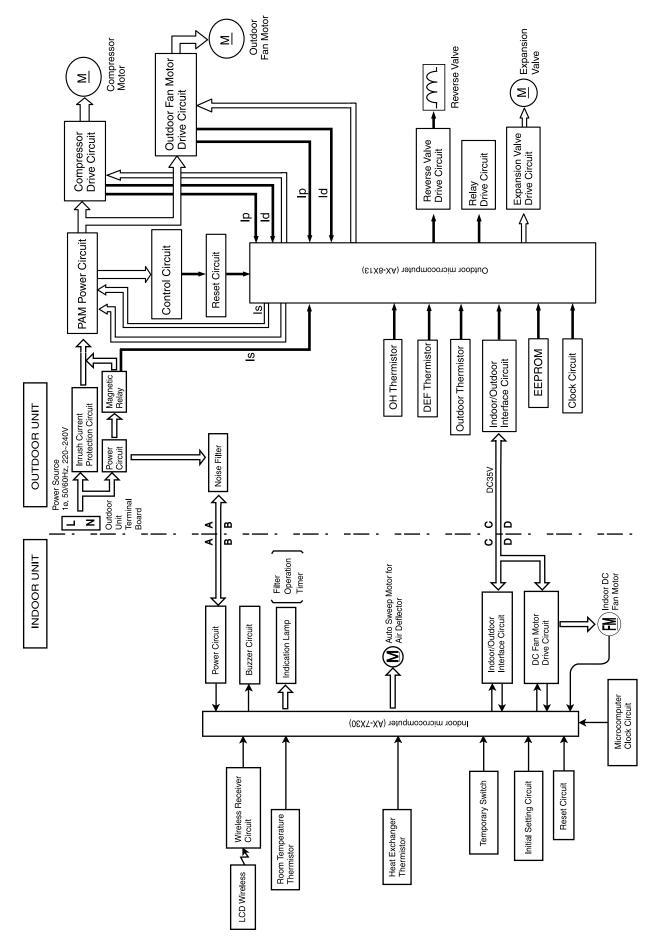


BASIC MODE

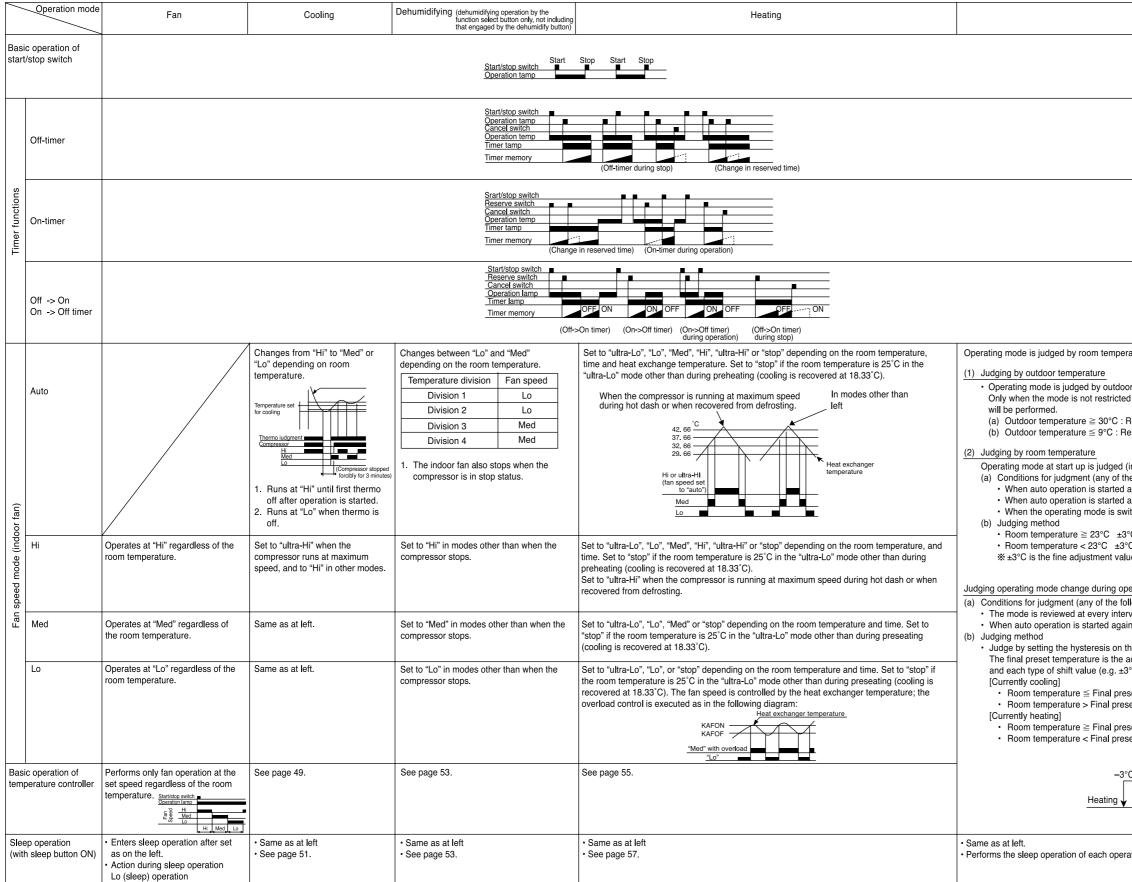

Auto
ature and outdoor temperature.
or temperature. d by this judgment, the judgment by room temperature in the next paragraph
Restricted to cooling estricted to heating
initial judgment) le followings) after 1 hour has elapsed since the operation was stopped. after the previous manual mode operation. itched to auto while operating at manual mode.
*C : Cooling Room C : Heating -temperature Je from the remote controller. 23°C
eration (Continuous judgment)
llowings) temperature val time. n before 1 hour has elapsed since the operation was stopped.
he final preset temperature. actually targeted preset temperature which is the sum of the basic preset temperature "°C by remote controller, preset temperature correction value, powerful shift value, etc.).
set temperature –3°C Change to heating set temperature –3°C Continue cooling
set temperature +2°C Change to cooling set temperature +2°C Continue heating
C Cooling
\uparrow
final preset temperature +2°C
ation mode.


	RAS-60YH7	
LABEL NAME	VALUE	
WMAX	5200 min ⁻¹	
WMAX2	5200 min ⁻¹	
WSTD	4750 min ⁻¹	
WBEMAX	3600 min ⁻¹	
СМАХ	5000 min ⁻¹	
CSTD	4600 min ⁻¹	
СКҮМАХ	3900 min ⁻¹	
СЈКМАХ	3900 min ⁻¹	
CBEMAX	2300 min ⁻¹	
WMIN	1200 min ⁻¹	
CMIN	1600 min ⁻¹	
STARTMC	60 Seconds	
DWNRATEW	100%	
DWNRATEC	100%	
SHIFTW	0°C	
SHIFTC	1°C	
CLMXTP	30.00°C	
YNEOF	25.00°C	
TEION	2.00°C	
TEIOF	9.00°C	
SFTDSW	0.66°C	
DFTIM1	50 Minutes	
DFTIM2	60 Minutes	

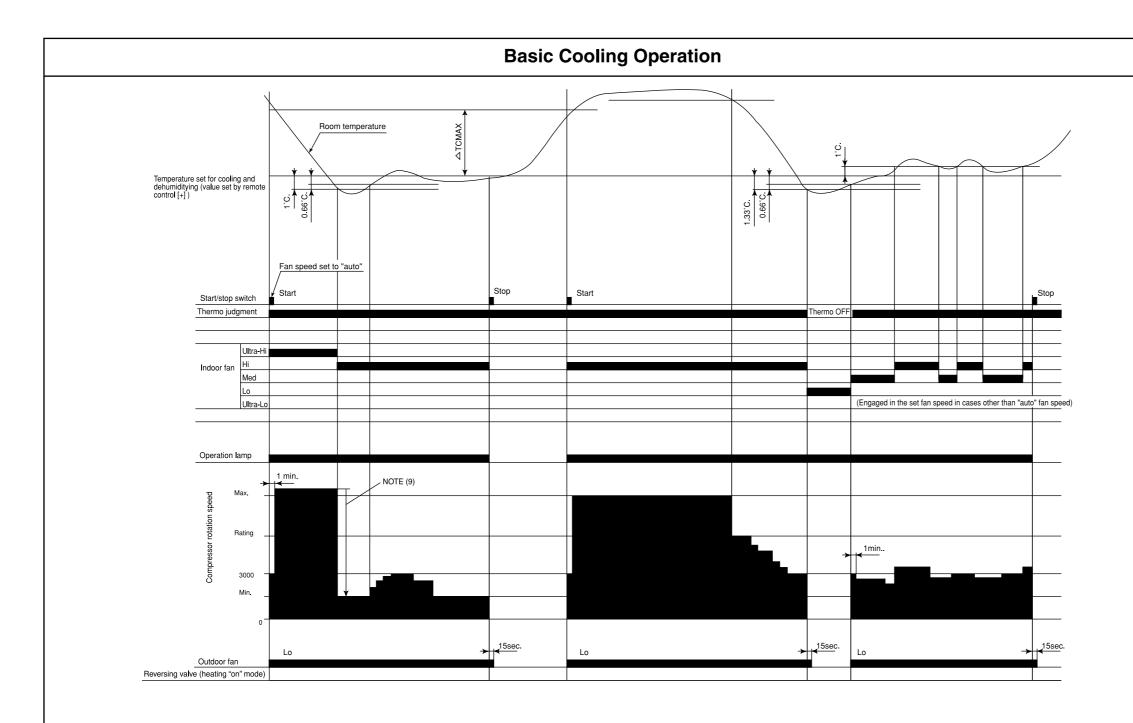


- (1) Condition for entering into Cool Dashed mode. When fan set to "Hi" or "Auto mode" and temperature difference between indoor temperature and set temperature has a corresponding compressor rpm (calculated value in Table 2) larger than CMAX.
- (2) Cool Dashed will release when i) a maximum 25 minutes is lapsed and ii) room temperature is lower than set temperature -3°C (thermo off) and iii) when room temperature has achieved setting temperature -1°C then maximum Cool Dashed time will be revised to 20 minutes. And iv) indoor fan is set to Lo and Med fan mode and v) change operation mode.
- (3) During Cool Dashed operation, thermo off temperature is set temperature (with shift value) -3°C. After thermo off, operation continue in Fuzzy control mode.
- (4) Compressor minimum "ON" time and "OFF" time is 3 minutes.
- (5) During normal cooling mode, compressor maximum rpm CMAX will maintain for 60 minutes if indoor temperature is lower than CLMXTP. No time constrain if indoor temperature is higher than CLMXTP.
- (6) When fan is set to "Hi", compressor rpm will be limited to CKYMAX.
- (7) When fan is set to "Med", compressor rpm will be limited to CJKMAX.
- (8) When fan is set to "Lo", compressor rpm will be limited to CBEMAX.
- (9) During Cool Dashed, when room temperature reaches set temperature -1°C compressor rpm is actual rpm x DWNRATEC.

Table 2 $\Delta TCMAX$

Temperature difference Calculated compressor rpm 1.66 2265 min ⁻¹ 2 2435 min ⁻¹ 2.33 2600 min ⁻¹ 2.66 2765 min ⁻¹ 3.33 2935 min ⁻¹ 3.33 3100 min ⁻¹ 3.66 3265 min ⁻¹ 3.66 3265 min ⁻¹ 4 3435 min ⁻¹ 4.33 3600 min ⁻¹ 4.66 3765 min ⁻¹ 5.33 4100 min ⁻¹ 5.66 4265 min ⁻¹ 6.33 4600 min ⁻¹ 6.33 4600 min ⁻¹ 6.33 4600 min ⁻¹ 7 4935 min ⁻¹ 7.33 5100 min ⁻¹ 7.66 5265 min ⁻¹ 8 5435 min ⁻¹ 8.33 5600 min ⁻¹ 8.33 5600 min ⁻¹ 9 5935 min ⁻¹ 9.33 6100 min ⁻¹ 9.66 6265 min ⁻¹ 10 6435 min ⁻¹		
1.66 2265 min ⁻¹ 2 2435 min ⁻¹ 2.33 2600 min ⁻¹ 2.66 2765 min ⁻¹ 3 2935 min ⁻¹ 3.33 3100 min ⁻¹ 3.66 3265 min ⁻¹ 4 3435 min ⁻¹ 4.33 3600 min ⁻¹ 4.66 3765 min ⁻¹ 5 3935 min ⁻¹ 5.66 4265 min ⁻¹ 5.66 4265 min ⁻¹ 6 4435 min ⁻¹ 6.66 4765 min ⁻¹ 7 4935 min ⁻¹ 7.33 5100 min ⁻¹ 7.66 5265 min ⁻¹ 8 5435 min ⁻¹ 8.33 5600 min ⁻¹ 9 5935 min ⁻¹ 9.33 6100 min ⁻¹		
2 2435 min^{-1} 2.33 2600 min^{-1} 2.66 2765 min^{-1} 3 2935 min^{-1} 3.33 3100 min^{-1} 3.66 3265 min^{-1} 4 3435 min^{-1} 4.33 3600 min^{-1} 4.66 3765 min^{-1} 5.33 4100 min^{-1} 5.66 4265 min^{-1} 6 4435 min^{-1} 6.66 4765 min^{-1} 7 4935 min^{-1} 7.33 5100 min^{-1} 7.66 5265 min^{-1} 8 5435 min^{-1} 8.33 5600 min^{-1} 9 5935 min^{-1} 9.33 6100 min^{-1}	difference	compressor rpm
2.33 2600 min ⁻¹ 2.66 2765 min ⁻¹ 3 2935 min ⁻¹ 3.33 3100 min ⁻¹ 3.66 3265 min ⁻¹ 4 3435 min ⁻¹ 4.33 3600 min ⁻¹ 4.66 3765 min ⁻¹ 5 3935 min ⁻¹ 5.33 4100 min ⁻¹ 5.66 4265 min ⁻¹ 6 4435 min ⁻¹ 6.33 4600 min ⁻¹ 6.66 4765 min ⁻¹ 7 4935 min ⁻¹ 7.33 5100 min ⁻¹ 7.66 5265 min ⁻¹ 8 5435 min ⁻¹ 8.33 5600 min ⁻¹ 9 5935 min ⁻¹ 9.33 6100 min ⁻¹	1.66	2265 min ⁻¹
2.66 2765 min^{-1} 3 2935 min^{-1} 3.33 3100 min^{-1} 3.66 3265 min^{-1} 4 3435 min^{-1} 4.33 3600 min^{-1} 4.33 3600 min^{-1} 4.66 3765 min^{-1} 5.33 4100 min^{-1} 5.66 4265 min^{-1} 6 4435 min^{-1} 6.66 4765 min^{-1} 7 4935 min^{-1} 7.33 5100 min^{-1} 7.66 5265 min^{-1} 8.33 5600 min^{-1} 8.66 5765 min^{-1} 9 5935 min^{-1} 9.33 6100 min^{-1}	2	2435 min ⁻¹
3 2935 min^{-1} 3.33 3100 min^{-1} 3.66 3265 min^{-1} 4 3435 min^{-1} 4.33 3600 min^{-1} 4.66 3765 min^{-1} 5 3935 min^{-1} 5.33 4100 min^{-1} 5.66 4265 min^{-1} 6 4435 min^{-1} 6.33 4600 min^{-1} 6.66 4765 min^{-1} 7 4935 min^{-1} 7.33 5100 min^{-1} 7.66 5265 min^{-1} 8 5435 min^{-1} 8.33 5600 min^{-1} 9 5935 min^{-1} 9.33 6100 min^{-1} 9.66 6265 min^{-1}	2.33	2600 min ⁻¹
3.33 3100 min ⁻¹ 3.66 3265 min ⁻¹ 4 3435 min ⁻¹ 4.33 3600 min ⁻¹ 4.66 3765 min ⁻¹ 5 3935 min ⁻¹ 5.33 4100 min ⁻¹ 5.66 4265 min ⁻¹ 6 4435 min ⁻¹ 6.33 4600 min ⁻¹ 6.66 4765 min ⁻¹ 7 4935 min ⁻¹ 7.33 5100 min ⁻¹ 7.66 5265 min ⁻¹ 8 5435 min ⁻¹ 8.33 5600 min ⁻¹ 9 5935 min ⁻¹ 9.33 6100 min ⁻¹	2.66	2765 min⁻¹
3.66 3265 min^{-1} 4 3435 min^{-1} 4.33 3600 min^{-1} 4.66 3765 min^{-1} 5 3935 min^{-1} 5.33 4100 min^{-1} 5.66 4265 min^{-1} 6 4435 min^{-1} 6.33 4600 min^{-1} 6.66 4765 min^{-1} 7 4935 min^{-1} 7.33 5100 min^{-1} 7.66 5265 min^{-1} 8 5435 min^{-1} 8.33 5600 min^{-1} 9 5935 min^{-1} 9.33 6100 min^{-1} 9.66 6265 min^{-1}	3	2935 min ⁻¹
4 3435 min^{-1} 4.33 3600 min^{-1} 4.66 3765 min^{-1} 5 3935 min^{-1} 5.33 4100 min^{-1} 5.66 4265 min^{-1} 6 4435 min^{-1} 6.33 4600 min^{-1} 6.66 4765 min^{-1} 7 4935 min^{-1} 7.33 5100 min^{-1} 7.66 5265 min^{-1} 8 5435 min^{-1} 8.33 5600 min^{-1} 9 5935 min^{-1} 9.33 6100 min^{-1} 9.66 6265 min^{-1}	3.33	3100 min ⁻¹
4.33 3600 min^{-1} 4.66 3765 min^{-1} 5 3935 min^{-1} 5.33 4100 min^{-1} 5.66 4265 min^{-1} 6 4435 min^{-1} 6.33 4600 min^{-1} 6.66 4765 min^{-1} 7 4935 min^{-1} 7.33 5100 min^{-1} 7.66 5265 min^{-1} 8.33 5600 min^{-1} 8.66 5765 min^{-1} 9 5935 min^{-1} 9.33 6100 min^{-1} 9.66 6265 min^{-1}	3.66	3265 min ⁻¹
4.66 3765 min^{-1} 5 3935 min^{-1} 5.33 4100 min^{-1} 5.66 4265 min^{-1} 6 4435 min^{-1} 6.33 4600 min^{-1} 6.66 4765 min^{-1} 7 4935 min^{-1} 7.33 5100 min^{-1} 7.66 5265 min^{-1} 8.33 5600 min^{-1} 8.66 5765 min^{-1} 9 5935 min^{-1} 9.33 6100 min^{-1} 9.66 6265 min^{-1}	4	3435 min⁻¹
5 3935 min ⁻¹ 5.33 4100 min ⁻¹ 5.66 4265 min ⁻¹ 6 4435 min ⁻¹ 6.33 4600 min ⁻¹ 6.66 4765 min ⁻¹ 7 4935 min ⁻¹ 7.33 5100 min ⁻¹ 7.66 5265 min ⁻¹ 8 5435 min ⁻¹ 8.33 5600 min ⁻¹ 8.66 5765 min ⁻¹ 9 5935 min ⁻¹ 9.33 6100 min ⁻¹	4.33	3600 min ⁻¹
5.33 4100 min ⁻¹ 5.66 4265 min ⁻¹ 6 4435 min ⁻¹ 6.33 4600 min ⁻¹ 6.66 4765 min ⁻¹ 7 4935 min ⁻¹ 7.33 5100 min ⁻¹ 7.66 5265 min ⁻¹ 8 5435 min ⁻¹ 8.33 5600 min ⁻¹ 9 5935 min ⁻¹ 9.33 6100 min ⁻¹ 9.66 6265 min ⁻¹	4.66	3765 min⁻¹
5.66 4265 min ⁻¹ 6 4435 min ⁻¹ 6.33 4600 min ⁻¹ 6.66 4765 min ⁻¹ 7 4935 min ⁻¹ 7.33 5100 min ⁻¹ 7.66 5265 min ⁻¹ 8 5435 min ⁻¹ 8.33 5600 min ⁻¹ 8.66 5765 min ⁻¹ 9 5935 min ⁻¹ 9.33 6100 min ⁻¹ 9.66 6265 min ⁻¹	5	3935 min ⁻¹
6 4435 min ⁻¹ 6.33 4600 min ⁻¹ 6.66 4765 min ⁻¹ 7 4935 min ⁻¹ 7.33 5100 min ⁻¹ 7.66 5265 min ⁻¹ 8 5435 min ⁻¹ 8.33 5600 min ⁻¹ 9 5935 min ⁻¹ 9.33 6100 min ⁻¹ 9.66 6265 min ⁻¹	5.33	4100 min ⁻¹
6.33 4600 min ⁻¹ 6.66 4765 min ⁻¹ 7 4935 min ⁻¹ 7.33 5100 min ⁻¹ 7.66 5265 min ⁻¹ 8 5435 min ⁻¹ 8.33 5600 min ⁻¹ 9 5935 min ⁻¹ 9.33 6100 min ⁻¹ 9.66 6265 min ⁻¹	5.66	4265 min⁻¹
6.66 4765 min ⁻¹ 7 4935 min ⁻¹ 7.33 5100 min ⁻¹ 7.66 5265 min ⁻¹ 8 5435 min ⁻¹ 8.33 5600 min ⁻¹ 8.66 5765 min ⁻¹ 9 5935 min ⁻¹ 9.33 6100 min ⁻¹ 9.66 6265 min ⁻¹	6	4435 min⁻¹
7 4935 min ⁻¹ 7.33 5100 min ⁻¹ 7.66 5265 min ⁻¹ 8 5435 min ⁻¹ 8.33 5600 min ⁻¹ 8.66 5765 min ⁻¹ 9 5935 min ⁻¹ 9.33 6100 min ⁻¹ 9.66 6265 min ⁻¹	6.33	4600 min⁻¹
7.33 5100 min ⁻¹ 7.66 5265 min ⁻¹ 8 5435 min ⁻¹ 8.33 5600 min ⁻¹ 8.66 5765 min ⁻¹ 9 5935 min ⁻¹ 9.33 6100 min ⁻¹ 9.66 6265 min ⁻¹	6.66	4765 min⁻¹
7.66 5265 min ⁻¹ 8 5435 min ⁻¹ 8.33 5600 min ⁻¹ 8.66 5765 min ⁻¹ 9 5935 min ⁻¹ 9.33 6100 min ⁻¹ 9.66 6265 min ⁻¹	7	4935 min⁻¹
8 5435 min ⁻¹ 8.33 5600 min ⁻¹ 8.66 5765 min ⁻¹ 9 5935 min ⁻¹ 9.33 6100 min ⁻¹ 9.66 6265 min ⁻¹	7.33	5100 min ⁻¹
8.33 5600 min ⁻¹ 8.66 5765 min ⁻¹ 9 5935 min ⁻¹ 9.33 6100 min ⁻¹ 9.66 6265 min ⁻¹	7.66	5265 min⁻¹
8.66 5765 min ⁻¹ 9 5935 min ⁻¹ 9.33 6100 min ⁻¹ 9.66 6265 min ⁻¹	8	5435 min⁻¹
9 5935 min ⁻¹ 9.33 6100 min ⁻¹ 9.66 6265 min ⁻¹	8.33	5600 min⁻¹
9.33 6100 min ⁻¹ 9.66 6265 min ⁻¹	8.66	5765 min⁻¹
9.66 6265 min ⁻¹	9	5935 min⁻¹
	9.33	6100 min ⁻¹
10 6435 min ⁻¹	9.66	6265 min⁻¹
	10	6435 min ⁻¹
10.33 6600 min ⁻¹	10.33	6600 min ⁻¹
10.66 6765 min ⁻¹	10.66	6765 min ⁻¹
11 6935 min ⁻¹	11	6935 min ⁻¹

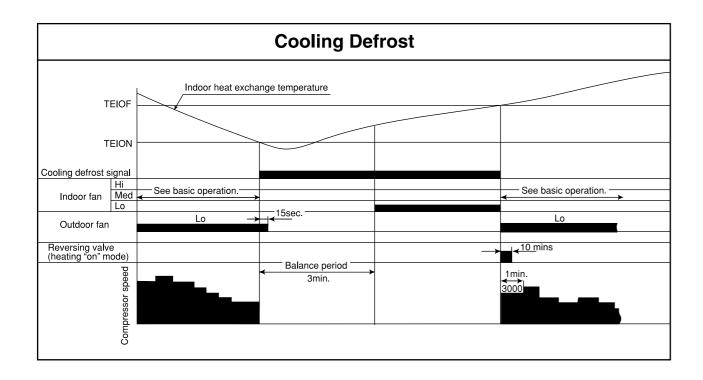

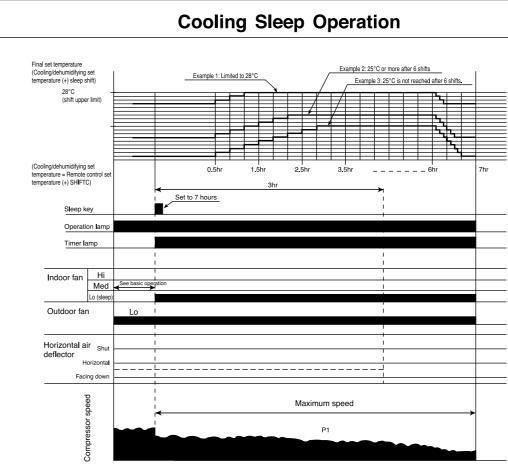


- (1) The sleep operation starts when the sleep key is pressed.
- (2) When the sleep key is set, the maximum compressor speed is limited, and the indoor fan is set to "sleep Lo".
- is not reached after 6 shifts, shifts repeat unit 25°C is reached.
- The sleep shift upper value of set temperature is 28°C. (4)
- (5) After 6 hours, a shift down to the initial set temperature is made at a rate of 0.33°C/5 min.
- switching is made.
- The indoor fan speed does not change even when the fan speed mode is changed. (7)
- (8) counted.
- (9)
- (10) If sleep operation is canceled by the cancel key or sleep key, all data is cleared.

(3) 30 minutes after the sleep key is set, the sleep shift of temperature starts, and upper shift is made at least 6 times. If 25°C


(6) If the operation mode is changed during sleep operation, the set temperature is cleared, and shift starts from the point when

When operation is stopped during sleep operation, the set temperature when stopped, as well as the time, continue to be

If the set lime is changed during sleep operation, all data including set temperature, time, etc. is cleared and restarted.

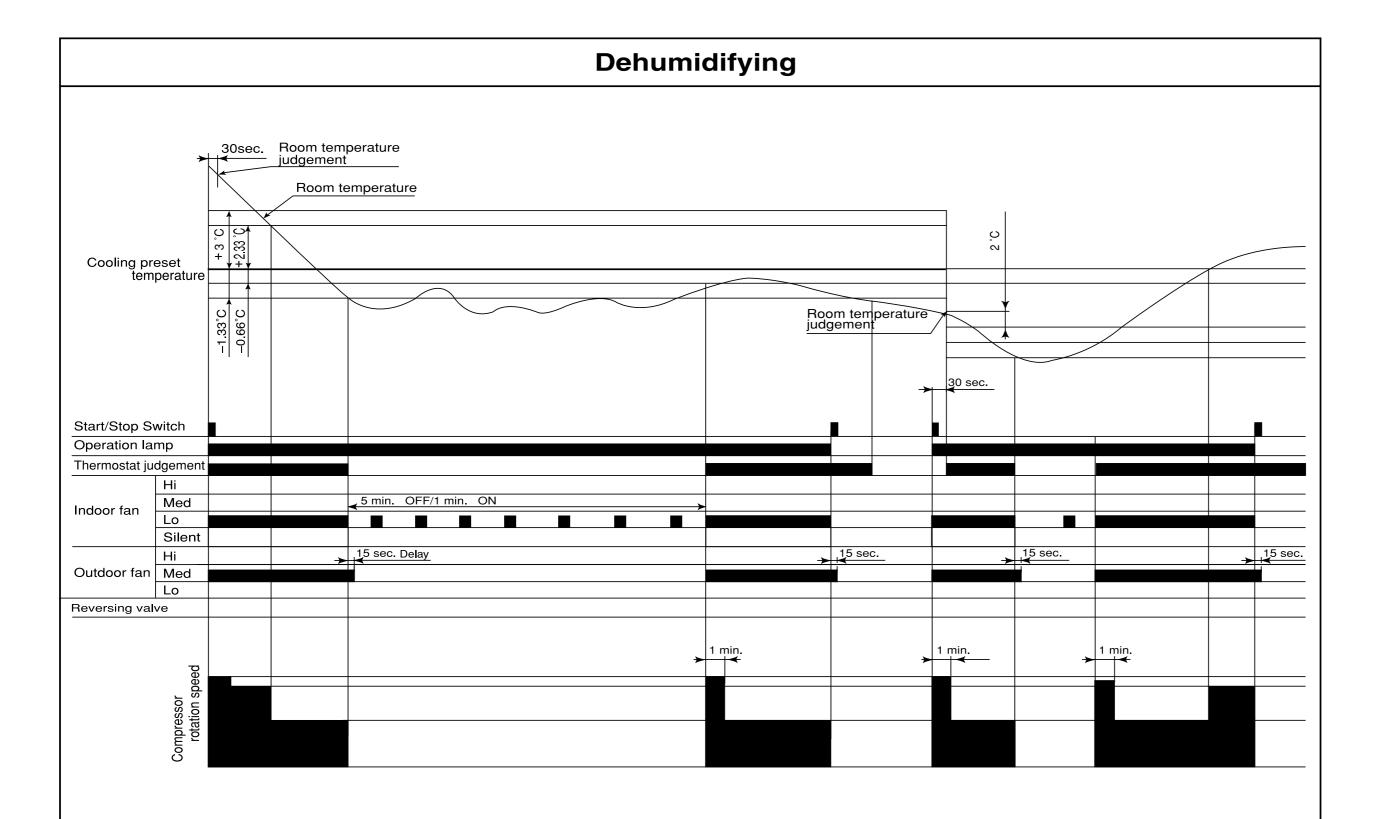

- (1) If the room temperature is (cooling preset temperature) (1.33°C) or less after 30 seconds from starting the operation, the operation is done assuming as the preset temperature = (room temperature at the time) (2°C).
- (2) The indoor fan is operated in the "Lo" mode. During thermo OFF indoor fan will be OFF for 5 minutes and ON for 1 minute.
- (3) When the operation is started by the themostat turning ON, the start of the indoor fan is delayed 32 seconds after the start of compressor operation.
- (4) The compressor is operated forcedly for 3 minutes after operation is started.
- (5) The minimum ON time and OFF time of the compressor are 3 minutes.

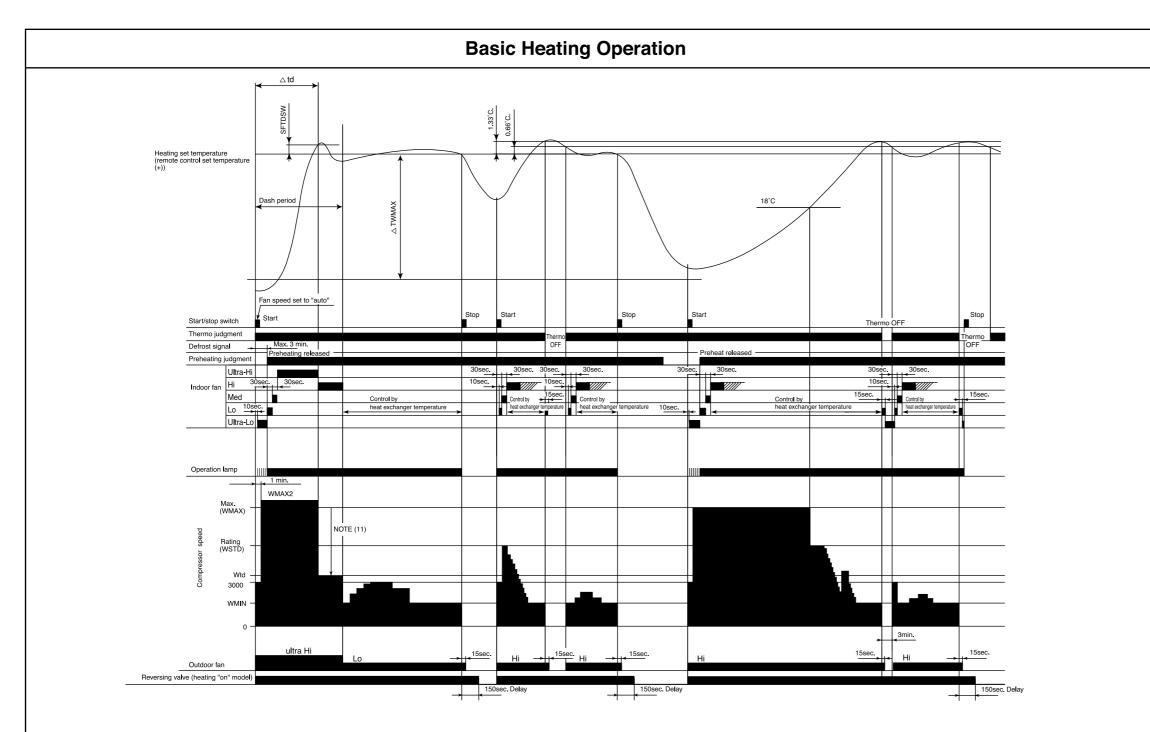


- (1) Condition for entering into Hot Dashed mode. When fan set to "Hi" or "Auto mode" and i) Indoor temperature is lower than 18°C, and ii) outdoor temperature is lower than 10°C, and iii) Temperature difference between indoor temperature and set temperature has a corresponding compressor rpm (calculated value in Table 3) larger than WMAX.
- Hot Dashed will release when i) Room temperature has achieved the set temperature + SFTDSW. ii) Thermo off. (2)
- (3) During Hot Dashed operation, thermo off temperature is set temperature (with shift value) +3°C. After thermo off, operation continue in Fuzzy control mode.
- Compressor minimum "ON" time and "OFF" time is 3 minutes. (4)
- During normal heating mode, compressor maximum rpm WMAX will maintain for 120 minutes if indoor temperature is higher than 18°C. No time limit constrain if indoor temperature (5) is lower than 18°C and outdoor temperature is lower than 2°C.
- (6) During Hotkeep or Defrost mode, indoor operation lamp will blink at interval of 3 seconds "ON" and 0.5 second "OFF".
- (7) When heating mode starts, it will enter into Hotkeep mode if indoor heat exchanger temperature is lower than YNEOF + 0.33°C.
- When fan is set to "Med" or "Lo", compressor rpm will be limited to WBEMAX. (8)
- In "Ultra-Lo" fan mode, if indoor temperature is lower than 18°C, indoor fan will stop. If indoor temperature is higher than 18°C + 0.33°C, fan will continue in "Ultra-Lo" mode. (9) During Hotkeep or Defrost mode, fan will continue in "Ultra-Lo" mode.
- (10) During Hot Dashed or outdoor temperature is lower than -5°C, compressor rpm is WMAX2.
- (11) During Hot Dashed, when room temperature reaches set temperature + SFTDSW compressor rpm is actual rpm x DWNRATEW.

Table 3 $\Delta TWMAX$

Temperature	Calculated
difference	compressor rpm
1.66	1965 min⁻¹
2	2135 min⁻¹
2.33	2300 min ⁻¹
2.66	2465 min ⁻¹
3	2635 min ⁻¹
3.33	2800 min ⁻¹
3.66	2965 min ⁻¹
4	3135 min⁻¹
4.33	3300 min ⁻¹
4.66	3465 min⁻¹
5	3635 min⁻¹
5.33	3800 min ⁻¹
5.66	3965 min ⁻¹
6	4135 min ⁻¹
6.33	4300 min ⁻¹
6.66	4465 min⁻¹
7	4635 min⁻¹
7.33	4800 min ⁻¹
7.66	4965 min ⁻¹
8	5135 min ⁻¹
8.33	5300 min ⁻¹
8.66	5465 min ⁻¹
9	5635 min⁻¹
9.33	5800 min ⁻¹
9.66	5965 min⁻¹
10	6135 min⁻¹
10.33	6300 min⁻¹
10.66	6465 min⁻¹
11	6635 min⁻¹

Notes:

1. See the data in Table 1 on page 47 for each constant in capital letters in the diagrams.

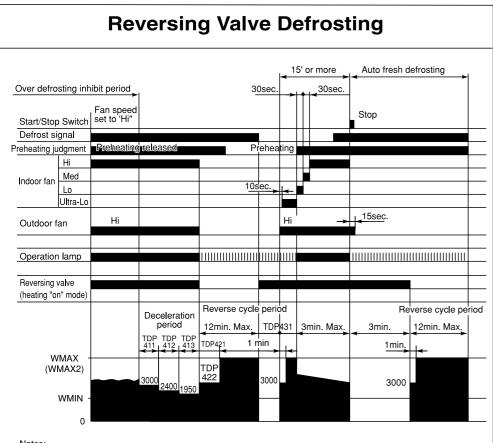


(1) The defrosting inhibit period is set as shown in the diagram below. When defrosting has finished once, the inhibit period is newly set, based on the outdoor temperature when the compressor was started. During this period, the defrost signal is not accepted.


(2) If the difference between the room and outdoor temperature is large when defrosting is finished, the maximum compressor speed (WMAX) or (WMAX2) can be continued for 120 minutes maximum.
 (3) The defrosting period is 12 minutes maximum.

(4) When operation is stopped during defrosting, it is switched to auto refresh defrosting.

(5) Auto refresh defrosting cannot be engaged within 15 minutes after operation is started or defrosting is finished.

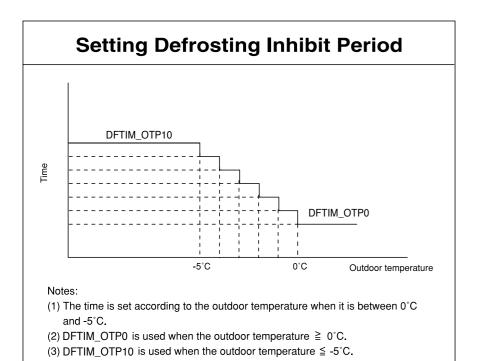


Heating Sleep Operation

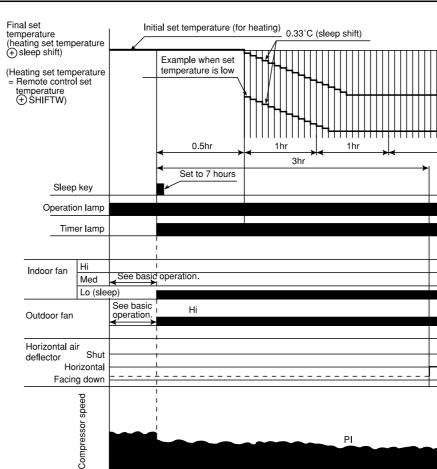

Notes:

- (1) The sleep operation starts when the sleep key is pressed.
- (2) When the sleep key is set, the maximum compressor speed is limited to WSTD+2000/2, and the indoor fan is set to "sleep Lo".
- (3) 30 minutes after the sleep key is set, the sleep shift of set temperature starts.
- (4) The maximum sleep shift of set temperature is 5°C, and the minimum is 12°C.
- (5) If the operation mode is changed during sleep operation, the changed operation mode is set and sleep control starts.
- (6) The indoor fan speed does not change even when the fan speed mode is changed. (Lo)
 (7) When defrosting is to be set during sleep operation, defrosting is engaged and sleep operation is restored after
- defrosting.(8) When operation is stopped during sleep operation, the set temperature when stopped, as well as the time, continue to be counted.
- (9) If the set time is changed during sleep operation, all data including set temperature, time, etc. is cleared and restarted

(10) If sleep operation is canceled by the cancel key or sleep key, all data is cleared.

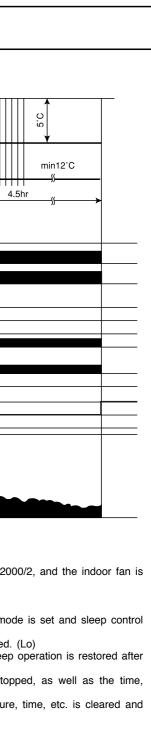


REFRIGERATING CYCLE DIAGRAM

MODEL RAS-60YH7/RAC-60YH7A

COOLING, DEHUMIDIFYING, DEFROSTING


OUTDOOR UNIT

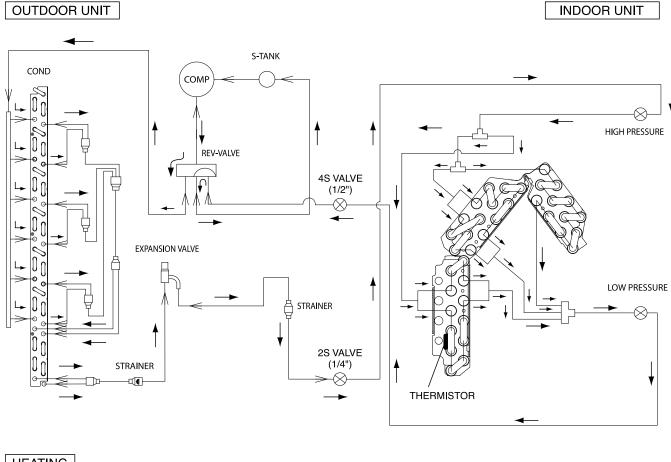

HEATING

OUTDOOR UNIT

INDOOR UNIT

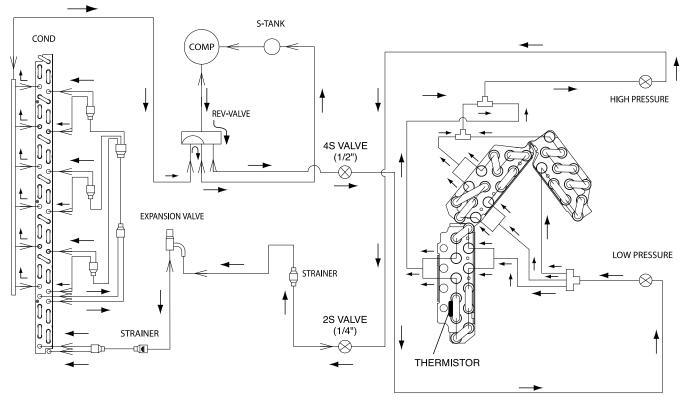


MMAND IS P) OPERAT OPERAT OPERAT OPERAT			PRESENT CONDITION	NOI		
STOP EACH MODE STOP ONE SWING CLOSING ARI DEFLECTOR) ATTO COOL STOP 2) DURING ONE SWING STOP AT THE MOMENT: AUTO COOL STOP 2) DURING STOP AT THE MOMENT: AUTO COOL STOP 2) DURING STOP AT THE MOMENT: AUTO COOL STOP 3) DURING STOP AT THE MOMENT: AUTO COOL STOP 3) DURING STOP AT THE MOMENT: AUTO HEAT DURING SWINGING STOP AT THE MOMENT: DURING DURING AUTO HEAT 3) DOWWARD 3) DOWWARD DURING DURING AUTO HEAT DURING SWINGING STOP AT THE MOMENT: DURING DERATION AUTO HEAT BURING 3) DOWWARD 3) DOWWARD 3) DOWWARD DURING AUTO HEAT BURING SWINGING STOP AT THE MOMENT: DURING AUTO HEAT BURING SWINGING STOP AT THE MOMENT: STOP AT THE MOMENT: DURING DURING BURING SWINGING STOP AT THE MOMENT: STOP AT THE MOMENT: DURING DURING DURING SWINGING STOP AT	INPUT SIGNAL	OPERATION	OPERATION MODE	AIR DEFLECTOR	OPERATING SPECIFICATION	KEFEKENCE
Image: Provision of the service of the moment of	KEY INPUT	STOP	EACH MODE	STOP	one swing (closing air deflector) ① Downward ② Upward	INITIALIZE AT NEXT OPERATION.
AUTO COOL COOL DUFING AUTO COOL STAPT SWINGING STAPT SWINGING STAPT SWINGING STAPT SWINGING STAPT SWINGING NUTO DRY DUFING AUTO HEAT AUTO HEAT BURING SWINGING STOP AT THE MOMENT. Nutro HEAT DUFING AUTO HEAT BURING SWINGING STOP AT THE MOMENT. Nutro HEAT AUTO HEAT BURING SWINGING STOP AT THE MOMENT. Nutro HEAT AUTO HEAT BURING SWINGING STOP AT THE MOMENT. Nutro DRY AUTO DRY BURING SWINGING STOP AT THE MOMENT. DUFING AUTO DRY ENDORWARD STOP AT THE MOMENT. DUFING AUTO DRY ENDORMARD STOP AT THE MOMENT. AUTO DRY AUTO DRY ENDORMARD STOP AT THE MOMENT. AUTO DRY AUTO DRY ENDORMARD STOP AT THE MOMENT. AUTO DRY AUTO DRY ENDOR STOP AT THE MOMENT. STOP E				1 1	STOP AT THE MOMENT.	
DURING DURING SWINGING STOP AT THE MOMENT. OPERATION AUTO HEAT STOP STAFT SWINGING STAFT SWINGING AUTO HEAT AUTO HEAT STOP DURING STAFT SWINGING STAFT SWINGING AUTO HEAT AUTO HEAT BUDNWARD DURING STOP DURING STAFT SWINGING AUTO HEAT DURING SWINGING STOP DURING SWINGING STOP AT THE MOMENT. DURING DURING DURING SWINGING STOP AT THE MOMENT. START SWINGING TEMPORARILY. DURING SWINGING START SWINGING TEMPORARILY. DURING DURING DURING SWINGING STOP SWINGING TEMPORARILY. STOP SWINGING TEMPORARILY. DURING SWINGING DURING TEMPORARY STOP) START SWINGING TEMPORARY STOP) STOP DURING ONE SWINGING DURING ANDE IS CLEARED IF SWING COMMAND IS DURING SWINGING TEMPORARY STOP) DURING SWINGING TEMPORARY STOP) DURING SWINGING TEMPORARY STOP) STOP EXOP DURING ONE SWINGING ON SWINGING TEMPORARY STOP) DURING SWINGING TEMPORARY STOP) DURING SWINGING SUPWARAP			AUTO COOL COOL FAN AUTO DRY	STOP	START SWINGING ① DOWNWARD ② UPWARD ③ DOWNWARD	
OPERATION OPERATION OPERATION STOP STAFT SWINGING STAFT SWING AGAIN. STAFT SWING AGAIN. STAFT SWINGING STAFT SWING AGAIN. STAFT SWING AGAI		DURING			STOP AT THE MOMENT.	
N DURING SWINGING STOF AT THE MOMENT. N AUTO DRY DRY DRY DRY AUTO DRY DRY DRY DRY DRY DRY DRY DRY DRY DRY		OPERATION	AUTO HEAT HEAT CIRCULATOR	STOP	START SWINGING ① DOWNWARD ② UPWARD ③ DOWNWARD	
N AUTO DRY DRY AUTO HEAT TEMPORARY STOP START SWING AGAIN. DURING AUTO HEAT AUTO HEAT AUTO DRY DRY AUTO HEAT BURING AUTO HEAT STOP SWINGING TEMPORARILY. AUTO HEAT DURING CICLLATOR DURING SWINGING TEMPORARILY. STOP SWINGING TEMPORARILY. STOP COCL TROULATOR STOP SWINGING TEMPORARILY. SWING MODE IS CLEARED IF SWING COMMAND IS TRANSMITTED DURING TEMPORARY STOP.) STOP COCL TOP DURING ONE SWINGING INITALIZE STOP DURING ONE SWINGING ONOWWARD DOWINWARD INITALIZE DURING EACH MODE STOP INITALIZE ONOWWARD INITALIZE DURING BURING ONE SWINGING ONE SWINGING INITALIZE INITALIZE DURING EACH MODE STOP INITALIZE INITALIZE INITALIZE DURING BURING ONE SWINGING INITALIZE INITALIZE INITALIZE DURING BURING ONE SWINGING INITALIZE INITALIZE INITALIZE DURING BURING ONE SWINGING AND MODE BECOMES INITALIZE INIT					STOP AT THE MOMENT.	
DURING OPERATION AUTO HEAT HEAT DURING SWINGING STOP SWINGING TEMPORARILY. SWING MODE IS CLEARED IF SWING COMMAND IS TRANSMITTED DURING TEMPORARY STOP.) STOP COOL STOP NITIALIZE FAN NITIALIZE BURING ONE SWING NITIALIZE BURING ONE SWING NITIALIZE OPENARY STOP.) STOP COOL STOP NITIALIZE DURING ONE SWING NITIALIZE OPENARD NITIALIZE BURING ONE SWING NITIALIZE OPENARD DURING OPERATION EACH MODE STOP DURING ONE SWINGING ONE SWING (CLOSING AIR DEFLECTOR) DURING OPERATION EACH MODE ONE SWINGING ONE SWING (CLOSING AIR DEFLECTOR) DURING OPERATION EACH MODE ONE SWINGING ONE SWINGING ONE SWING (CLOSING AIR DEFLECTOR) DURING OPERATION EACH MODE ONE SWINGING ONE SWINGING ONE SWINGING ONE SWINGING DURING EACH MODE DURING SWINGING ONE SWINGING AND MODE BECOMES INTIALIZING DURING EACH MODE DURING SWINGING INTIALIZING ONE	THERMO. ON (INTERNAL FAN ON)		AUTO DRY DRY	TEMPORARY STOP	START SWING AGAIN.	
COUL FAN DIPYCOUL FAN DIPYSTOP TO OWNWARD DURING ONE SWINGINITIALIZE DOWNWARD O DURING ONE SWINGINITIALIZE DOWNWARD ONE SWINGINGINITIALIZE TO OWNWARD ONE SWINGINGINITIALIZE TO OWNWARD TO ONNOW ARD TO OWNWARD ONE SWINGINGINITIALIZE TO OWNWARD TO OWNWARD 	THERMO. ON (INTERNAL FAN OFF)	OPERATION	AUTO HEAT HEAT CIRCULATOR		stop swinging temporarily. (swing mode is cleared if swing command is transmitted during temporary stop.)	
HEAT CIRCULATOR STOP DURING ONE SWING INITIALIZE DURING OPERATION EACH MODE STOP DURING SWINGING (1) DOWNWARD OPERATION EACH MODE (1) DOWNWARD DURING OPERATION BURING SWINGING (1) DOWNWARD DURING OPERATION EACH MODE (1) DOWNWARD DURING OPERATION EACH MODE (1) DOWNWARD DURING OPERATION EACH MODE (1) DOWNWARD DURING OPERATION (1) DOWNWARD DURING STOP (1) TIALIZING CONDITION OF EACH MODE. DURING EACH MODE INITIALIZING CONDITION OF EACH MODE.	MAIN SWITCH	STOP	COOL FAN DRY	Q	INITIALIZE ① DOWNWARD ② UPWARD	
DURING EACH MODE STOP DURING SWINGING ONE SWING (CLOSING AIR DEFLECTOR) OPERATION DURING ① DOWNWARD DURING DURING ③ UPWARD DURING BURING ③ UPWARD OPERATION BURING ③ UPWARD DURING BOURING BOURING STOP OPERATION FACH MODE INITIALIZING DURING BOURING STOP INITIALIZING CONDITION OF EACH MODE.	Ď		HEAT CIRCULATOR	G	INITIALIZE ① DOWNWARD	
OPERATION DURING DURING DURING EACH MODE STOP INITIALIZING CONDITION OF EACH MODE. DURING EACH MODE STOP INITIALIZING CONDITION OF EACH MODE. DURING OPERATION STOP STOP SWINGING AND MODE BECOMES INITIALIZING	MAIN SWITCH	DURING	FACH MODE	Q	ONE SWING (CLOSING AIR DEFLECTOR)	INITIALIZE AT NEXT
DURING EACH MODE DURING SWINGING DURING SWINGING	OFF	OPERATION				OPERATION.
DURING EACH MODE DURING SWINGING DURING SWINGING				STOP	INITIALIZING CONDITION OF EACH MODE.	
	CHANGE OF OPERATION	DURING OPERATION	EACH MODE		STOP SWINGING AND MODE BECOMES INITIALIZING CONDITION.	

AUTO SWING FUNCTION

DESCRIPTION OF MAIN CIRCUIT OPERATION


MODEL RAS-60YH7

1. Reset Circuit

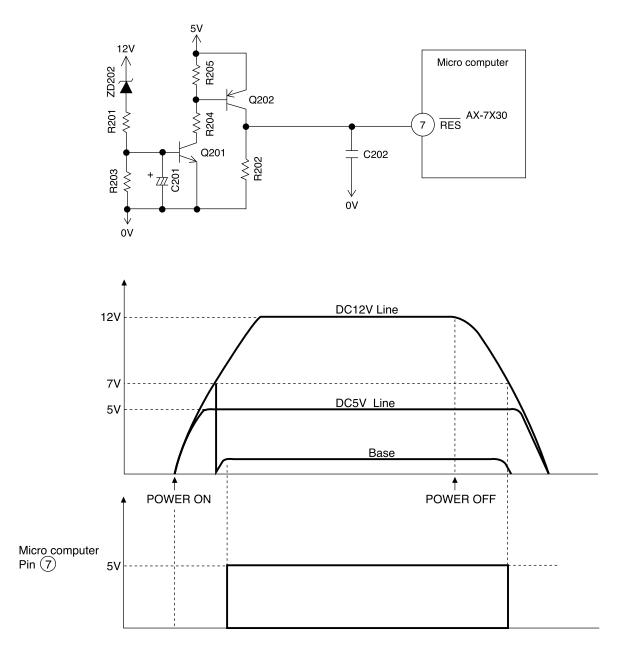

- The reset circuit is used to reset the program to its initial settings when the power is turned on or when the power is recovered after a power failure.
- The micro computer is reset when the reset input is "Lo", and operation is possible when the reset input is "Hi".
- The waveforms at each point when the power is turned on and off are shown in the diagrams.
- When the power is turned on, since Q202's collector is set to "Lo" at this time, Q202 is turned OFF and the reset input of the micro computer is set to "Lo". Then, the voltage of DC 12V line and DC 5V line are increase. When the voltage of DC 12V lines reaches about 7V, ZD202 is turn ON. The potential of Q201's base rises and Q202 is turned ON. The DC 5V line voltage already stable at this time and and the micro computer starts operations.
- When the power is turned OFF, the voltage of the DC 12V line decreases. When it becomes about 7V, ZD202 is turned OFF, then Q201 is turned OFF, Q202 is turned OFF, the reset input of the micro computer is set to "Lo" and the micro computer is under the reset mode.


2. Buzzer Circuit

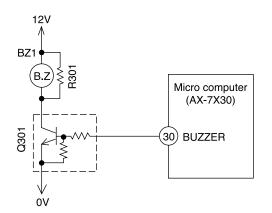


When the buzzer is to be activated, buzzer output pin (30) of the micro computer alternates between ON and OFF repeatedly at 4kHz and Q301 is turned ON/OFF accordingly. A 4kHz voltage is applied to the buzzer and the diaphragm of the buzzer vibrates to output 4kHz sound.

3. Initial setting (IC401)

The pre-heating operation start value, ratings of the compressor, maximum rotation speed, etc. are preset in the micro computer.

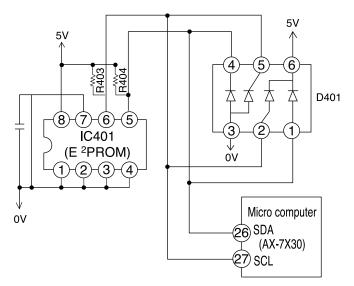

4. Receive circuit

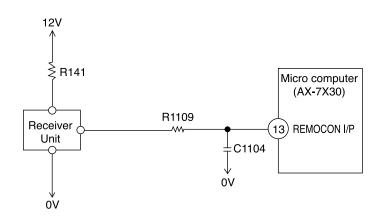

Infrared signals from the wireless remote controller are received by the light receiving unit and output after being amplified and shaped.

5. Auto Sweep Motor Circuit

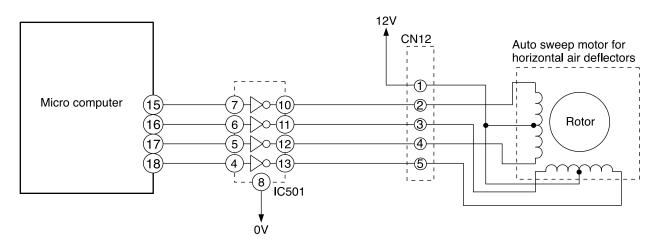


Fig. 5-1 Auto Sweep Motor Circuit (Horizontal air deflectors)

• Fig. 5-1 shows the Auto sweep motor drive circuit; the signals shown in Fig. 5-2 are output from pins (5-(18) of the micro computer.

Micro computer pins			Step	width		(Horizor	
Horizontal air deflectors	1	2	3	4	5	6	' 7 	8
(15)			 		 	 	 	
(16)		1	 	 	 	 		
(17)		 	 	 		 	 	
(18)		1 1 1 1		1 1 1 1	1 1 1 1	 	1 	

Fig. 5-2 Micro computer Output Signals


• As the micro computer's outputs change as shown in Fig. 5-2, the core of the auto sweep motor is excited to turn the rotor. Table 5-1 shows the rotation angle of horizontal air deflectors.

Table 5-1	Auto	sweep	Motor	Rotation
-----------	------	-------	-------	----------


	Rotation angle per step (°)	Time per step (ms)
Horizontal air deflectors	0.0879	10

6. Room Temperature Thermistor Circuit

- Fig. 6-1 shows the room temperature thermistor circuit.
- The voltage at (A) depends on the room temperature as shown in Fig. 6-2.

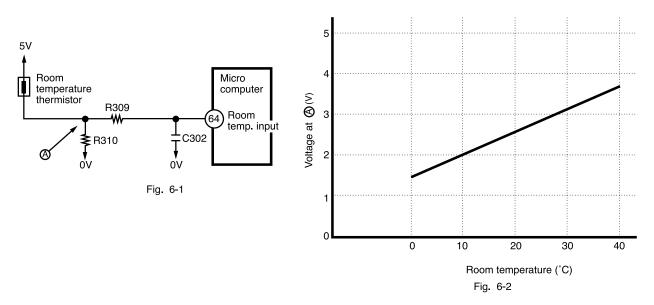


7. Heat exchanger temperature thermistor circuit

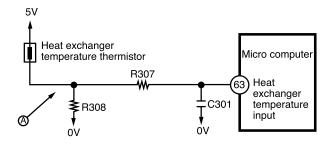




- The circuit detects the indoor heat exchanger temperature and controls the following.
 - (1) Low-temperature defrosting during cooling and dehumidifying operation.

The voltage at A depends on the heat exchanger temperature as shown in Fig. 7-2.

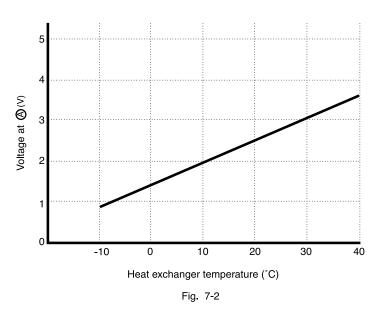

8. Temporary Switch

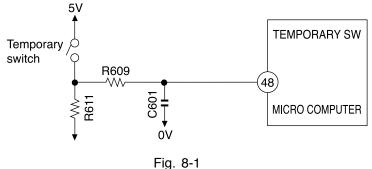

- The temporary switch is used to operate the air conditioner temporarily when the wireless remote control is lost or faulty.
- The air conditioner operates in the previous mode at the previously set temperature. However, when the power switch is set to OFF, it starts automatic operation.

JOINT CONNECTOR

D^{VDC} 340V 5V (<u>4) vcc</u> 15\ FM 20V IC2 vs 5 C503 C504 6) FG ZD20 Q503 0V RPM FEED BACK SIGNAL (MICON PIN (14)) 5١ 4 OUTPUT SIGNAL (MICON PIN (10) ▲~~~ R232 R234 B233 T L C C 331 ٥V Q204 οv οv Fig. 9-1 <Exp. of circuit wave> FAN MOTOR VS VOLTAGE (CN2 BETWEEN PIN 3-5) MICON (1) PIN VOLTAGE VOLTAGE FG FAN MOTOR RELATION BETWEEN JOINT (BETWEEN 0V - 40) CONNECTOR AND ROTATION RPM (BETWEEN PIN 3-6) Low speed (700min-High speed (1200min⁻¹) Low speed (700min High speed (1200min⁻ 1300min⁻ 7.1mS 1.7mS 4.2mS 15V 15V

9. Indoor Fan Motor Feedback Circuit



- Fan motor will receive signal thru Joint Connector with VDC (Motor Drive Voltage), VCC (Motor Controller Power Supply), VSC (RPM Instruction) motor WCC return the FG sinal under frequency RPM.
- The circuit produces fan motor drive from 340V DC supplied from the indoor unit and controls the fan motor speed.

A CAUTION 1

Indoor fan motor circuit will be connected with primary power source line and please take care of the electrical shock.

A CAUTION 2


Please do not disconnect the fan motor connector during running due to the high voltage supply, it will cause the damage at fan motor and PWB.

2.1V

5.4V

DESCRIPTION OF MAIN CIRCUIT OPERATION

1. Power Circuit

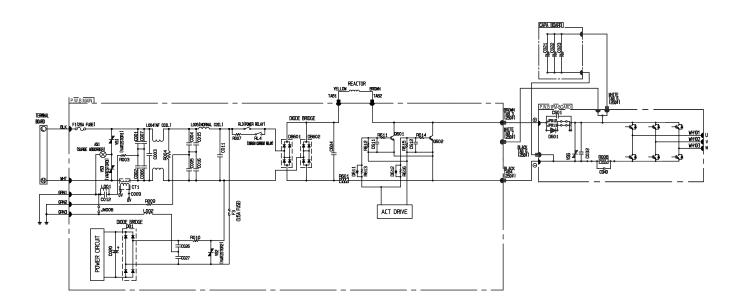



% This circuit full-wave rectifies 220 - 240 VAC applied between terminals L and N and boosts it to a required voltage with the IPM to create a DC voltage.

The voltage become 320-360V when the compressor is operated.

※ Importance component

- (1) Intelligence Power Module (IPM)A module that constitute by an inverter part.
- (2) Diode Stack (DB1, DB601, DB602)These rectify the 220 240 VAC from terminal L and N to a DC power supply.

<Reference>


In case of Intelligence Power Module malfunction or connection failure immediately after compressor starts, its may stop due to error of [abnormal low speed], [switching failure],[Ip stop] and others.

<Reference>

If diode stack (DB601,DB602) are faulty, DC voltage may not be generated and the compressor may not operate at all. Also be aware that the 3.15A fuse might have blown.

(3) Smoothing capacitors (CO21 ~ CO24, 400 μ F, 450V)

This smoothes (averages) the voltage rectified by the diode stack.

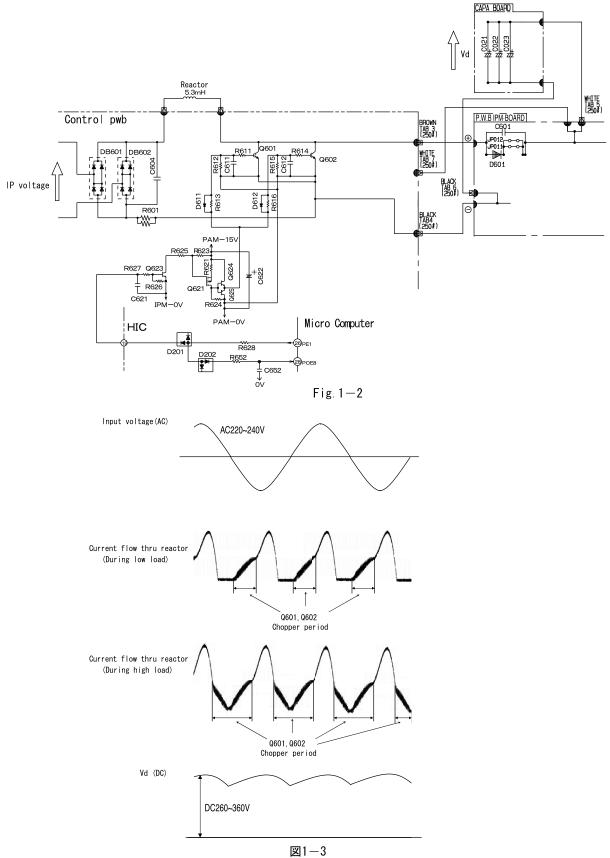

(4) |GBT to improve efficiency (Q601,Q602)


It will improve the efficiency during compressor load become heavy when current flow thru the chopper period of Q601, Q602.

(5) C001 ~ C007, C015, C016, C026, C027, L004, L005

These absorb electrical noise generated during operation of compressor and also absorb external noise entering from power line to protect electronic parts.

(6) Surge Absorber, Varistor1,2,3

These absorbs external power surge.

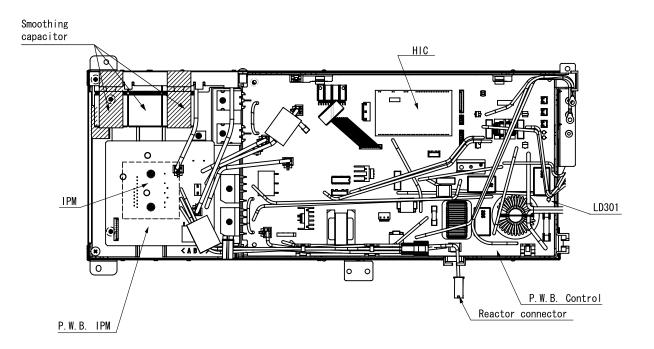

*Be careful to avoid an electric shock as a high voltage is generated. Also take care not to cause a short-circuit through incorrect connection of test equipment terminals. The circuit board can be damage.

2. PWB for power circuit

Voltage specification of power circuit as shown in below table. <{Checking point>

Output	Spec	Main load	Measuring point	Example of possible failure mode.
5V 0/P	5 ±0. 4V	Micon, Thermistor	Tester⊕ : J19 (5V) Tester⊖ : J16 (0V)	Outdoor not operate, no blinking indication
12V 0/P	12 ^{±1} V	Micon, IC2,3,4 Relay circuit	Tester⊕ : L104(12V) Tester⊖ : J16 (0V)	Outdoor not operate, no blinking indication
16V 0/P	15. 5±1. ⁵V	IPM for Comp IPM for DC fan	Tester⊕ : L103(16V) Tester⊖ : J16 (0V)	Stop : LD301 3,4 or 12 times blinking
PAM-15V 0/P	15 ±1. 55 ∨	ACT circuit	Tester⊕ : J31 (PAM-15V) Tester⊝ : J16 (OV)	Stop : LD301 14 times blinking

* Power circuit for pwb can consider normal if the result is satisfied with above specification.

3. Reversing valve control circuit

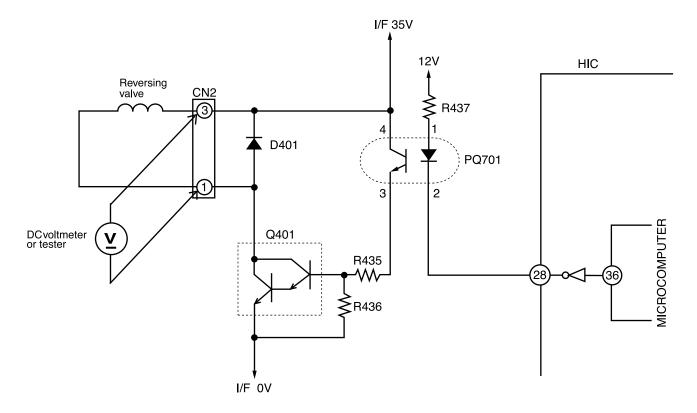


Fig. 3 – 1

 Reversing valve control circuit can switch reversing valve ON/OFF according to instruction from indoor microcomputer depending on the operation condition shows in Table 3-1.
 Voltage at each point in each operation condition is approximately as shown below when measured by

Voltage at each point in each operation condition is approximately as shown below when measured by tester. (When voltage between pin 1 and 3 CN2 is measured)

Op	peration condition	Voltage between pin 1 and 3 CN2
Cooling	General operation of Cooling	About 0V
	In normal heating operation	About 35V
Heating	MAX. rotation speed instructed by indoor microcomputer after defrost is completed	About 35V
	Defrosting	About 0V
Dehumidifying	Sensor dry	About 0V

Table 3-1

4. Temperature Detection Circuit

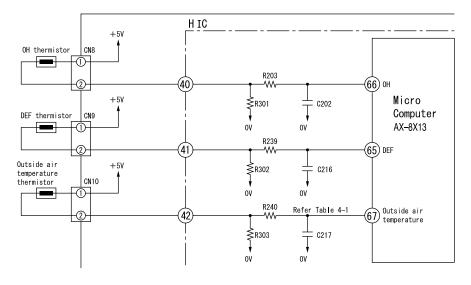


Fig. 4-1

- * OH thermistor circuit detect the temperature at the surface of compressor head, DEF thermistor circuit detect the defrosting operation temperature.
- * A thermistor is a negative resistor element which has characteristics that the higher(lower) the temperature, the lower(higher) the resistance.
- * When the compressor is heated, the resistance of the OH thermistor becomes low and \oplus 5V is divided by OH thermistor and R301 and the voltage at pin 66 of microcomputer.
- * Compare the voltage at microcomputer pin 66 and setting value stored inside. If the value exceed the set value, microcomputer will judge that the compressor is overheated and stop the operation.
- * When frost is formed on the outdoor heat exchanger, the temperature at the exchanger drops abruptly. Therefore the resistance of the DEF thermistor becomes high and the voltage at pin 65 of micro computer drops. If this voltage becomes lower than the set value stored inside, microcomputer will enter the defrost control.
- * During defrost operation, the microcomputer will transfer the defrosting condition command to indoor unit via SDO pin of interface of IF transmission output.
- * The microcomputer read the outdoor temperature by Outside Air thermistor and transfer it to the indoor unit, thus controlling the compressor rotation speed according to the set value in the EEPROM of indoor unit and switching the operation mode (outdoor fan on/off etc.) to DRY mode.

Below table show the typical values of outdoor temperature in relation to the voltage.


Outside Air Temperature (°C)	-10	0	10	20	30	40
Voltage at both side of R3O3 (V)	1.19	1.69	2.23	2. 75	3. 22	3.62

-<Reference>


When the thermistor is open open condition or disconnect, microcomputer pin $65 \sim 67$ are approx.OV; When thermistor is shorted, they are approx.5V and LD301 will blink 7 times.

However, an error is detected when only the OH thermistor is shorted and will enter blinking mode after 12 minutes start the compressor operation.

5. Electric expansion valve circuit

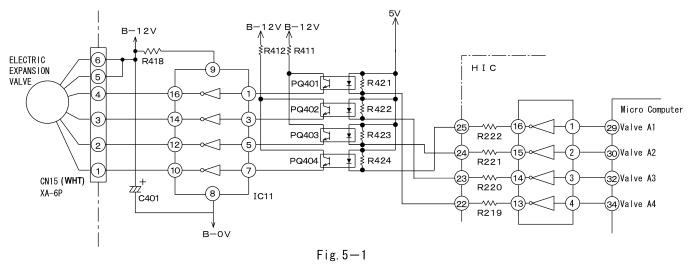

- * The electric expansion value is driven by DC12V. Power is supplied to 1 or 2 phases of 4-phase winding to switch magnetic pole of winding in order to control the opening degree.
- Relationship between power switching direction of phase and open/close direction is shown below.
 When power is supplied, voltages at pins 4 to 1 of CN15 are about 0.9V and 12V when no power is supplied.
 When power is reset, initial operation is performed for 10 or 20 seconds. During initial operation, measure all voltages at pin 4 to 1 of CN15 by using a multimeter. If there is any pin with voltage that has not changed from 0.9V or 12V, expansion valve or micro computer is broken.
- * Fig.5-1 shows logic waveform when expansion valve is operating.

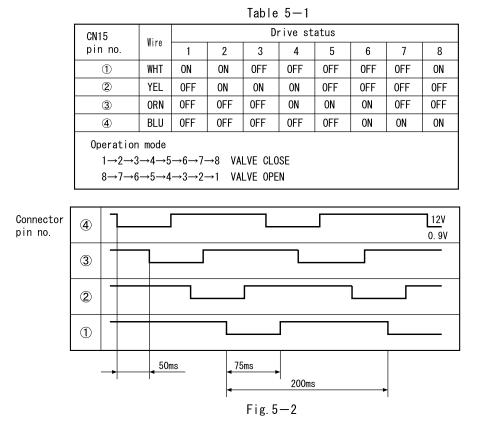

With expansion valve control, opening degree is adjusted to stabilize target temperature by detecting compressor head temperature. The period of control is about once per 20 seconds and output a few pulse.

6. Outdoor DC fan motor control circuit

* This model is built with DC fan motor control circuit inside outdoor electrical unit.

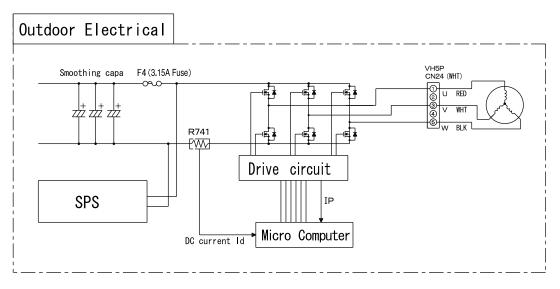


Fig	6—	1
-----	----	---

This DC fan motor is control by outdoor micro computer that follow the operating instruction received from indoor micro computer. The DC current that flow from R741 will presume actual operation speed and control the rotation to follow the operating instruction. Based on this DC current it will detect a over current and other fan motor failure.

(1) Fan motor speed controller during starting

Due to the interference of strong wind etc., operation movement is changed based on fan direction and rotation speed as shown below during starting of operation. In addition, the fair wind is define as wind that blow to outside direction using Mouth Ring part. At strong and contrary wind ... The rotational speed is not controlled as to protect the equipment and fan will rotate reversely depend on the wind. Automatically


	start when wind condition become weak.
At contrary wind	The rotational speed is controlled in fair wind direction after it
	slowly reduce the speed and finally stop.
At fair wind	The rotational speed is controlled as it is.
At strong fair wind	The rotational speed is not controlled as to protect the equipment
	and fan will rotate reversely depend on the wind. Automatically
	start when wind condition become weak.

(2) Fan motor speed controller during unit operating

There is a case where fan rpm is reducing during rotating caused by interference of strong wind If this condition continue in long period, fan will stop rotating. (LD301 : 11 times blinking) The unit will restart according to control as per during start (1).

- (3) Method of confirming self diagnosis LD301 lamp : 12 times blinking If the unit stop and LD301 on the pwb blinking 12 times [fan lock stop is detected], follow below steps to confirm it.
 - Fan lock stop is detected when something has disturb the fan rotation by inserting material into propeller fan or ice has growing inside outdoor unit caused by snow. Remove it if found something is bloking the fan.
 - 2. Confirmed that CN24 connector is securely inserted. Fan lock stop is detected also when connector is not properly inserted. Please securely insert if found any disconnection.
 - 3. Fan lock stop also can be detected where strong wind blown surrounding the unit. Please confirm after restart the unit. (It may take few minutes to operate the compressor) It is not a malfunction of electrical unit or fan motor if the unit run continuesly after restart the unit.
 - 4. Check fan motor condition as below procedure.

[Checking Fan Motor] procedure

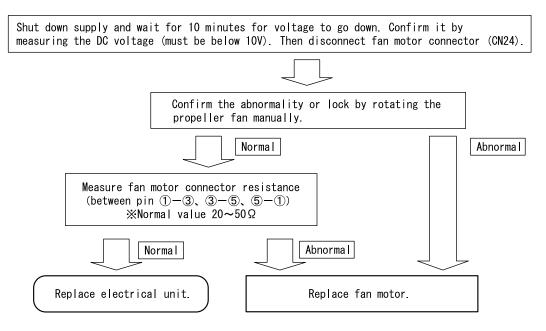

- 5. Reconnect again fan motor connector (CN24).
 - ※ Please confirm above checking procedure if found F4(3.15A fuse) blown If fan motor is broken, replace both electrical unit and fan motor.

Reference


- No power is suplied to the outdoor unit if F4(3.15A Fuse) is blown. Both DC fan motor and switching power supply is using same fuse.
- Caution
- * Beware of electric shock due to high voltage when conducting an operation check. Power supply for DC fan motor and compressor is common (DC260~360V).

SERVICE CALL Q & A

the temperature is preset at

"30".

COOLING MODE

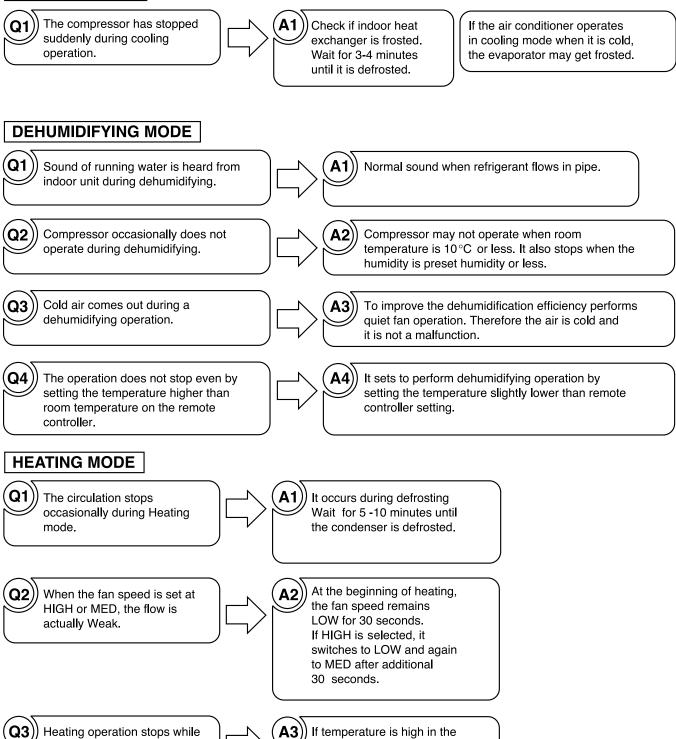


outdoor, heating operation


may stop to protect internal


devices.

AUTO FRESH DEFROSTING

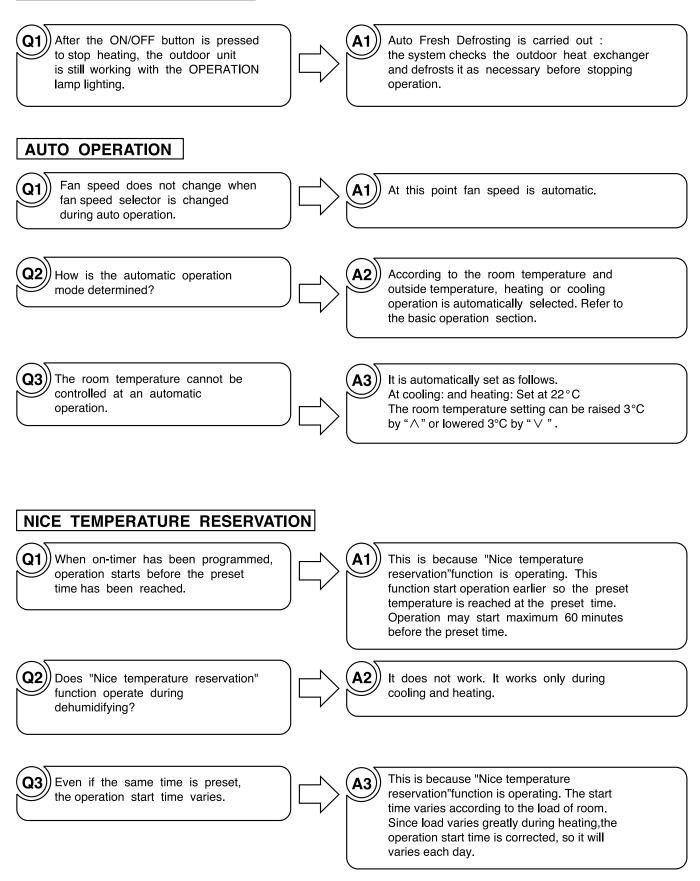


AT STARTING OPERATION

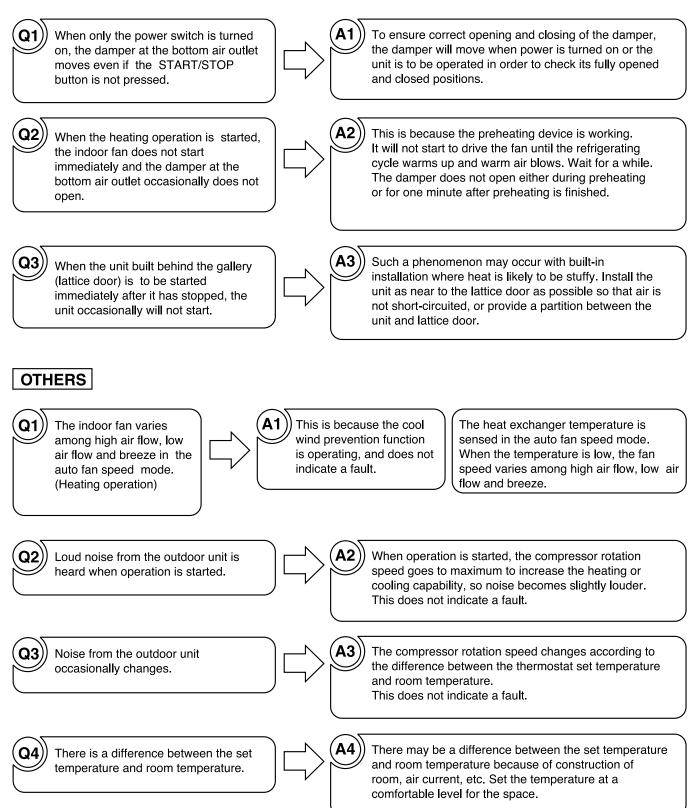


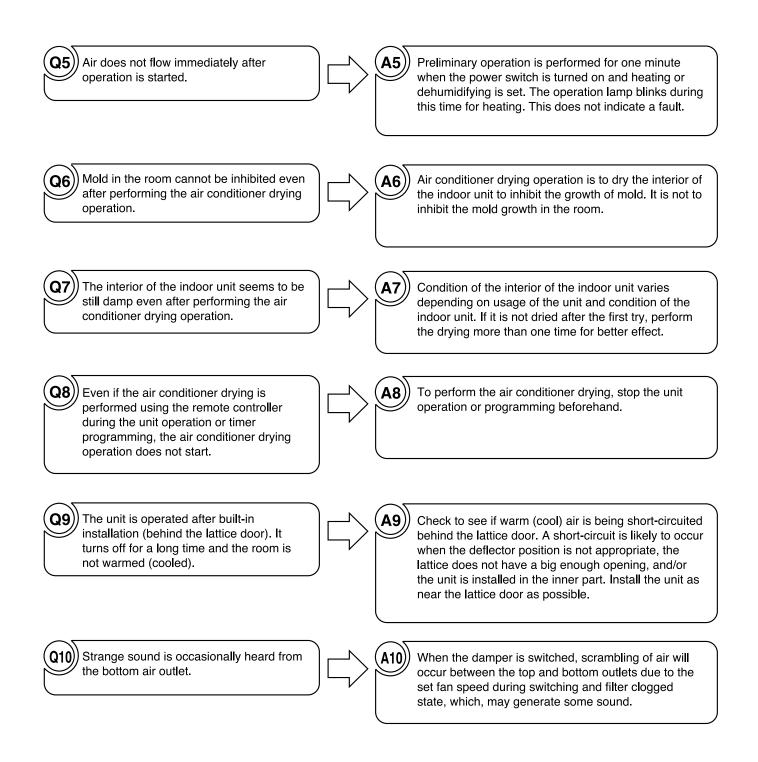

TROUBLE SHOOTING

PRECAUTIONS FOR CHECKING

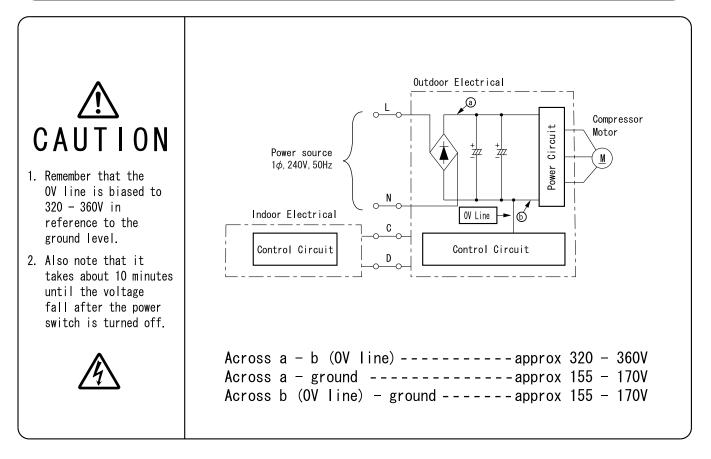

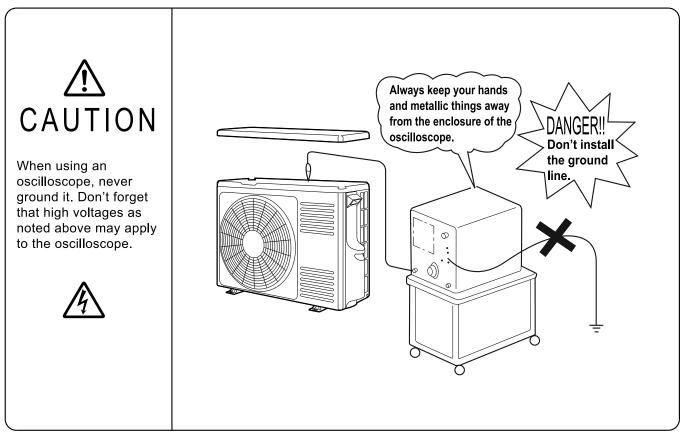


DISCHARGE PROCEDURE AND METHOD TO STOP ENERGIZE THE POWER CIRCUIT



Caution

- Voltage of about 300-330V is charged between both ends of smoothing capacitors.
- During continuity check for each part of circuit in outdoor electrical parts, be sure to discharge smoothing capacitor to prevent secondary trouble.
- 1. Turn OFF power supply to the outdoor unit.
- After power is turned OFF, wait for 15 minutes or more. Then remove electrical parts cover and apply soldering iron of 30 to 75W for 15 seconds or more to DC voltage ⊕ and DC voltage — terminals in order to discharge voltage in smoothing capacitors.

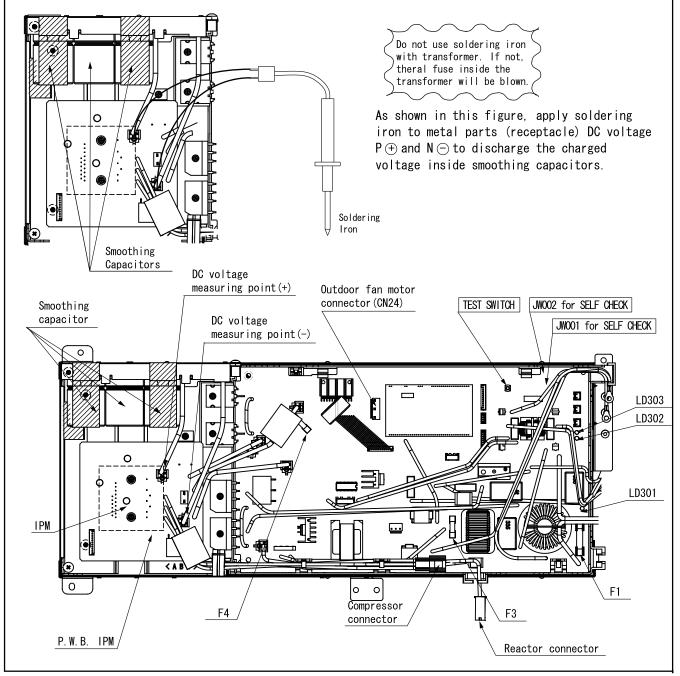


[Other cautions]


(1) Disconnection of tab terminal receptacle

All recectacle used to connect with tab terminal are built with lock mechanism. Please take note that by using a force to pull out the receptacle without releasing the lock, can cause a damage. Furthermore, during connecting the receptacle back make sure to securely insert until end.


* Receptacle type and procedure to releasing the lock



Vertical type (with plastic casing) Pull out by holding the plastic casing.

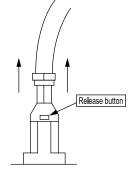

Vertical type (without casing) Pull out while pushing the release button.

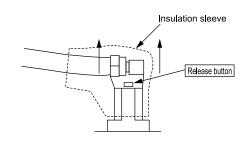


Horizontal type (with insulation sleeve) Pull out from top of insulation sleeve while pushing the release button.

(2) Disconnecting on board connector

On board connector with lock machanism are widely used. Please take note that by using a force to pull out with out releasing the lock mechanism, can cause a damage.

Furthermore, during inserting back the connector make sure it surely done.

Release lock with finger before disconnecting.

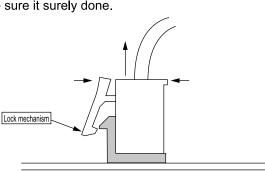


(3) Connector disconnection during discharge is prohibited

Disconnecting connector during discharge is extremely prohibited.Component on board and fan motor will damage. Proceed trouble shooting process after confirming smoothing capacitor of indoor & outdoor pwb has been discharge.


CHECKING THE INDOOR TIMER LAMP IF BLINKING 1 TIME

<Caution> Please turn OFF power supply before proceed with below checking flow.

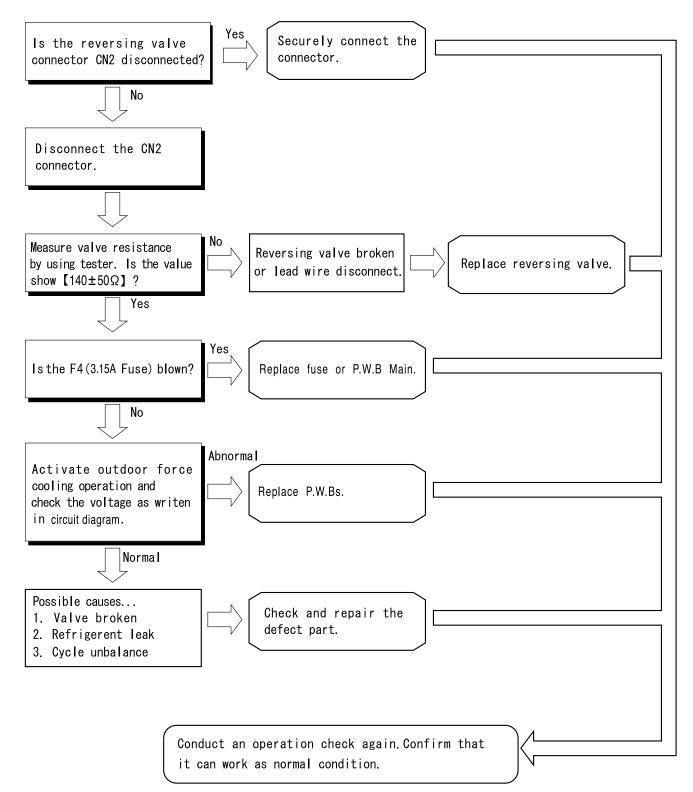

CHECKING THE INDOOR/OUTDOOR UNIT ELECTRICAL PARTS AND REFRIGERATING CYCLE

MODEL RAS-60YH7

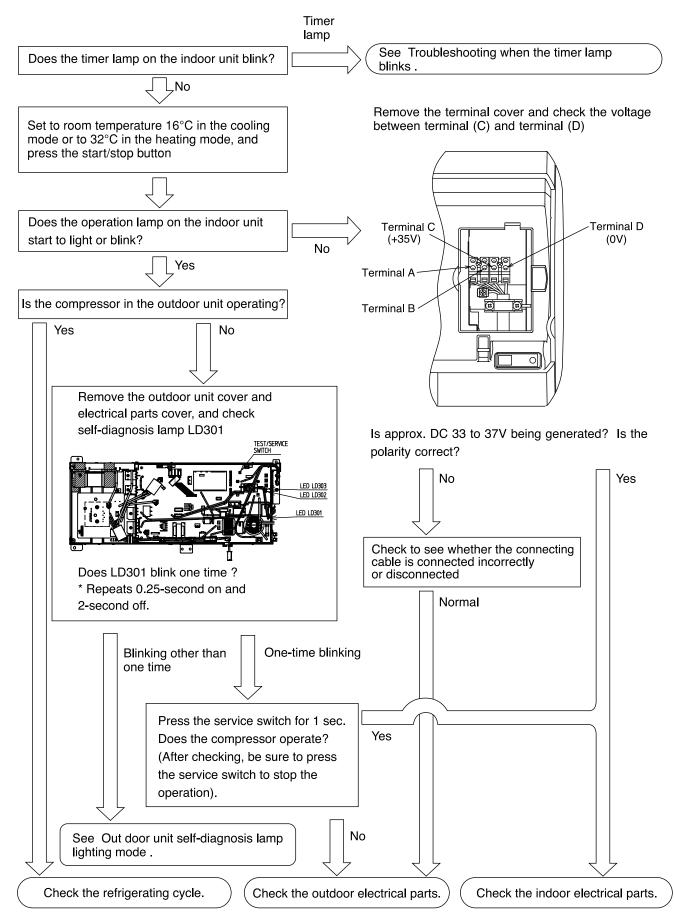

TROUBLESHOOTING WHEN TIMER LAMP BLINKS.

MODEL RAS-60YH7

Perform troubleshooting according to the number of times the indoor timer lamp and outdoor LD301 blink.

SELF-DIAGNOSIS LIGHTING MODE

No.	Blinking of Timer lamp	Reason for indication	Possible cause
1	 5‱. _ 1 time	Reversing valve defective When the indoor heat exchanger temperature is too low in the heating mode or it is too high in the cooling mode.	 (1) Reversing valve defective (2) Heat exchanger thermistor disconnected (only in the heating mode) (Note) The malfunction mode is entered the 3rd time this abnormal indication appears (read every 3 minutes).
2	5sec 2 times	Outdoor unit forced operation When the outdoor unit is in forced operation or balancing operation after forced operation	Electrical parts in the outdoor unit
3	5‱ 3 times	Indoor/outdoor interface defective When the interface signal from the outdoor unit is interrupted.	 Indoor interface circuit Outdoor interface circuit
4	5 5880. — — 4 times	Outdoor electrical assembly defective.	Please check at the outdoor electrical led lamp blinking (LD301) and refer to self diagnosis lighting mode for outdoor unit.
5	<u>5≋ec.</u> 9 times	Room thermistor or heat exchanger thermistor is faulty When room thermistor or heat exchanger thermistor is opened circuit or short circuit.	(1) Room thermistor(2) Heat exchanger thermistor
6	<u>5800.</u> −− 10 times	Over-current detection at the DC fan motor	 Indoor fan locked Indoor fan motor Indoor control P.W.B.
7	▲ ● 5sec. ● 13 times	IC401 or IC402 data reading error When data read from IC401 or IC402 is incorrect.	IC401 or IC402 abnormal

(_____ - Lights for 0.5 sec. at interval of 0.5 sec..)

<Cautions>


Ж1

- (1) If the interface circuit is faulty when power is supplied, the self-diagnosis display will not be displayed.
- (2) If the indoor unit does not operate at all, check to see if the connecting cable is connected or disconnected.
- (3) To check operation again when the timer lamp is blinking, you can use the remote control for operation (except for mode mark ×1).


CHECKING INDOOR UNIT ELECTRICAL PARTS

MODEL RAC-60YH7A


1. Power does not come on (no operation)

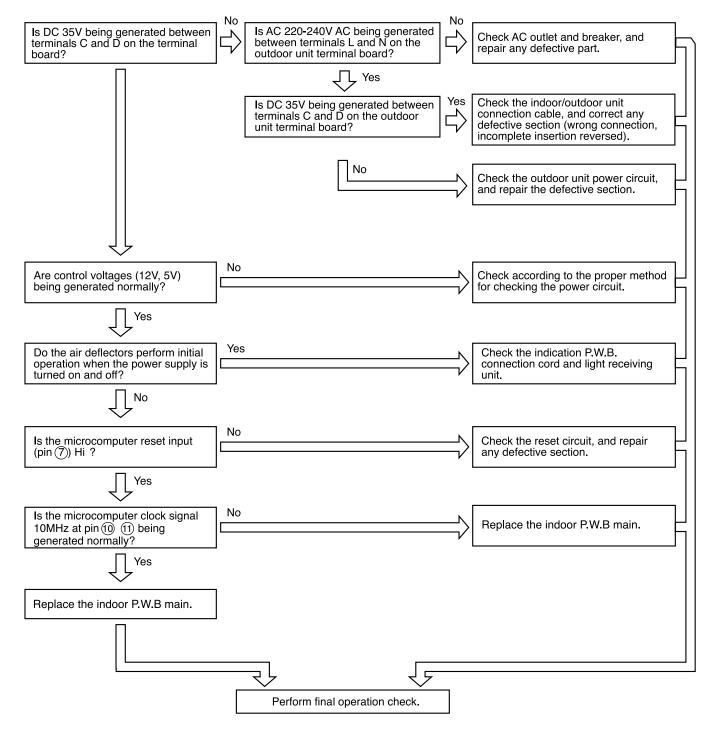


2. Outdoor unit does not operate (but receives remote infrared signal)

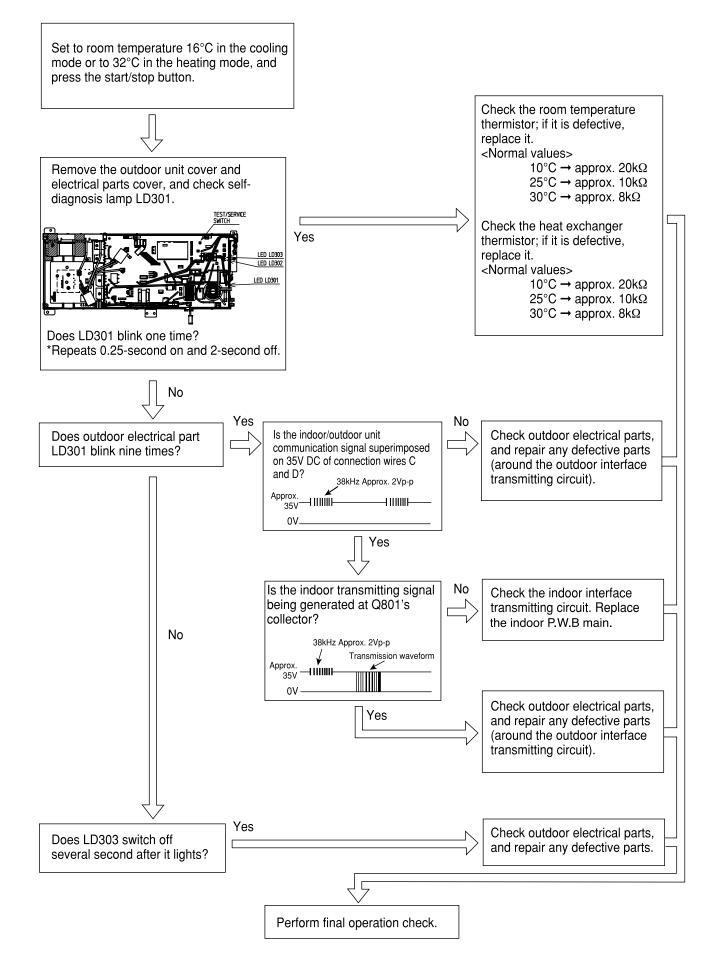


3. Only indoor fan does not operate (other is normal)

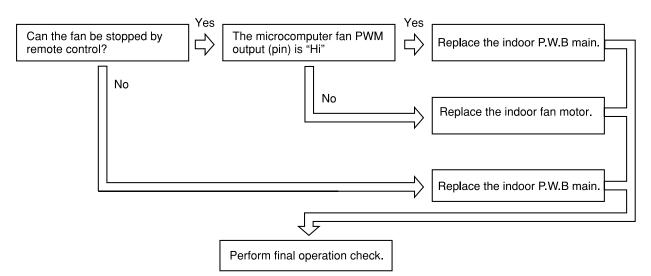


4. Air deflector does not move (others are normal)

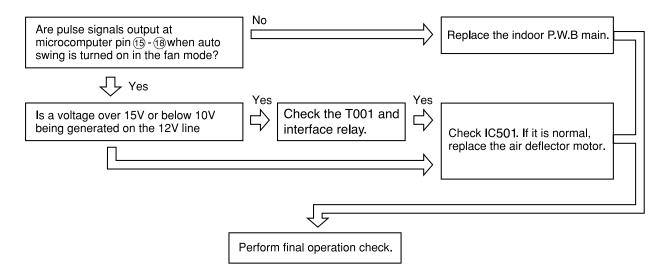


5. All systems stop from several seconds to several minutes after operation is started (all indicators are also off)

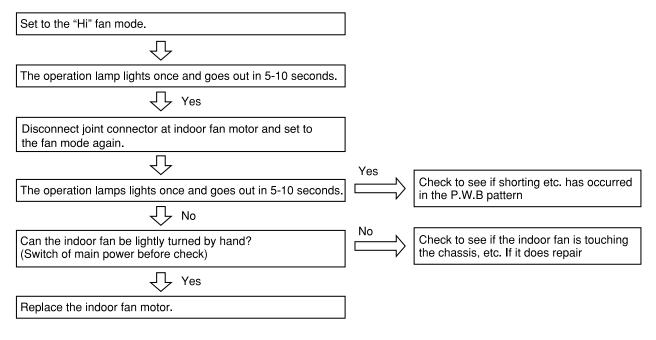


6. Check the main P.W.B (power circuit)

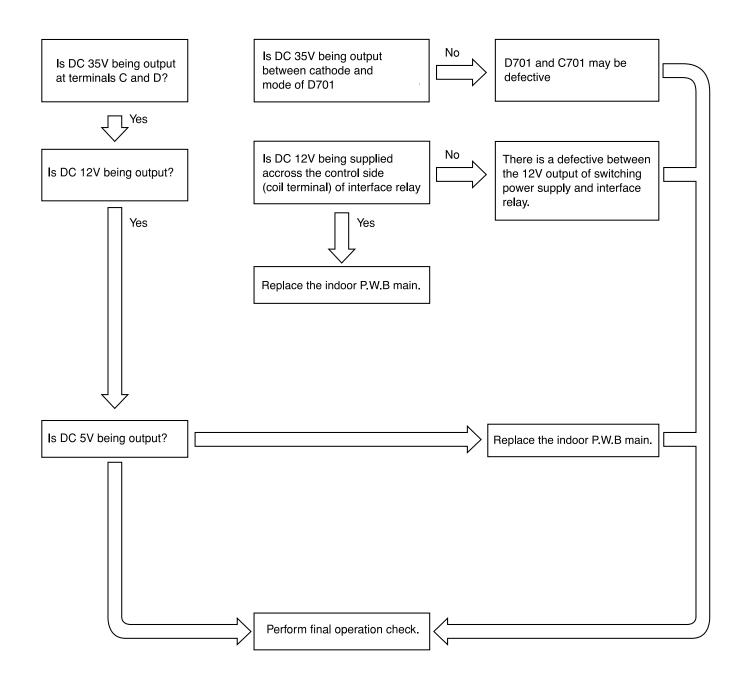



CHECKING THE OUTDOOR UNIT ELECTRICAL PART

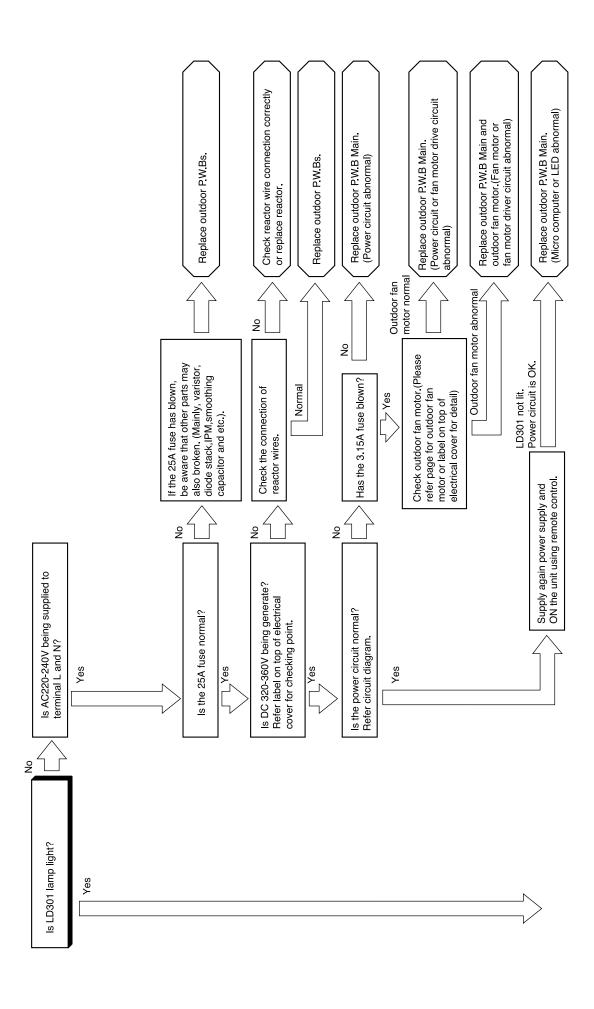

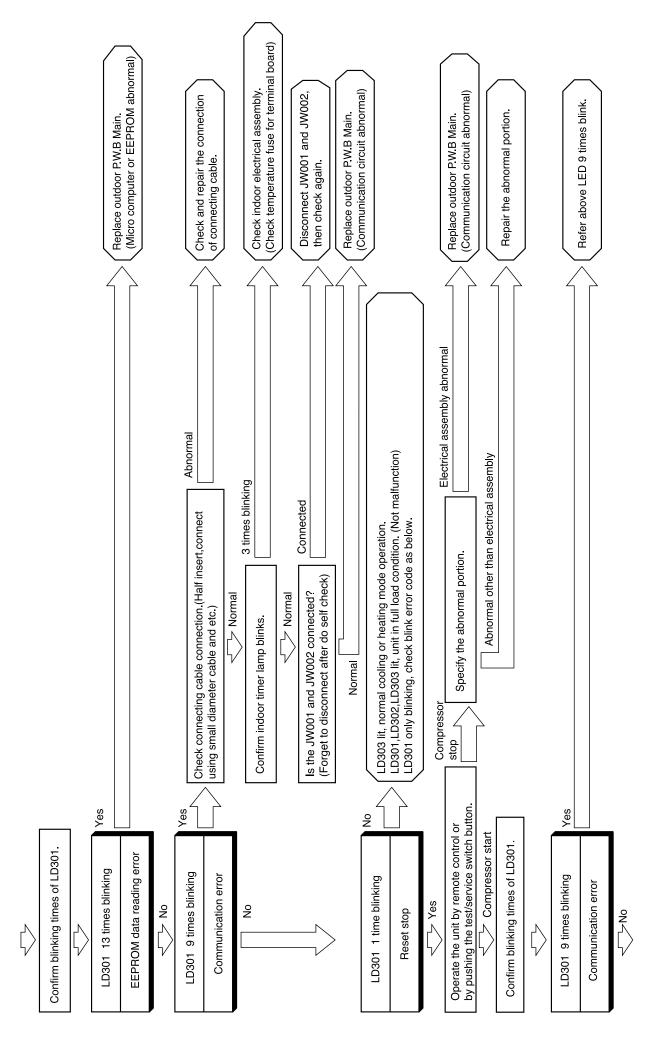

- 89 -

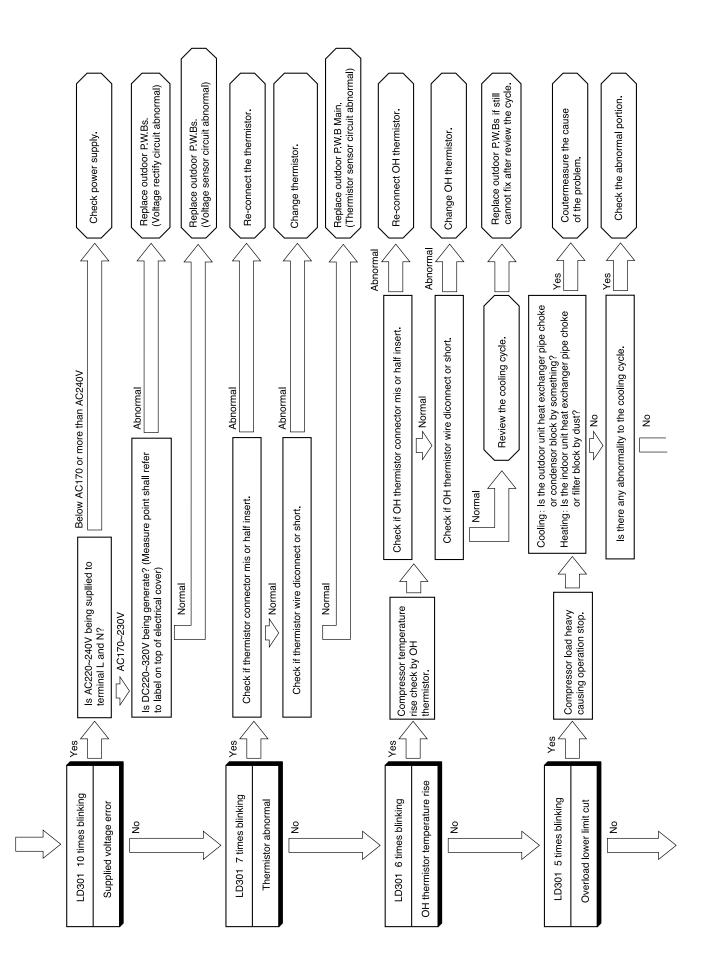

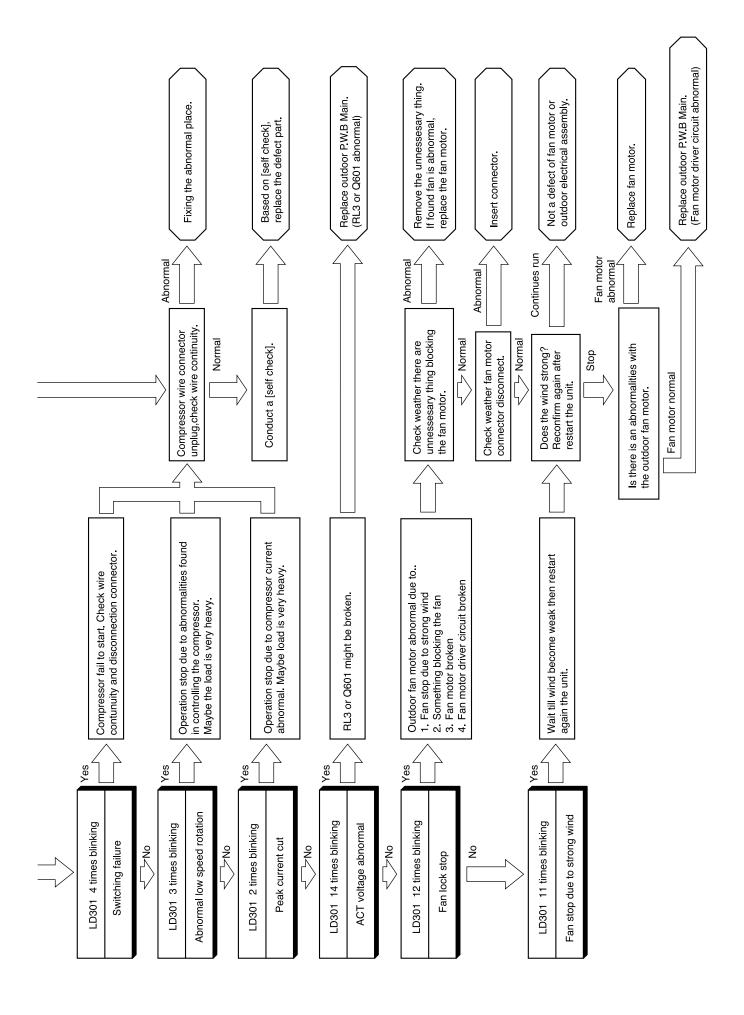

SELF CHECK

When self-diagnosis lamp blinks 2,3,4 and 5 times happen, to determine whether compressor faulty or electrical unit faulty, please conduct a SELF CHECK as below.

- 1. Switch OFF main power supply.
- 2. Short circuit between JW001 and JW002.
- 3. Switch ON main power supply LD302 will blink 1 time.
- 4. (Within 3 minutes) Press Test/Service Switch for 1 second or more.
- 5. Self-diagnosis result will be shown LD303 will ON (LIT) and LD301 will be blinking. Then refer to diagnosis table 2.
- 6. Switch OFF main power supply. Then release back JW001 and JW002 to original condition (no short circuit condition).
- * If step No. 6 is not carried out, the system will not operate properly until 3 minutes has lapsed after restore the power supply.
- * SELF CHECK diagnosis result

SELF-DIA	SELF-DIAGNOSIS LIGHTING MODE LIT Z BLINKING OFF					
L L L D D D 3 3 3 0 0 0 1 2 3 REDREDRED	SELF-DIAGNOSIS RESULT	REPAIR METHOD				
 □ □ 1 TIME 	ELECTRICAL OK	① CHANGE COMPRESSOR				
2 TIMES	PEAK CURRENT CUT OFF	© Change P.W.B.s				
Ø □ ■ 7 TIMES	Compressor Current Abnormal	 ● IF COMPRESSOR CONNECTOR LOOSE OR NG - CHECK CONNECTOR CONDITION ● IF COMPRESSOR CONNECTOR OK, - CHECK COMPRESSOR, CHANGE P.W.B.s 				
I0 TIMES	DC VOLTAGE ABNORMAL	 IF AC VOLTAGE INPUT ABNORMAL (OVER STANDARD VOLTAGE ±10%), FOLLOW STANDARD AC VOLTAGE INPUT IF AC VOLTAGE INPUT IS NORMAL (WITHIN ±10%), - CHANGE P.W.B.S 				
 □ □ ■ 13 TIMES 	EEPROM READING ERROR	⊕ Change P.W.B. Main				

In case abnormalities found in measurement result, change the defect part.

In case electrical is normal and before it can be use, modify back

JW001 and JW002 as normal condition (before conduct a self check).

In case of service person forgot to release JW001 and JW002 to original condition;

<u>Case 1:</u>

If main power supply continuously ON, outdoor microcomputer will keep showing diagnosis result (LD303 will ON and LD301 will blinks).

<u>Case 2:</u>

If main power supply OFF at once, then switch ON again:

a) Outdoor microcomputer will wait the self check command (by pressing test/service switch) within 3 minutes (LD302 blinks 1 time).

If test/service signal input is not received, unit will return to normal operation mode after this 3 minutes has lapsed. (LD302 OFF and LD301 blinks 1 time).


<u>Case 3:</u>

If main power supply OFF at once, then switch ON again and on indoor unit by remote control;

- a) Indoor unit will receive remote control signal and send signal to outdoor unit. For the first 3 minutes, outdoor micro-computer will ignore this indoor signal (LD302 blinks 1 time).
- b) After 3 minutes has lapsed (LD302 OFF and LD301 blinks 1 time), unit will return to normal operation mode.

HOW TO OPERATE USING OUTDOOR UNIT TEST SWITCH

- 1. Pull out power cord plug and wait for 1 minute before plug in again.
- 2. Remove outdoor electrical cover and confirm that LD301 will blink 1 time.
- 3. Force cooling operation is start when TEST SWITCH is pressed for 1 second or more.
 - % (There is a case where operation will only start after 1 minute after pressing the TEST SWITCH due to initilizing of the expansion valve)
- 5. Press again the TEST SWITCH for about 1 minute or more to stop the force cooling operation.

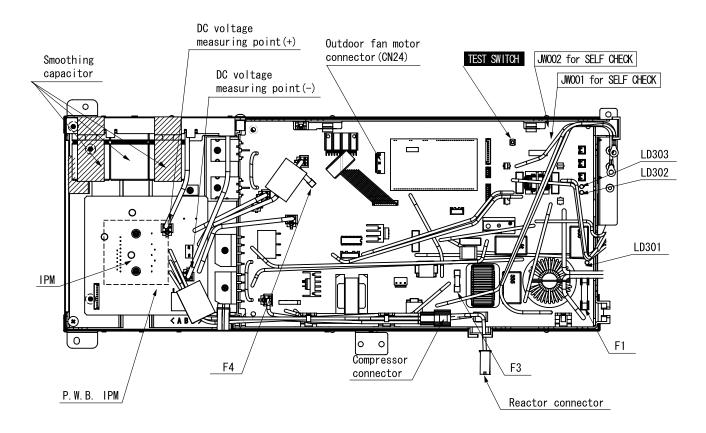


※ Caution

- 1. Turn OFF the breaker first before can start servicing.
- 2. Never operate the unit in this condition for more than 5 minutes.
- 3. If the checking is done with the compressor connector disconnected, the unit will continue normal operation when electrical part are normal, or it will repeat operating for approximate 1 minute and stop due to overload power limit cut
- 4 If interface signal (DC35V) terminal C and D are not connected when the outdoor unit TEST SWITCH is used for checking,LD301 will blink 9 times after operation to indicate a communication error.
- 5. To proceed with TEST SWITCH operation again, breaker must be turn OFF and ON it again. (TEST SWITCH will operate 1 time only once power is supplied)
- 6 When service operation is completed, restore the connection as original condition.

LIGHTING MODE OF SELF-DIAGNOSIS LAMP

POSITION OF SELF-DIAGNOSIS LAMP

1

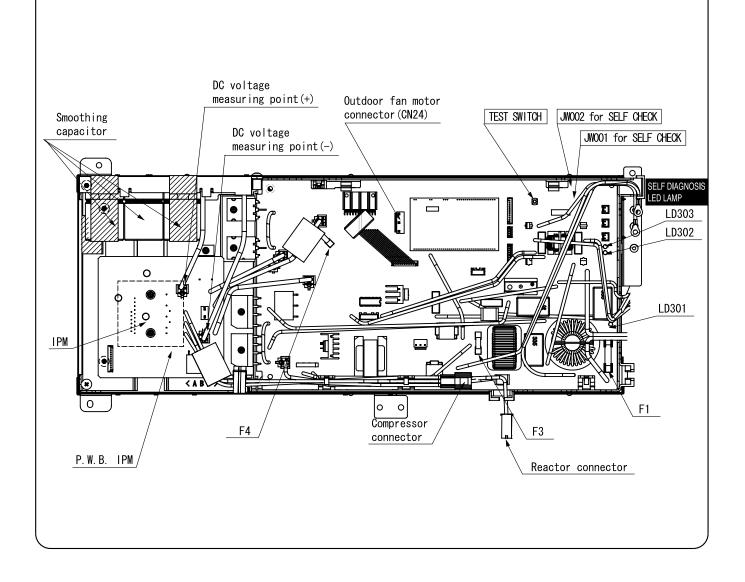


LIGHTING MODE SELF-DIAGNOSIS LAMP

2 LIGHTING MODE SELF-DIAGNOSIS LAMP

A A DANGER (DC360V)	SELF-DIAGNOSIS LIGHTING MODE LIT Z BLINKING 1 OFF		STRUCTURE OF ELECTRICAL	TABLE 2 : DURING SELF-DIAGNOSIS COMPLETED	IS COMPLETED
 SWITCH DFF MAN POWER SUPPLY #D0 NOT TOUCH ANY OTHER TO THE OUTDOOR UNIT AT LEAST PARTS EXCEPT TEST (SERVICE) 0 MNUTES BEFORE START THE SWITCH WHEN SERVICE 	L L SELF- D D SELF- D D AGNOSIS DETAILS NAME	Main Check Point	PM CAPA PMB	SELF-DIAGNOSIS LIGHTING MODE LIT	BLINK
	m		PM P.M.B DC NPUT (+)	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	
AND TAB6/BLK(-) IS LESS THAN 10V.	<u>+</u>	OLEAK OF REFRIGERANT			O CHANGE COMPRESSOR
SELF DIAGNOSIS LIGHTING MODE	TEMP. RISE OPERATING	OFAN NOTOR OF NOTOR CRUIT OTHERNISTOR OCONNECTION OF THERNISTOR IS FAULTY		2 TIMES REAK CURRENT CUT OFF	O CHANGE P.W.B.S
L L SELF- D D DIAGNOSIS D 0 NAME	N WEN NDOR UNT IS N NEN NDOR UNT IS SMILARY MOT MALFINTION	O THERMSTOR CIRCUIT O CABLE IS WRONG CONNECTED O CABLE IS OPEN O METERAGE CIRCUIT BETMEEN INDOOR AND OTTORYON IMIT		7 TIMES ABNORMAL	© F COMPRESSOR CONNECTOR LOOSE OR NG -CHECK CONNECTOR CONDITION -C COMPRESSOR CONNECTOR OX -CFECK COMPRESSOR, CHANGE P.M.B.S
<u>س</u>		© POWER SUPPLY VOLTAGE © RECEPTAGLE OF WRE FOR P.W.B. PM IS			① IF AC VOLTAGE NPUT ABNOPMAL (OVER STANDARD VOLTAGE ±10%)
	R IS INCURRECT. FAN MOTOR LOAD IS TOO HEAVY OR ROTATION	© NOT PROPERLY NGERTED ① F.AN MOTOR ③ OUTDOOR CONDITION (MND)		10 TIMES DC VOLTAGE ABNORMAL	-FOLLON STANDARD AC VOLTAGE NPUT © F AC VOLTAGE NPUT NORMAL (WITHIN ±10%) -CHANGE P.M.B.S.
	USTUTED BI WIND BLOW. OUTDOOR FAN RPM IS NOT ROTATE AS INTENDED RPM.	©FAN MOTOR ©FAN HOTOR CIRCUIT		Image: Second reading error 13 Times	© Change P.W.B. Main
	ading read the data in Read the data in Eepron.	© P.W.B. MAIN	EUSE F1 BEL DIAGNOSS USED-JW001	TABLE 3 : OUTDOOR FAN MOTOR INSPECTION (SELF-DIAGNOSIS)	INSPECTION (SELF-DIAGNOSIS)
	DEFECTED.COMPRESSOR ABNORMAL LOAD.	© P.W.B.s © COMPRESSOR		1. SWITCH OFF MAIN POWER SUPPLY.	AMERICAN COMPLEXIVE OF
[2] DURING STOP	ACTIVE CIRCUIT ABNORMAL.	①P.w.B.s	DEFERMINE WHETHER DOMERSSON BLINKS 2.3.4 AND 5 TIMES HAPPENTO DEFERMINE WHETHER DOMERSSON OR ELECTRICAL UNIT FAULTY.	2. DISLUNNELI UUIDUUK FAN MUTUK U P.W.B. MAIN.	USJONNELL UULUUUK FAIN MULUK LUNNELLUK FKUM LUNNELLUK LN24 UF PM.B. MAN. DATAFT FLAN.
Independing to the second of the second o	The state of the s	Interval of 0.25 SEC. AT Interval of 0.25 SEC.	SFL F-DIAGNOSIS METHOD		REVENT IN CONTRACT AN SIGN TO CONTRACT TO CONTRACT AND TO CONTRACT
HAS BEEN TURNED ON, IT OVER CURRENT IS DETECTED.	SERVICE OPERATION	ION TE FROM INDOOR UNIT AND STORE IT AT OUTTOOR UNIT.	1. SWITCH OFF MAN POWER SUPPLY. 2. SHORT CRCUIT BETWEEN JMOO1 AND JMOO2. 2. SKURTH AN MAN POMERE JURDOV J IADO2.	20 TO 50 Ohm. CONNECT BACK THE OUTDOOR FAN CONNECTOR OKE FINSH DO INSPECTION.	NNECTOR ONCE FINISH DO INSPECTION.
Image: Construction	1 SWITCH OFF THE MAIN POWER SUPPLY AND THEN SWITCH IT ON AGAN. (WAIT FOR 1 MINUTE).	SWITCH IT ON AGAIN.	4. WITCH ON THAT FORTING OF LET LOUGE THE OF THE ACTION OF	OTHER INSPECTION,	
C Switching S Failure	2. Press and hold test outdoor unit in cooli damage. Do not oper,	ec. Or more to start O prevent parts from Dre than 5 minutes.	LD301 WILL BLNK/NG. THEN REFER TO DIAGNOSIS TABLE 2. 6. SMITCH OF MAIN DORE SUPPLY. THEN RELEASE BACK JUODI AND JUMOS TO ADMARKIN FORMERING AND ELADET FORMERING.	1. DIAGNOSS FOR REVERSING VALVE OPERATION ERROR. -CHECK REVERSING VALVE WIRE CONNECTION EITHER WIRE BROKEN OR	PERATION ERROR. VECTION EITHER WIRE BROKEN OR
Image: Construction of the state of the state state of the s	3. Press and hold test service operation. 4. Repeat step 1 to 3 i	//Service Switch For 1 Sec. Or More to Stop The F Service Operation Need to be repeated.	WAL TO DRUMPL CONTINUE TO STORT CALOUT CONTINUE. WE STEP NOA NOT CARRED OUT, THE SYSTEM MLL NOT OPERATE PROPERLY UNTL 3 MINUTES HAS LAPSED AFTER RESTORE THE POWER SUPPLY.	NOT, IF OK, CHECK HUSE F3, IF BROKEN, REPLACE FUSE OR PMLBS. 2. DIAGNOSS FOR COMMUNICATION SIGNAL ERROR OR OUTDOOR NOT FUU -CHECK WIRNG CONNECTION BETWEEN INDOOR AND OUTDOOR.	noi. F. dk. Check fuce F.3. F. Broken, refl.ace fuce or P.M.B.s. Diagnoss for communication Signal Error or Outdoor not Functional, -check Wring connection Between Ndoor and Outdoor.


CHECKING THE REMOTE CONTROLLER

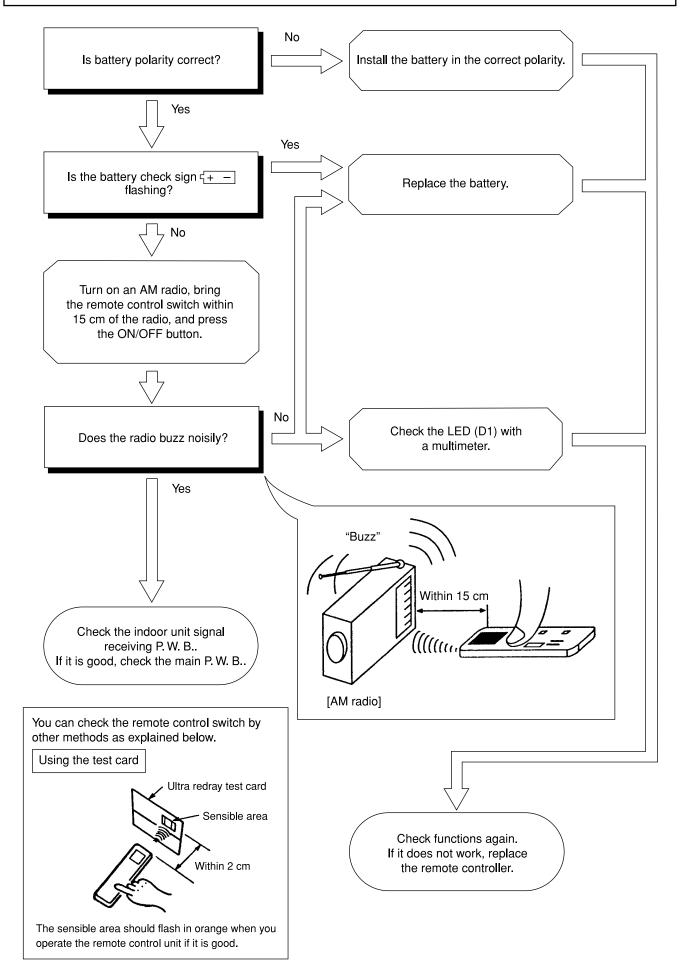

CHECKING THE REFRIGERATING CYCLE


(JUDGING BETWEEN GAS LEAKAGE AND COMPRESSOR DEFECTIVE)

1. Troubleshooting procedure (No operation, No heating, No cooling)

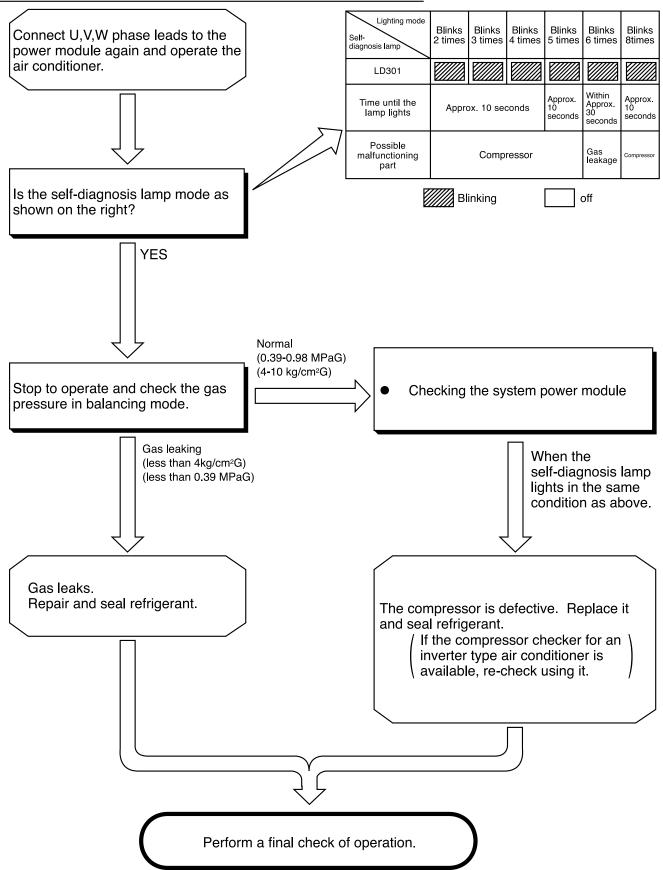

PARTS LIST AND DIAGRAM

INDOOR UNIT MODEL : RAS-60YH7

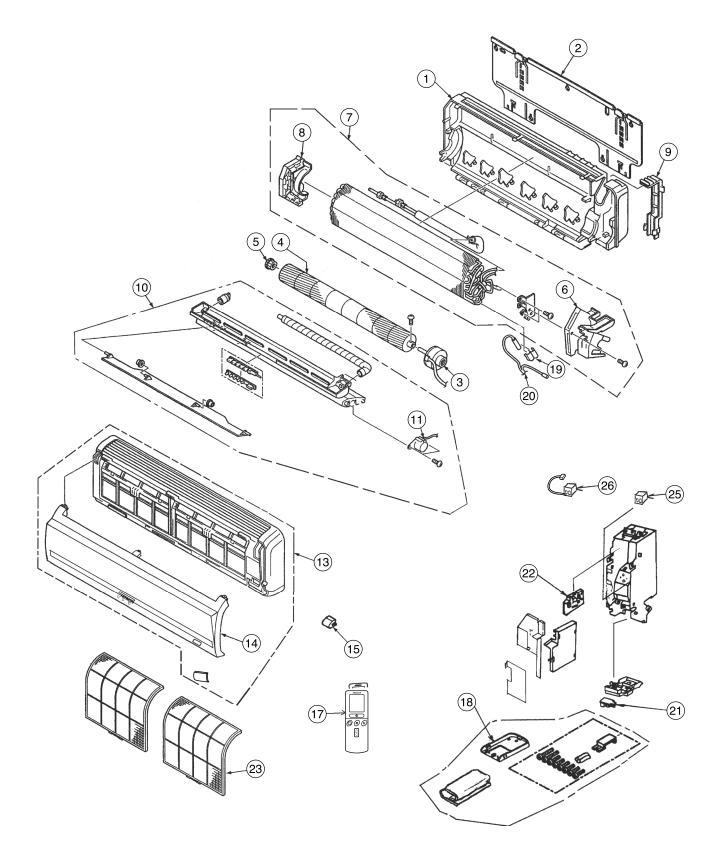


MODEL RAS-60YH7

NO.	PART NO. RAS-60YH7		Q'TY / UNIT	PARTS NAME
1	PMRAS-70YHA	001	1	CABINET
2	PMRAS-40CNH2	R23	1	MOUNTING PLATE
3	PMRAS-70YHA	R04	1	FAN MOTOR
4	PMRAS-70YHA	R10	1	TANGENTIAL FAN
5	PMRAS-25CNH2	005	1	P-BEARING ASSY
6	PMRAS-51CHA1	004	1	FAN MOTOR BASE
7	PMRAS-60YHA2	R02	1	CYCLE ASSY
8	PMRAS-51CHA1	R20	1	BEARING COVER
9	PMRAS-18CP5	003	1	PIPE SUPPORT
10	PMRAS-70YHA	R03	1	DRAIN PAN ASSY
11	PMRAS-18CP6	R02	1	AUTO SWEEP MOTOR
13	PMRAS-60YH5	001	1	FRONT COVER ASSEMBLY
14	PMRAS-60YH5	002	1	FRONT PANEL
15	PMRAS-10C7M	008	3	САР
17	PMRAS-18NH6A	R02	1	REMOTE CONTROL ASSEMBLY
18	PMRAS-10C3M	003	1	REMOTE CONTROL SUPPORT
19	PMRAS-40CNH2	R26	1	THERMISTOR SUPPORT
20	PMRAS-70YHA	R12	1	THERMISTOR
21	PMRAS-70YHA	R08	1	P.W.B (RECEIVER)
22	PMRAS-60YH7	R01	1	P.W.B (MAIN)
23	PMRAS-60YH7	R02	2	FILTER
25	PMRAC-07CV1	R06	1	TERMINAL BOARD (2P)
26	PMRAS-70YHA	R11	1	TERMINAL BOARD (2P)

PARTS LIST AND DIAGRAM

OUTDOOR UNIT MODEL : RAC-60YH7A

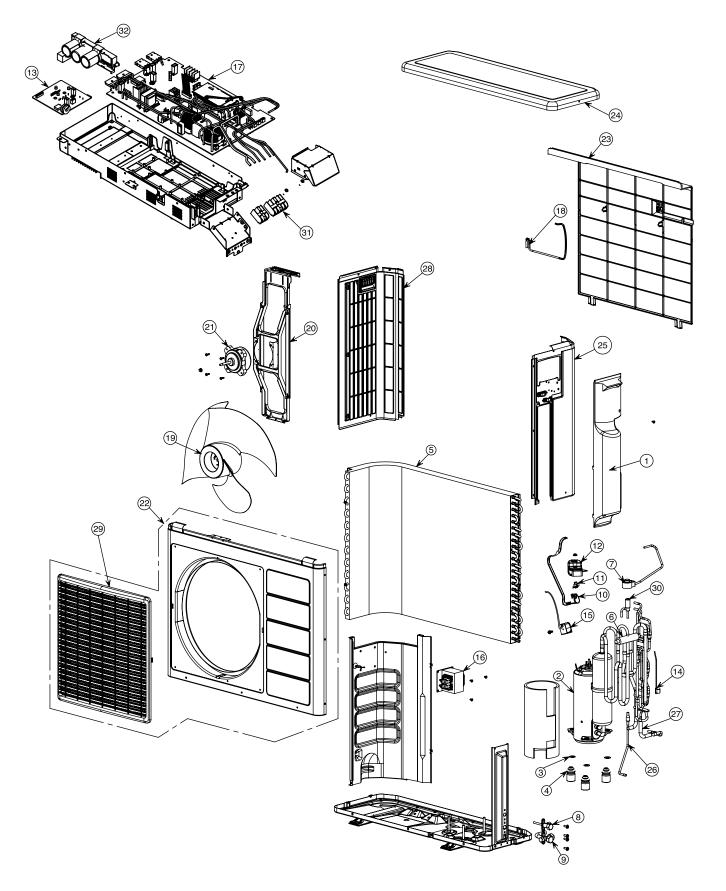

MODEL RAC-60YH7A

NO.	PART NO. RAC-60YH7A	\	Q'TY / UNIT	PARTS NAME
1	PMRAC-60YHA2	S04	1	SV-COVER
2	PMRAC-60YH7	S01	1	COMPRESSOR
3	KPNT1	001	4	PUSH NUT
4	RAC-2226HV	805	3	COMPRESSOR RUBBER
5	PMRAC-50NH4	S02	1	CONDENSER
6	PMRAC-70YHA1	999	1	REVERSING VALVE
7	PMRAC-25NH4	S03	1	ELECTRICAL EXPANSION COIL
8	PMRAC-50NH4	S03	1	VALVE (2S)
9	PMRAM-72QH5	918	1	VALVE (4S)
10	PMRAC-40CNH2	S14	1	THERMISTOR (OH)
11	PMRAC-25NH4	S09	1	OVERHEAT THERMISTOR SUPPORT
12	PMRAC-X13CX	906	1	OVERLOAD RELAY COVER
13	PMRAC-50YH7A	S02	1	P.W.B (IPM)
14	PMRAC-50YHA2	S07	1	THERMISTOR (DEFROST)
15	PMRAC-50YHA2	S09	1	COIL (REVERSING VALVE)
16	PMRAC-50YHA2	S04	1	REACTOR
17	PMRAC-60YH7A	S01	1	P.W.B (MAIN)
18	PMRAC-50YHA2	S08	1	THERMISTOR (OUTSIDE TEMPERATURE)
19	PMRAC-70YHA	907	1	PROPELLER FAN
20	PMRAC-40CNH2	S18	1	SUPPORT (FAN MOTOR)
21	PMRAC-50YHA2	S03	1	FAN MOTOR
22	PMRAC-50YHA2	S05	1	CABINET
23	PMRAC-40CNH2	921	1	NET
24	PMRAC-40CNH2	922	1	TOP COVER
25	PMRAC-60YHA2	S06	1	SIDE PLATE-R
26	PMRAC-60YHA2	S02	1	STRAINER (PIPE)
27	PMRAC-60YHA2	S03	1	STRAINER (COND)
28	PMRAC-40CNH2	926	1	SIDE PLATE-L
29	PMRAM-52QH5	S03	1	GRILL
30	PMRAC-25NH4	S16	1	EXPANSION VALVE
31	PMRAC-25NH4	S13	1	TERMINAL BOARD (4P)
32	PMRAC-50YH7A	S03	1	P.W.B (CAPA-BOARD)

HITACHI

RAS-60YH7 / RAC-60YH7A

PM NO. 0508E

Printed in Malaysia